
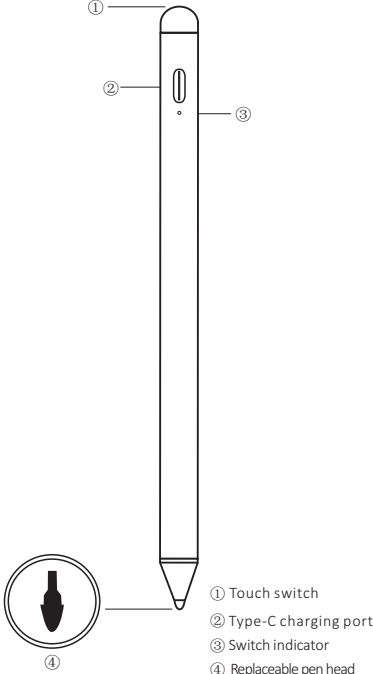 


正面

User Manual	Product Details	Product Specifications
<div>Active Stylus</div> <div></div> <div>Please read this instructions completely and keep it properly Note: The picture is for reference only, and the appearance is subject to the actual product</div>	<div></div> <div>① Touch switch ② Type-C charging port ③ Switch indicator ④ Replaceable pen head</div>	<div>Model NO: Active capacitive pen Material: Aluminum alloy Anti-mis-touch function: Yes Input: 5V-0.2A Pressure induction: No Bluetooth: No Pen head: Replaceable pen head Applicable model: ipad 2018 (version6) A1893/A1954 ipad 2019 (version7) A2197/A2200/A2198 ipad 2020 (version8) A2270/A2428/A2429/A2430 ipad 2021 (version9) A2602/A2603/A2604/A2605 ipad mini(version5) A2133/A2124/A2126/A2125 ipad mini(version6) A2567/A2568/A2569 ipad Air(version3) A2152/A2123/A2153/A2154 ipad Air(version4) A2316/A2324/A2325/A2072 ipad Pro(11 inches) A1980/A2013/A1934/A1979 ipad pro11 inches(version2) A2228/A2068/A2230/A2231 ipad pro11 inches(version3) A2377/A2301/A2459/A2460 ipad Pro12.9 inches(version3) A1983/A2014/A1895/A1876 ipad pro12.9 inches(version4) A2229/A2069/A2232/A2233 ipad pro12.9 inches(version5) A2378/A2379/A2461/A2462 Please confirm that the above models are universal and other models are invalid. Confirmable model on the back of IPAD device</div>

反面

Product Features

1. Stylish and minimalist style, aluminum alloy with piano baking varnish, calm and luxurious, novel and durable.

2. The tip of the pen is made of special conductive materials and finely ground. Artificially create a smooth pen tip to prevent damage to the screen

3. Products compatible with iPad 2018 after model (specific model to see product parameters) can be written, painted, recorded

4. Continuous use for up to 8-10 hours (for reference only), 5 minutes without using smart power off.

Instructions for use

1. iPad version is not lower than 12.2;

2. Open Settings-Apple Pencil-Turn off only use Apple Pencil to doodle

3. Turn on Settings-Bluetooth and close the connection of the original Apple Pen.  
(After the above settings are completed, the product can be used normally.)

Settings

Apple Pencil

General

Control Center

Display & Brightness

Home Screen & Dock

Accessibility

Wallpaper

Siri & Search

Apple Pencil

Touch ID & Passcode

Better

Privacy

Only Draw with Apple Pencil

When enabled, only Apple Pencil will draw. Your fingers will be used for scribbling instead.

English and Chinese

Scribble

Use Apple Pencil to handwrite in any text area to convert it into type.

Try Scribble

Pencil Gestures

Left Corner Swipe

Right Corner Swipe

Screenshot >

Quick Note >

Actions when you swipe your pencil from a bottom corner.

How to Use

1. Touch the top of the capacitive pen to turn it on, the indicator light turns blue to start using, touch the top of the capacitive pen again to turn it off, and the indicator light turns off.

Touch switch

2. With magnetic adsorption function, it can be adsorbed by lightly putting it on, like Apple Pencil can be adsorbed on the tablet

3. Detachable and replaceable nib design, no need to worry about wear and tear! (Lightly twist the nib for easy removal/ installation)

(Remove)

(install)

How to Charge

1. Please use the micro USB/Type-C charging cable to charge connect one end to the usb port of the stylus, and the other end to the usb port on the computer or tablet.(FIG 1)

2. Please connect one end of the data cable to the pen and the other end to the 5V DC power adapter.(FIG 2)

3. The 5V mobile power supply with USB interface is directly plugged into the touch pen for charging. During the charging process, the red charging lamp will turn on and the whole charging time will be about 90 minutes. (FIG 3)

(FIG 1)

(FIG 2)

(FIG 3)

CE

RoHS

PS

FC

1. Touch the top of the capacitive pen to turn it on, the indicator light turns blue to start using, touch the top of the capacitive pen again to turn it off, and the indicator light turns off.



2. With magnetic adsorption function, it can be adsorbed by lightly putting it on, like Apple Pencil can be adsorbed on the tablet



3. Detachable and replaceable nib design, no need to worry about wear and tear! (Lightly twist the nib for easy removal/ installation)



(Remove)



(install)

1. Please use the micro USB/Type-C charging cable to charge connect one end to the usb port of the stylus, and the other end to the usb port on the computer or tablet.(FIG 1)

2. Please connect one end of the data cable to the pen and the other end to the 5V DC power adapter.(FIG 2)

3. The 5V mobile power supply with USB interface is directly plugged into the touch pen for charging. During the charging process, the red charging lamp will turn on and the whole charging time will be about 90 minutes. (FIG 3)



(FIG 1)



(FIG 2)



(FIG 3)

CE

RoHS

FC

RECYCLE

WARRANTY

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.