

SE300

Astell&Kern

INSTRUCTION BOOK

User Guide

CONTENTS

Getting Started _01

Package Contents	02
Product Overview	03
Power Management	05
Charging	06
Connections	07
Firmware Updates	12

Using the Device _02

Basic Operations	13
Home Screen	17
Menu Category Screen	18
Main Menu Screen	20
Music Player Screen	21
Notification Bar	24
Using Open APP Service	27
AK CONNECT	28
AK File Drop	33
Listening to Music	35
Playlist Management	38
ReplayGain	41
USB DAC Installation	42
How to Use USB Audio	43
CD Ripping	44
AK CD-Player	46
Car Mode	47
Bookmark Function	48
Favorites Function	49
Settings	50
Connecting to Wi-Fi	58
Using Bluetooth	59
Equalizer Setup	62

Miscellaneous _03


Precautions	64
Troubleshooting	66
Copyright	67
Certifications	68
Registered Trademarks	70
Disclaimers	71
Specifications	72

Package Contents

Contents may be changed without prior notice to improve the performance or quality of the product.



 SE300



Leather Case & Protective Film



microSD Card Slot Cover



USB Type-C Cable



Quick Start Guide & Warranty Card

Leather Case & Protective Film: Protect the device and its screen.

microSD Card Slot Cover: The cover is used to protect the microSD card slot when not in use. It is installed in the product by default.

USB Type-C Cable: Please use a separate conversion adapter when connecting to a PC that cannot connect Type C. (Conversion adapters are not included in the component.)

Quick Start Guide: Basic overview of device functionality.


Warranty Card: Provides warranty details for your device. Maintain a copy of this card as it may be required for future technical support requests.

User Guide: The User Guide can be downloaded from the Astell&Kern website.

[<http://www.astellnkern.com> > Support > Download]

Product Overview

The appearance of the product, as well as the printed and engraved information, may vary depending on the model.

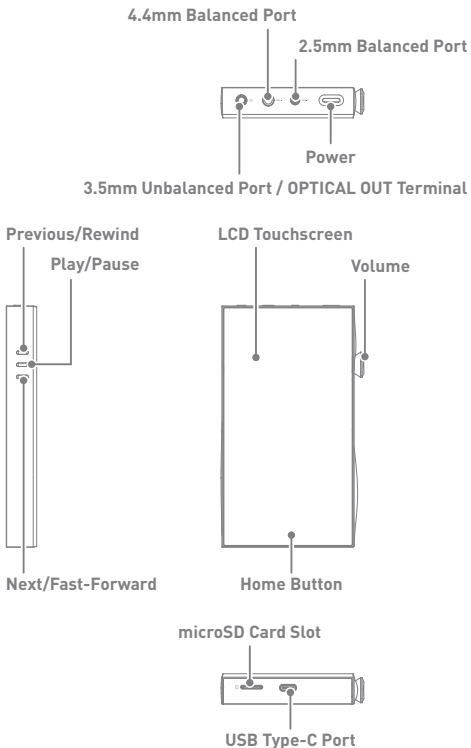

4.4mm Balanced Port: BAL.1 - **4.4mm Balanced Port symbol.**

For audio output, connect earphones or headphones that utilize a 4.4mm jack.

2.5mm Balanced Port: BAL.2 - **2.5mm Balanced Port symbol.**

For audio output, connect earphones or headphones that utilize a 2.5mm jack.

Power:  - **Power symbol.**

Short press - Turns the screen on or off.

Press and hold - Turns the device on or off.

Volume: Turn the wheel to adjust the playback output volume level.

3.5mm Unbalanced Port / Optical Out Terminal:

 - **3.5mm Unbalanced / S/PDIF Port symbol.**

For audio output, connect earphones or headphones that utilize a 3.5mm jack. Music can be played back on a S/PDIF-capable external device via an optical cable.

Previous/Rewind:

Short press - Play the previous song or restart the current song.

Press and hold - Rewind the current song.

Play/Pause: Play or pause the current song.

LCD Touchscreen: Display screen with touch control features.

Next/Fast-Forward:

Short press - Play the next song.

Press and hold - Fast-forward the current song.

Home Button: Press to return to the Home Screen.

microSD Card Slot:  - **microSD Card Slot symbol.**

Insert a microSD card to access its files.

USB Type-C Port: For charging and data transfer.

Power Management

Powering the Device On/Off

1. Press and hold the [Power] button to turn on the device.
2. While the device is on, press and hold the [Power] button to shut down the device. A confirmation message will appear.
3. Press [OK] to turn off the device.



This device has an automatic shutdown feature to save battery power. The device will turn off if there is no user input during the period defined in [Menu - Settings - Timer Settings - Auto Power Off] (See Page 56)

Turning the Screen On/Off

1. While the screen is on, press the [Power] button to turn off the screen.
2. Press [Power] button again to turn it on.



This device has an automatic timeout feature to save battery power. The screen will turn off if there is no user input during the period defined in [Menu - Settings - Timer Settings - Screen Timeout]. (See Page 56)

Reset Function

1. In case of unexpected device failure or freeze, press and hold [Power] for 7 seconds to force a shutdown. The device can then be restarted after the shutdown is complete.



Resetting the device will not affect stored data or time settings. Do not use the reset function while the product is in use. Doing so may corrupt the data on the device.

Charging

Charging via USB Wall Adapter

1. Commercially available 9V 1.67A output adapters may be used for charging.




Fast charging time: Approx. 3.5 hours (Fully discharged, Power-off, 9V 1.67A adapter) / Normal charging: Approx. 5.5 hours (Fully discharged, Power-off, 5V 2A adapter)

The manufacturer shall not be responsible for problems caused by the use of adapters that do not adhere to the recommended specifications.

Connections


3.5mm Unbalanced Port

1. Connect earphones or headphones to the 3.5mm unbalanced port.

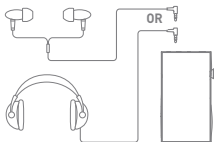


2.5/4.4mm Balanced Port

1. Connect earphones or headphones that support a 2.5mm or 4.4mm headphone jack to the 2.5mm or 4.4mm balanced port.

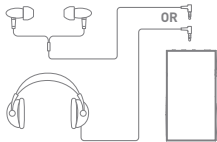

Connecting to a Computer

 1. Turn on the device and your computer.
2. Use the USB Type-C cable to connect the device to a computer in accordance with settings in [Menu - Settings - USB Mode].
 - [Default] Media Device (USB Drive): Transfer files from a computer to the device.
 - DAC Input: Listen to music on a connected computer through the device. (See Page 42)



Mac users need to download and install Android File Transfer from the Astell&Kern website. [<http://www.astellnkern.com> > Support > Download]

For an optimal connection, quit any unnecessary programs before connecting the device to the computer.

Do not use cables other than the USB Type-C cable provided with the device. Doing so may cause malfunctions.


Use USB 2.0 only on Mac.

When a USB connection is established while playing a DSD or DXD file, a mode selection pop-up box will appear with the following options:

- External device connection: Connect the player to the computer to transfer files, USB DAC for audio playback or CD Ripper connection.
- Charge device: Charge the device.

Copy Files (Folders) to the Device

1. To copy files/folders from your computer, select the desired files/folders and drag & drop them into the device folder.

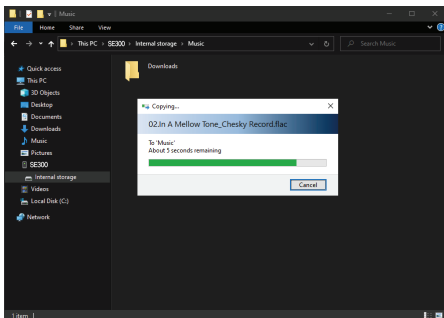


Ensure the USB Type-C cable is properly connected.

Turning off the device, computer or disconnecting the USB Type-C cable while copying or moving files/folders may corrupt files or device memory.

File transfer speeds may be affected by the computer and/or the OS environment.

Delete Files (or Folders) from the Device

1. Select the file/folder to delete, right-click the mouse, and then select [Delete].
2. Select [Yes] in the [Confirm File/Folder Deletion] window to delete the selected files/folders.

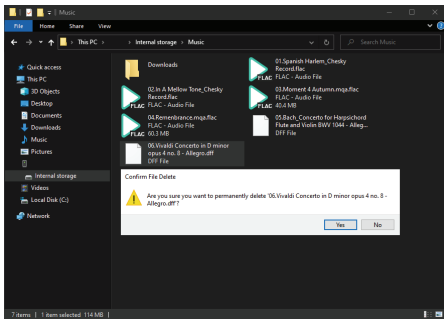

Disconnecting from the Computer


 
1. Disconnect the USB Type-C cable after the transfer between the device and computer is complete.



Disconnecting the device from the computer during a file transfer may corrupt data on the device.

Insert/Remove a microSD Card

1. Refer to the diagram and gently insert a microSD card into the microSD card slot.
2. To safely remove a microSD card, on the Home Screen, select [Safely remove SD card] from the Notification Bar or select [Unmount SD card] from [Menu - Settings - System Information].
3. Gently press the microSD card in to unlock and release it from the slot.

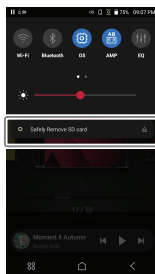

Recommended microSD Cards

SAMSUNG, SANDISK



Maximum Capacity: 1TB

Notes on Inserting a microSD Card

- Do not force the microSD card into the slot. Doing so may cause malfunction of the product and damage to the card.
- Do not repeatedly insert/remove the microSD card.
- If not inserted properly, the microSD card may cause product malfunctions and may become lodged in the product.

Notes on Removing a microSD Card

- Be sure to safely remove the microSD card from the device. Not following the proper procedure may corrupt data and cause serious damage to the both the card and device.
- Do not remove the microSD card during use. Doing so may cause malfunction, delete data and damage the microSD card.

Notes on Using a microSD Card

- If the microSD card is not recognized or functions improperly, format the card, preferably in the FAT32 system.
- Using cards other than the recommended microSD card types may cause malfunctions.
- A microSD card is not included in the product package. Please purchase separately.

Firmware Updates

Wi-Fi Update / OTA (Over-the-Air)

1. Connect to a wireless network.
2. If a new firmware update is available, the screen will display a Firmware Update Guide window.
3. Select [Update].
4. Follow the on-screen instructions to proceed with the firmware update.



For Wi-Fi connections, see Page 58.

The firmware update may not start if the battery level is too low. (A minimum battery level of 20% is required.)

Do not disconnect from the wireless network while downloading the update file. Doing so may cause data corruption and/or damage to the system.

If an error occurs or the notice in the Notification Bar disappears during an update, download the firmware update again through [Menu - Settings - Update - System].

Moving to another screen during a file download will cancel the download.

Basic Operations

LCD Touchscreen



1. This device features an LCD touchscreen that allows you to perform operations by touch.
Use the touchscreen to access various features on the device.



To prevent damage to the screen, do not use a sharp object or excessive force.

Return to the Home Screen


1. Press [] at any time to return to the Home Screen.

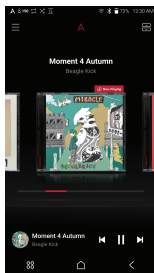
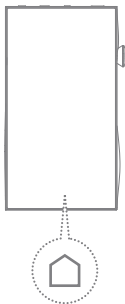


Home Screen

From the Home Screen, swipe your finger to the left, right, up or down from any edge of the touchscreen to access display menus. Each side of the Home Screen will activate a different display menu.

Menu Category Screen



1. Swipe the screen in the [right → left] direction, or press [] in the upper right to move to the Menu Category Screen.

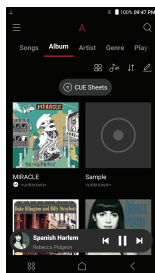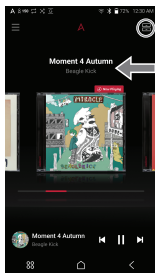

Music files extracted using the AK CD-Ripper accessory that are stored in the Ripping folder of the internal memory will be displayed in the CD library menu.


Notification Bar

1. From the top edge of the touchscreen, swipe your finger down to display the Notification Bar.

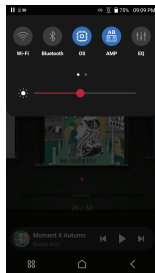
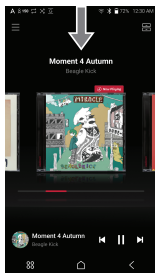


Mini Player Screen


1. Swipe up or tap on the Mini Player Screen to expand to the Music Player Screen.

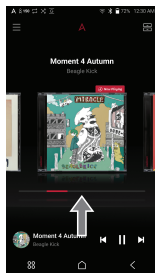



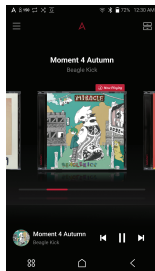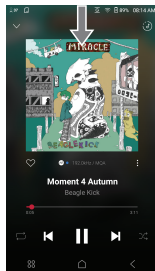

2. Swipe down or press [∨] in the upper left to collapse the Music Player Screen.

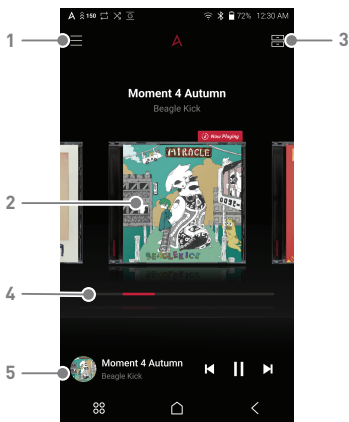





Home Screen





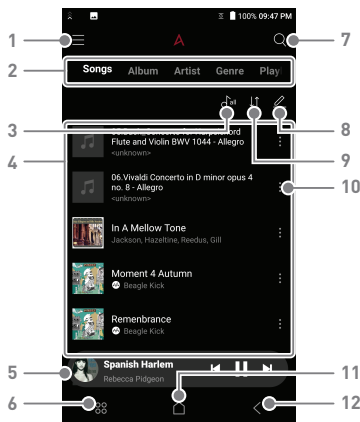








1		Menu	Go to the Main Menu.
2		Album Cover	Press on an album image to go to that album.
3		Menu Category	Press [] in the upper right to go to the menu category screen.
4		Album Seek Bar	Use the bottom bar to go to other albums.
5		Music Player Screen	Go to the playback screen by operating the Mini Player Screen.

Menu Category Screen



1	 Menu	Go to the Main Menu.
2	Category	Swipe left and right to switch between categories.
2-1	 Home/Category Setting	Changes the order of the Home screen settings or menu categories.
3	 Play All	Play all songs in the selected category.
4	Music List	Display the playlist in the current category.
5	Music Player Screen	A mini player screen for the current song.

6	 Services	View the service app list and install /run apps.
7	 Search	Enter keywords to display a list of songs with the search terms in their names.
8	 Edit Mode	Display the editing options for the playlist.
9	 Sort	Set the sort options for the playlist.
10	 More	Go to the More menu for the selected song. Different items are displayed depending on the selected category.  : Add the selected song to play next  : Add the selected song to play last  : Add the selected song to the playlist  : Delete the selected song
11	 Home Screen	Go to the Home screen.
12	 Previous Screen	Return to the previous screen.