 



THE
SHARPER
IMAGE®

SOUND SOOTHER®
CD/RADIO/ALARM CLOCK

SI735 Instructions

 SHARPER IMAGE DESIGN™

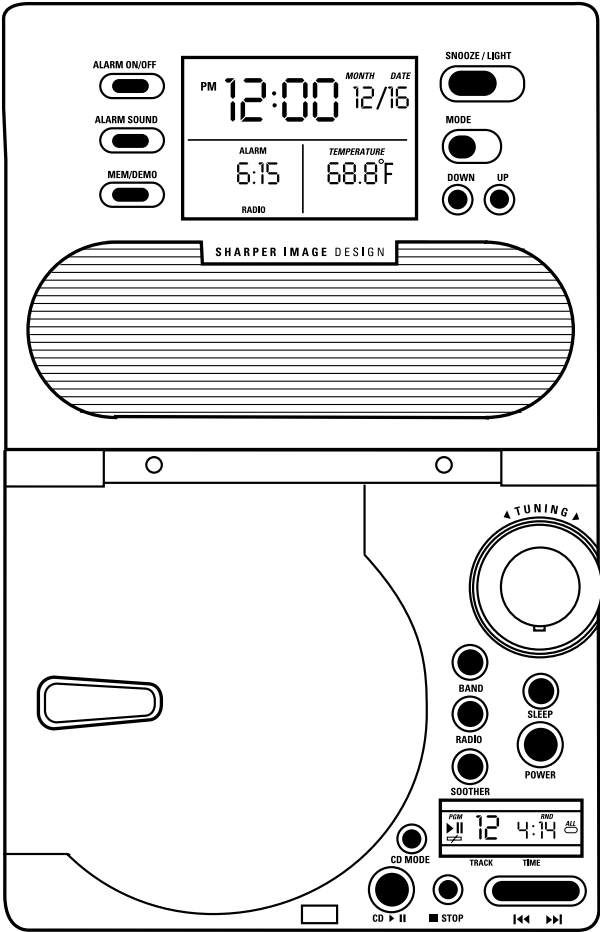



Dear Customer,

Thank you for your purchase of a Sharper Image Design™ product. You have received a quality product, backed by a one-year warranty. Your satisfaction as a Sharper Image customer means everything to us. We look forward to serving you now and in the future.

Over 500 other affordable, fun, and useful products are available through The Sharper Image® Catalog and retail stores. To receive a copy of our catalog or for the address of the store nearest you, please call our toll-free number 1-800-344-4444.

 
Enjoy your purchase!

 
Richard

*Richard Thalheimer
Founder and Chairman*

sharperimage.com

Shop our complete Internet catalog.
Online ordering is protected by Secure Sockets Layer technology.





DESCRIPTION AND TABLE OF CONTENTS


The portable CD Alarm Clock/Radio with Sound Soother[®] offers the most popular audio features in one compact unit. Perfect for travel, convenient for bedside, and small enough to sit on a desktop.

Additional features include: a display for month and date, temperature display, and a jack to use with the included “bud” style headphones.

It includes a telescoping antenna for FM reception, and an internal antenna for AM radio broadcasts.


NOTE: The quality of AM reception can be adjusted by changing the position of the unit itself. Re-position the telescoping antenna to alter FM reception.

DISPLAY AND CONTROLS	Page 1
AUDIO CONTROLS	Page 2
BATTERY INFORMATION	Page 3
SETTING THE CLOCK	Page 5
SETTING THE CALENDAR	Page 6
SETTING THE ALARM	Page 8
RADIO PRESETS	Page 9
SOUND SOOTHER [®]	Page 10
CD PLAYER FEATURES	Page 12
INTERNATIONAL & SLEEP	Page 13

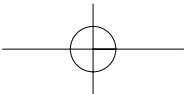


1


DISPLAY AND CONTROLS

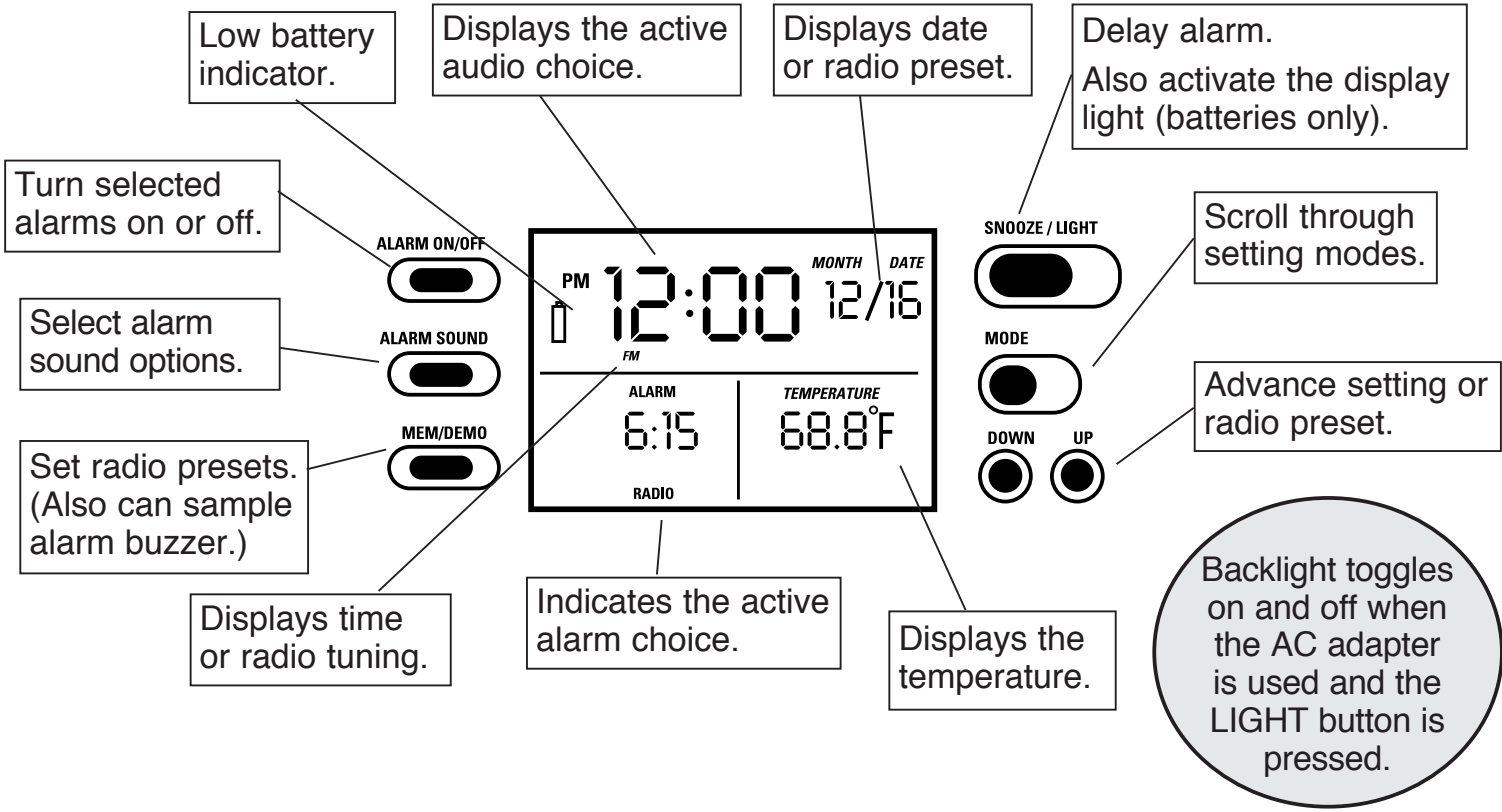

AUDIO CONTROLS

  2

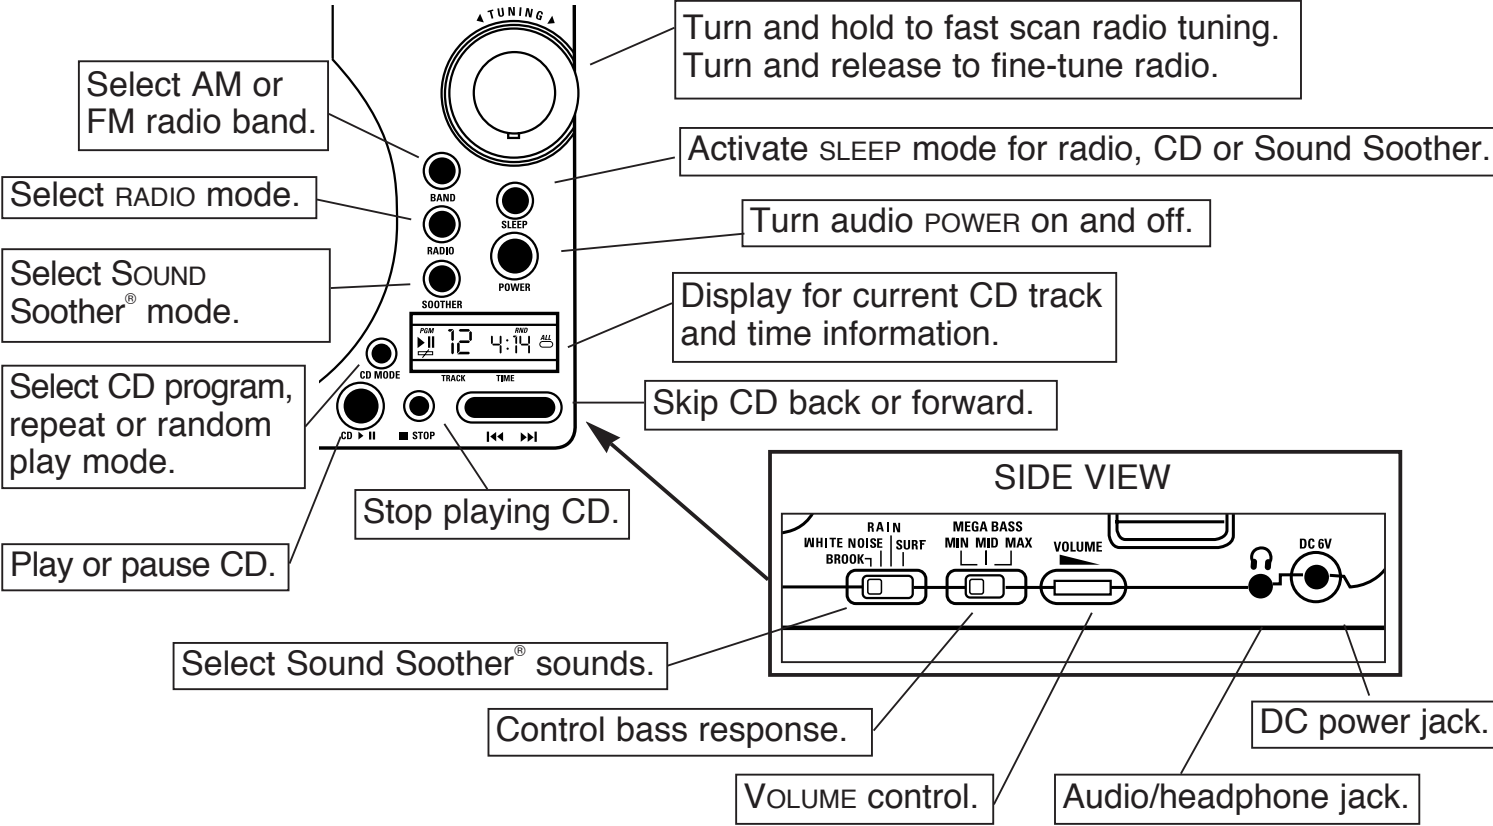




3


BATTERY INFORMATION

 
Icon indicates low/weak battery.

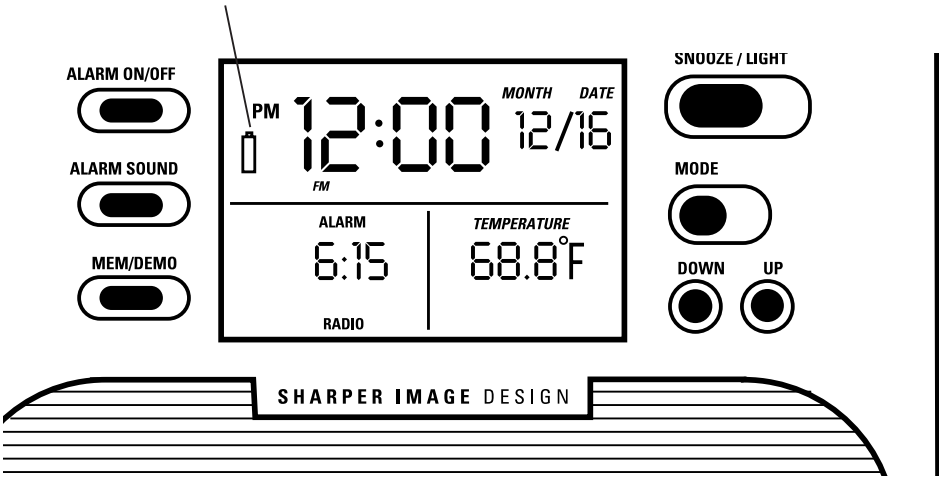

An optional AC adapter may be plugged into the jack located on the side of the unit. This adapter can be used to power the alarm, CD player, Sound Soother, and radio only. The SNOOZE/LIGHT button toggles the display backlight on and off when powering the unit with the adapter.

 One CR2032 button battery is required for the clock and display to function properly. The clock battery should only be removed when being replaced with a new battery.



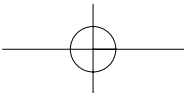

BATTERY INFORMATION


4

CD/RADIO/ALARM AND SOUND SOOTHER BATTERIES

Requires four AA alkaline batteries, or optional AC adapter. Replace old batteries with new ones when the **WEAK BATTERY** icon flashes on the LCD screen. Controls will not function without these batteries or the AC adapter in place. The AA batteries should be removed when the unit is to be powered mainly by the AC adapter.


This product has two battery compartments.


To access the battery compartments, slide the covers as indicated.

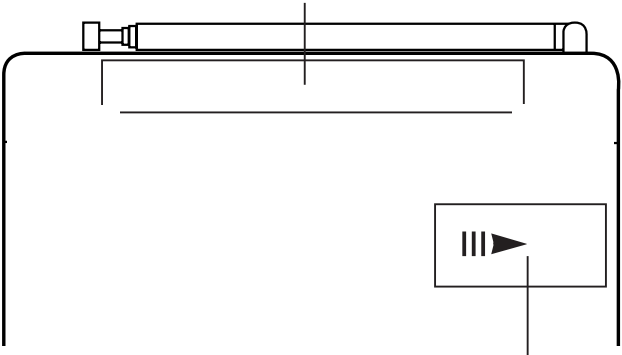

CLOCK/BACKUP BATTERY AND RESET BUTTON

This unit is shipped with one CR2032 battery in place. Activate the battery for the first time, by removing the shipping tab, pulling it away from and out of the battery compartment. This compartment also houses a reset button. Use a small object, such as an unbent paper clip, to press the reset button if the unit or display malfunctions.

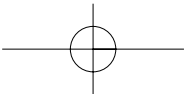


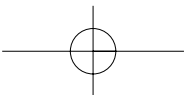


5

SETTING THE CLOCK


Press the MODE button
Until the hour setting flashes.

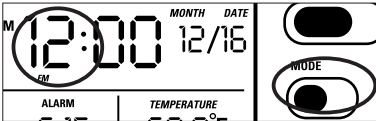



Press UP or Down
To change the hour setting.

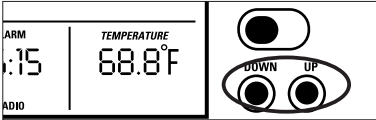

Press the MODE button
Until the minute setting flashes.

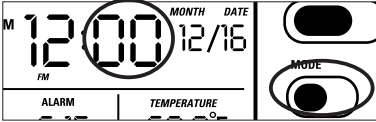



Press UP or Down
To change the minute setting.

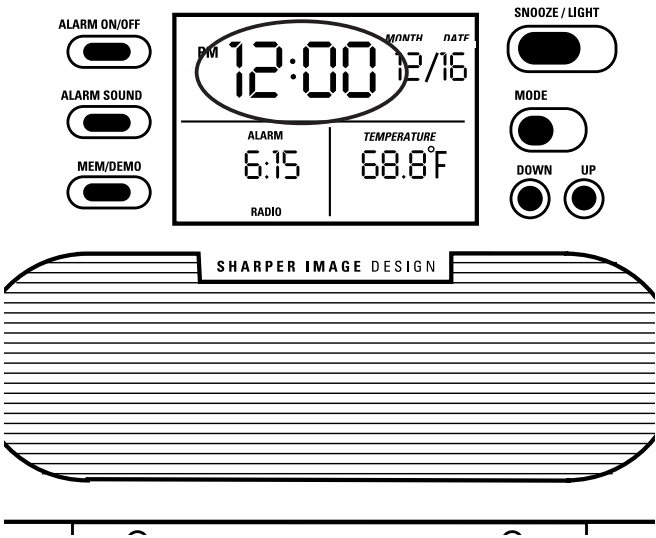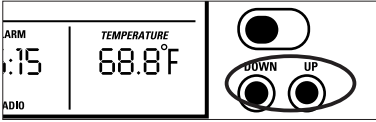

Press and hold buttons to quickly advance the settings.

If the setting is advanced past midnight, the time will be displayed in 24 hour (military) format. Continue advancing to switch back to 12 hour (US standard) time display.

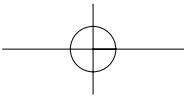

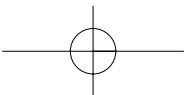

SETTING THE CALENDAR

6

Press the MODE button

Until the year display is flashes.

Press UP or DOWN

To change the year.

Press the MODE button

Until the month flashes.

Press UP or DOWN


To change the month.

Press the MODE button


Until the date flashes.

Press UP or DOWN

To change the date.

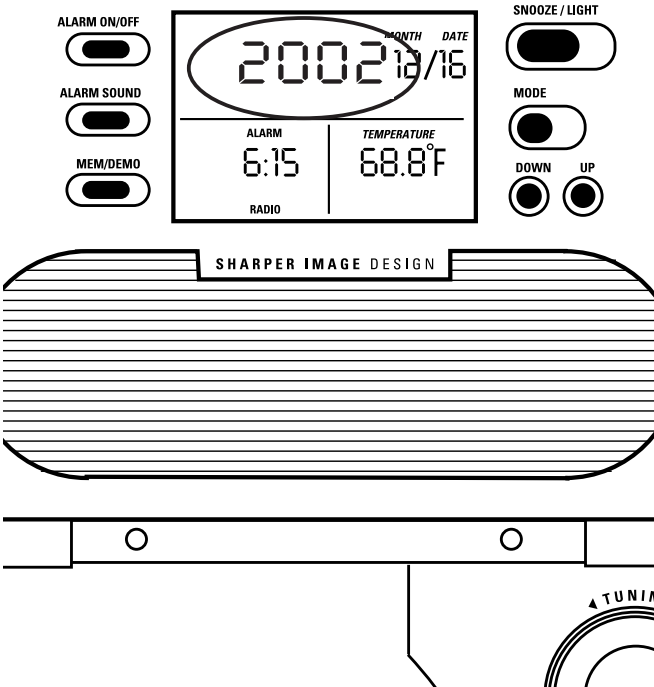

Press and hold buttons to quickly cycle through the display.

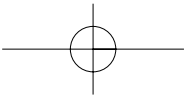


7

SETTING THE ALARM


Press the MODE button

Until alarm hour flashes.

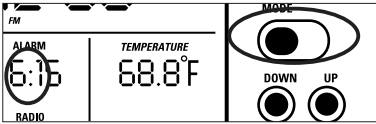


Press UP or DOWN

To change alarm time hour.

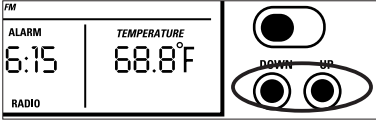


Press the MODE button

Until alarm minutes flashes.

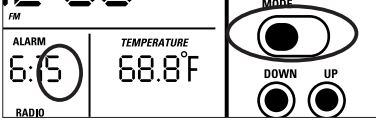


Press UP or DOWN

To change alarm time minutes.

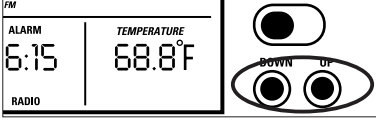

Press ALARM SOUND

To select alarm sound.

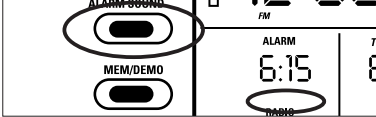


Selecting RADIO alarm will default the alarm to the last selected radio station.

ALARM ON/OFF

ALARM SOUND

MEM/DEMO

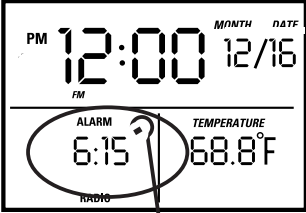

SNOOZE / LIGHT


MODE


DOWN

UP

When this alarm icon is on the screen, it tells you that the alarm will go off at the time you selected.

If no button is pressed, new setting is saved and the display returns to normal operation.

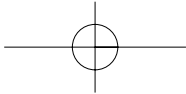

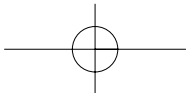

ADDITIONAL ALARM FEATURES

8

SNOOZE


Press the SNOOZE button when the alarm sounds to delay the alarm for up to thirty minutes. Each press adds 10 minutes to the delay time. (Press 1X for 10 minute snooze, 2X for 20 minutes and 3X for the maximum 30 minutes snooze delay.) If the ALARM ON/OFF button is not pressed, the snooze feature will repeat three times, and then the alarm will reset itself for the next day.

AUTO-SNOOZE (Buzzer Only)

If no buttons are pressed the alarm will continue for one minute, after which time the snooze feature will be automatically activated. The alarm will sound again after nine minutes. This will repeat three times before the alarm will turn off and reset itself for the next day.

AUTO-RESET

If the ALARM ON/OFF button is used to turn the alarm off, the alarm is automatically reset for the next day. If no button is pressed within the first minute of the radio, or CD alarm activating, the unit will power off automatically after 30 minutes, and the alarm will reset for the next day. To completely de-activate the alarm, press the ALARM ON/OFF button a second time.

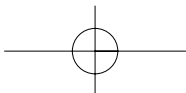


9

SETTING THE RADIO PRESETS


Press RADIO

(Power must be on.)

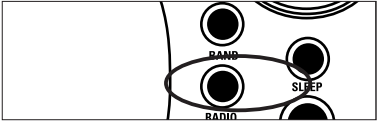


Tune to desired station.

(Use tuning knob.)

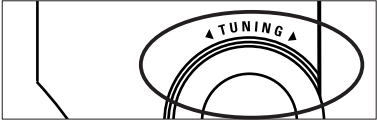


Press MEM/DEMO

Active preset number flashes.

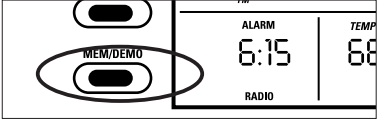


Press UP or DOWN

To change active preset number.

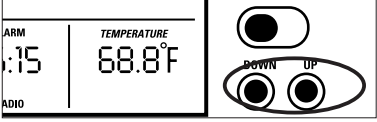


Press MEM/DEMO


To lock selection to memory.

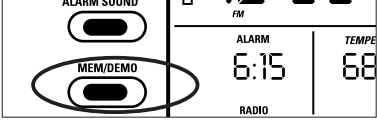

Up to 10 preset stations can be programmed for AM and FM.

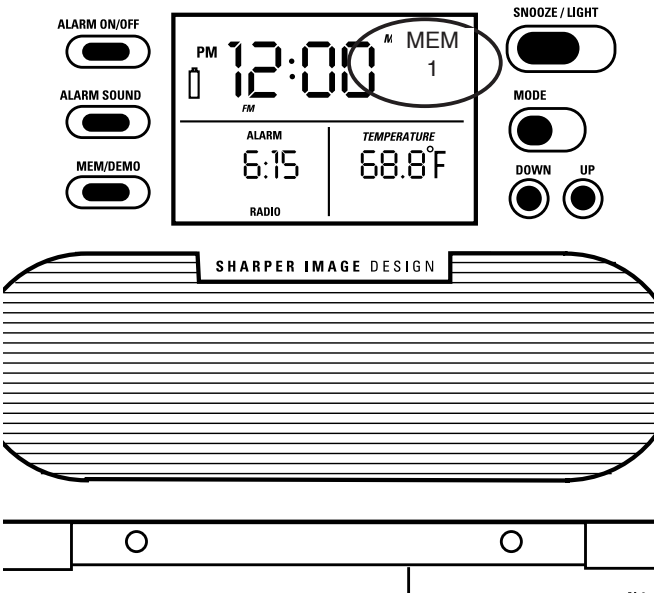

Pressing UP or DOWN when the radio is playing, will scan up and down instantly to preset stations.

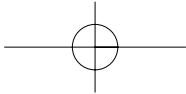

SOUND SOOTHER®


10

The Sound Soother provides a relaxing atmosphere of soothing background sounds of nature. It can be used to effectively mask out surrounding noises, such as traffic, loud neighbors and even snoring.

It has been generally found that the Sound Soother volume does not need to be very loud to be effective. Most people find that even with the Sound Soother positioned at a low volume, they will be able to ignore distracting noises, and improve their relaxation.


Press SOOTHER

To select Sound Soother mode.

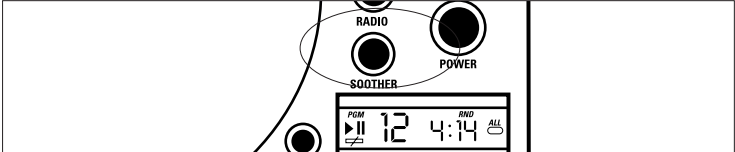


Use the soother switch

To select Sound Soother sound.

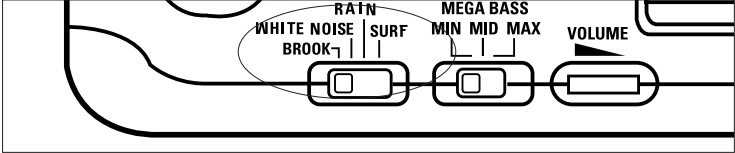

The Sound Soother® will turn off when the alarm sounds, but it cannot be used as an alarm.

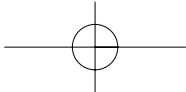

11

CD PLAYER CONTROLS

WHEN CD IS PLAYING:
Press to select either single track repeat, or entire CD replay.

WHEN CD IS NOT PLAYING:
Press to toggle between random and regular play order .


WHEN CD IS NOT PLAYING:
Press to begin playing CD or CD program.

WHEN CD IS PLAYING:
Press to toggle between pause and play.


Press to stop playing the CD and to indicate completion when programming .

WHEN CD IS NOT PLAYING:
Press to forward or reverse track selection by 1 .

WHEN CD IS PLAYING:
Press and release to forward or reverse track selection by 1.
Press and hold to scan forward or backward within the track that is playing.

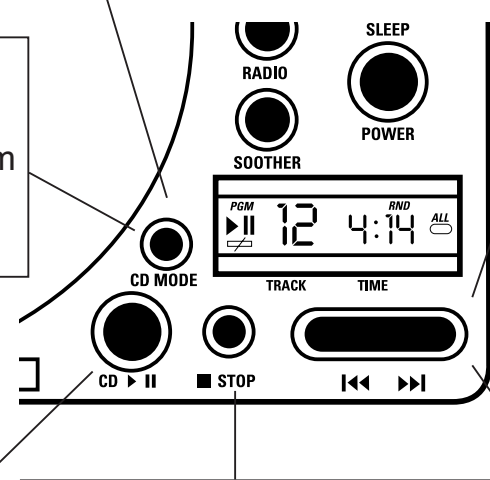

The diagram shows the control panel of a CD player. At the top are three buttons: RADIO, SLEEP, and POWER. Below them is a SOOTHER button. In the center is a digital display showing 'PGM 12 4:14 RND ALL' with 'TRACK' and 'TIME' labels. To the left of the display is a CD MODE button. Below the display are two buttons: CD > II and a square STOP button. To the right of the STOP button are two large buttons with double arrows (left and right) for track selection. Callout lines connect these controls to their respective functions described in the surrounding text boxes.

 


CD PLAYER ADVANCED FEATURES

12

The CD player can be accessed by pressing on the side and lifting it open. This cover must be closed to operate the CD player.


REPEAT/AUTO-REPLAY:

Press MODE, while the unit is playing, to toggle through the repeat feature. A “1” on the display indicates a single track replay. An “ALL” on the display indicates continuous replay for the entire CD. Pressing one more time cancels the repeat/replay program.

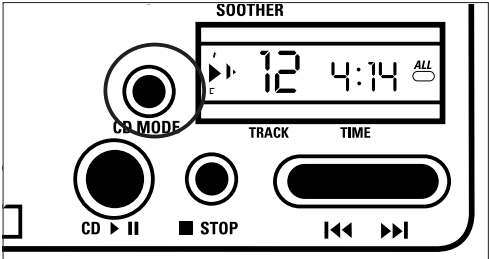



RANDOM PLAY:

Press MODE, while the unit is stopped, until the display indicates “RND”. Press play to begin. The CD will now play in random order.

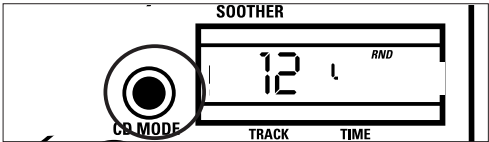

PROGRAMMED PLAYBACK:

Press MODE, while the unit is stopped, until the display indicates “PROGRAM”. Select a track to play by using the FORWARD or REVERSE buttons. Program the selected track by pressing MODE. Continue until all desired tracks have been selected and programmed. Press stop when selections are complete and to end programming.

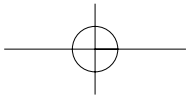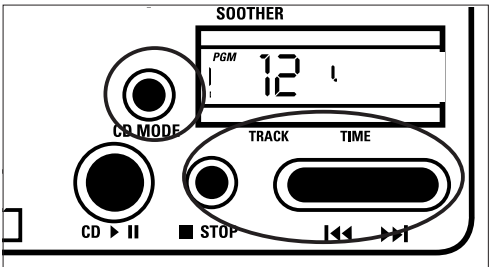


13 INTERNATIONAL AND SLEEP TIMER FEATURES

Press the MODE button

Until the temperature flashes.

Press UP or DOWN


Selects Fahrenheit or Celsius.

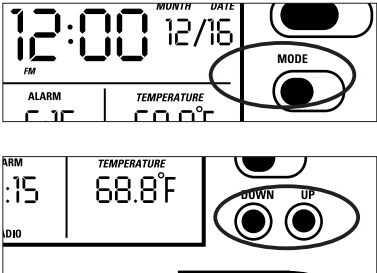

ALARM ON/OFF

ALARM SOUND

MEM/DEMO

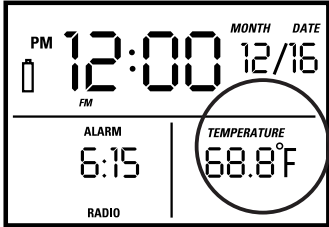


SNOOZE / LIGHT

MODE

DOWN


UP

 
Change the AM scanning rate from 10kHz (US) to 9kHz (European) by pressing MODE until the main display flashes the current setting (either 9 or 10). Press UP or DOWN to change the selection.

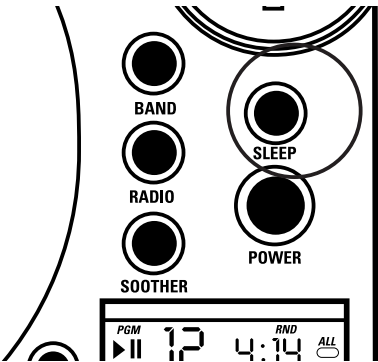

Use the sleep timer to fall asleep to the Sound Soother, radio or CD. The selected audio will automatically shut off after the programmed time.

To operate the timer: Press the sleep button to activate the timer for 15 minutes, each additional press will add a fixed number of minutes to the timer. The timer can not be set for more than 60 minutes.

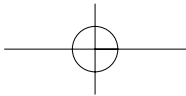

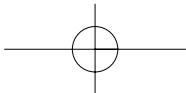

MODEL:SI735


WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE:

This product complies with DHHS Rule 21 subchapter J at date of manufacture. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for assistance.

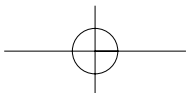



WARRANTY

We warrant to the original user that this product shall be free from all defects in material or workmanship for one year from the date of purchase. This warranty does not apply to any product which has been subject to abuse, misuse, negligence or accident, nor does it apply to any batteries which may be supplied with the product. Defects caused by tampering, unauthorized alterations or repairs are not covered by this warranty. We may elect to replace the entire unit, at no extra cost to you, with the same model or a similar model rather than repair it.

If a defect covered by this warranty should occur, return the product along with proof of purchase, a check or money order for \$5.00 to cover shipping and handling, and a brief explanation of the problem to:

TSI - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

We have found through experience that if a product uses batteries, many of the problems thought to be product defects are simply caused by weak batteries. To save any unnecessary inconvenience, we encourage you to try replacement batteries before you return the product. Please feel free to call our customer service representatives at 1-800-344-5555 with any questions.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2002
Sharper Image Corporation
San Francisco

PRINTED IN HONG KONG
V6

