


amazonbasics

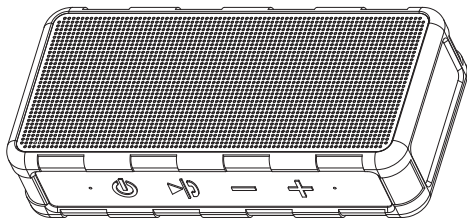

Portable Outdoor IPX5 Waterproof Bluetooth Speaker

Enceinte Portative Bluetooth Étanche IPX5 pour l'Extérieur

Tragbarer, Wasserfester Outdoor-Bluetooth-Lautsprecher, IPX5

Altoparlante Bluetooth Impermeabile IPX5 Portatile per Esterno

Altavoz Bluetooth Impermeable IPX5 Portátil Para Exterior

Draagbare IPX5 Waterdichte Bluetooth-Luidspreker voor Buiten

B081HCHC4Y, B081HD1ZR1, B081HD9TRN

English	3
Français	16
Deutsch	28
Italiano	40
Español	52
Nederlands	64

IMPORTANT SAFETY INSTRUCTIONS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- Read these instructions.
- Keep these instructions.
- Heed all instructions.
- To avoid accidental falls into pools, bathtubs or other water containers, do not place it at the edge.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- Refer all servicing to qualified service personnel.
- No naked flame sources, such as lighted candles, should be placed on the product.
- This product is only suitable for use in moderate climates. Do not use it in tropical or in particularly humid climates.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Battery Warnings

**WARNING**

Risk of explosion! Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

- The battery contained in this product is non-replaceable. Do not throw the product into a fire. Before disposal, the battery must be removed from the product. Contact qualified professional.
- Do not leave the battery charging for a prolonged period of time when the product is not in use.
- Do not charge the battery overnight.
- If the product appears to be bulging or shows other undesirable phenomena (e.g. excess noise), stop using the product immediately.
- Do not cover the product while charging the battery. Charge the product in a well-ventilated environment.
- Charge the product once every 3 months to avoid shortening its battery life.

Symbols Explanation



This symbol stands for “Conformité Européenne”, which means “Conformity with EU-directives”. With the CE-marking the manufacturer confirms that this product complies with applicable European directives and regulations.

IPX5

This product is protected against water jets from any direction (when the lid of charging port is closed). Do not immerse in water.




Direct current (DC)





Intended Use

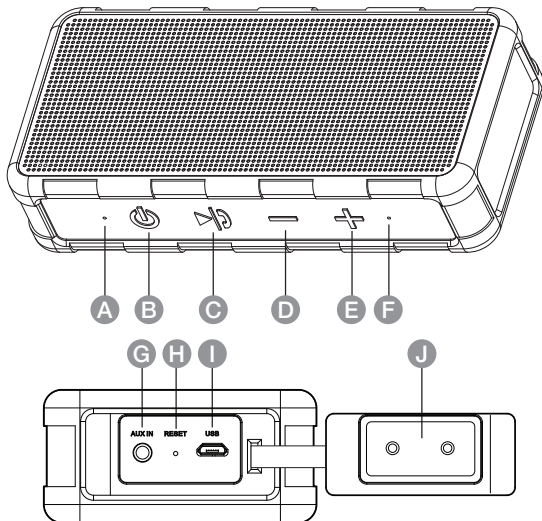- This product is intended for outdoor and household use only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Product Description





- A Charging/pairing indicator
- B  On/off
- C  Press to play/pause the playback
- D  Long press to return to the previous track. Short press to decrease volume
- E  Long press to skip to the next track. Short press to increase volume
- F Microphone
- G **AUX IN** socket
- H **RESET** switch
- I **USB** socket
- J Side flap
- K USB cable

NOTICE To keep the product splash-proof, make sure the side flap (J) is closed.

Before First Use

- Check the product for transport damages.
- Remove all the packing materials.

**DANGER**

Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

Operation

Charging built-in battery

- Connect the USB cable (K) to the **USB** socket (I).
- Connect the other end of the USB cable (K) to a USB-A port on a computer or a suitable power adaptor 5 V $\overline{=}$ 1 A. The charging indicator (A) stays lit when charging.
- The product is fully charged when the charging indicator (A) goes off.

Switching on/off

Press and hold the  button (B) for 2 seconds.

NOTICE


The product automatically switches off approximately after 20 minutes of inactivity.

Pairing mode


NOTICE

Bluetooth® pairing is required if the speaker is used for the first time with a new Bluetooth® enabled device.

Model number:	Bluetooth® device name:
B081HCHC4Y B081HD1ZR1 B081HD9TRN	AmazonBasics WP522

- After switching on, the pairing indicator (A) flashes slowly for approximately 10 seconds while the speaker scans for a previously paired devices.
- To go straight to pairing new device, press and hold the  button (C) for 2 seconds.
- When the pairing indicator (A) flashes rapidly, the speaker is ready for pairing.
- Activate Bluetooth® on the device you wish to pair and search for a new device.
- When searching finishes, select “AmazonBasic WP522 from the list on your device.
- Once the devices are paired, the pairing indicator (A) stays lit.

Disconnecting Bluetooth®

- Press and hold down the  button (C) to disconnect a connected device.
- The product returns to pairing mode once disconnect from a paired device.


Auxiliary input mode

- Connect an 3.5 mm audio cable (not included) to the **AUX IN** socket (G) and to the desired playback device e.g. MP3 player.

- The indicator (A) stays lit after AUX cable is connected.


Music playback


 : Press to play/pause the playback.


 : Long press to skip to the next track.

 : Long press to return to the previous track.

Calling

 : Press to accept/end call.

 : Press and hold to reject call.

 : Press and hold during a call to switch back to mobile device speakers, and vice versa.

Volume control

NOTICE The volume resets to the medium level after each start up.

 : Short press to increase volume.

 : Short press to decrease volume.

Factory reset

If the product is not functioning properly, press and hold the **RESET** switch (H) with a pointed object (for example a paper clip) to reset to original factory settings.

Cleaning and Maintenance

NOTICE Switch the product off before cleaning.

NOTICE During cleaning do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

Cleaning

- To clean the product, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Storage

- Store the product in its original packaging in a dry area. Keep away from children and pets.

Trademarks



The Bluetooth® word mark and Logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by AmazonBasics is under license. Other trademarks and trade names are those of their respective owners.

Simplified EU Declaration of Conformity

- Hereby, Amazon EU Sarl declares that the radio equipment type B081HCHC4Y, B081HD1ZR1, B081HD9TRN is in compliance with Directive 2014/53/EU.

- The full text of the EU declaration of conformity is available at the following internet address: https://www.amazon.co.uk/amazon_private_brand_EU_compliance

FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Canada IC Notice

- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - (1) this device may not cause interference, and
 - (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- This equipment complies with FCC and Industry Canada radiation exposure limits set forth for an uncontrolled environment.
- This Class B digital apparatus complies with Canadian CAN ICES-3(B) / NMB-3(B) standard.

Battery Disposal



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

Disposal



The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Feedback and Help

Love it? Hate it? Let us know with a customer review. AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.




US: amazon.com/review/review-your-purchases#
UK: amazon.co.uk/review/review-your-purchases#



US: amazon.com/gp/help/customer/contact-us
UK: amazon.co.uk/gp/help/customer/contact-us

Specifications

Input:	5 V  1A
Battery type:	Lithium battery, 3.7 V, 1300 mAh
Operation frequency:	2.402 GHz – 2.480 GHz
RF power:	Max. 5 dbm
Charging time:	4 hours
Rated power output:	2 x 2.5 W
Driver size:	2 x 1.5"
Frequency response:	60 Hz – 20 kHz
Sensitivity:	-5.3 dB
Impedance:	4 Ω
Bluetooth® version:	5.0
Operating distance (range):	32.8 foot (10 m)
IP Rating:	IPX5 (when the lid of charging port is closed)
Net weight:	approx. 0.66 lbs (0.3 kg)
Dimensions: (W x H x D)	approx. 6.37 x 1.45 x 2.99" (16.2 cm x 3.7 cm x 7.6 cm)



amazon.com/AmazonBasics

MADE IN CHINA

FABRIQUÉ EN CHINE

HERGESTELLT IN CHINA

PRODOTTO IN CINA

HECHO EN CHINA

GEMAAKT IN CHINA

FCC ID: HBOWP522B

IC: 1055A-WP522B



V01-04/20