 


MEET YOUR ECHO BUDS

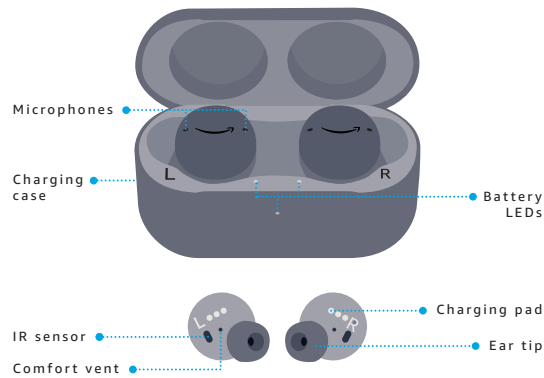

The case button and USB-C charging port are located on the back of the charging case.

ACTIVATE YOUR ECHO BUDS



GET THE ALEXA APP

Install the latest version of the Amazon Alexa app. Setup through the Alexa app is required to activate the full functionality of your Echo Buds.



START SETUP

Open the charging case. Wait for the case LED to pulse blue, indicating the earbuds are in pairing mode.



FOLLOW SETUP IN APP

In the Alexa app, tap the pop-up and follow the on-screen instructions. Completing setup ensures you'll always get the latest software updates.

FIT YOUR ECHO BUDS

To get started, learn how to properly insert your earbuds.

IDENTIFY THE LEFT AND RIGHT EARBUD

Check the L and R indicators on the inner surface of the earbuds.



USE THE LOGO TO ORIENT THE EARBUD

Turn the earbud so the smile logo is right-side up. Then place the earbud in your ear and rotate slightly to get a snug and secure fit.



Test your fit with the ear tip fit test in the Alexa app.

PERSONALIZE YOUR FIT

EAR TIPS

For the best audio quality, the ear tip should feel snug but comfortable.



 
PICK A SIZE

Size medium is preinstalled.

WING TIPS (OPTIONAL)

The wing tips can help secure the earbuds, especially during exercise.

Caution: To avoid tearing, hold by the wing and gently pull over the earbud.

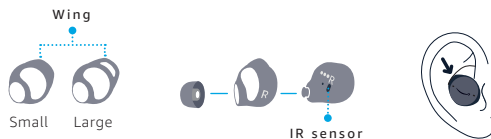

1. FIND YOUR FIT

Try both sizes.

2. INSTALL

Do not cover IR sensor.

3. PLACE IN EAR

 
Tuck wing tip.

TAP TO CONTROL

To use tap controls, tap the center of either earbud.

TAP CONTROLS

- Single tap
- Double tap
- Triple tap
- Long hold

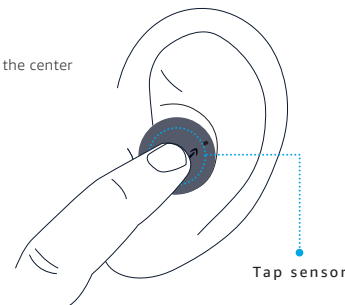

Customize your tap controls by assigning actions such as:

Play/pause
Next track
Siri or Google Assistant

Active noise cancellation
Passthrough
Answer/end call

Learn more and define your own tap controls in the Alexa app.

ALEXA IS DESIGNED TO PROTECT YOUR PRIVACY



WAKE WORDS AND INDICATORS

Alexa doesn't begin listening until your Echo device detects the wake word (for example, "Alexa"). An audible tone lets you know when audio is being sent to Amazon's secure cloud.



MICROPHONE CONTROLS

You can mute the microphones in the Alexa app or by configuring a custom tap control. In addition, if you remove an earbud from your ear, access to Alexa will be disabled for that earbud.



VOICE HISTORY

Want to know exactly what Alexa heard? You can view and delete your voice recordings in the Alexa app at any time.

These are just a few of the ways that you have transparency and control over your Alexa experience. Explore more at amazon.com/alexaprivacy.

TALK TO ALEXA

 
"Alexa, what can you do?"



To try asking Alexa a question, simply say "Alexa," then ask. See the included Things to Try card to help get you started.

CHECK THE BATTERY LEVEL

"Alexa, what's my battery level?"

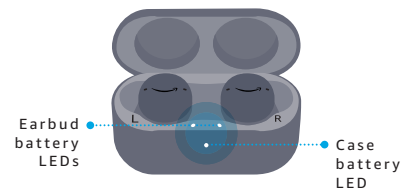

EARBUD CHARGE LEVEL

More than 40%

Less than 40%

Battery low



CASE CHARGE LEVEL

Greater than 1 full charge

Less than 1 full charge

Battery low

When the case is closed, the LED on the case displays earbud charge level.



To charge your Echo Buds, place them in the case.



Always wipe off any sweat or moisture from your Echo Buds before charging.

CONNECT TO OTHER DEVICES

1

OPEN THE CASE

Open the Echo Buds charging case, then press the case button for 3 seconds.

2

WAIT FOR BLUE LED TO PULSE

The light on the front of the case will pulse blue, indicating that your Echo Buds are discoverable and ready to pair.

3

PLACE ECHO BUDS INTO EARS

Insert the earbuds in your ears and complete pairing on your device

You will need to pair and activate your Echo Buds through the Alexa app before pairing with other devices.



GIVE US YOUR FEEDBACK

Alexa will improve over time, with new features and ways to get things done. We want to hear about your experiences. Use the Alexa app to send us feedback or visit www.amazon.com/devicesupport.



TROUBLESHOOTING

For troubleshooting and more information, go to Help & Feedback in the Alexa app.