



Mug Warmer

Model: SMW12 / BK

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs or the appliance in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to Salton for examination, repair or adjustment. See Warranty.
8. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
9. The use of accessories or attachments not recommended by Salton may cause hazards.

10. Extreme caution must be used when moving an appliance containing hot liquids, including wax.
11. When using candles, use only tempered glass or metal containers, containers get hot.
12. Some candles tend to overflow when melted. Watch carefully.
13. **WARNING:** Do not light the wick of the candle when using the Warmer.
14. Remove the cover of the candle when using the Warmer.
15. Do not use outdoors.
16. Do not let cord hang over edge of table or counter or touch hot surfaces.
17. Do not place on or near a hot gas or electric burner or in a heated oven.
18. Always attach plug to appliance first then plug into the wall outlet. To disconnect remove the plug from the wall outlet and then remove other end from appliance.
19. Do not use appliance for other than its intended use.
20. Do not leave unit unattended while in use.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

HOW TO USE

This product is designed to keep hot beverages at the right drinking temperature, warm candles to release their aroma or keep gravy at the correct serving temperature.

Mug or Gravy:

1. Place the mug warmer on a level, heat and stain resistant surface.
2. Simply set your cup or mug (glass or ceramic), on the black warming surface of the mug warmer. Use a gravy boat that sits level on the black warming section of the mug warmer. Do not use a gravy boat that is on a stand.
3. Plug into the nearest 120 volt wall electrical outlet.
4. Turn the wheel on the On/Off Switch to the ON position - it will click as it switches between ON and OFF. The indicator light on the unit will glow when it is in the ON position.

IMPORTANT NOTES:

- This appliance is not intended for use with plastic or Styrofoam cups.
- This appliance is not intended to heat a beverage, only to maintain a drinking temperature.
- This appliance will remain 'ON' until it is switched to the 'OFF' position and the indicator light is out. Unplug when not in use.

Candle:

1. Place the mug warmer on a level, heat and stain resistant surface.
2. Remove the lid from the candle before warming.
3. Please the candle, in a tempered glass or ceramic holder on the black warming surface.
4. Plug into the nearest 120 volt electrical wall outlet.
5. Turn the wheel on the On/Off Switch to the ON position - it will click as it switches between ON and OFF. The indicator light on the unit will glow when it is in the ON position.

IMPORTANT NOTES:

- If the candle is not melting make sure that the indicator light is on and that the candle jar lid has been removed.

- All candles, wax chips, tarts, etc. must be in a jar or dish.
- NEVER light the wick of the candle when warming.
- Once a candle has been melted by a candle warmer it is not recommended that you light the wick and burn the same candle.
- 18 ounce (510 g) or smaller candles are recommended
- This appliance will remain 'ON' until it is switched to the 'OFF' position and the indicator light is out. Unplug when not in use.

CARE AND CLEANING

1. Always unplug the appliance and let it cool before cleaning.
2. Clean the warmer by wiping with a cloth dampened in warm soapy water. If candle wax spills on the candle warmer, use a plastic spatula or credit card to scrape the wax off. Use a paper towel to rub off any remaining wax. Do not use metal or any other sharp objects to scrape off melted wax.
3. Dry thoroughly.
4. NEVER immerse the warmer in water or any other liquid.
5. NEVER use abrasive cleaning products, bleach or alcohol.
6. Any servicing, other than cleaning, should be performed by an authorized service representative.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

** The original sales receipt is the only acceptable proof of purchase**

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Appliances (1985) Corp. at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

OR

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

Salton Appliances (1985) Corp.
 81A Brunswick, Dollard-des-Ormeaux, Quebec H9B 2J5 Canada
 Telephone: 514-685-3660 (Ext. 226) Fax: 514-685-8300
 E-mail: service@salton.com www.salton.com