

LCD MONITOR

SHARP INFORMATION DISPLAY WEB BROWSER Application OPERATION MANUAL

Introduction

This software,

- · Can browse any web sites through the internet.
- · A network environment that allows access to the internet is required.

Important Information

- This software has been shipped after strict quality control and product inspection. If, however, you find any failure, contact your product dealer.
- Please understand that SHARP CORPORATION bears no responsibility for errors made during use by the customer or a
 third party, nor for any other malfunctions or damage to this software arising during use, except where indemnity liability is
 recognized under law.
- Transcribing or duplicating part or all of this manual and/or this software without permission from our company is not permitted.
- As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice.
- · The screens and procedures are examples. The contents or details may vary. The screen is for explanatory purposes.

Trademarks

- · Google and Android are trademarks or registered trademarks of Google LLC.
- · All other brand and product names are trademarks or registered trademarks of their respective holders.

Note

• This manual is valid to version 94.10.4606.71 and later of the Web Browser application.


How to use

Starting this software

Follow the steps below to start this software.

• On the home screen or the all apps screen, tap the "Web Browser" icon ().

Main Screen

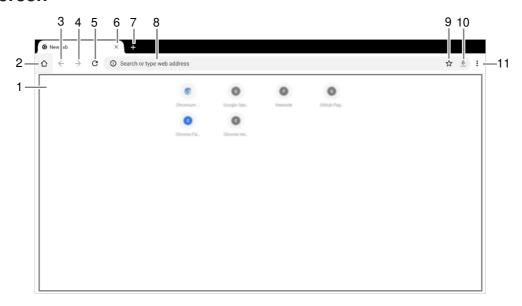

- 1. Window that a web page is shown.
- 2. Homepage icon

A Web page registered as top page will open.

(See "8. Homepage" in "Settings Screen" how to set URL.)

This icon will not appear in the case of Homepage OFF.

3. Back icon

Back to previous web page which has been shown.

4. Forward icon

Go to next web page which has been shown.

5. Update icon

Reload a web page which is shown currently.

6. Close mark

Close a tab of browser.

7. Open mark

Open a new tab of browser.

Address bar

Put words to be searched or URL of a web page to be accessed.

The registered search engine will be opened in the case of inputting words.

(See "2. Search engine" in "Setting Screen" about how to register different search engine.)

A Web page corresponding with the URL will be opened in the case of inputting a URL.

9. Book mark icon

Memorize a URL shown on the window as a book mark.

10. Download icon

Download a web page shown on the window as a file.

11. Menu button

Display below menu of Web Browser.



- 11-1. Open a new tab.
- 11-2. Show the history of accessed web page.
- 11-3. Show the list of downloaded files.

(Note) It may be necessary to install an application software in order to make a downloaded files available.

- 11-4. Show the list of memorized book marks.
- 11-5. Show the list of tabs recently used.
- 11-6. Switch to Mobile site or Request desktop site

Mobile site : request a web page for mobile devices to a web site.

Request desktop site : request a web page for computer to a web site.


(Note) This setting has the purpose to display a web site contents depending on if a mobile device or desktop device is being used. There may be cases when a web page may not show correctly or contents on a web page may not change even when switching this setting. Reload a web page after switching this setting in order to update displayed content.

11-7. Open Settings screen.

The opening Setting screen requires the admin password authentication, if using on the monitor that supports the Lock Admin Password.

Monitors which support the admin password: PN-L652B, PN-L752B, PN-L852B

Settings Screen

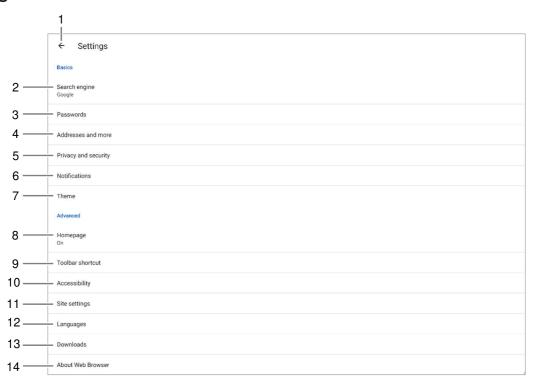

Back icon 1.

Close the Settings screen, and back to previous screen.

Search engine 2.

Choose and register a search engine which you want to use.

3.

Open some settings for password

- Save passwords Set ON / OFF of this function.

- Auto Sign-in Set ON / OFF of the function to sign-in to a web site automatically with using saved

credentials.

- Check Passwords This function is not available.

Address and more

Set ON / OFF of the save function such as address, phone number, and e-mail address.

Privacy and security

- Clear browsing data Delete browsing history, cookies, site data, cache files, etc.

- Safe Browsing Select a safe browsing protection level. - Always use secure connections Set the HTTPS priority mode ON / OFF.

When turned on, HTTPS will be used preferentially when accessing web pages, and

sites that do not support HTTPS will be warned before loading.

- Preload pages for faster browsing

Set ON / OFF of the page preload function. and searching

When turned on, the pages that are expected to be accessed are preloaded when the

web page is displayed.

- Use secure DNS Set ON / OFF of the secure DNS usage setting.

If it is ON, set the provider to be used.

- Do Not Track Set ON / OFF of tracking refusal.

When turned on, a tracking refusal request will be sent along with the browsing traffic.

(Note) Whether or not to respond to the request depends on the website.

- Privacy Sandbox Set ON / OFF of the privacy sandbox function.

Notifications 6.

Set ON / OFF of various notifications from the web browser application.

7.

Select a display design theme.

Homepage 8.

Set ON / OFF of the homepage function. If it is ON, set the home page to be used. Toolbar shortcut

Set ON / OFF of the toolbar shortcut function. If it is ON, select the shortcut function to use.

10. Accessibility

- Text scaling Change the text size of the web page.

(Note) The settings may not be reflected, such as when the website does not allow

changes.

- Force enable zoom Set ON / OFF of the function that forcibly enables zooming.

When turned on, the website's zoom prevention request will be overwritten.

- Simplified view for web pages Set ON / OFF of the simple display function.

When turned on, if the web page supports simple display, simple display will be

proposed.

11. Site settings

Change website permission settings.

If you select a website from "All Sites", you can set the permissions to be granted from the list of permissions used by the

If you select various permissions, you can set the websites to which the permissions are granted from the list of websites that use the permissions.

12. Languages

- Web Browser's language Select the language you want to use in your web browser.

- Content languages Set the language used to display the website.

If the website supports it, it will be displayed in the set language.

13. Downloads

- Download location Select the media on which you want to save the downloaded file.

If no external storage (USB flash drive, SD card, etc.) is connected to the monitor. only "Download" (internal storage) can be selected. If external storage is connected

to the monitor, you can select from "Download" and "External storage".

If you select "Download", it will be saved in the following folder.

[Shared folder of internal storage] / Download

If you select "External storage", it will be saved in the following folder.

[External storage root folder] /Android/data/jp.co.sharp.visualsolutions.idpiwb

.browser/files/Download

- Ask where to save files Set ON / OFF of the function to confirm the save location of the file when executing

the download.

When turned on, a confirmation dialog for the media on which the file will be saved

will be displayed when the download is executed.

14. About Web Browser

The application version information, operating system information of the running system, and license information are displayed.

Exiting this software

Follow the steps below to exit this software.

• Tap the home icon on navigation bar of the monitor.

