

Breville

ikonTM

Electric Knife Sharpener

Instructions

BKS600



Inspiration. Every day.TM

	Page
Breville recommends safety first	4
Know your Breville ikon Electric Knife Sharpener	6
Operating your Breville ikon Electric Knife Sharpener	7
Care and cleaning	9



Congratulations

on the purchase of your new Breville ikon Electric Knife Sharpener

Breville recommends safety first

Congratulations on the purchase of your new Breville ikon Electric Knife Sharpener. We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

IMPORTANT SAFEGUARDS FOR YOUR BREVILLE IKON ELECTRIC KNIFE SHARPENER

- Carefully read all instructions before operating and save for future reference
- Remove any packaging material and promotional labels before using the knife sharpener for the first time.
- Do not place the knife sharpener near the edge of a bench or table during operation. Ensure the surface is level, clean and free of liquid or other substances.
- Do not place the knife sharpener on or near a hot gas or electric burner, or where it could touch a heated oven.
- Do not use on metal surfaces, for example, a sink drain board.
- Always ensure the knife sharpener is properly assembled before connecting to the power outlet and operating.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Always ensure the knife sharpener is turned off at the power outlet and the cord is unplugged before moving the appliance, when not in use, if left unattended and before cleaning or storing.
- Do not place any part of the knife sharpener in the dishwasher.
- Keep the appliance clean. Follow the cleaning instructions provided in this book.

SPECIAL SAFETY INSTRUCTIONS

- Do not attempt to operate the knife sharpener by any method other than those described in this booklet.
- Do not leave the knife sharpener unattended when in use.
- Handle all knives to be sharpened with extreme care – before and after sharpening.
- Ensure knives to be sharpened are clean and dry.
- Ensure knives to be sharpened are straight-edged. Do not sharpen serrated-edged knives.
- Make sure that only the blade of the knife to be sharpened comes in contact with the rotating ceramic pins of the sharpening wheel.
- Never insert your fingers or other items into the rotating ceramic pins of the sharpening wheel. Keep hands, hair and clothing away from the knife sharpener when the appliance is switched on and the ceramic pins of the sharpening wheel are rotating.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Unwind the cord fully before use.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Do not let the cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure they do not play with the appliance.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- It is recommended to regularly inspect the appliance. Do not use the appliance if the power supply cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville service centre for examination and/or repair.
- Any maintenance, other than cleaning, should be performed at an authorised Breville Service Centre.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Know your Breville ikon Electric Knife Sharpener

20 ceramic sharpening pins

positioned crosswise on the rotating wheel for superbly sharpened knives.

Rotating Wheel

holds ceramic sharpening pins in place

Die cast design

premium quality for sophistication and durability

On/Off button

press and hold down to operate.



Non-slip base

Grips to your bench top and makes knife sharpening easy and comfortable.

Operating your Breville ikon Electric Knife Sharpener

Before first use

Before using your knife sharpener for the first time, remove any packaging material and promotional stickers and labels. Ensure the appliance is switched off at the power outlet and the power cord is unplugged.

Step 1

Collect the knives you wish to sharpen and ensure they are clean and dry.

Step 2

Place the knife sharpener on a flat, dry surface such as a bench top. Insert the power plug of the knife sharpener into a 230/240V power outlet and switch the power on.

The knife sharpener will only sharpen straight edged, stainless steel or carbon steel knives. Do not use serrated knives with the knife sharpener.

Note

Step 3

Hold the knife you wish to sharpen in your right hand. Switch the knife sharpener on by pressing and holding down the On/Off button with index finger of your left hand.

Step 4

Hold the knife firmly by the handle and ensure that the blade edge it is held straight, horizontally, and aligned with the rotating wheel (refer to image fig.1 and 2). Place the thickest part of the blade (located just above the handle) into the ceramic sharpening pins of the rotating wheel. With slight pressure, pull the knife slowly towards you so that the blade of the knife, from the thick end of the blade to the tip, passes through the ceramic sharpening pins (this will take approximately 3 to 4 seconds). Switch the knife sharpener off by releasing the On/Off button.



Fig 1



Fig 2

Step 5

Repeat Step 4, three to five times and then carefully check the sharpening results. If necessary repeat Step 4 until the desired sharpening is achieved.

A honing steel can be used in between using the electric knife sharpener to maintain the life and quality of your knife.

Note

How often knives require sharpening will vary with usage. Knives that are used often will need to be sharpened more frequently than knives that are rarely used.

Note

Step 6

Switch the knife sharpener off by releasing the On/Off button. Switch off at the power outlet and remove the power plug.

Step 7

Carefully wipe the sharpened blade of the knife with a soft damp cloth to remove any residue metal filings. Dry thoroughly with a soft cloth.

Care for knife blades by storing knives individually in knife blocks, separate drawer compartments or pouches. Storing knives with other utensils can damage and blunt the sharpened blade edges.

Note



NEVER INSERT YOUR FINGERS INTO THE ROTATING PINS OF THE SHARPENING WHEEL.

Care and cleaning

Ensure the knife sharpener is switched off by releasing the On/Off button. Then switch the appliance off at the power outlet and remove the power plug.

Wipe the outer housing with a damp cloth and dry thoroughly.

Use a clean, dry pastry brush to clean around the ceramic sharpening pins and remove any residual metal filings. (refer to fig.3)

Storage

Ensure the knife sharpener is switched off and cleaned before storing. Stand the knife sharpener upright on the feet under the base. Do not place anything on top of it.



Fig 3

Any excess metal filings that may collect under the ceramic sharpening pins of the rotating wheel of the knife sharpener, can be removed by unscrewing the compartment cover positioned underneath the appliance. Gently shake and/or use a vacuum cleaner to suck out the residual filings from the opening. Then place the cover back on the compartment and screw firmly back into position.



ALWAYS ENSURE THE KNIFE SHARPENER IS TURNED OFF AT THE POWER POINT AND THE CORD IS UNPLUGGED PRIOR TO CLEANING THE APPLIANCE.

Notes

Notes

Breville

Breville is a registered trademark of Breville Pty. Ltd.
ABN 98 000 092 928

Breville Customer Service Centre Australian Customers



Breville Customer Service Centre

PO Box 22

Botany NSW 2019

AUSTRALIA



Customer Service: 1300 139 798

Fax (02) 9384 9601

Email Customer Service: askus@breville.com.au

New Zealand Customers



Breville Customer Service Centre

Private Bag 94411

Greenmount

Auckland, New Zealand



Customer Service: 09 271 3980

Fax 0800 288 513

Email Customer Service: askus@breville.com.au



PRINTED ON
RECYCLED PAPER



www.breville.com.au

© Copyright. Breville Pty. Ltd. 2007

ikon is a trademark of Breville Pty. Ltd.

Due to continual improvements in design or otherwise,
the product you purchase may differ slightly from the
one illustrated in this booklet.

Model BKS600 Issue 1/07