

archer² bumperkit™



replacement instructions

Instructions for replacing the bumpers are the same whether you are replacing them on an Archer² or an Archer³, hereafter referred to as Archer.

Copyright April 2019, Juniper Systems, Inc. Information is subject to change without notice. Juniper Systems, Archer², and Archer³ are trademarks of Juniper Systems, Inc.

Kits: 24080, 24081, 24082, 24083



tel: 435.753.1881 | web: www.junipersys.com

1132 W. 1700 N. Logan, UT 84321

Contents of Archer²/Archer³ Bumper Replacement Kit

The bumper replacement kit includes the following items:

- Standard Archer: One bumper for the top and one bumper for the bottom
- Barcode Archer: One top bumper with a viewing window for the barcode reader and one bumper for the bottom
- Instruction sheet

Remove the old bumpers

1. Pull one front corner of the bumper away from the unit.
2. Pull the bumper off the unit.

Install the new bumpers

The Archer bumpers are designed with a small tab inside the front corners of the bumper. This must fit inside the mating hole on the Archer.



1. Place one front corner of the bumper slightly above the front corner of the Archer as seen below.



2. Push the bumper down so that the tab is inserted into the mating hole.
3. Press the first back corner of the bumper into the Archer.
4. Press along the front and back edges of the bumper to seat them into the Archer.
5. Press the second back corner into the Archer.
6. With the rest of the bumper seated, lift and fold back the second front corner of the bumper to expose the tab inside.
7. Pull and stretch the bumper so that the front corner can be positioned slightly above the second front corner of the Archer.
8. Once positioned, insert the tab into the mating hole.
9. Remove and replace the remaining bumper in the same manner.



P/N: 24079-01