

CHAMBERLAIN Lift-Master

Universal Receiver
Model 600LM

OWNERS MANUAL

F.C.C. rules prohibit adjustments to or modification of receiver and/or transmitter circuitry except for changing the code setting and/or replacing the transmitter battery. **THERE ARE NO OTHER USER SERVICEABLE PARTS.**

Manufactured under 1 or more of the following U.S. patents: RE29,525; 4,037,201; 4,750,118; 4,806,930 - Other Patents Pending

For use with Remote Control Transmitters - Models 61LM, 62LM, 63LM, and 64LM.

IMPORTANT: Disable your existing receiver before installing this replacement unit. If this is not possible, locate receiver as far from original receiver as possible. When installing two or more receivers in a garage, position them at least 10 feet apart to prevent electronic interference.



INSTALL THE RECEIVER OUT OF THE REACH OF CHILDREN. DO NOT ALLOW CHILDREN TO OPERATE RECEIVER OR REMOTE CONTROL TRANSMITTER. SERIOUS PERSONAL INJURY FROM A CLOSING DOOR MAY RESULT FROM MISUSE OR THE OPENER. DISCONNECT POWER TO THE OPENER BEFORE INSTALLING RECEIVER.

CAUTION: Do not attempt to open the back of the receiver case. NO USER SERVICEABLE PARTS.


OPEN RECEIVER: Insert a small screwdriver in slot on receiver front panel as shown. Twist up actuator cover.

CONNECT RECEIVER AND OPENER: Remove about 1/4" of insulation from each end of the 2-strand bell wire. Connect one end to the receiver screw terminals (polarity is NOT required). Route wire along channels and out the bottom as shown.

Connect the other end of the bell wire to the two opener terminal screws labeled "white & red", "common & command", or the terminals used for the push button control.

Use insulated staples (not supplied) to secure bell wire between receiver and opener. Length of bell wire depends on where the receiver will be installed.


Choose a 120 Volt AC polarized outlet for the receiver which is **OUT OF THE REACH OF CHILDREN**. Plug receiver into selected outlet. Return power to the opener.

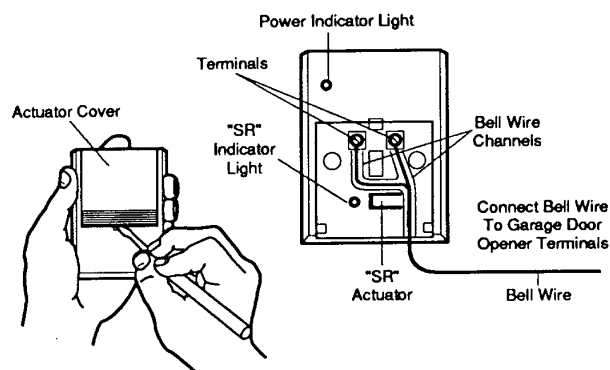

MATCHING/CHANGING THE CODE

SET CODES SWITCHES IN ALL REMOTE CONTROL TRANSMITTERS TO MATCHING POSITIONS

Shown below are some of the accessory remote controls available for use with this universal receiver. If more than one remote will be used to operate your garage door opener, the code switches in ALL remotes must be set to the same positions. Please refer to instructions included with the transmitter for specific code setting procedures. Code Switch #1 in a multi-function remote is neutral - set it to any position.

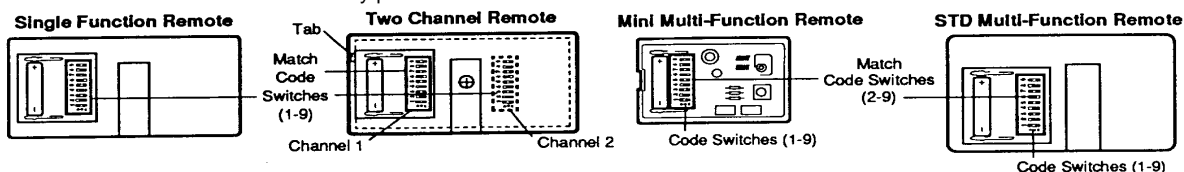

REPLACEMENT PARTS: Universal Receiver (complete) - 41-A3562-2; Receiver Actuator Cover - 41A3591

SET RECEIVER TO MATCH TRANSMITTER(S) CODE

YOU MAY WANT SOMEONE TO HELP AT THIS POINT!

1. Press and HOLD the selected push button on the remote control transmitter.
2. Then press the 'Smart' button on the receiver. The adjacent indicator light will FLASH and the door will begin to MOVE. Release the remote push button. Code setting is now complete. Snap cover back on receiver.

NOTE: If the remote control push button is not held down until the receiver indicator light flashes, the opener will not learn the code.

