



# 2 Slice Toaster Stainless Steel

**Model Number: IA0713**

## INSTRUCTION MANUAL

---

### AFTER SALES SUPPORT

  1300 777 137

 [service@unclebills.com.au](mailto:service@unclebills.com.au)

MODEL: IA0713 PRODUCT CODE: 51057 08/2015



# Welcome

Congratulations on choosing to buy a Kuchef® product.

All products brought to you by Kuchef® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

# Contents

02	Welcome
04	Warranty Details
05	General Information and Safety Instructions
08	Product Overview
10	Getting Started
11	Instructions
12	Other Useful Information
14	FAQ
16	Repair and Refurbished Goods or Parts Notice



# Kuchef®

## Stainless Steel Toaster

# Warranty Details

---

The product is guaranteed to be free from defects in workmanship and parts for a period of 3 years from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

---

#### AFTER SALES SUPPORT

**AUS** 1300 777 137

[service@unclebills.com.au](mailto:service@unclebills.com.au)

MODEL: IA0713 PRODUCT CODE: 51057 08/2015



# General Information and Safety Instructions

## RETAIN FOR FUTURE USE



Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical product.

### Electrical Safety and Cord Handling

1. Before turning on the Toaster ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the product.
2. To protect against fire and electric shock, do not immerse the product, cord set or plug in water or any other liquid.
3. Do not use an extension cord unless completely necessary with the Toaster. If an extension cord is used, please ensure that it has a rating equal or exceeding the rating of this product.
4. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
5. Do not bend or damage the power cord.
6. Never force the plug into an outlet.
7. Always unplug the Toaster when not in use. To disconnect from the power supply, grip the plug and pull from the power outlet. Never pull by the cord. The plug must be removed from the power outlet before cleaning, servicing, maintenance or moving the Toaster.
8. Do not move or lift the Toaster while the cord is still connected to the power outlet or still on.
9. To avoid a hazard, do not use the Toaster if the plug, cord or the Toaster itself is damaged. Please contact the After Sales Support line for further advice.
10. Ensure that the power cord does not get tangled under the feet of the Toaster.
11. Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

---

#### AFTER SALES SUPPORT

  1300 777 137

 [service@unclebills.com.au](mailto:service@unclebills.com.au)

MODEL: IA0713 PRODUCT CODE: 51057 08/2015

# General Information and Safety Instructions (cont)

## Usage Conditions and Restrictions

1. The Toaster is intended for indoor household use only and not for commercial purposes.
2. Do not use the Toaster for other than its intended use.
3. The Toaster is not a toy. Supervise young children to ensure they do not play with this product.
4. The Toaster is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
5. Do not leave the Toaster unattended when plugged in. Always switch off and unplug when you are not using the Toaster.
6. Do not operate or place any part of the Toaster on or near any hot surfaces (such as a gas, or electric burner or a heated oven).
7. This unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the Toaster.
8. Improper installation may result in the risk of fire, electric shock or injury to person.
9. The manufacturer is not responsible for any eventual damage caused by improper or faulty use.
10. The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock or injury.
11. The Toaster is not intended to be operated by means of an external timer or any type of separate remote control system.

# General Information and Safety Instructions (cont)

## Handling and Usage

1. To reduce the risk of electrocution, never operate this product with wet hands, submerge in water or spill liquids into the product.
2. Do not use the Toaster near a window as rain may cause electric shock.
3. Do not place the appliance near a hot gas or electric burner or combustible materials such as curtains or tablecloths, as the bread may burn.
4. Do not cover the appliance whilst in use. If it is covered there is a risk of fire.
5. Do not place the appliance against a wall or against other appliances, leave at least 10cm of free space around the product.
6. Always operate the Toaster on a flat, even and stable level surface.
7. Allow for the Toaster to cool down completely before moving, cleaning or storing away.
8. Do not lift the Toaster by placing your fingers inside or near the bread slots.
9. If bread becomes jammed in the slots, do not attempt to remove without unplugging the Toaster from the power outlet. Ensure you handle with care when removing and do not damage the heating elements.
10. Do not allow for crumbs to accumulate in the crumb tray, ensure you empty and clean regularly.

# Product Overview




1. **Toasting Slots**
2. **Toasting/High Lift Lever**
3. **Stainless Steel Body**
4. **Cancel Button**
5. **Reheat Button**
6. **Defrost Button**
7. **Bagel Button**
8. **Crumb Tray** - At the back of the Toaster.
9. **Browning Control Dial**

**Included (not pictured):**

Power Cord, Instruction Manual, Quick Start Guide and Warranty Card

---

**AFTER SALES SUPPORT**

 1300 777 137

 [service@unclebills.com.au](mailto:service@unclebills.com.au)

MODEL: IA0713 PRODUCT CODE: 51057 08/2015



# Product Overview (cont)

## Functions

### Cancel

The cancel function allows you to stop the toasting process at any time. The cancel indicator light illuminates once the toasting lever is lowered and locked into position in all functions. To stop the toasting process, simply press the cancel button and the toasting lever will return to the starting position and the indicator light will go out.

### Reheat

The reheat function allows you to warm toast which has gone cold. To reheat toast, place the toast into the toasting slots, lower the toasting lever until it locks in position and then press the reheat button. The reheat indicator light will illuminate while in this function. The reheat time is fixed and cannot be adjusted with the browning control dial. The reheat function can be cancelled at any time by pressing the cancel button.

### Defrost

The defrost function allows you to toast bread straight from the freezer. Place bread into the toasting slots, turn the browning control dial to desired setting, lower the toasting lever until it locks into position and then press the defrost button. The defrost indicator light will illuminate while in this function. The defrost function can be cancelled at any time by pressing the cancel button.

### Bagel

This function allows you to toast one side of your bread while keeping the other side warm (the outer side of the slots toasts while inner side warms). Cut your bagel in half and insert the two halves into the bread slots with the side to be toasted facing the outer side of the Toaster. Turn the browning control dial to desired setting, lower the toasting lever until it locks into position and then press the bagel button. The bagel indicator light will illuminate while in this function. The bagel function can be cancelled at any time by pressing the cancel button.

### Browning Control Dial

The browning control dial allows you to select the colour your bread will be toasted, with '1' being the lightest and '7' being the darkest. Set the browning control dial to a lower setting for dry, stale or thin breads and a higher setting for fresh, thick sliced breads. To adjust the browning control dial, turn the dial clockwise.

# Getting Started

## Before First Use

Prior to using your Toaster, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using this appliance. We recommend you keep the original packaging for storing your Toaster when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Toaster is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
2. Remove the twist-tie which is securing the electrical cord. Uncoil the cord and straighten it to remove any kinks. Do not use this product if these parts are damaged. In case of damage, phone the After Sales Support line.
3. Place the Toaster on a flat, stable and dry surface to operate.
4. Plug the cord into a power outlet and switch on.
5. On first use, set the browning control dial to setting '1' and lower the toasting lever with no bread in the Toaster. This will eliminate the initial element burning smell.
6. Repeat this step twice before use.

**NOTE:** The Toaster may emit a slight burning smell when it is first being used. Do not be alarmed, this is normal and will cease with continued use.

# Instructions

## Using Your Stainless Steel Toaster

1. Place the Toaster on a flat, stable, dry surface to operate.
2. Plug the cord into a power outlet and switch on.
3. Turn the browning control dial to desired setting. Setting ranges from '1' (lightest), to '7' (darkest).
4. Place one slice of bread in each toasting slot, ensuring the bread is not too large or thick to fit into the slots.
5. Lower the toasting lever until it locks into position. Toasting will begin immediately.

**NOTE:** If the power to the Toaster is switched off, the toasting lever will not lock into position.

**NOTE:** The cancel indicator light will illuminate when the toasting lever is lowered and locked into position. You can cancel the toasting process at any time by pressing the cancel button.

6. When the Toaster has finished, the toasting lever will return to the starting position and raise the toast at the same time.
7. Raise the toasting lever above the starting position to safely remove toast out of the Toaster.



**WARNING:** The toasting slots may become very hot during operation. Ensure you handle with caution.

# Other Useful Information

## Cleaning and Maintenance

1. Switch off and unplug the cord from the power outlet.
2. Allow for the Toaster to cool down completely before cleaning.
3. Wipe the exterior of the Toaster with a soft damp cloth.
3. Do not use harsh scouring agents, powders, steel wool or chemicals when cleaning, as these products may damage the exterior finish.
4. To remove the crumb tray, push the tray to unlock and slide it out. Then wipe the crumbs away with a soft cloth or paper towel. Replace the crumb tray back into the slot and push the tray once again to lock back into position.



**NOTE:** The crumb tray should be emptied and cleaned regularly. Do not allow crumbs to accumulate in the bottom of the Toaster.

**WARNING:** Ensure you switch off, unplug the cord from the power outlet and allow the Toaster to cool down completely before cleaning.

**WARNING:** To reduce the risk of electrocution, never operate this product with wet hands, submerge underwater or spill liquids into the product.

# Other Useful Information (cont)

## Storage

- Before packing the Toaster away for storage, ensure that it has completely cooled down and is clean and dry.
- We recommend storing the Toaster in its original carton to protect it from dust.
- Store the Toaster in a clean and dry place, out of children's reach.
- Do not place heavy objects on top during storage.

## Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycle all packaging material where possible.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require another copy of this instruction manual please contact [service@unclebills.com.au](mailto:service@unclebills.com.au) to obtain an electronic copy.

The Toaster has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 60335.1  
AS/NZS 60335.2.9



## Specification Table

MODEL:	IA0713
VOLTAGE:	220-240V ~ 50/60Hz
POWER:	780-925W
DIMENSIONS:	27 x 15.5 x 18.5cm
NET WEIGHT:	1.4kg
WARRANTY:	3 Years

Version No: 1.1  
Issue Date: 20 May 2015

---

### AFTER SALES SUPPORT

  1300 777 137

 [service@unclebills.com.au](mailto:service@unclebills.com.au)



MODEL: IA0713 PRODUCT CODE: 51057 08/2015

# FAQ

Problem	Solution
The Toaster does not turn on?	<ul style="list-style-type: none"><li>• Please check that the power cord is plugged into the outlet correctly and switched on.</li><li>• Check there is power to the outlet by testing with another product.</li></ul>
Why is the toast jamming in the Toaster?	<ul style="list-style-type: none"><li>• Check the bread is not too thick or the bread is torn.</li></ul>
Why is the toast burning?	<ul style="list-style-type: none"><li>• The heat setting may be too high. Lower the browning control dial to lower setting.</li></ul>
Can I cancel my toast at any time?	<ul style="list-style-type: none"><li>• Yes you can, just press the cancel button.</li></ul>
What types of bread can I put in my Toaster?	<ul style="list-style-type: none"><li>• As long as the bread is sliced and can fit inside the toasting slots, any type of bread can be toasted. This toaster is suitable to toast bagels, crumpets and english muffins.</li></ul>

---

## AFTER SALES SUPPORT

  1300 777 137



 [service@unclebills.com.au](mailto:service@unclebills.com.au)

MODEL: IA0713 PRODUCT CODE: 51057 08/2015

# Notes

---

## AFTER SALES SUPPORT

  1300 777 137

 [service@unclebills.com.au](mailto:service@unclebills.com.au)

MODEL: IA0713 PRODUCT CODE: 51057 08/2015



# Kuchef®

## Stainless Steel 2 Slice Toaster

# Repair and Refurbished Goods or Parts Notice

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

**We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD

PO Box 6292



Silverwater NSW 1811 Australia

1300 777 137

Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)

---

#### AFTER SALES SUPPORT

  1300 777 137

 [service@unclebills.com.au](mailto:service@unclebills.com.au)

MODEL: IA0713 PRODUCT CODE: 51057 08/2015

