

# Cuisinart®



## Instruction Booklet Cool Scoops™ Plus - ICE-30A Series

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

---

# IMPORTANT SAFEGUARDS

## READ ALL INSTRUCTIONS BEFORE USING

When using any electrical appliance, especially when children are present, basic safety precautions should always be taken to reduce the risk of fire, electric shock and/or injury, including the following:

- Never leave unattended while cooking to avoid possibility of fire.
- This appliance is intended for **HOUSEHOLD USE ONLY** and similar applications such as:
  - staff kitchen areas in shops, offices & other working environments;
  - farmhouses;
  - clients in hotels, motels and other residential type environments;
  - bed and breakfast settings
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack experience and knowledge unless, they have been given instruction concerning use of the appliance by a person responsible for their safety.
- To ensure no possible accidental injury occurs, when infirmed persons (including children) are near the appliance, they must be closely supervised.
- Children should always be supervised to ensure they do not play with the appliance.
- Use only on an appropriate benchtop & indoors only, sitting away from flammable materials such as curtains, draperies and walls of similar nature as a fire may occur if comes in contact or becomes covered during operation.
- Do not place on or near a hot gas, electric burner, or in a heated oven.
- Do not use appliance for other than its intended use.
- This appliance is under 220V~240V use only. Check voltage to be sure the voltage indicated on the nameplate agrees with your voltage.
- Always attach plug to unit first, then plug cord to wall outlet. To safely disconnect, press/turn dial "OFF" to stop cooking cycle and remove plug from electrical outlet.
- To avoid the possibility of the unit being accidentally pulled off the working area, which could result in damage to the unit or personal injury, do not let the cord hang over the edge of a table or benchtop.
- To avoid damage to the cord and possible fire or electrocution hazard, do not let cord come into contact with any hot surfaces including a stovetop.
- Do not operate this appliance if it has been dropped or damaged (including the cord) in any manner or is not operating correctly. Return the appliance to the nearest Cuisinart Repair Centre for examination, repair, electrical or mechanical adjustment.
- Do not operate this appliance in an appliance cabinet or under a wall cabinet. When storing in an appliance cabinet, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the unit is in contact with the walls of any cabinetry or on closing the cabinet door and touching the unit.
- When in use, avoid contact with any moving parts.
- Keep hands hair and clothing, as well as spatulas and other utensils away during operation to reduce the risk of injury and/or damage to the appliance.
- Always unplug from the electrical outlet when not in use before putting on or taking off parts and before cleaning.
- The use of attachments not recommended by Cuisinart may be hazardous.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- At no time, before or during cooking and cleaning immerse unit, plug or cord in water, or any other liquids similarly under running water too – this is to protect against the starting of a fire and electric shock that could induce injury to persons. If the unit, plug or cord should fall into water or other liquids, unplug the cord from the electrical output immediately. DO NOT reach into the water.
- Do not clean with metal scouring pads or hard implements. Pieces can break off the

pad and touch electrical parts, involving a risk of electric shock.

- While cleaning do not try to dislodge any food when unit is plugged in. Always unplug the unit when cleaning.
- To reduce the risk of fire or electric shock, do not disassemble the base. The base does not contain any user-serviceable parts.
- Keep hands and utensils out of freezer bowl while in use to reduce the risk of injury to persons or to the appliance itself.
- NEVER USE SHARP TOOLS inside the freezer bowl at any time. Sharp tools will scratch and damage the inside of the freezer bowl. A rubber spatula or wooden spoon may be used when the appliance is off.
- Never expose the freezer bowl to a heat source - on or near flames, hot plates or stoves.
- Do not wash the freezer bowl in a dishwasher.

## SPECIAL CORDSET INSTRUCTIONS

- A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over unintentionally or pulled on by children.

## UNPACKING INSTRUCTIONS

1. Place the box on a large, sturdy, flat surface.
2. Open the box and remove the instruction book and any other literature.
3. Lift the packing materials, Cool Scoops™ Plus and accessories out of the box.
4. Remove all other parts packed in polyfoam and remove packing materials surrounding those parts. Be sure to check all packing materials for all parts listed in the Parts and Features section on page 4 before discarding.

5. Remove any protective or promotional labels from your Cool Scoops™ Plus and other parts.

## SAVE THESE INSTRUCTIONS BEFORE THE FIRST USE

Before using your Cool Scoops™ Plus for the first time, remove any dust from shipping by wiping the base, cover and controls with a damp cloth.

Be sure to thoroughly clean all accessories with hot, sudsy water before first use as well. This includes all the parts and accessories on the following page. Do not use any abrasive cleaners or hard implements.

Do not use on heat-sensitive surfaces or store items on top of the Cool Scoops™ Plus

ENSURE THE EXTERIOR WALLS OF YOUR Cool Scoops™ Plus IS NOT WITHIN 15CM CONTACT OF ANY OTHER PARAPHENALIA.

## SAFETY FEATURE

 
The Cool Scoops™ Plus is equipped with a safety feature that automatically stops the unit if the motor overheats. This may occur if the dessert or drink is extremely thick, if the unit has been running for an excessively long period of time, or if added ingredients (nuts, fruit etc.) are in extremely large pieces. To reset the unit, turn the ON/OFF switch to the OFF position. Let the unit cool off. After a few minutes, you may turn the unit on again and continue making the dessert or drink.

## CONTENTS

Important Safeguards. . . . .	2
Special Cordset Instructions. . . . .	3
Before the First Use . . . . .	3
Parts & Features. . . . .	4
Controls & Functions . . . . .	5
Frozen Desserts Guide. . . . .	5
Operating Instructions . . . . .	5
Adding Ingredients . . . . .	5
Cleaning & Maintenance . . . . .	6


---

## PARTS & FEATURES

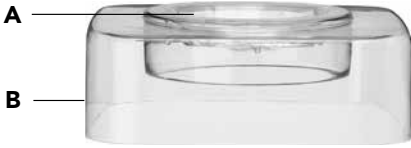


### A. Ingredient Spout

 Pour recipe ingredients through the spout. Also use to add ingredients, like chocolate chips or nuts, without interrupting the freezing cycle.

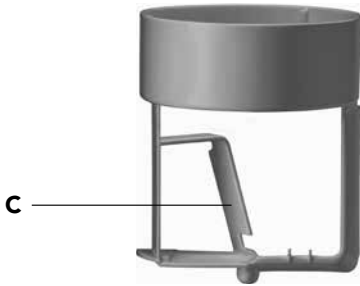

### B. Easy-lock Lid

 Transparent to let you watch the freezing process as it progresses. Lid is designed to easily lock to the base.

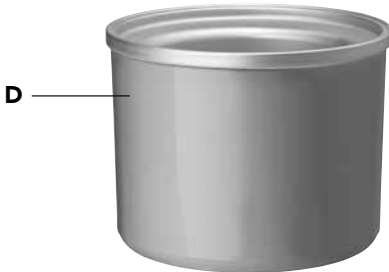

### C. Mixing Arm

Mixes and aerates ingredients in freezer bowl to create frozen dessert or drink.

### D. Freezer Bowl

Contains cooling liquid within a double insulated wall to create fast and even freezing. Double wall keeps the bowl cool and at an even temperature. Ensure to prefreeze bowl 24 hours before mixing.



### E. Base

Contains heavy-duty motor strong enough to handle ice cream, frozen yogurt, sherbet, sorbet, and frozen drinks.

### F. On/Off Dial

### G. Rubber Feet (not shown)

Nonslip feet keep base stationary during use.

### H. Cord Storage (not shown)







Unused cord is easily pushed into the base to keep counters neat and safe.

## CONTROLS & FUNCTIONS

Using your Cool Scoops™ Plus is one of the easiest frozen dessert makers to use. With only an ON and OFF dial, create limitless latherings of endless flavours with this plus-size 2-litre frozen dessert maker. From delicious ice cream and cool sorbet to lush yoghurt, a simple turn to the right will do all the churning for you.



## FROZEN DESSERTS GUIDE

	Ice Cream	Soft, sweet frozen dessert made with milk & cream.
	Gelato	A similar custard base as ice cream, but has a higher proportion of milk and a lower proportion of cream and eggs (or no eggs at all).
	Sorbet	Frozen water sweetened with sugar or other sweet like syrups; typically fruit juice, fruit purée, wine, liqueur or honey.
	Frozen Yoghurt	Fresh yoghurt frozen & aerated. Usually more tart than ice cream, as well as lower in fat.
	Parfait	A rich cold dessert made with whipped cream, eggs & fruit.
	Slushie or Slush	Frozen uncarbonated beverages or water with flavouring churned into finely crushed drinkable ice.

## OPERATING INSTRUCTIONS

**Note:** Ensure mixing bowl has been in freezer for at least 24 hours before using.

1. Use our recipes on the reverse pages that follow or use them as a starting point for inspiration. making sure it yields 2 litres or less. Do not fill the freezer bowl higher than 1.2cm from the top. The ingredients will increase in volume during the freezing process. For best results, prepare ingredients in a container from which it is easy to pour.
2. Remove the freezer bowl from the freezer, and plastic bag (that prevents freezer burn). Place freezer bowl on the centre of the base. **NB:** Bowl will begin to defrost quickly once it has been removed from freezer. Use it immediately after removing from freezer.
3. Place mixing arm in freezer bowl. Arm does not fit tightly. It just rests in the centre of the bowl, with the circle side facing up.
4. Place lid on base. Easy-lock lid mechanism allows lid to rest on base in multiple positions (see diagram).
5. Turn the On/Off switch to ON position. Freezer bowl will begin to turn.
6. Immediately pour ingredients through ingredient spout.
7. Frozen desserts or drinks will be done in 25–35 minutes. The time will depend on the recipe and volume of the dessert or drink you are making. The consistency after churning will be like soft serve which is normal. To firm the ice cream or frozen dessert, transfer to an airtight plastic storage container that encourages speedy freezing i.e. high-surface-area-to-volume.

Do not store frozen desserts or drinks in the freezer bowl. Desserts and drinks will stick to the side of the freezer bowl and may damage the bowl.

## ADDING INGREDIENTS

Ingredients such as crushed biscuits and nuts should be added about 5 minutes before the recipe is complete. Once the dessert or drink has begun to thicken, add the ingredients through the ingredient spout. Nuts and other ingredients should be no larger than a chocolate chip.

---

## **CLEANING & MAINTENANCE**

- Clean the freezer bowl, mixing arm and lid in warm sudsy water then dry all parts thoroughly.
- Wipe motor base clean with damp cloth.
- Do not put freezer bowl in the dishwasher.
- Never clean with abrasive detergents or implements.
- Do not put freezer bowl in freezer if bowl is wet.
- Do not store lid, mixing arm, or base in freezer - however you may store the freezer bowl in the freezer for convenient immediate use.
- Before freezing, wrap the bowl in a plastic bag to prevent freezer burn.

©2020 Cuisinart  
Suite 101 Ground Floor  
18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

Visit our Website:  
[www.cuisinart.com.au](http://www.cuisinart.com.au)

Printed in China

**IB-8/135E**

Trademarks or service marks of third parties referred to herein are the trademarks or service marks of their respective owners.