

SYLVANIA

Bluetooth Neon Light Up Speaker

SP627

User Manual



SYLVANIA is a registered trademark of OSRAM Sylvania Inc.
used under license.

Getting started

- Remove the unit from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the packaging contents.

Packaging Contents

- Lightup Bluetooth® Speaker With Carry Handle
- USB Charging Cable
- 3.5mm Auxiliary Cord
- Instruction Manual


Features

- 2.1 Channel Bluetooth® 63 LED Lights
- Built-in 2 Speakers
- Built-in Micro SD (TF) card slot & USB port
- Built-in rechargeable battery
- USB Recharge Cable & Aux Cable included

IMPORTANT SAFETY INFORMATION

- Read all instructions before using this product.
- Do not immerse in water or any other liquids.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified persons. Improper repairs may place user at serious risk.
- Place unit on sound, even surface, free of vibrations and away from sources of heat.
- Do not use with wet hands.
- Do not put objects into openings.
- Keep free of dust, lint, hair etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.
- Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of Parts

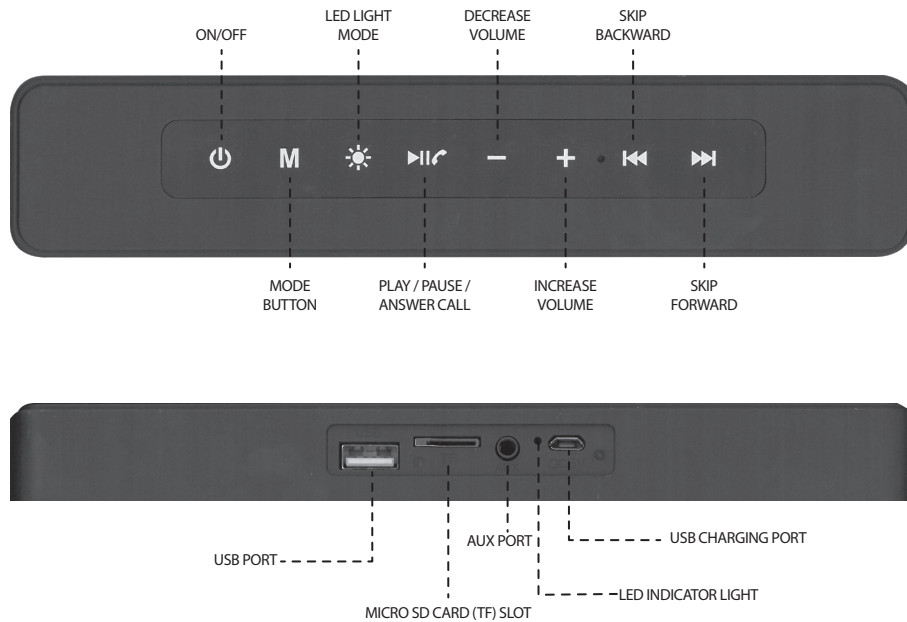

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the unit before use.

- Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar power source.
- Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes nearly 4 to 5 hours to fully charge the Battery.

Note: In order to have better battery life, please do not charge for more than 6 hours. Overcharging the speaker can adversely impact the battery life.

Turn On/Off the Speaker

- To Turn "ON" slide the "POWER ON/OFF" switch to the ON Position.
- To Turn "OFF" slide the "POWER ON/OFF" switch to the OFF Position.

Turn the speaker to Bluetooth® pairing mode -

- Turn ON the speaker.
- You would see LED Light blinking steadily. The speaker is now in pairing mode.

(Note: Speaker will automatically pair with previously paired devices)

Pairing your device with Bluetooth® Speaker –

Your Bluetooth® Speaker can wirelessly stream audio from any Bluetooth® enabled device within 10 metres. Simply follow the below steps.

- Turn ON the speaker.
- You would see LED Light blinking steadily. The speaker is now in pairing mode.
- Turn on Bluetooth® on your Mobile Phone or Tablet or Computer.
- It will search for available Bluetooth® devices in its proximity.
- The pairing name of our Bluetooth® Speaker is "Sylvania SP627", pair it with this device.
- If required, enter the password '0000' to confirm to finalize pairing.
- Once paired successfully, the Blue LED indicator light will blink slowly.
- If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favourite song at the Bluetooth® device and music would now stream through Bluetooth® speaker.

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth® Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / decrease Volume	Playing music	Use the Volume Controller located on the control panel to adjust the volume to your desired level
Pause	Playing music	Press once to pause the music
Play	Pause	Press once to resume the music
Previous Track	While playing	Short press the button to the previous track
Next Track	While playing	Short press the button to the next track
LED Light Mode	Change color	Short press the button to change color of the LED light

Aux function of the Speaker (to play music from non-Bluetooth® devices)

- Turn on the speaker.
- Plug the 3.5 mm auxiliary cord (included) to the auxiliary port of the speaker. And, the other end of the cable connects to the audio device (such as MP3 Players / computer / tablet etc.).
- Select your favourite song at the source device.

Note: Once AUX cable is connected to the Bluetooth® Phone & Speaker, music through the Bluetooth® will be stopped. Media and volume can be controlled only through source devices, while playing music in Auxiliary mode.

Media controls (Skip Forward, Skip Backward, Play, Pause etc) can be controlled only from the source device, while in auxiliary mode.

Listening to Music using Micro SD Card (TF) Slot

- Turn on the speaker.
- Insert Micro SD Card (TF) into the Micro SD Card (TF) Slot. Music would be automatically streamed.
- Press Skip Forward or Skip Backward to move forward or backward on your playlist.
- Press Play/Pause to Play or Pause a track.

Note: While using Bluetooth®, if you insert Micro SD Card, speaker would disconnect the Bluetooth® connection and switch to Micro SD card function. You can press MODE button again, to select the Bluetooth® mode.

U disk play music

- Turn on the speaker.
- Insert the U disk to the USB port, it will switch to USB mode and start playing the music, the Bluetooth mode will be disconnected.
- Press Skip Forward or Skip Backward to move forward or backward on your playlist.
- Press Play/Pause to Play or Pause a track.

Tips!!

- Press the "MODE" button to switch different functions of the speaker. The functions are – Bluetooth® / Micro SD / AUX-In / USB.
- When the unit is not in use, turn OFF the device to save the battery power.
- Do not overcharge the unit; every charge should not exceed 6 hours.

Do's and Don'ts

Do not play music at excessive levels as damage to hearing and/or equipment may result.
Do not use in wet or in damp surroundings.

Specification

Bluetooth® version : 2.1 + EDR
Speaker Output : 2 x 3Watts
Play time : Up to 4 hours (Approx.)
Charge Voltage : DC 5V (USB)
Bluetooth Range : 10 metres (Approx.)
Built-in Rechargeable Battery : 3.7V / 1200mAh
(Note: Battery life & charging time may vary based on usage & types of devices used.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Table, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all	Source (Tablet, Mobile Phone, and Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.
Keep this unit away from wet or damp surroundings.

Bluetooth® is a trademark on a registered trademark of Bluetooth® SIG Inc.

This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic domestic appliances. This symbol on appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.



Made in China

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in apatricular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

For service assistance and product information, please call: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3
www.curtisint.com