 


User Manual

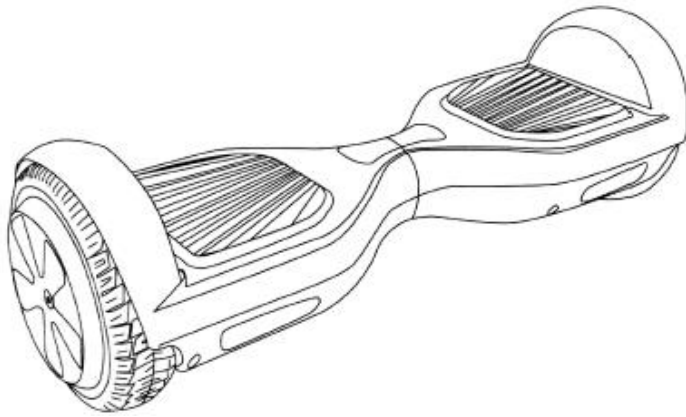

Model No:
GS10R / GS10B
Electric Scooter

Distributed by:

LENOXX

Lenoxx Electronics Aust. Pty Ltd
Importers and Wholesalers of Electronics and toys
6 Oban court, Laverton North. Victoria. 3026
ABN: 97 844 321 851
PH: 03 9267 2100
FAX: 03 9267 2199
For service call: 1300 666 848
Email: lenoxx@lenoxx.com.au
www.lenoxx.com.au

WARNING:

FAILURE TO COMPLY WITH SAFETY
INSTRUCTIONS MAY LEAD TO
PROPERTY DAMAGE, BODILY HARM AND
IN EXTREME CIRCUMSTANCES, DEATH.

Table of Contents

1. Introduction

2. Safety

3. Getting Started

3.1 Diagram for Reference

3.2 Charging the Battery

3.3 Your Weight Must Be Over 15kg

3.4 Battery Level

4. Riding Guide

4.1 Preparation

4.2 Steps to Riding

4.3 Terrians and Reminders

5. Maintenance & Repair

5.1 Storage

5.2 Inflation

1. Introduction

Congratulations on your purchase of the new electronic scooter.

Invented to transcend transportation and focus on practical movement, this stylish and compact transporter celebrates personal and intuitive mobility. This new item is fun to use and easy to ride. It's both portable and stylish.

This manual will help you set up and use this product. It is important that you adhere to all safety warnings and cautions that appear throughout this manual and that you use good judgment when riding.

This product is not recommended for children under 14 years of age without adult supervision.

Traveling by this has a lot of fun-we hope you'll think so too.

The Package Contains:

1*All-New one Self-balancing Electric Scooter

1* Samsung battery and charger with power cord (NO CONVERTER NEEDED)

1*User manual

2. Safety

There are risks to riding or driving every vehicle. This one is no exception. Remember when you learned to ride a bike? You probably started in a safe location and had somebody help you learn. You started slowly. This technique applies to ours as well.

Whenever you ride this scooter, you risk death or serious injury from loss of control, collision and falls. To reduce risk of injury, you must read and follow all instructions and warnings in this manual. Always wear an approved protective gear, helmets should be properly fitted and fastened to your head. Other protective gear is recommended such as knee and elbow pads.

This product is not designed for road use and should not be used on roads or in any public areas such as footpaths, car parks and cycle path. Please consult with your local state traffic authorities or council for advice.

Please ensure this manual is read and understood beforehand, and do pay extra attention when riding.

Attention!

1. Always check the battery charge before using. Do not ride when its battery is low, as indicated by a twinkling green light or a solid red light. This may stop operating and cause you to fall.

2. Check local laws and regulations to see where and how you may use yours legally. Follow all applicable laws for vehicles and pedestrians.

The specific legislation for each State can be seen on the links below. Please note, this is current at the time of writing, and as with most Laws, they can be changed from time to time. We suggest contacting your local council for more information.

QLD <http://www.tmr.qld.gov.au/Safety/Queensland-road-rules/Personal-mobility-devices.aspx>

NSW <http://www.rms.nsw.gov.au/registration/unregisteredvehicles/scootersminibikes.html>

VIC <https://www.vicroads.vic.gov.au/safety-and-road-rules/road-rules/a-to-z-of-road-rules/scooters-and-wheeled-recreational-devices>

ACT <http://www.rego.act.gov.au/aboutus/infomotoriseddevices.htm>

 
TAS http://www.transport.tas.gov.au/licensing/information/tasmanian_road_rules/road_safety_rules/motorised_scooters_ie_wheeled_recreational_devices

WA http://www.transport.wa.gov.au/mediaFiles/licensing/LBU_DL_B_RideSafeAll.pdf

SA <https://www.sa.gov.au/topics/transport-travel-and-motoring/cycling/riding-a-power-assisted-bicycle>

NT http://www.transport.nt.gov.au/__data/assets/pdf_file/0018/19611/V56-Motorised-scooters-and-power-assisted-cycles-Dec-2012.pdf

3. Avoid obstacles and slippery surfaces, which could result in a loss of balance or traction and cause a fall.
4. Do not exceed the maximum weight of 264 pounds (120 kilograms)-including backpacks and other items that might be carried. Exceeding the weight limit could injure the rider and damage it.
5. They should not be ridden by young children. Use your judgment about whether a rider has the necessary coordination, strength and maturity to use. Only children 14 years old or older should be permitted to use.
6. Do not use if you are pregnant or attempting to become pregnant
7. Do not lift it off the ground when it is turned on. Do not turn on in mid-air. This will cause the wheels to spin freely, which could result in injury to yourself or damage to things around you.
8. Do not modify it. Modifications could interfere with operating and could result in serious injury and/or damage. Modifications void its Limited Warranty.
9. Since balances by accelerating in response to your leaning forward, if you lean too far forward, the motor will not be able to catch up with you and you may fall. When you reach maximum speed it will tilt backward. **DO NOT** attempt to accelerate further or you will fall.
10. **DO NOT use this product, while under the influence of drugs or alcohol.**
11. **DO NOT Step Forward OFF or Jump OFF your scooter**

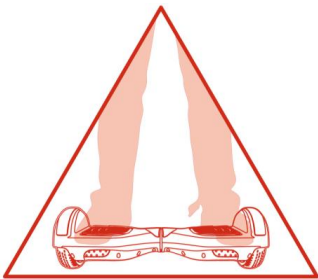


KEEP YOUR FEET ON SENSOR PAD



DO NOT USE ON STAIRS

3. Getting Started

 3.1 Diagrams for Reference

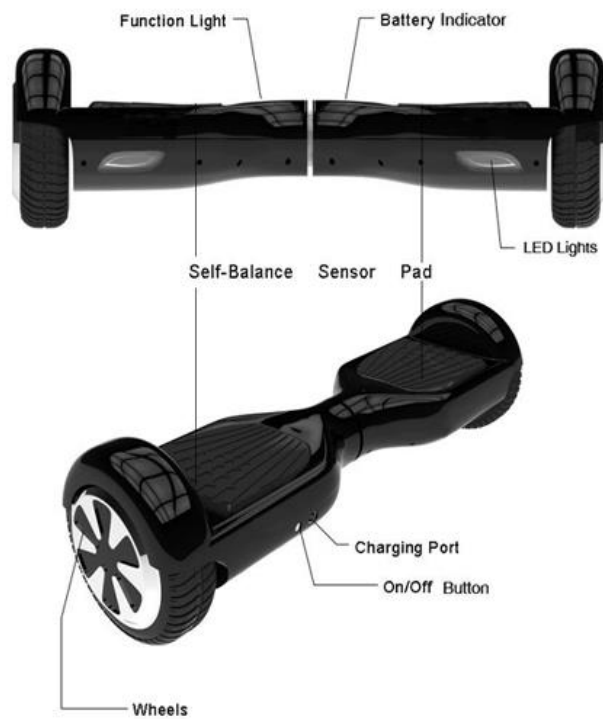

3.2 Charging the Battery

Your package comes with a built-in lithium-ion battery pack. For the first time, you must fully charge the battery. Be sure to charge the battery in a clean, dry location.

- (1) Plug one end of the power cord into it. Plug the other end into a grounded AC outlet. The red charging light on the charger unit will turn on.
- (2) The charger may take up to 15 hours to complete its charge. The red light on the charger will turn green once it is finished.

3.3 Your Weight Must Be Over 15kg

In order to guarantee your children's safety, everyone who drives must be over 15kg in weight. If the driver's weight is lower than 15kg, it would shake automatically until he/she steps down.

3.4 Battery Level

A LED indicator is used to indicate battery level. When the light is green, it means that has enough power. When the light turns red, you should charge it as soon as possible. Please check power level before usage to ensure there is enough power for the return trip. You may want to charge it every time after use. When power level is lower than 10%, the LED indicator will flicker and the buzzer will sound off.

Sustained range will decrease during winter, because the battery performance decreases quickly in cold conditions. In -15°C , for example, battery performance is only about half in comparison to that in room temperature.

WARNING: It will notify you when the battery charge is dangerously low by slowing down and shaking the wheels when you are riding it, if these warnings occur, immediately slow down and safely step off. Turn the unit off. Do not attempt to ride again until the battery is recharged.

 
4. Riding Guide

4.1 Preparation


When you want to start your first ride, please try to wear comfortable casual or sports outfit and wear flat shoes. Please bring it to a more spacious place, and ensure that there is no any significant obstacles.

4.2 Steps to Riding


- (1) Set it on the ground and turn the power on. It can face either direction. The green light on the top of the unit will light up. Put your dominant foot on the platform, next to the wheel. Use your foot to level the platform and activate the balancing system. The balancing system will not active until the platform is level.
 - (2) With one foot on one platform (sensor pad) stand up straight. Place your other foot on the other of the platform (sensor pad).
 - (3) Shift your body weight gradually forward to pick up speed. Do not lunge forward.
 - (4) Shift your body weight backward to slow down or stop. If you continue to lean back, you will be able to travel backward.
 - (5) To turn right, slightly tilt your right foot forward. To turn left, slightly tilt your left foot forward.
 - (6) To rotate, slightly tilt one foot forward and the other foot backward.
 - (7) When you are ready to get off, slow down, stop and step off with one foot first, then the other. Turn it off. If you do not turn off, It will stay on for 5 minutes allowing you to step on and go again without engaging the on/off switch. It will shut off automatically after 5 minutes.
-

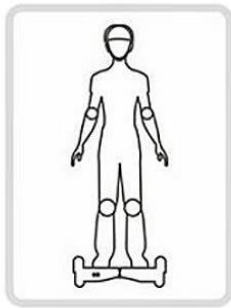

 
Step 01

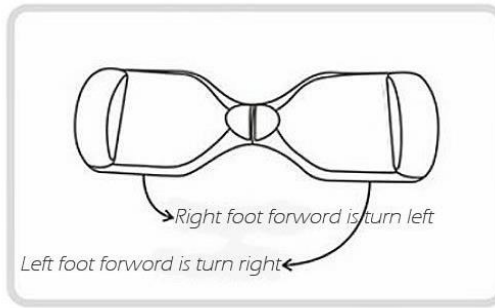

 Step 02

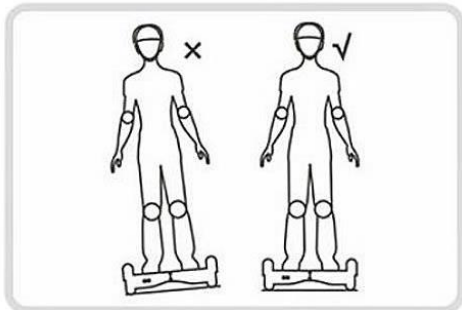

 Step 03

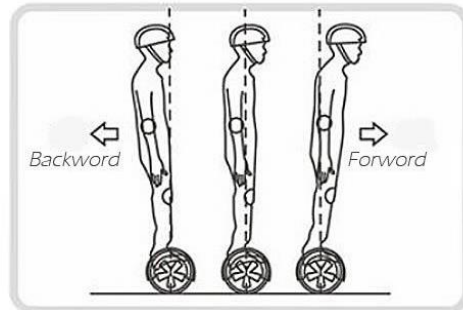

Step 04

REMEMBER: Do not lift it off the ground when it turned on. Do not turn on it in mid-air.

IMPORTANT: The top speed is 15+ km/hr, when you approach the maximum speed, it will try to prevent you from accelerating further. It will tilt back in order to shift your weight backward. You may feel that you are being 'pushed' back or that you cannot make it go any faster. Do not continue leaning or bending forward to try and increase your speed or you will fall.

4.3 Terrain and Reminders

(1)It is intended for indoors or use on smooth, flat surfaces. However, to prevent loss of traction, you must always be careful when riding and learn to identify and avoid slippery and wet surfaces, loose materials, slopes, potholes and other obstacles.

(2)Stop and step off it over unsafe surfaces or terrain.

(3)Their wheels must be able to grip the ground for you to stay upright. Slips occur when loses traction, potentially causing loss of control and a fall. Abrupt maneuvers and riding over slippery surfaces, bumps, and loose objects and materials, may cause it to lose traction.

Product Specifications

Max Speed	10-12kp/h or 6-7mp/h
Dimensions	58.5cm x 18cm x 18cm
Weight	10.4kg
Range	Up to 15km-20km Range
Max Weight Limit	120KG
Max Climbing Angle	15°
Min Turning Radius	0°
Charging Time	Approximately 3 hours
Tyre Size	170mm
Tyre Type	Solid Non-Inflatable
Chassis Clearance	30mm
Pedal Height	110mm
Lithium-Ion Battery	Samsung 36V, 4.4AH
Waterproof and Dustproof	IP54
Rated Temperature Tolerance	-15C° to 50C°

5. Maintenance & Warranty

5.1 Storage

Please store it in a dry place. If left unused, re-charge the battery every two months to maintain longevity of the battery.

5.1 Inflation

The tires are a vacuum tire and do not need to be inflated.

5.3 Warranty

The warranty will not be covered under the following conditions:

- (1) Malfunction due to misuse.
- (2) Malfunction caused by unauthorized modifications, disassembling, or repair.
- (3) Accidental damage or malfunction due to unsuitable storage.
- (4) Unmatched warranty/proof of purchase and product.
- (5) Surface damages.
- (6) Disassembling parts unspecified by this manual.
- (7) Damage or malfunction caused by long rides in the rain or soaking in water, will not be covered.

LENOXX
www.lenoxx.com.au



Facebook.com/LenoxxElectronics

Follow us



twitter.com/LenoxxAustralia

WARNING

FAILURE TO COMPLY WITH SAFETY INSTRUCTIONS MAY LEAD TO PROPERTY DAMAGE, BODILY HARM AND IN EXTREME CIRCUMSTANCES, DEATH.

You MUST read the included User Guide before attempting to operate the Revo Glider, what follows below is only a summary of the main SAFETY PRECAUTIONS that apply to the E-Scooter

- Please wear appropriate safety and protective gear to prevent personal injury.
- Do not ride the E-Scooter if you are less than the minimum weight or exceed the maximum weight (See User Guide).
- Do not attempt to open or modify the E-Scooter.
- Do not use the E-Scooter to place persons or property in direct or indirect danger.
- Do not operate the E-Scooter while under the influence of drugs and/or alcohol.
- Do not operate the E-Scooter when fatigued.
- Do not ride the E-Scooter off curbs, ramps or attempt to perform stunts or tricks.
- Do not turn sharply, especially at high speeds.
- Do not continuously spin in place for prolonged periods of time, this may cause dizziness.
- Do not ride the E-Scooter in an abusive or extreme manner.
- Do not attempt to ride the E-Scooter in dark or poorly lit areas.
- Do not ride the E-Scooter down stairs or escalators.
- Do not drive in or near puddles of water or other liquids, mud, sand, stones, gravel, debris or near rough and rugged terrain.
- Do not ride the E-Scooter in inclement weather.
- Do not ride the E-Scooter on slippery surfaces or steep slopes.
- If you are unsure if you can safely ride on a specific terrain, step off. ALWAYS EXERCISE CAUTION.
- PAY ATTENTION - Always look at where you are riding and be aware of the riding conditions in front of you including: people, places, property and objects around you.
- Do not operate the E-Scooter whilst talking, texting or looking at your phone.
- Operate the E-Scooter with extreme caution when indoors, especially around people, property and narrow spaces.
- Do not ride the E-Scooter on the road, footpath or cycle path.
- Do not ride the E-Scooter near motor vehicles or on public roads.
- Do not climb or descend steep hills with the E-Scooter.
- Do not attempt to operate the E-Scooter with two or more people on-board.
- Do not carry anything whilst using the E-Scooter.
- Not suitable for individuals with lack of balance or medical conditions which affect balance.
- Do not use the E-Scooter if you are pregnant or attempting to become pregnant.
- Not suitable for young children, elderly persons or those without the physical capability to operate the E-Scooter.
- DO NOT STEP FORWARD OFF THE E-SCOOTER.
- DO NOT JUMP OFF THE E-SCOOTER.
- PROTECTIVE EQUIPMENT SHOULD BE WORN. NOT TO BE USED IN TRAFFIC.
- You must comply with all local, state and federal laws regarding the operation of the E-Scooter in public and private property.

LENOXX

ELECTRONICS GOODS WARRANTY

WE WARRANT THIS PRODUCT TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 12 MONTHS AFTER DELIVERY TO THE ULTIMATE USER AND WE WILL REPAIR AT NO CHARGE OR REPLACE IT AT OUR OPTION SHOULD IT BECOME DEFECTIVE UNDER THIS WARRANTY PROVIDING YOU SUBMIT PROOF OF PURCHASE (ORIGINAL SALES RECEIPT) WHEN MAKING A REQUEST UNDER THIS WARRANTY. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT, WHICH HAS BEEN SUBJECT TO MISUSE NEGLECT OR ACCIDENT. THE WARRANTY DOES NOT COVER: HANDLES, BATTERIES, ELECTRICAL CORDS, ANTENNAS, MICROPHONES, BROKEN CABINETS OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE PRODUCT. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS (AUSTRALIA) PTY LTD BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

IMPORTANT MESSAGE: BEFORE SENDING YOUR UNIT TO LENOXX FOR REPAIR YOU MUST SUPPLY PROOF OF PURCHASE (Original Sales Receipt) TO VALIDATE YOUR WARRANTY.

THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS AND REMEDIES OF THE CONSUMER UNDER A LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THE WARRANTY RELATES.

"Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure".

FOR WARRANTY REGISTRATION VISIT: www.lenoxx.com.au

Service Direct Line (Australia only): 1300 666 848

Model No: GS10R/ GS10B

Batch No: PR3285