

SAMSUNG ELECTRONICS AMERICA, INC.

SERVICE DIVISION
400 Valley Road, Suite 201
Mount Arlington, NJ 07856
1-800-SAMSUNG (1-800-726-7864)
www.samsung.com

SAMSUNG

ELECTRONICS

AH68-01725R


SAMSUNG

Digital Surround AV Receiver System ***HT-AS600***

Instruction Manual



Safety Warnings

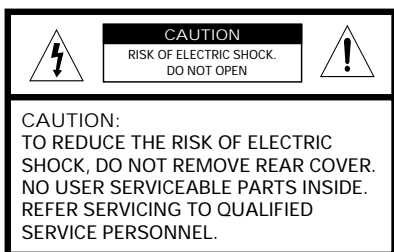

Note to CATV system installer :
This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.




This symbol alerts you to important operating and maintenance instructions accompanying the unit.



WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.


Precautions

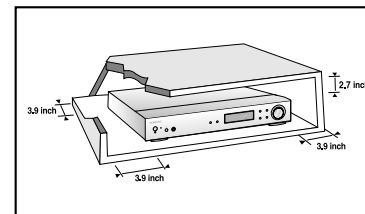


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

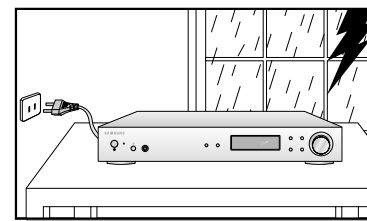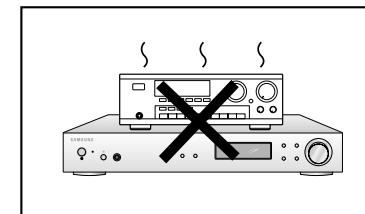


During thunderstorms, disconnect AC main plug from the wall outlet.
Voltage peaks due to lightning could damage the unit.

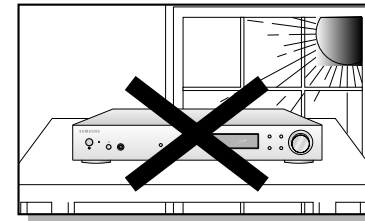

Do not expose the unit to direct sunlight or other heat sources.
This could lead to overheating and malfunction of the unit.

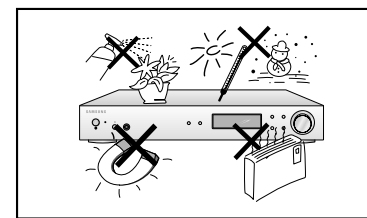

Protect the player from moisture (i.e. vases), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use.
Use of this product is for personal use only.
Condensation may occur if your player or disc have been stored in cold temperatures.
If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

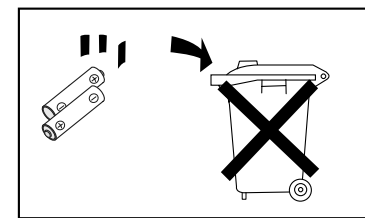

The battery used with this product contain chemicals that are harmful to the environment.
Do not dispose of batteries in the general household trash.



Safety Instructions

READ INSTRUCTIONS

All the safety and operating instructions should be read before the appliance is operated.

RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

HEED WARNINGS

All warnings on the appliance and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

WATER AND MOISTURE

Do not use this video product near water—for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

OVERLOADING

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

VENTILATION

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating these openings must not be blocked or covered.

The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should never be placed near or over a radiator or heat register.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been followed.

POWER CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

CLEANING

Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

LIGHTNING

For added protection of this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

OBJECT AND LIQUID ENTRY

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

ACCESSORIES

Do not place this video product on an unstable cart, stand, tripod, bracket, or table.

The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance.

Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

CART

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

POWER SOURCES

This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of supply to your home, consult your appliance dealer or local power company. For video products intended to be operated from battery power, or other sources, refer to the operating instructions.

POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

POLARIZATION

This video product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other.) This plug will fit into the power outlet only one way.

This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

OUTDOOR ANTENNA GROUNDING

• If an outside antenna is connected to the antenna terminal, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.

• In the U.S.A section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See the figure below.

ATTACHMENTS


Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

SERVICING

• Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
• Refer all servicing to qualified service personnel.

REPLACEMENT PARTS

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

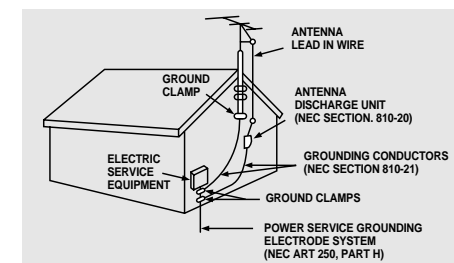

SAFETY CHECK

Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

DAMAGE REQUIRING SERVICE

Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
- If the video product has been dropped or the cabinet has been damaged.
- When the video product exhibits a distinct change in performance - this indicates a need for service.

HEAT

This video unit should be situated away from heat sources such as radiators, stoves, or other products (including amplifiers) that produce heat.



Features

Dolby Pro Logic II

Dolby Pro Logic II is a new form of multi-channel audio signal decoding technology that improves upon existing Dolby Pro Logic.

DTS (Digital Theater Systems)

DTS play backs 5.1 channel sound with less compression than Dolby Digital for richer sound.



Contents

PREPARATION

Safety Warnings	1
Precautions.....	2
Safety Instructions.....	3
Features	5
Description	7

CONNECTIONS

Connecting the Speakers	11
Connecting External Components	13
Connecting the FM and AM Antennas.....	16

OPERATION

Before Using the AV Receiver	17
Selecting External Component Input	18
Setting the Speaker Mode	19
Setting the Speaker Listening Distance.....	21
Setting DRC (Dynamic Range Compression)	23
Test Tone	24
Setting Speaker Level	27
Dolby Pro Logic II Mode.....	29
Dolby Pro Logic II Effect	31
SFE Mode.....	33
Stereo Mode.....	35

RADIO OPERATION


Listening to Radio	37
Presetting Radio Stations	38

MISCELLANEOUS


Convenient Functions	39
Operating TV with Remote Control.....	41
Operating VCR (DVD) with Remote Control.....	43
Before Calling for Service.....	45
Specifications	47
WARRANTY	48

Description


[Front Panel]

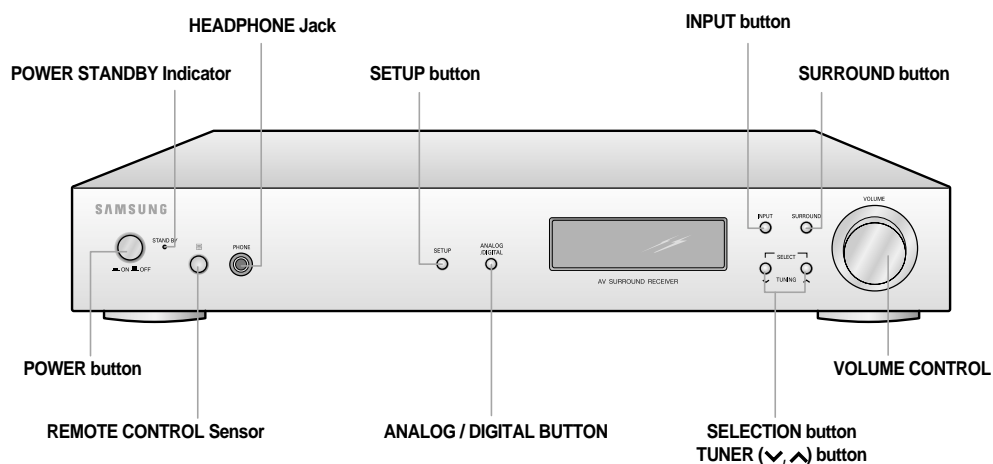



[Display]

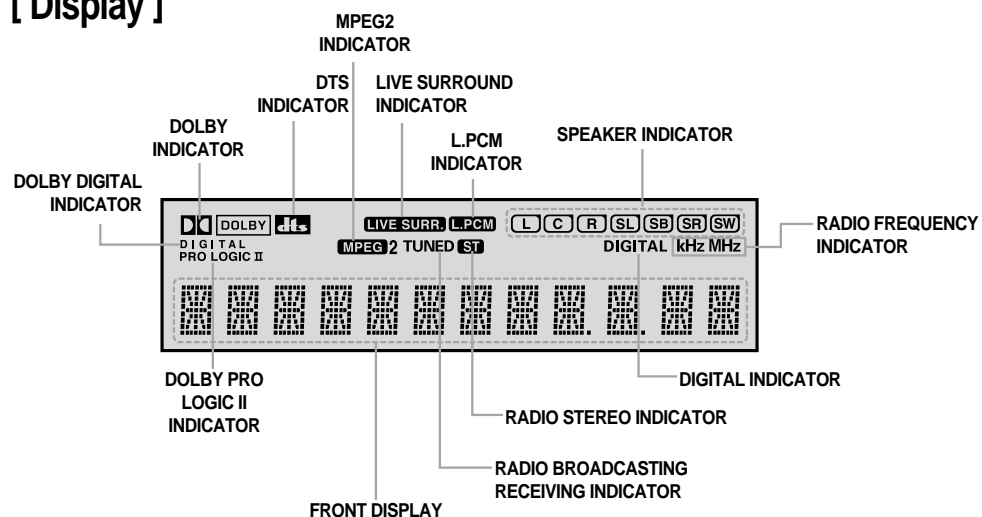

[Rear Panel]

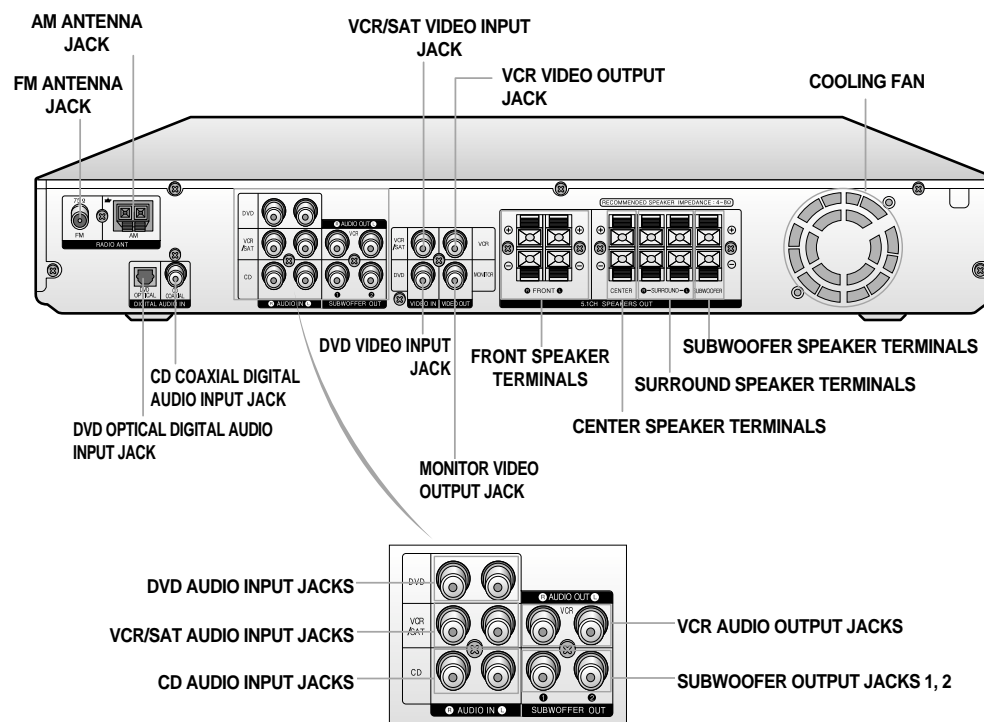


Accessories

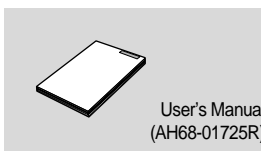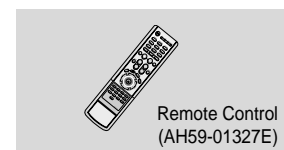




Description

[Remote Control]

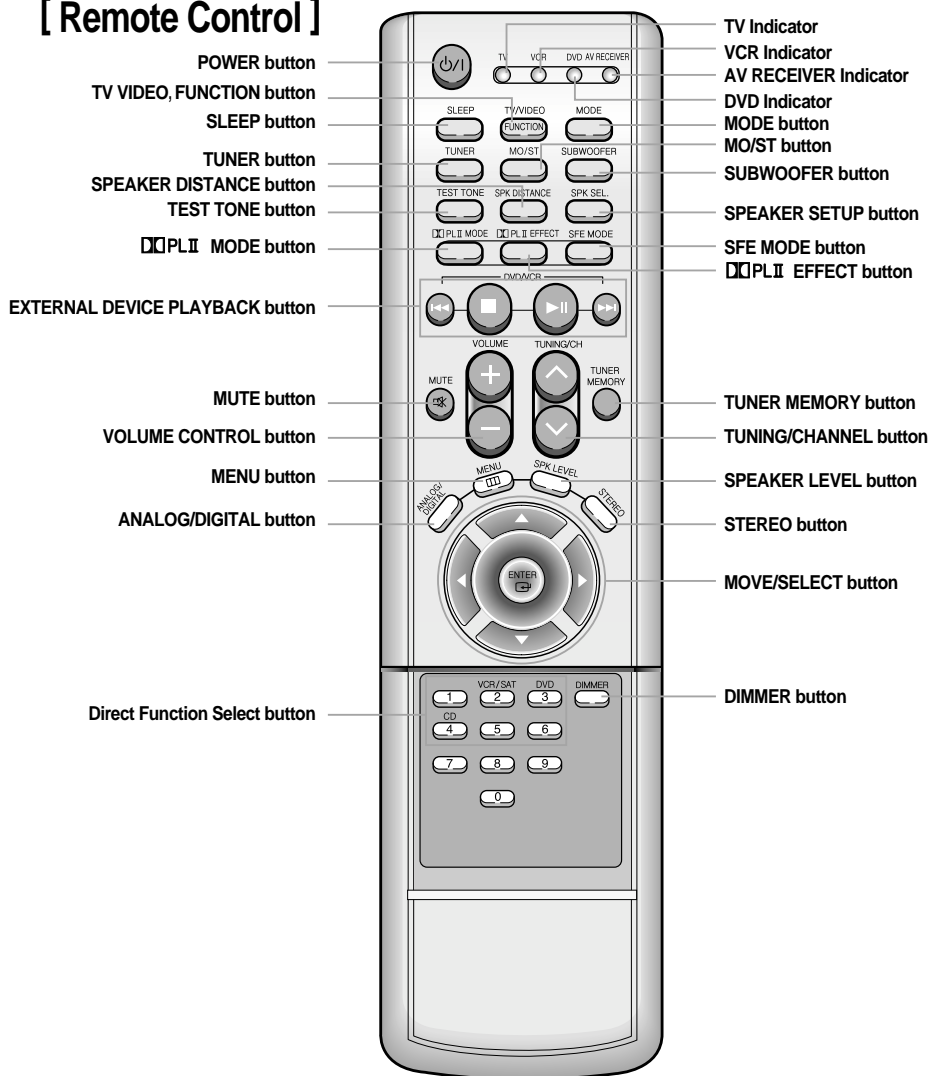

Insert Remote Batteries

- 1 Remove the battery cover on the back of the remote by pressing down and sliding the cover in the direction of the arrow.
- 2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).
- 3 Replace the battery cover.

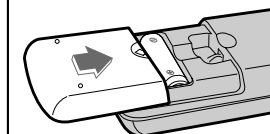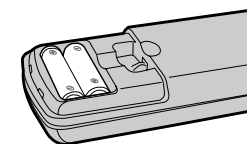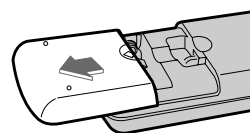


Follow these precautions to avoid leaking or cracking batteries:


- Place batteries in the remote control so they match the polarity: (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

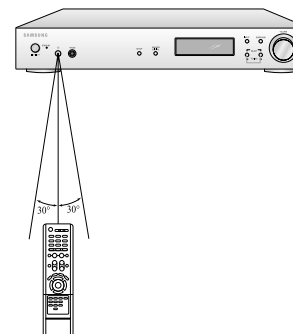


To open the remote control cover, push the top of the cover, then slide downward.

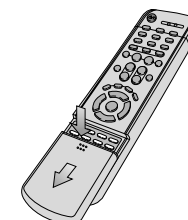



Connecting the Speakers

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

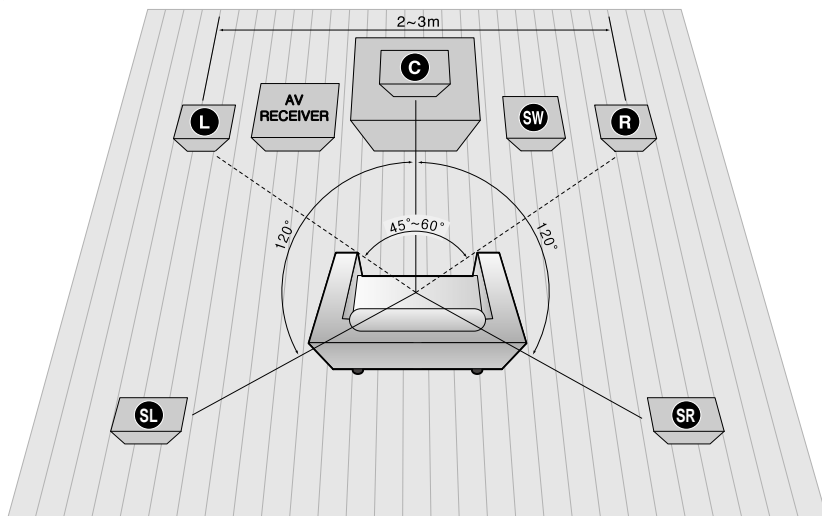

Position of AV Receiver

- Place AV Receiver on a dedicated stand or rack.

Front Speakers L R

- Place these speakers in front of your listening position, facing inwards (about 45°) toward you.
- Place the speakers so that their tweeters will be at the same height as your ear.
- Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speakers.

Center Speaker C

- It is best to install it at the same height as the front speakers.
- You can also install it directly over or under the TV.


Surround Speakers SL SR

- Place these speakers behind your listening position.
- If there isn't enough room, place these speakers so they face each other.
- Place them about 60 to 90cm (2 to 3feet) above your ear, facing slightly downward.
- Unlike the front and center speakers, the surround speakers are used to handle mainly sound effects and sound will not come from them all the time.

Subwoofer SW


- The position of the subwoofer is not so critical. Place it anywhere you like.

Note When you place the speaker on the wall, make sure to fasten it tightly so that it may not fall off.

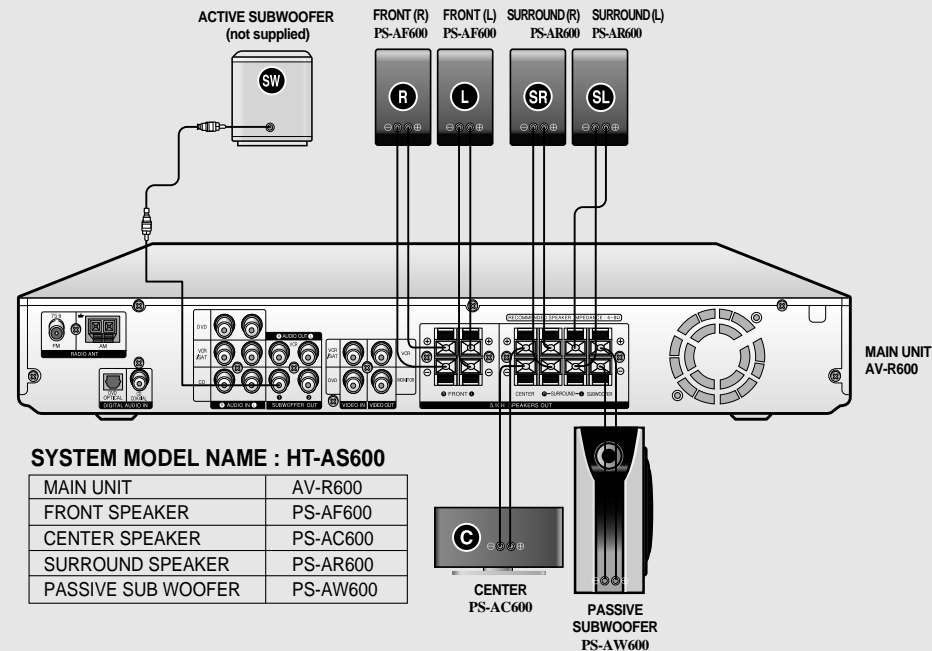


Connecting Speaker Wire

 1 Press the tab of the speaker connector.



 2 Insert the black wire into the black(-) terminal and the gray wire into the gray(+) terminal.



Note


- Never touch speaker terminals while the power is on. Doing so could result in electric shock.
- Make sure the polarities (+ and -) are correct.




Connecting External Components

Connecting Video Component

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

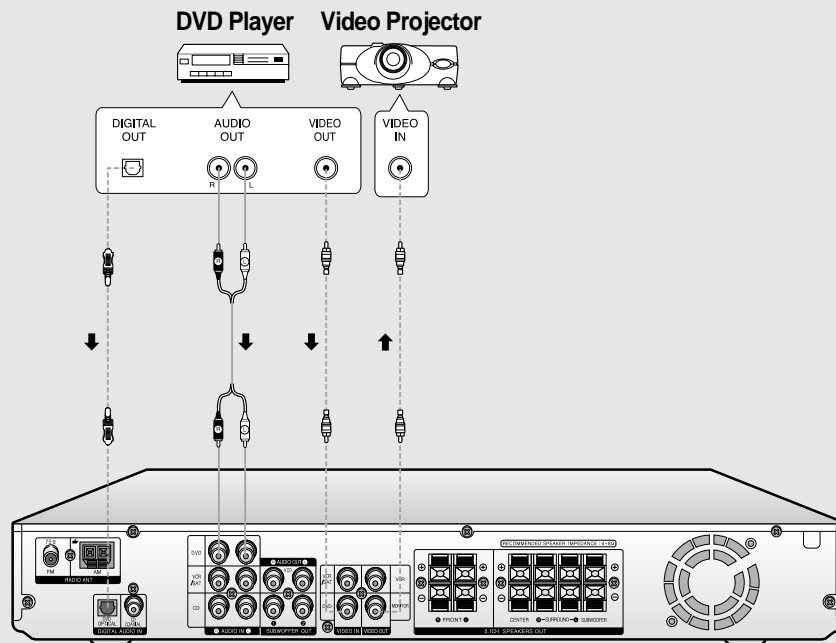

• Disconnect the power plug from the outlet if you do not use this unit for long period of time.

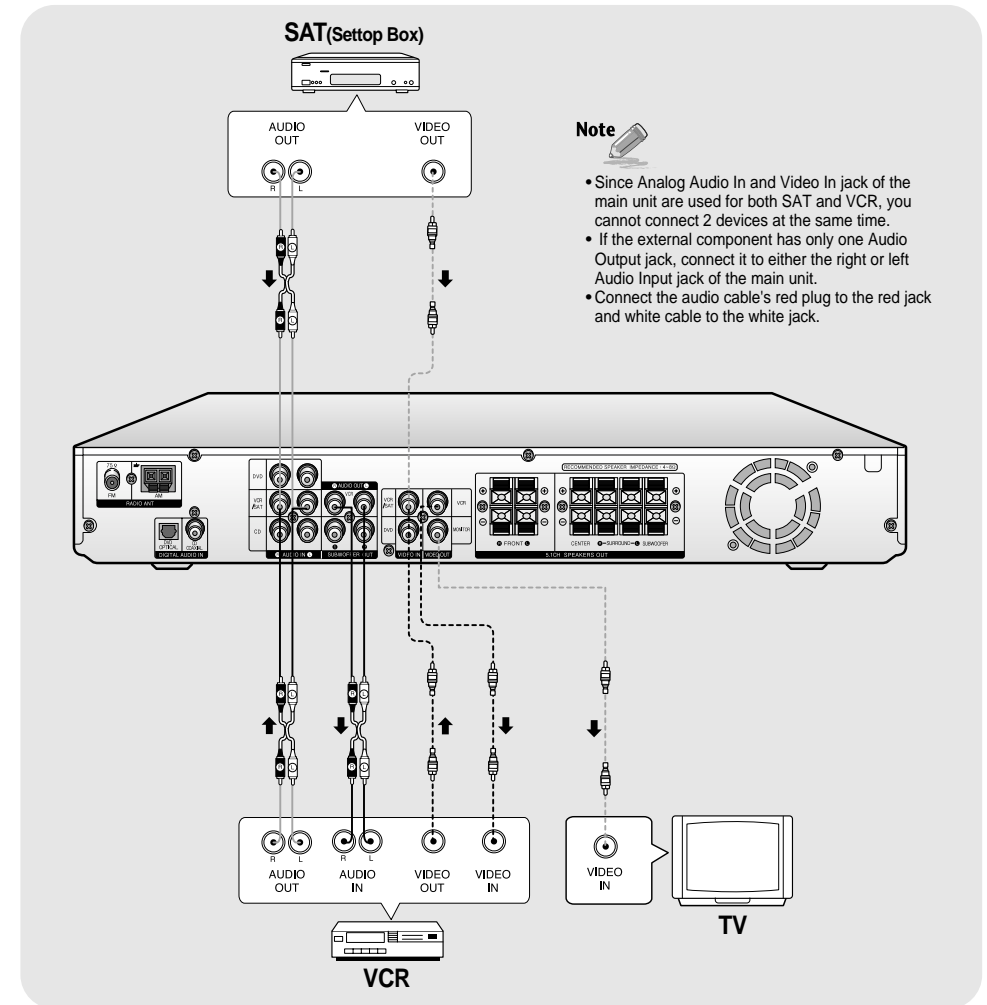


- Since Analog Audio In and Video In jack of the main unit are used for both SAT and VCR, you cannot connect 2 devices at the same time.
- If the external component has only one Audio Output jack, connect it to either the right or left Audio Input jack of the main unit.
- Connect the audio cable's red plug to the red jack and white cable to the white jack.


Connecting External Component

Connecting Audio Component

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

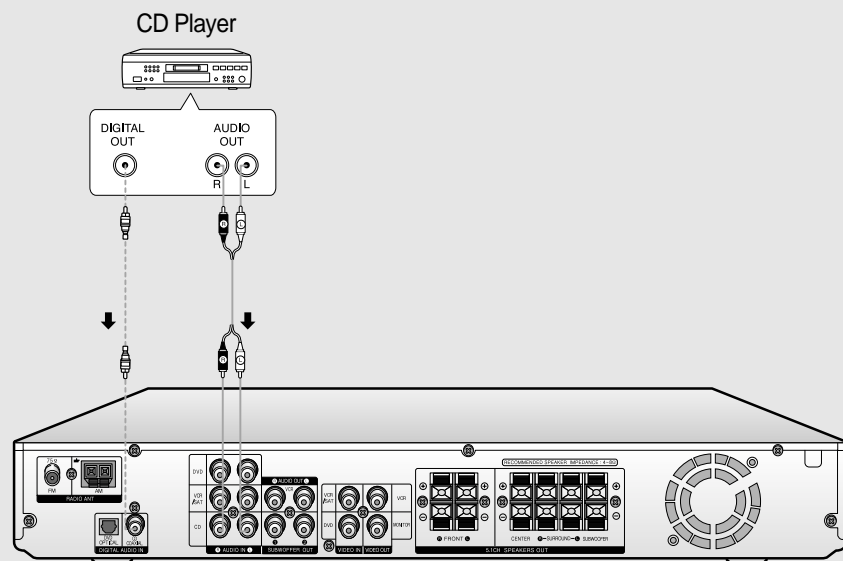

Connecting the FM and AM Antennas

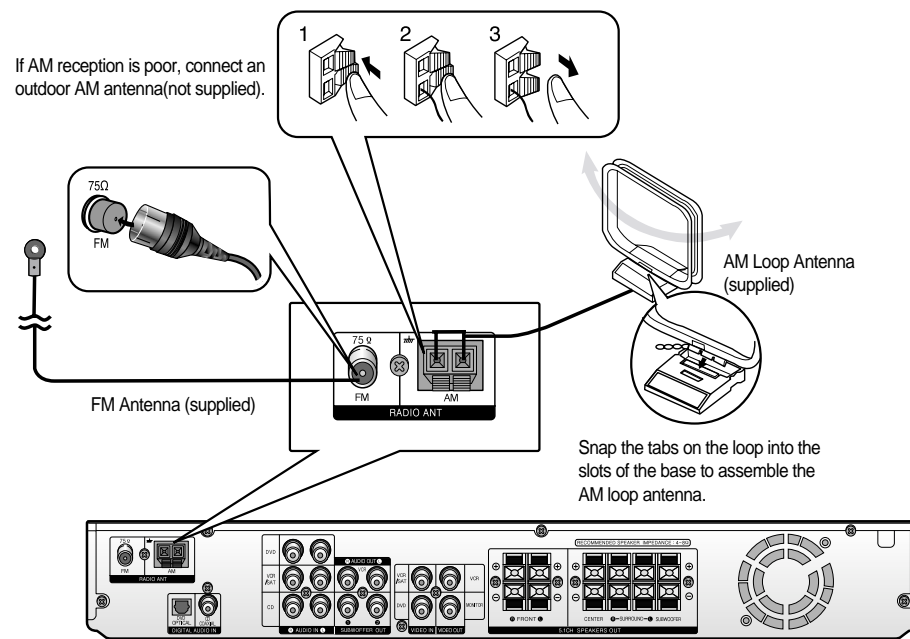

FM antenna connection


1. Connect the FM antenna supplied to the FM 75Ω COAXIAL terminal as a temporary measure.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

AM antenna connection

1. Connect the AM loop antenna supplied to the AM terminals.
2. If reception is poor, connect an outdoor single vinyl-covered wire to the AM terminal. (Keep the AM loop antenna connected).

COOLING FAN

The cooling fan dissipates the heat generated inside the unit so that the unit can be operated normally. The cooling fan is activated automatically to supply cool air to the unit.

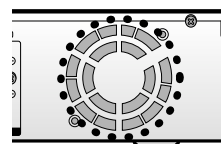

Please observe the following cautions for your safety.

- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit could rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)



Before Using the AV Receiver

Turning On/Off

MAIN UNIT

- 1 Connect the power plug to the outlet.
- 2 Press the **POWER** (ON OFF) button of the main unit.
 - This unit will be turned on or off.

REMOTE CONTROL

Press the **POWER** () button of the remote control while main unit is turned on.

- This unit will be turned on or set to Standby mode.



- This unit will not turned on or off even if you press the **POWER** () button on the remote control while the main unit is turned off.
- When you turn off the power by pressing the **POWER** () button on the remote control, the unit will be in standby mode. To completely turn off the power, press the **POWER** (ON OFF) button of the main unit. Standby indicator will be turned off.

Functions of Dedicated Remote Control

You can operate TV, VCR, DVD, AV Receiver with one remote control.
See pages 41-44 for more details.

REMOTE CONTROL

Press **MODE** button.

- Each time you press this button, it will select and blink TV indicator → VCR indicator → DVD indicator → AV Receiver indicator in turn.



Selecting External Component Input

To Select the Function

REMOTE CONTROL

Method 1

Press the **FUNCTION** button.

- Each time you press the this button, CD → DVD → VCR/SAT → FM → AM will be selected in turn.

Method 2


Press **DIRECT FUNCTION** Select button.

- You can directly select VCR/SAT, DVD, CD.

MAIN UNIT

Press **INPUT** button.

- Each time you press the this button, CD → DVD → VCR/SAT → FM → AM will be selected in turn.

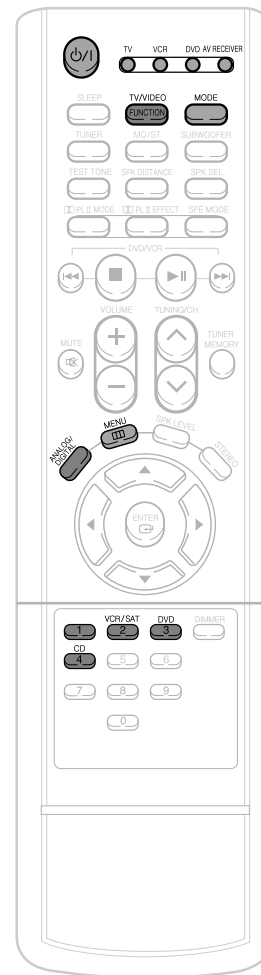


To Select Analog/Digital Input


You can listen to sound in Analog 2 Channels or Dolby Digital 5.1 Channel using this unit.

Press the **ANALOG/DIGITAL** button.

 - For DVD, VCR/SAT Function
ANALOG and **OPTICAL** (DVD OPTICAL) will be selected repetitively.



 - For CD Function
ANALOG and **COAXIAL** will be selected repetitively.




- You can enjoy Dolby Digital only if you connect the Audio Output jack of an external audio component to the optical/coaxial digital Audio Input jack on the main unit.
- You can operate this function only with the remote control.
- This function will be selected in analog only for VCR function.



Setting the Speaker Mode

Before moving or installing the product, be sure to turn off the power and disconnect the power cord. Signal outputs and frequency response from the speaker will automatically be adjusted according to your speaker configuration and whether certain speakers are used or not.

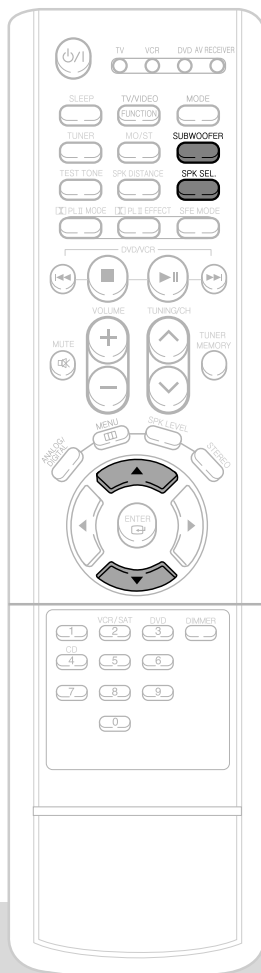

REMOTE CONTROL

- 1 Press **SPK SEL.** button to select the speaker you want.
 - Each time you press this button, F.SPK → C.SPK → S.SPK → SW SPK → CROVR → SPK MODE OFF will be selected in turn.
- 2 Press **▲▼** button to set the speaker mode.

To Exit Setup Mode

- Wait for about 5 seconds or press the **SPK SEL.** button of the remote control to select SPK MODE OFF.


To turn the SUBWOOFER On or Off.

Press **SUBWOOFER** button.

- Each time you press this button, SW SPK : YES, SW SPK : NO will be selected in turn.
- If you play in 2 Channel Stereo, select 'YES' to use Subwoofer and 'NO' not to use.



If F.SPK is set to 'SMALL', SW SPK is fixed to 'YES'.

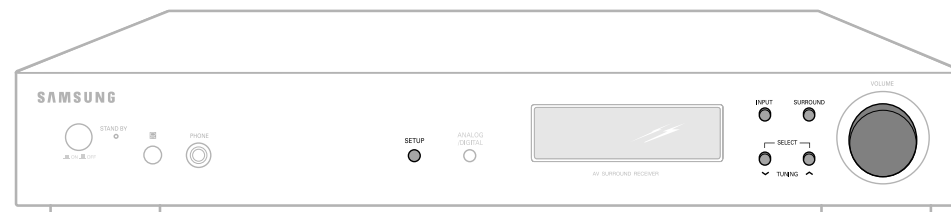

MAIN UNIT

- 1 Press **SETUP** button.
 - "SETUP MODE" appears on the display and enters into Setup Mode.
- 2 Press **INPUT** button one time.
 - "SPEAKER SETUP" appears in the display.
- 3 Press **SURROUND** button to select the speaker you want.
 - Each time you press this button, F.SPK → C.SPK → S.SPK → SW SPK → CROVR will be selected in turn.
- 4 Press **SELECT** (**▼, ▲**) button to set the speaker mode.

To Exit Setup Mode

- Wait for about 5 seconds or turn the **VOLUME CONTROL** of the main unit. "SETUP MODE OFF" appears on the display and exits Setup Mode.


Setting the Speaker

- F.SPK (Front)** : LARGE, SMALL
- C.SPK (Center)** : LARGE, SMALL, NONE
- S.SPK (Surround)** : LARGE, SMALL, NONE
- SW SPK (Subwoofer)** : YES, NO
- CROVR (Crossover Frequency)**: 60, 80, 100, 120, 150, 180, 200Hz

- LARGE** : Select when you use large speaker. You can listen to full range sound.
- SMALL** : Select this when you use small speaker. Bass below 100Hz will not be output.
- NONE** : Select this when you use no speaker.
- YES** : Select this when you use Subwoofer Speaker if you play back in 2 Channel Stereo.
- NO** : Select when you do not use Subwoofer Speaker if you play back in 2 Channel Stereo.
- CROVR** : Select the crossover frequency depending on the size of speaker connected when you use subwoofer. Select 60Hz if cone paper speaker is 5.6inch, select 80Hz for 4.8inch, 100Hz for 4inch, 120Hz for 3.2inch, 150Hz for 2.4inch, 180Hz and 200Hz for 1.6inch.



Setting the Speaker Listening Distance

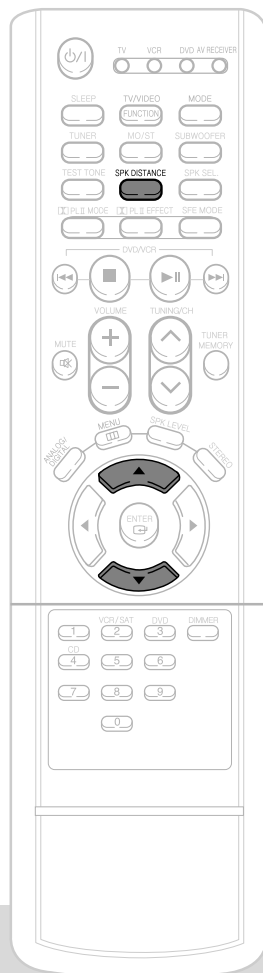

REMOTE CONTROL

- 1 Press the **SPEAKER DISTANCE** button to select the speaker you want.
 - Each time you press this button, F.L → CEN → F.R → S.R → S.L → S.W → DISTANCE OFF will be selected in turn.
- 2 Press **▲▼** button to set the speaker distance.
 - For F.L, CEN, F.R, S.W Speaker, you can set the distance from the speaker to listening position between 0.0~1.5m in intervals of 0.3m.
 - For S. R, S.L Speaker, you can set the distance from the speaker to listening position between 0.0~4.5m in intervals of 0.3m.


To Exit Setup Mode

- Wait for about 5 seconds or press the **SPEAKER DISTANCE** button of remote control to select DISTANCE OFF.



Note

- If the listening position is beyond the range of speaker distance setup when you place the speaker, set the speaker distance to the maximum.

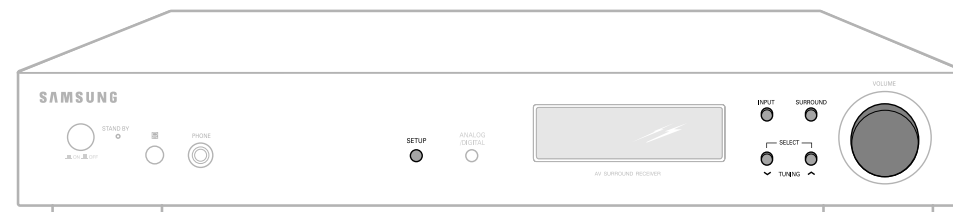

MAIN UNIT

- 1 Press **SETUP** button.
 - "SETUP MODE" appears on the display and enters into Setup Mode.
- 2 Press **INPUT** button 2 times.
 - "DISTANCE SETUP" appears on the display.
- 3 Press **SURROUND** button to select the speaker you want.
 - Each time you press this button, F.L → CEN → F.R → S.R → S.L → S.W will be selected in turn.
- 4 Press **SELECT** (▼, ▲) button to set the speaker distance.
 - For F.L, CEN, F.R, S.W Speaker, you can set the distance from the speaker to listening position between 0.0~1.5m in intervals of 0.3m.
 - For S.R, S.L Speaker, you can set the distance from the speaker to listening position between 0.0~4.5m in intervals of 0.3m.

To Exit Setup Mode

- Wait for about 5 seconds or turn the **VOLUME CONTROL** of the main unit. "SETUP MODE OFF" appears on the display and exit Setup Mode.


Setting Speaker Distance

Set the distance from the speaker to listening position in intervals of 0.3m.

- F.L (Front-Left)** : 0feet ~ 5feet
- CEN (Center)** : 0feet ~ 5feet
- F.R (Front-Right)** : 0feet ~ 5feet
- S.R (Surround-Right)** : 0feet ~ 15feet
- S.B (Surround Center)** : 0feet ~ 15feet
- S.L (Rear-Left)** : 0feet ~ 15feet
- SW (Subwoofer)** : 0feet ~ 5feet

Setting DRC (Dynamic Range Compression)

You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night.

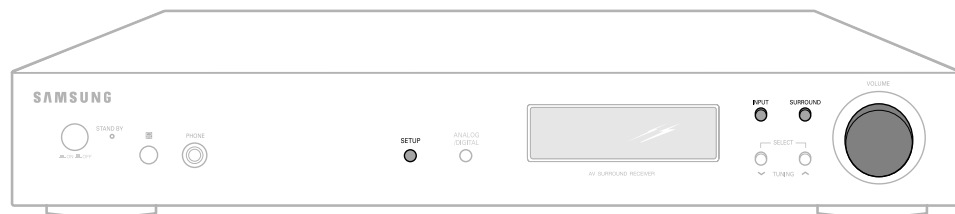

MAIN UNIT

- 1 Press **SETUP** button.
 - "SETUP MODE" appears on the display and enters into Setup Mode.
- 2 Press **INPUT** button 3 times.
 - "DRC SETUP" appears on the display.
- 3 Press **SURROUND** button to set DRC.
 - Each time you press this button, DRC : STD → DRC : MAX → DRC : MIN will be selected in turn.

To Exit Setup Mode

- Wait for about 5 seconds or turn the **VOLUME CONTROL** of the main unit. "SETUP MODE OFF" appears on the display and exits Setup Mode.

Setting DRC


- **STD** : Sets DRC effect to standard.
- **MAX** : Sets DRC effect to maximum.
- **MIN** : Sets DRC effect to minimum.



Note • You can only set this function via the main unit.

Test Tone

Use test tone to check the speaker connection status or level.

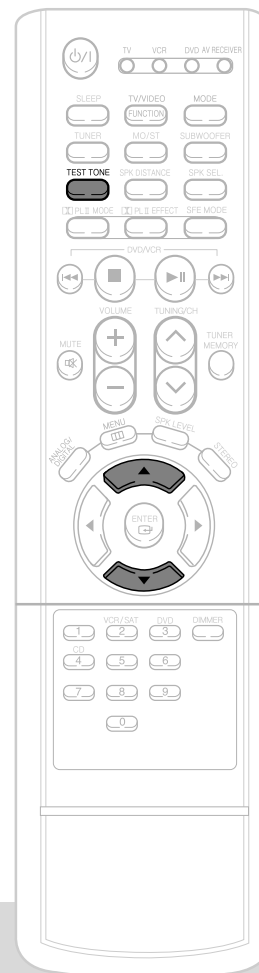

To Automatically Output Test Tone



REMOTE CONTROL

1 Press **TEST TONE** button.

- Test signal will be automatically output as follows; F.L → CEN → F.R → S.R → S.L → S.W.
- During test tone output, press **▲▼** button to adjust the speaker output level from -10 to +10 dB by 1 step.


To Stop Test Tone

- Press **TEST TONE** button again.



Test Tone

Use test tone to check speaker connection status or level.

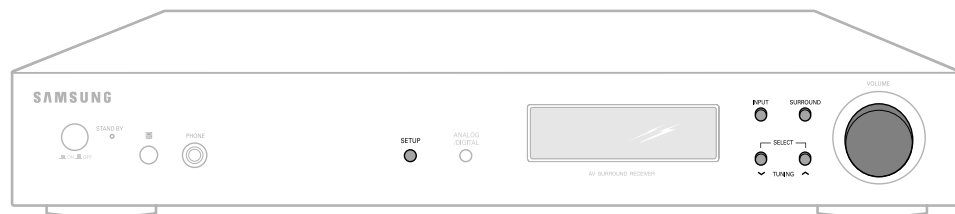

To Automatically Output Test Tone




MAIN UNIT

- 1 Press **SETUP** button.
 - "SETUP MODE" appears on the display and enters into Setup Mode.
- 2 Press **INPUT** button 4 times.
 - "TEST-T AUTO" appears in the display.
- 3 Press **SURROUND** button.
 - Test signal will be automatically output as follows; F.L → CEN → F.R → S.R → S.L → S.W .
 - During test signal output, press **SELECT** (**▼**, **▲**) button to adjust the speaker output level from -10 to +10 dB by 1 step.

To Stop Test Tone

Method 1) Press **INPUT** button 2 times.
 • "TEST-T OFF" appears on the display and test tone stops.

Method 2) Turn **VOLUME CONTROL**.
 • "SETUP MODE OFF" appears on the display and test tone stops.

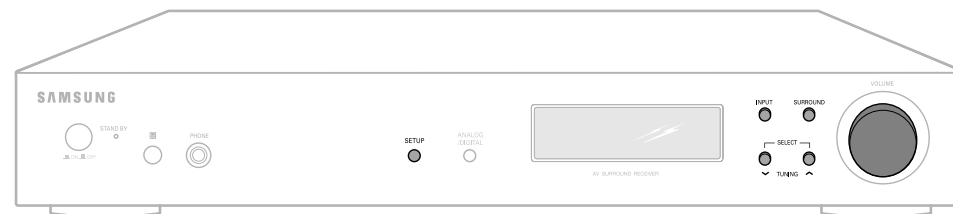

To Manually Output Test Tone



MAIN UNIT

- 1 Press **SETUP** button.
 - "SETUP MODE" appears on the display and enters into Setup Mode.
- 2 Press **INPUT** button 5 times.
 - "TEST-T MANU" appears in the display.
- 3 Press **SURROUND** button.
 - Each time you press this button, F.L → CEN → F.R → S.R → S.L → S.W will be selected in turn.
- 4 Press **SELECT** (**▼**, **▲**) button to set the test tone as you want.
 - You can adjust the speaker output level from -10 to +10dB by 1 step.

To Stop Test Tone

Method 1) Press **INPUT** button 1 time.
 • "TEST-T OFF" appears on the display and test signal stops.

Method 2) Turn **VOLUME CONTROL**.
 • "SETUP MODE OFF" appears on the display and test tone stops.


Test Tone Output

- **F.L (Front-Left)** : -10 ~ +10dB
- **CEN (Center)** : -10 ~ +10dB
- **F.R (Front-Right)** : -10 ~ +10dB
- **S.R (Surround-Right)** : -10 ~ +10dB
- **S.L (Surround-Left)** : -10 ~ +10dB
- **S.W (Subwoofer)** : -10 ~ +10dB



Setting Speaker Level

You can set the balance and level of speakers

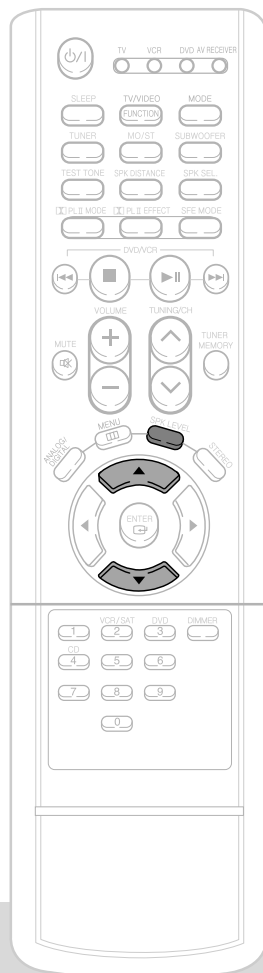

Remote Control

1 Press **SPK LEVEL** button to select the speaker you want.


- Each time you press this button, F.L → CEN → F.R → S.R → S.L → S.W → SPK LEVEL OFF will be selected in turn.

2 Press **▲▼** button to set the speaker level you want.

- You can adjust it from -10 to +10dB by 1 step.
- The sound gets quieter at -10dB and louder at +10dB.
- Default setting value is 00dB.

To Exit Setup Mode

- Wait for about 5 seconds or press **SPK LEVEL** button on the remote control to select SPK LEVEL OFF.

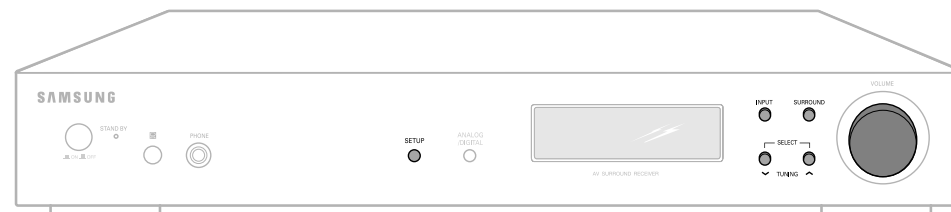

MAIN UNIT

1 Press **SETUP** button.

- "SETUP MODE" appears on the display and enters into Setup Mode.

2 Press **INPUT** button 7 times.

- "LEVEL SETUP" appears on the display.

3 Press **SURROUND** button.

- Each time you press this button, F.L → CEN → F.R → S.R → S.L → S.W will be selected in turn.

4 Press **SELECT** (▼, ▲) button to set to the speaker level you want.


- You can adjust it from -10 to +10dB by 1 step.
- The sound gets smaller at -10dB and louder at +10dB.
- Default setting value is 00dB

To Exit Setup Mode

- Wait for about 5 seconds or turn **VOLUME CONTROL** of the main unit. "SETUP MODE OFF" appears on the display and exits Setup Menu.


Setting Speaker Level

- F.L (Front-Left)** : -10 ~ +10dB
- CEN (Center)** : -10 ~ +10dB
- F.R (Front-Right)** : -10 ~ +10dB
- S.R (Surround-Right)** : -10 ~ +10dB
- S.L (Surround-Left)** : -10 ~ +10dB
- S.W (Subwoofer)** : -10 ~ +10dB

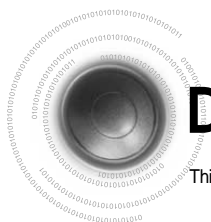

Dolby Pro Logic II Mode

This mode provides 5.1 channel sound from 2 channel sources

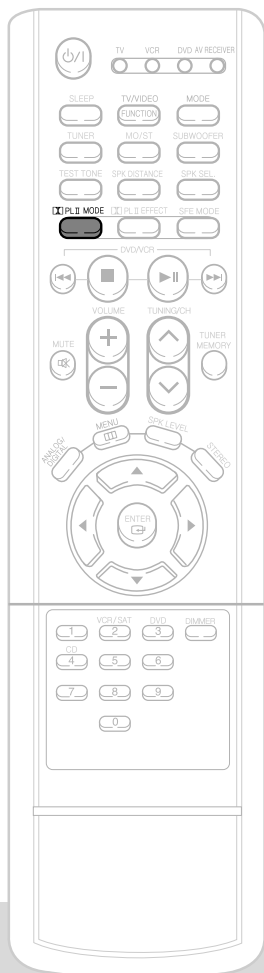

REMOTE CONTROL


1 Press **DPL II MODE** button.

- Each time you press this button, MUSIC → CINEMA → MATRIX → PROLOGIC will be selected in turn.



To Exit Setup Mode

- Wait for about 5 seconds.

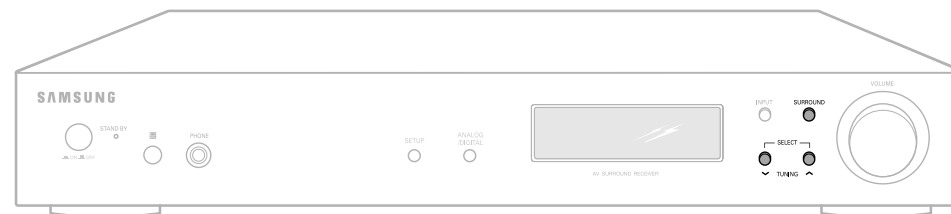

MAIN UNIT

1 Press **SURROUND** button briefly to select "DPL II" Mode.

- Each time you press this button, DPL II → SFE → STEREO will be selected in turn.

2 Press **SELECT** (**↓**, **↑**) button.

- Each time you press **SELECT** (**↑**) button, MUSIC → CINEMA → MATRIX → PROLOGIC will be selected in turn.
- Each time you press **SELECT** (**↓**) button, PROLOGIC → MATRIX → CINEMA → MUSIC will be selected in turn.

To Exit Setup Mode

- Wait for about 5 seconds.

Dolby Pro Logic II Mode

- MUSIC** : Provides 5.1 Channel Surround sound to digital, analog or existing stereo sources such as CD, TAPE, FM, TV and Stereo VCR.
- CINEMA** : Adds realism to the movie soundtrack.
- MATRIX** : You will hear 5.1 Channel Surround sound.
- PROLOGIC** : You will experience a surround effect with just the front left and right speakers.




Note

- You cannot use Dolby Pro Logic II Mode for multi channel signals such as Dolby Digital and DTS.
- Pro Logic works only for PCM audio signals with sampling frequencies of 32KHz, 44KHz or 48KHz.
- Sound will not be output from rear center speaker if PCM audio signal is mono.



Dolby Pro Logic II Effect

This function works only in Dolby PRO LOGIC II MUSIC Mode.

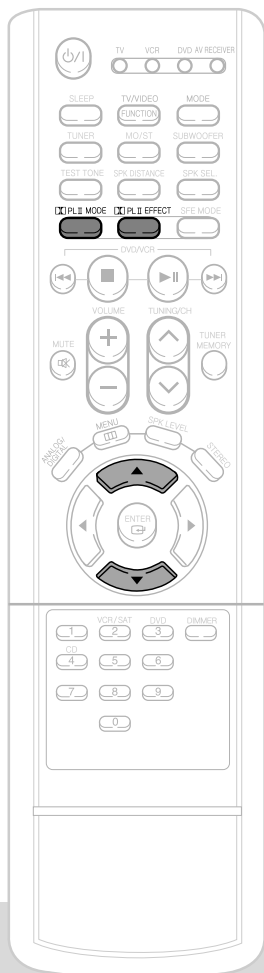

REMOTE CONTROL

1 Press **PL II MODE** button to select 'MUSIC' Mode.

2 Press **PL II EFFECT** button.

- Each time you press this button, C-WIDTH → DIMENSION → PANORAMA → DPL II EFT OFF will be selected in turn.

C-WIDTH: 0

DIMENSION: +3


PANORAMA: ON

3 Press **▲▼** button to select Dolby Pro Logic II effect you want.

- C-WIDTH: You can set from 0 to 7.
- DIMENSION: You can set from -7 to +7.
- PANORAMA: You can Set it ON or OFF.

To Exit Setup Mode

- Wait for about 5 seconds or press **PL II EFFECT** button of remote control to select DPL II EFT OFF.

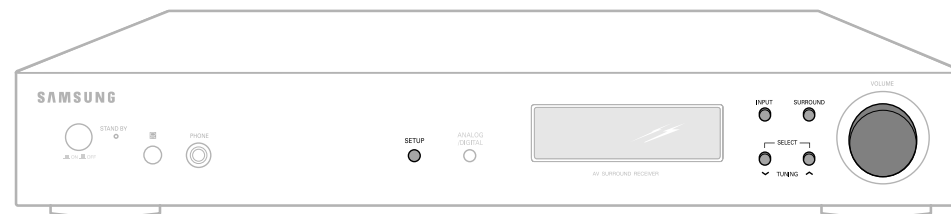

MAIN UNIT

1 Press **SETUP** button.

- "SETUP MODE" appears on the display and enters into Setup Mode.

2 Press **INPUT** button 9 times.

- "DPL II MODE" appears on the display.

3 Press **SURROUND** button.

- Each time you press this button, C-WIDTH → DIMENSION → PANORAMA will be selected in turn.

4 Press **SELECT** (**▼**, **▲**) button to select Dolby Pro Logic II effect you want.

To Exit Setup Mode

- Wait for about 5 seconds or turn **VOLUME CONTROL** of the main unit. "SETUP MODE OFF" appears on the display and exits Setup Mode.


Dolby Pro Logic II Effect

- **C-WIDTH** : This sets the width of the center image. The higher the setting, the less sound comes from the center speaker.
- **DIMENSION** : Incrementally adjusts the sound field (DSP) from the front or rear.
- **PANORAMA** : This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.



SFE Mode

Refer to the unique sound existing at specific place and you can feel live sound as if you are listening at actual site.

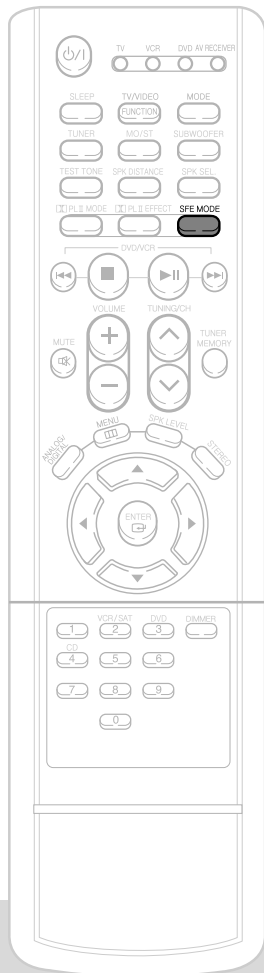

REMOTE CONTROL


1 Press **SFE MODE** button.

- Each time you press this button, **HALL** → **THEATER** → **ARENA** → **CLUB** → **DOME** → **STADIUM** → **CHURCH** will be selected in turn.



To Exit Setup Mode

- Wait for about 5 seconds.

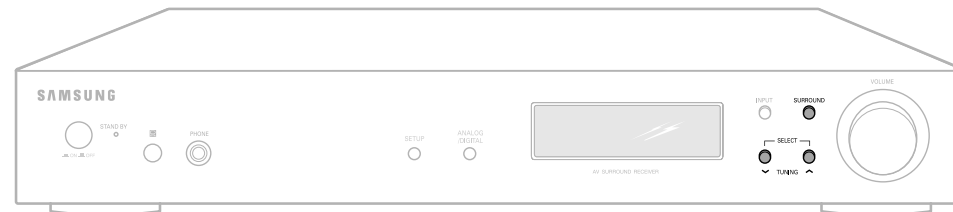



MAIN UNIT

1 Press **SURROUND** button briefly to select 'SFE' Mode.

- Each time you press this button, **DPL II** → **SFE** → **STEREO** will be selected in turn.

 2 Press **SELECT** (,) button.


- Each time you press Select () button, **HALL** → **THEATER** → **ARENA** → **CLUB** → **DOME** → **STADIUM** → **CHURCH** will be selected in turn
- Each time you press Select () button, **CHURCH** → **STADIUM** → **DOME** → **CLUB** → **ARENA** → **THEATER** → **HALL** will be selected in turn.

To Exit Setup Mode

- Wait for about 5 seconds.

Stereo Mode

You can select this mode when you listen to sound through the Front Left and Right speakers and subwoofer.

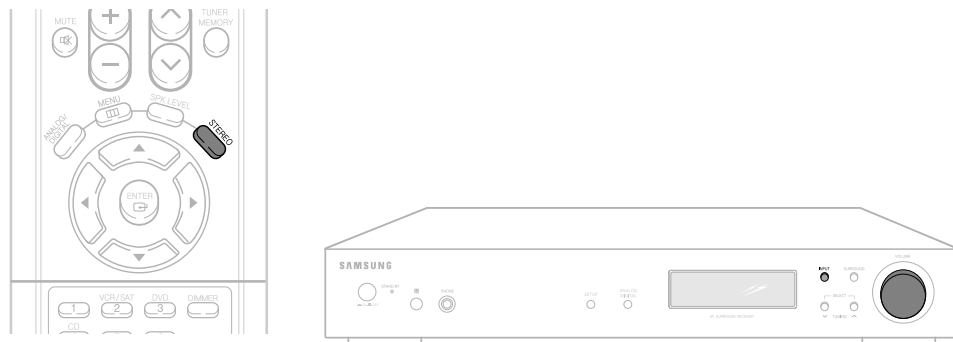

REMOTE CONTROL

Press **STEREO** button.

- "STEREO" appears in the display and Stereo Mode is selected.



To Exit Setup Mode

- Wait for about 5 seconds.

MAIN UNIT

Press **SURROUND** button briefly to select 'STEREO'.

- Each time you press this button, DPL II → SFE → STEREO will be selected in turn.

To Exit Setup Mode

- Wait for about 5 seconds.



- When PCM and Analog Stereo signals are input, the left and right channels are played back in Stereo Mode.

For Surround Mode and Input Signal

o = active, - = inactive

Surround Mode	Input Signal	Decoding	Output Channel				Display Information	
			L/R	C	SL/SR	Sub Woofer	Display Signal Format	Channel Status
DOLBY (MUSIC, CINEMA, MATRIX, GAME, PROLOGIC)	Dolby D Surr. EX	Dolby Digital 5.1	o	o	o	o	1X1 DIGITAL	L, C, R, SL, SR, SW
	Dolby D (5.1ch)	Dolby Digital 5.1	o	o	o	o	1X1 DIGITAL	L, C, R, SL, SR, SW
	Dolby D (2ch)	Pro Logic II x	o	o	o	o	1X1 DIGITAL	L, R
	Dolby D (2ch Surr)	Pro Logic II x	o	o	o	o	1X1 DIGITAL	L, R
	LPCM (Audio)	Pro Logic II x	o	o	o	o	LPCM	L, R
	Analog	Pro Logic II x	o	o	o	o	ANALOG	-
NEO:6 (MUSIC, CINEMA)	DTS-ES	DTS 5.1	o	o	o	o	dts, ES	L, C, R, SL, SR, SW
	DTS 96/24	DTS 96/24	o	o	o	o	DTS 96/24	L, C, R, SL, SR, SW
	DTS (5.1)	DTS 5.1	o	o	o	o	dts	L, C, R, SL, SR, SW
	LPCM (Audio)	Neo:6	o	o	o	-	LPCM	L, R
	Analog	Neo:6	o	o	o	-	ANALOG	-
	Dolby D (2ch)	Neo:6	o	o	o	-	1X1 DIGITAL	L, R
SFE	Dolby D (2ch Surr)	Neo:6	o	o	o	-	1X1 DIGITAL	L, R
	Dolby Surr. EX	SFE	-	-	-	-	1X1 DIGITAL	L, C, R, SL, SR, SW
	Dolby D (5.1ch)	SFE	-	-	-	-	1X1 DIGITAL	L, C, R, SL, SR, SW
	Dolby D (2ch)	SFE	o	o	o	o	1X1 DIGITAL	L, R
	Dolby D (2ch Surr)	SFE	o	o	o	o	1X1 DIGITAL	L, R
	DTS-ES	SFE	-	-	-	-	dts, ES	L, C, R, SL, SR, SW
EXES	DTS (5.1ch)	SFE	-	-	-	-	dts	L, C, R, SL, SR, SW
	LPCM (Audio)	SFE	o	o	o	o	LPCM	L, R
	Analog	SFE	o	o	o	o	ANALOG	-
	Dolby D Surr. EX	Dolby Digital EX	o	o	o	o	1X1 DIGITAL	L, C, R, SL, SR, SW
	Dolby D (5.1ch)	Dolby Digital EX	o	o	o	o	1X1 DIGITAL	L, C, R, SL, SR, SW
	DTS-ES	DTS-ES	o	o	o	o	dts, ES	L, C, R, SL, SR, SW
STEREO	DTS (5.1ch)	DTS-ES	o	o	o	o	dts	L, C, R, SL, SR, SW
	Dolby Surr. EX	Stereo	o	-	-	o	1X1 DIGITAL	L, C, R, SL, SR, SW
	Dolby D (5.1ch)	Stereo	o	-	-	o	1X1 DIGITAL	L, C, R, SL, SR, SW
	Dolby D (2ch)	Stereo	o	-	-	-	1X1 DIGITAL	L, R
	Dolby D (2ch Surr)	Stereo	o	-	-	-	1X1 DIGITAL	L, R
	DTS-ES	Stereo	o	-	-	o	dts, ES	L, C, R, SL, SR, SW
	DTS 96/24	Stereo	o	-	-	o	dts 96/24	L, C, R, SL, SR, SW
	DTS (5.1ch)	Stereo	o	-	-	o	dts	L, C, R, SL, SR, SW
	LPCM (Audio)	Stereo	o	-	-	-	LPCM	L, R
	LPCM 96KHz	Stereo	o	-	-	-	LPCM	L, R
	Analog	Stereo	o	-	-	-	ANALOG	-

L/R : Front Speaker (Left/Right) C : Center Speaker SL/SR : Rear Speaker (Left/Right) SW : Subwoofer




- 2 channel Dolby Digital signal has Dolby Digital Pro Logic. Speaker Setup is set to LARGE, SMALL, or YES.
- If there is no surround signal in DVD disk, sound will not output from rear-left speaker, rear-right speaker, center speaker, and subwoofer.



Listening to Radio

You can listen to the chosen band (FM, AM broadcast stations) by using either the automatic or manual tuning operation.

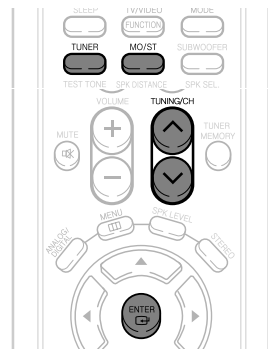

REMOTE CONTROL

1 Press **TUNER** button.

- Each time you press this button, FM → AM will be repetitively selected.

2 Select frequency.

- Automatic Tuning 1 :
 - 1) Press **ENTER** button to select PRESET.
 - 2) Press **TUNING/CH** (**▼**, **▲**) button to select the preset frequency.
- Automatic Tuning 2 :
 - 1) Press **ENTER** button to select MANUAL.
 - 2) Press and hold **TUNING/CH** (**▼**, **▲**) button to automatically tune in frequency.
- Manual Tuning :
 - 1) Press **ENTER** button to select MANUAL.
 - 2) Press **TUNING/CH** (**▼**, **▲**) button briefly to increase or decrease frequency by step by step.

To Listen to Mono/Stereo

Press **MO/ST** button on the remote.

- Each time you press this button, STEREO, MONO will be selected in turn.
- If you select MONO in the area with weak reception, it will help to reduce noise.
- This function works only with the Remote Control.

MAIN UNIT

1 Press **INPUT** button to select FM or AM.

2 Select the frequency.

- Automatic Tuning :
Press and hold **TUNING/CH** (**▼**, **▲**) button to automatically tune in frequency.
- Manual Tuning :
Press **TUNING/CH** (**▼**, **▲**) button briefly to increase or decrease frequency step by step.


How to select PRESET, MANUAL

1. Press the **SETUP** button.
2. Press the **INPUT** button 8 times.
3. Press the **SURROUND** button and select Manual or Preset.
 - This function operates only with the main unit.



Presetting Radio Stations

You can preset up to 30 FM and AM stations.

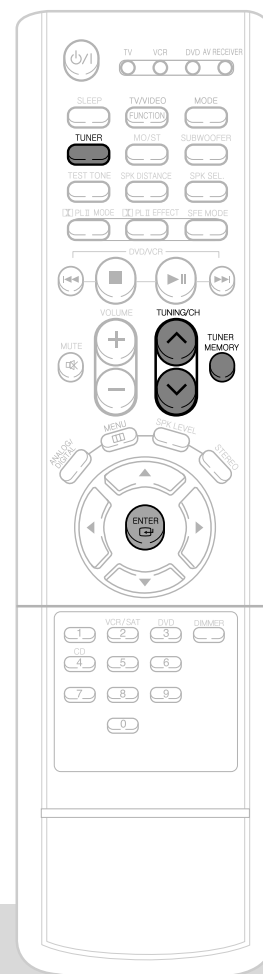


REMOTE CONTROL

Ex) If you preset FM 89.1 station in 2ch


1 Press **TUNER** button.

 - Each time you press this button, FM → AM will be selected in turn.



2 Press Select button and then **TUNING/CH** (**▼**, **▲**) button to select 89.1.

 - Refer to step 2, page 37, to tune in automatically and manually.



3 Press **TUNER MEMORY** button.

- Tuner number will blink on the display.



 
4 Press **TUNING/CH** (**▼**, **▲**) button to select preset 2.

- You can select from presets 1 to 30.



5 Press **TUNER MEMORY** button.


- Tuner number will disappear and station 89.1 will be saved in preset 2.




6 To preset other stations, repeat steps 2 to 5.

To Listen to Preset Station

- Press Select button of the remote control to select the PRESET and press **TUNING/CH** (**▼**, **▲**) button.

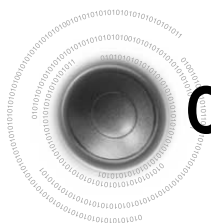

Convenient Functions

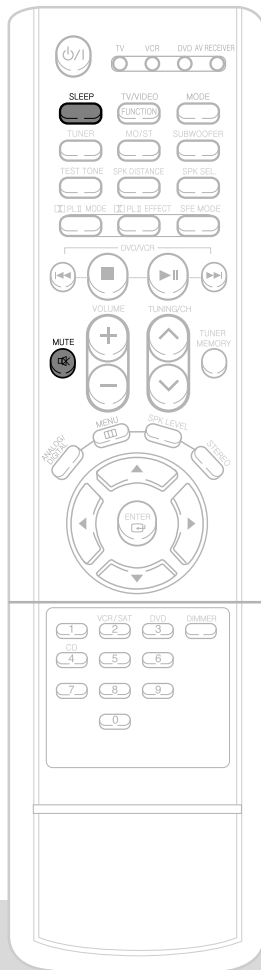

Sleep Timer Function

You can set the time that this unit will shut itself off.

REMOTE CONTROL

Press the **SLEEP** button.

- SLEEP : OFF → 15 → 30 → 45 → 60 → 90 → 120MIN will be selected in turn.

To Check Sleep Timer

Press **SLEEP** button.

- The remaining time before this unit will shut itself off is shown on the display.
- Pressing the button again changes the sleep time from what you have set earlier.

To Cancel Sleep Timer

- Press **SLEEP** button until SLEEP : OFF appears on the display.

Mute Function

This function is useful when answering a doorbell or telephone call.

REMOTE CONTROL

Press the **MUTE** button.

- MUTE appears on the display.


To Output Sound Again

Press **MUTE** button again.

- MUTE will disappear and sound will Output.



- Note**
- SLEEP, Mute and Adjust Display function can only be operated with the remote control.

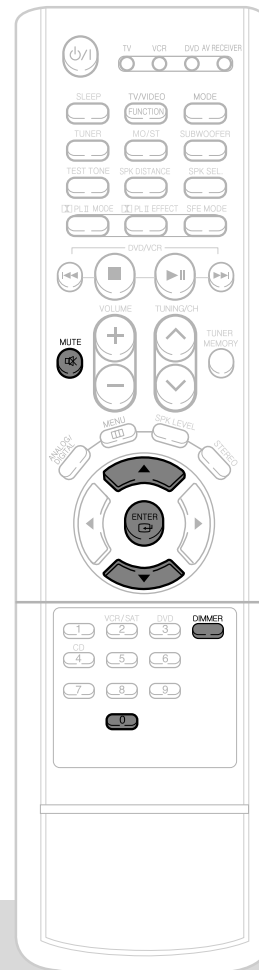

Reset Function

REMOTE CONTROL

- 1 Press the **MUTE** button.
• MUTE appears on the display.
- 2 Press “0” button five times and then press **ENTER** button.
- 3 Press **▲▼** buttons to select “YES”.
• The unit will turn automatically back on in 5 seconds.

Caution!

- Using the RESET function will erase all stored settings.
- Do not use this unless necessary.

Adjust the Display

You can adjust the brightness of the display.

REMOTE CONTROL

Press the **DIMMER** button.

- Each time you press this, the brightness of the display will be adjusted.

Using Headphone

Use headphones (not supplied) for private listening pleasure.


Connect the headphone to the headphone jack and listen to music.



- Note**
- Do not turn the volume up too high when you use headphone.
 - It may damage your hearing.



Operating TV with Remote Control

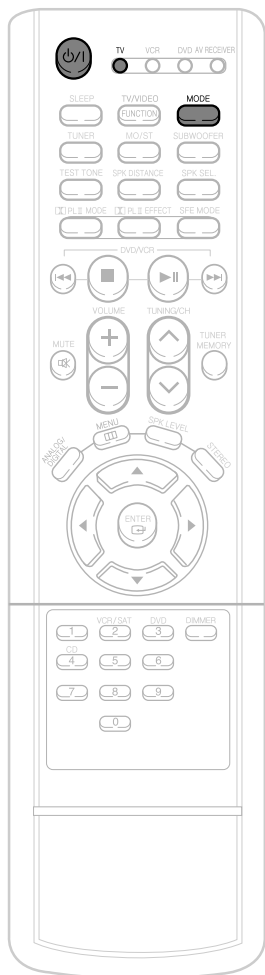

1 Press **MODE** button to make the TV indicator on the remote control flash.

2 Press **POWER**(ϕ /I) button to turn on the TV.

3 Point the remote control toward the TV.

4 While holding down **POWER**(ϕ /I) button, enter the code corresponding to your brand of TV.

- If the code matches the TV's code, the TV will be turned off.
- If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.

5 If TV is turned on or off when you press the power button of the remote control, the setting is completed.

- You can use the TV POWER, VOLUME, CHANNEL, and Numeric buttons (0-9).




Note


- The remote control may not work on some brands of TVs. Also, some operation may not be possible depending on your brand of TV.
- The remote control will work with Samsung TVs by default.

TV Brand Code List

Brand	Code Number	Brand	Code Number	Brand	Code Number
ADMIRAL(MWARDS)	056, 057, 058	LUXMAN	018	SYLVANIA	018, 040, 048, 054, 059, 060, 062
AMARK	001, 015	LXI(SEARS)	019, 054, 056, 059, 060, 062, 063, 065, 071	SYMPHONIC	061, 095, 096
ANAM	001, 002, 003, 004, 005, 006, 007, 008, 009, 010, 011, 012, 013, 014	MAGNAVOX	015, 017, 018, 048, 054, 059, 060, 062, 072, 089	TATUNG	006
AOC	001, 018, 040, 048	MARANTZ	040, 054	TECHWOOD	018
BELL&HOWELL(MWARDS)	057, 058, 081	MATSUI	054	TEKNIKA	003, 015, 018, 025
BROCCSONIC	059, 060	MGA	018, 040	TMK	018, 040
CANDLE	018	MITSUBISHI MGA	018, 040, 054, 059, 060, 075, 101	TOSHIBA	019, 057, 063, 071, 101, 107, 109, 110, 111, 113
CETRONIC	003	MTC	018	VIDTECH	018
CITIZEN	003, 018, 025	NEC	018, 019, 020, 040, 059, 060	VIDECH	059, 060, 069
CINEMA	097	NIKEI	003	WARDS	015, 017, 018, 040, 048, 054, 060, 064
CLASSIC	003	ONKING	003	YAMAHA	018
CONCERTO	018	ONWA	003	YORK	040
CONTEC	046	PANASONIC	006, 007, 008, 009, 054, 066, 067, 073, 074	YUPITERU	003
CORONADO	015	PENNEY	018	ZENITH	058, 079
CRAIG	003, 005, 061, 082, 083, 084	PHILCO	003, 015, 017, 018, 048, 054, 059, 062, 069, 090	ZONDA	001
CROSLEX	062	PHILIPS	015, 017, 018, 040, 048, 054, 062, 072, 112, 114, 117, 118	DONGYANG	003, 054
CROWN	003	PIONEER	063, 066, 080, 091	LOWE	054
CURTISMATES	059, 061, 063	PORTLAND	015, 018, 059	FINLUX	054, 109, 114
CXC	003	PROTON	040	YOKO	054
DAEWOO	002, 003, 004, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 030, 032, 034, 035, 036, 040, 048, 059, 090, 099, 100	QUASAR	006, 066, 067	LOEWE OPTA	054, 114
DAYTRON	040	RADIO SHACK	017, 048, 056, 060, 061, 075	PHONOLA	054, 112, 114
DYNASTY	003	RCA/PROSCAN	018, 059, 067, 076, 077, 078, 092, 093, 094	RADIOLA	054, 112
EMERSON	003, 015, 040, 046, 059, 061, 064, 082, 083, 084, 085	REALISTIC	003, 019	SCHNEIDER	054
FISHER	019, 065, 103	SAMPO	040	AKAI	103
FUNAI	003	SAMSUNG	000, 015, 016, 017, 040, 043, 046, 047, 048, 049, 054, 059, 060, 098	GRUNDIG	108, 109, 113, 119, 120, 121
FUTURETECH	003	SANYO	019, 061, 065, 101, 102, 103, 104	BLAUPUNKT	108
GENERALELECTRIC(GE)	006, 040, 056, 059, 066, 067, 068	SCOTT	003, 040, 060, 061	SIEMENS	108
HALL MARK	040	SEARS	015, 018, 019	CGE	113
HITACHI	015, 018, 050, 059, 069	SHARP	015, 057, 064, 101, 105, 106, 115	IMPERIAL	113
INKEL	045	SIGNATURE 2000(MWARDS)	057, 058	MIVAR	113
JCPENNY	056, 059, 067, 086	SONY	050, 051, 052, 053, 055, 101	SABA	114
JVC	070	SOUNDESIGN	003, 040	BANG&OLUFSEN	114
KTV	059, 061, 087, 088	SPECTRICON	001	BRIONVEGA	114
KEC	003, 015, 040	SSS	018	FORMENTI	114
KMC	015			METZ	114
LG(GOLDSTAR)	001, 015, 016, 017, 037, 038, 039, 040, 041, 042, 043, 044, 054, 086			WEGA	114
				RADIOMARELLI	114
				SINGER	114
				SINUDYNE	114
				TELEFUNKEN	116

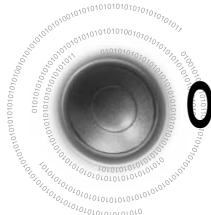

Operating your VCR (DVD) with Remote Control

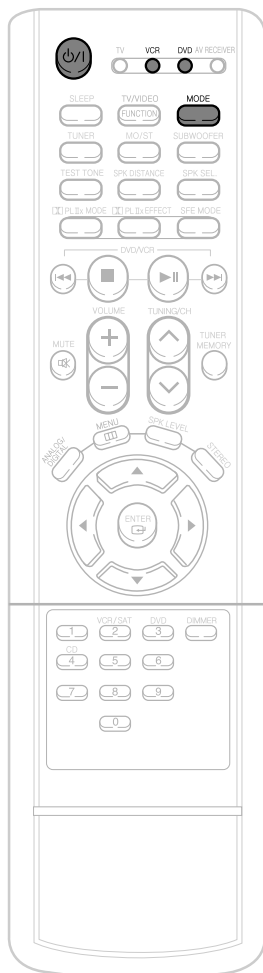


1 Press **MODE** button to make VCR indicator on the remote control flash.

- If you operate DVD, press Device Select button to make DVD indicator on the remote control flash.

2 Press **POWER**() button to turn on the VCR (DVD).

3 Point the remote control toward the VCR (DVD).

4 While holding down **POWER**() button, enter the code corresponding to your brand of VCR (DVD).

- If the code matches the VCR (DVD)'s code, the VCR (DVD) will be turned off.
- If there is more than one code listed for your VCR (DVD) in the table, enter one at a time to determine which code works.

5 If VCR (DVD) is turned on or off when you press the power button of the remote controller, the setting is completed.

- You can use VCR (DVD) POWER, VOLUME, PLAY, PAUSE, STOP, SKIP and Numeric button (0-9).



Note


- The remote control may not work on some brands of VCR (DVD)s. Also, some operations may not be possible depending on your brand of VCR (DVD).
- The remote control will work with Samsung VCRs (DVDs) by default.


VCR Brand Code List

Brand	Code Number	Brand	Code Number	Brand	Code Number
ADMIRAL(M,WARDS)	043, 106	MEI	001, 033	TASHIRO	050
AWIA	044, 045, 046	MEMOREX	001, 025, 033, 054, 091, 100	TATUNG	047, 052, 092
AKAI	088, 089, 090	MINOLTA	020, 021, 062	TEAC	044, 047, 052, 092
ANAM	001, 002, 003, 004, 005, 033	MITSUBISHI/MGA	068, 069, 070, 101, 102	TECHNICS	001, 033, 049, 091
AOC	091	MTC	072	TEKNIKA	001, 025, 033
AUDIO DYNAMIC	019, 047, 092	MULTITECH	044, 057, 069	TOSHIBA	006, 051
BELL & HOWELL(M,WARDS)	048, 093	NEC	019, 047, 052, 057, 092	TOTEVISION	025, 072
BROKSONIC	092, 094, 095	OLYMPIC	049, 091	TAEKWANG	087
CANON	001, 033, 049, 091	OPTIMUS	101	UNITECH	072
CAPEHART	011	ORION	103	VECTOR RESEARCH	019
CITIZEN	050	PANASONIC	001, 004, 033, 049, 067, 091, 107	VIDEO CONCEPTS	019
CRAIG	050, 072, 096	PENNEY	019, 020, 072	VIDEOSONIC	072
CRITERION	051	PENTAX	001, 020, 021, 033, 062	WARDS	001, 020, 031, 032, 033, 043, 050, 054, 072, 100, 105, 106, 109
CURTISMATHES	001, 031, 032, 033, 044, 091	PHILCO	001, 033, 046, 049, 091, 094	YAMAHA	019, 047, 048, 052, 092
DAEWOO	006, 007, 008, 009, 010, 011, 012, 013, 014, 015, 016, 017, 018, 046, 051, 091	PHILIPS	001, 030, 033, 049, 050, 066, 091	ZENITH	019, 047, 048, 052, 092
DAYTRON	011	PILOT	025	DVD Brand Code List	
DBX	019, 047, 052, 092	PIONEER	049		
EMERSON	025, 031, 032, 044, 046, 094, 095, 097, 098, 099	PORTLAND	011	Brand	Code Number
FISHER	009, 048, 053, 054, 055, 100	QUASAR	001, 033, 049, 067, 091, 107, 108	DENON	003, 032
FUNAI	044	RICO	036	DOONOO	019
GENERAL ELECTRIC(GE)	001, 031, 032, 033, 056, 091	RCA/PROSCAN	001, 020, 021, 031, 032, 033, 049, 051, 062, 066, 070, 091, 104	DMTECH	017
GO VIDEO	059, 060, 061	REALISTIC	001, 009, 025, 033, 101, 105	FISHER	002
HARMAN KARDON	019	SAMSUNG	000, 006, 031, 032, 057, 058, 071, 072, 073, 074, 075, 076, 077, 078, 079, 080, 081	GE	006
HITACHI	020, 021, 049, 054, 062, 100	SANYO	008, 009, 046, 048, 050, 054, 058, 093, 100	HARMAN KARDON	012
HQ	051	SANSUI	092	JVC	010, 013
INSTANT REPLAY	001, 033, 049, 091	SCOTT	006, 051, 054, 057, 069, 070, 100, 101	KENWOOD	008
JCL	001, 033	SEARS	020, 021, 025	LG	001
JCP	025	SHARP	043, 105, 106	MAGNAVOX	004
JCPENNY	047, 048, 052, 062, 091, 092	SINGER	096	MITSUBISHI	005, 016
JVC	001, 033, 047, 052, 063, 064, 065, 092	SIGNATURE 2000(M,WARDS)	043, 044, 054, 100, 106	ONKYO	004, 014
KENWOOD	047, 050, 052, 092	SHINTOM	096	OPTIMUS	011
LG(GOLDSTAR)	019, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 030, 050	SONY	034, 035, 036, 037, 038, 039, 040, 041, 042, 082, 083, 084, 085, 086	PANASONIC	021
LXI(SEARS)	020, 025, 044, 048, 050, 053, 054, 055, 062, 100	STS	020	PROSCAN	006
MAGIN	072	SYLVANIA	001, 033, 044, 049, 066, 091	PHILIPS	004, 023
MAGNAVOX	001, 031, 032, 033, 049, 066, 067, 091	SYMPHONIC	044	PIONEER	007, 011, 022, 025
MARANTZ	001, 019, 033, 047, 052, 092, 110	TANDY	009	RCA	006
MARTA	025, 050			SAMSUNG	000, 027



Before Calling for Service

 Symptom	Check	Remedy
Can't turn it on.	<ul style="list-style-type: none"> Is the power cord plugged into the outlet? 	<ul style="list-style-type: none"> Connect the power plug to the outlet.
It does not work when the button is pressed.	<ul style="list-style-type: none"> Is there static electricity in the air? 	<ul style="list-style-type: none"> Disconnect the power plug and connect it again.
Sound is not produced.	<ul style="list-style-type: none"> Are the speaker and external component connected properly? Does the Mute function work? Is the volume set to minimum? Is the speaker setup selected to NONE? 	<ul style="list-style-type: none"> Properly connect it. Press Mute button to cancel the function. Adjust the volume. Refer to pages 19~20 to select LARGE, SMALL or YES.
Picture does not appear when the function is selected.	<ul style="list-style-type: none"> Isn't the external component connected properly? 	<ul style="list-style-type: none"> Properly connect it.
Remote controller does not work.	<ul style="list-style-type: none"> Are the batteries exhausted? Is the distance between remote control and main unit proper? 	<ul style="list-style-type: none"> Replace with new batteries. Operate at close distance.
The sound from each device is changed during stereo playback.	<ul style="list-style-type: none"> Is the left/right speaker or left/right input/output code connected properly? 	<ul style="list-style-type: none"> Check the left/right channel and properly connect it.
Can't receive broadcasting.	<ul style="list-style-type: none"> Is AM or FM antenna connected properly? 	<ul style="list-style-type: none"> Properly connect the antenna. If the input strength of antenna connector is weak, install the FM antenna in a place with good reception.
There is no sound from surround speaker.	<ul style="list-style-type: none"> Is the surround speaker connected properly? Is S.SPK (Surround) set to NONE in Speaker Setup? Is Surround Mode selected to Stereo? 	<ul style="list-style-type: none"> Refer to pages 11~12 to connect it properly. Refer to pages 19~20 to select LARGE or SMALL. Refer to pages 20~36 to select other Surround Mode.
There is no sound from center speaker	<ul style="list-style-type: none"> Is the center speaker connected properly? Is C.SPK (Center) selected to NONE in Speaker Setup? Is the Surround Mode selected to Stereo? 	<ul style="list-style-type: none"> Refer to pages 11~12 to connect it properly. Refer to pages 19~20 to select LARGE or SMALL. Refer to pages 20~36 to select other Surround Modes.

 Symptom	Check	Remedy
Can't select Dolby Pro Logic II Mode.	<ul style="list-style-type: none"> Is the input signal selected properly? 	<ul style="list-style-type: none"> Select 2 channel Dolby Digital, PCM, and Analog input signal.
There is no sound when playing DTS encoded DVD and CD.	<ul style="list-style-type: none"> Is analog input selected? 	<ul style="list-style-type: none"> Check whether digital external component is properly connected and refer to page 18 to select the digital input.

Product Protection Function

Heat Protection

- Protection function works if the main unit is overheated or power transformer is overheated.
- appears in the display when the "PROTECTION" function works.
- If speaker terminal is shorted
- If speaker cord is shorted
- If there is no problem when you turn it on again after turning it off, PROTECTION mark will disappear on the display and the unit will work properly.



- Note**
- If PROTECTION appears on the display, check whether speaker terminal is shorted and then turn on the device.

SAMSUNG Home Theater

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

One (1) Year Parts and Labor*
(*90 Days Parts and Labor for Commercial Use)

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation of the product to and from the service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

SAMSUNG's obligations with respect to software products distributed by SAMSUNG under the SAMSUNG brand name are set forth in the applicable end user license agreement. Non-SAMSUNG hardware and software products, if provided, are on an "AS IS" basis. Non-SAMSUNG manufacturers, suppliers, publishers, and service providers may provide their own warranties.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied and authorized by SAMSUNG, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; product removal or reinstallation; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty hardware service, please contact SAMSUNG at:

SAMSUNG CUSTOMER CARE CENTER
400 Valley Road, Suite 201, Mt. Arlington, NJ 07856
1-800-SAMSUNG (1-800-726-7864) and www.samsung.com

GENERAL	Power Supply	120V, 60 Hz
	Standby Power Consumption	0.9W
	Power Consumption	95W
	Weight	9.25 lbs
	Dimensions (W x H x D)	16.9 x 2.6 x 13.7 inches
	Operating Temperature Range	41°F ~ 95°F
	Operating Humidity Range	10%~75%
FM TUNER	Frequency Response	87.5~108.0MHz
	Usable Sensitivity	12dBf
	S/N Ratio	MONO/STEREO 55/55dB
	Distortion	MONO/STEREO 0.3/0.8%
	Stereo Separation	30dB
	Tuner Output Level	1KHz, 75KHz Dev
AM TUNER	Frequency Response	522~1611KHz
	S/N Ratio	40dB
	Usable Sensitivity	60dBμV/m(Loop Antenna)
	Distortion	2% (MOD:80%)
AMPLIFIER	Rated Output	20Hz~20KHz/THD = 10%
	Front Speaker(Left+Right)	4 Ω 100W/CH
	Center Speaker	4 Ω 100W/CH
	Surround Speaker(Left+Right)	4 Ω 100W/CH
	Subwoofer	4 Ω 100W/CH
	Input Sensitivity/Impedance	450mV/47kΩ
	S/N Ratio(Analog Input/5.1CH Analog Input)	80dB
	Separation(1KHz)	60dB
FREQUENCY RESPONSE	Analog Input/5.1CH Analog Input	20Hz~20KHz(±3dB)
	Digital Input/96KHz PCM	20Hz ~44KHz(±3dB)
VIDEO OUTPUT	TV Format	NTSC/PAL
	Input Level/Impedance	1Vp-p/75 Ω
	Output Level/Impedance	1Vp-p/75 Ω
	Video Frequency Response	5Hz to 10KHz(-3dB)
	Component Video Frequency Response	5Hz to 40KHz(-3dB)
	S/N Ratio	60dB

SPEAKERS	Speaker system	Front / Surround	Center	Subwoofer speaker
	Impedance	4Ω x 4	4Ω	4Ω
	Rated input	100W	100W	100W
	Maximum input	200W	200W	200W
	Dimensions (W x H x D)	3.5 x 5.3 x 3.8 inches	7.8 x 4.2 x 3.9 inches	7.8 x 15.8 x 14.1 inches
	Weight	1.3 lbs	1.7 lbs	13.4 lbs

* S/N ratio, distortion, separation and usable sensitivity are based on measurement using AES-17 filter.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Region	Country	Customer Care Center ☎	Web Site
North America	CANADA	1-800-SAMSUNG (7267864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG (7267864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (7267864)	www.samsung.com
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421	www.samsung.com/br
	CHILE	800-726-7864(SAMSUNG)	www.samsung.com/cl
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-7267-864	www.samsung.com/latin
	VENEZUELA	1-800-100-5303	www.samsung.com/latin
Europe	BELGIUM	02 201 2418	www.samsung.com/be
	CZECH REPUBLIC	844 000 844	www.samsung.com/cz
	DENMARK	38 322 887	www.samsung.com/dk
	FINLAND	09 693 79 554	www.samsung.com/fi
	FRANCE	08 25 08 65 65 (0,15€/Min)	www.samsung.com/fr
	GERMANY	01805 - 121213 (€ 0,12/Min)	www.samsung.de
	HUNGARY	06 40 985 985	www.samsung.com/hu
	ITALIA	199 153 153	www.samsung.com/it
	LUXEMBURG	02 261 03 710	www.samsung.lu
	NETHERLANDS	0900 20 200 88 (€ 0.10/Min)	www.samsung.com/nl
	NORWAY	231 627 22	www.samsung.com/no
	POLAND	0 801 801 881	www.samsung.com/pl
	PORTUGAL	80 8 200 128	www.samsung.com/pt
	SLOVAKIA	0850 123 989	www.samsung.com/sk
	SPAIN	902 10 11 30	www.samsung.com/es
	SWEDEN	08 585 367 87	www.samsung.com/se
	U.K	0870 242 0303	www.samsung.com/uk
CIS	RUSSIA	8-800-200-0400	www.samsung.ru
	UKRAINE	8-800-502-0000	www.samsung.com/ur
Asia Pacific	AUSTRALIA	1300 362 603	www.samsung.com/au
	CHINA	800-810-5858, 010- 6475 1880	www.samsung.com.cn
	HONG KONG	2862 6001	www.samsung.com/hk
	INDIA	3030 8282 1600 1100 11	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1800-10-SAMSUNG (7267864)	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG (7267864)	www.samsung.com/sg
Middle East & Africa	THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
	VIETNAM	1 800 588 889	www.samsung.com/vn
	SOUTH AFRICA	0860 7267864 (SAMSUNG)	www.samsung.com/za
	U.A.E	800SAMSUNG (7267864)	www.samsung.com/mea