

SOHL® FURNITURE

designer



Read the manual.

It will help you get the best out of your product.

Still have questions?

Call After Sales Support


1300 777 137


Lift Up Storage Bench

Assembly Instructions



AFTER SALES SUPPORT

 **AUS** 1300 777 137

 service@unclebills.com.au

ASSEMBLY INSTRUCTIONS

MODEL: SEWB-2 PRODUCT CODE: 705712 10/2021

Contents

Warranty Details	3
Assembly Tips	4
Using Cam Lock and Quickfit	5
Hardware List	6
Parts List	7
Assembly Instructions	8
Repair and Refurbished Goods or Parts Notice	18



 
 
Assembly requirements

Equipment: phillips head screwdriver and flat head screwdriver.

2 x adults required

1.5 m x 1m assembly space required

1 hour assembly time

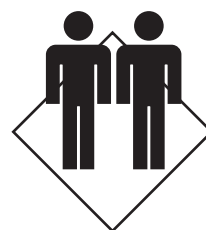

SOHL® FURNITURE



Lift Up Storage Bench Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months (dependent on product) from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Assembly Tips

Important

- Please read these instructions carefully before use and keep for future reference.
- This product is intended for domestic use only and is not designed for commercial use.
- Do not use this item if any components are missing or damaged.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.

Tips before you start:

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Usage of power tools is not recommended for assembling this product.
11. Please use caution and care when lifting the product to avoid personal injury and/or damage.

Care and Maintenance of your Furniture

 
- ☒ Regularly check all fastenings to ensure that they are properly tightened.
- ☒ To clean your item, please use a damp cloth and wipe clean.
- ☒ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☒ Please do not place hot items (eg. hot drinks) directly on to the surface.

Please refer to separate Warranty Certificate for full warranty details and information.

Using Cam Lock and Quickfit


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

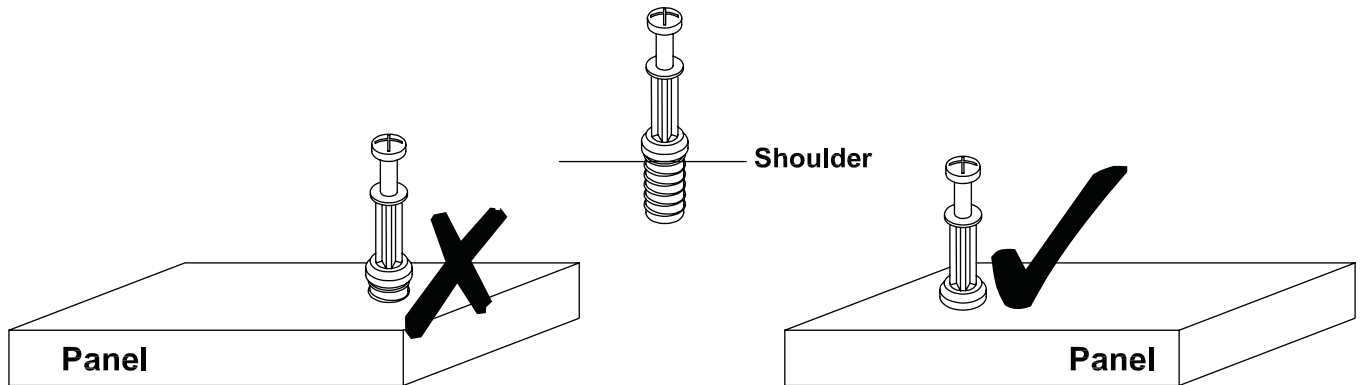

CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

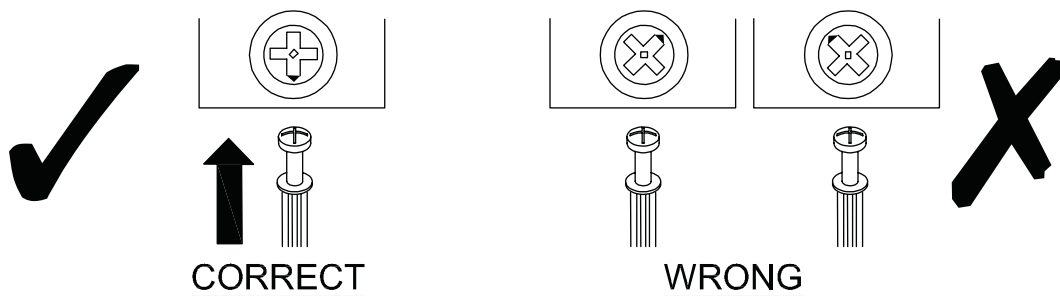


Quickfit head should be in the centre of the cam lock when the two panels are joined.

Turn cam lock clockwise to tighten.

 Cam lock should be inserted before quickfit.

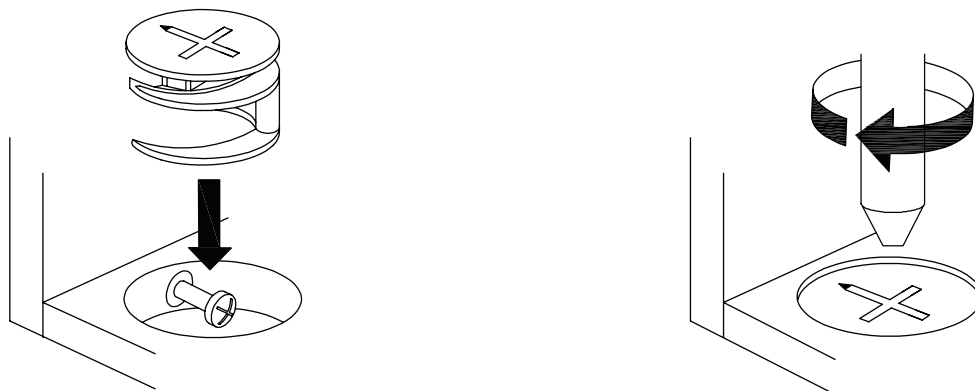


Hardware List

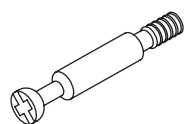 


4 x A
Quickfit
Screw



 4 x B
Cam Lock




12 x C
Wooden
Dowel

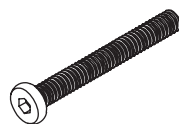 

8 x D
Bolt



 
8 x E
Barrel Nut

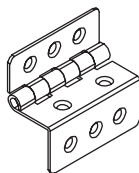

3 x F
Hinge



 
24 x G
Screw

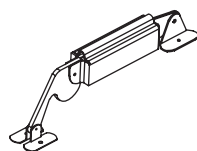

2 x H
Liftup Hinge



 8 x I
Screw




1 x J
Allen Key




8 x K
Sticker

 
Parts List

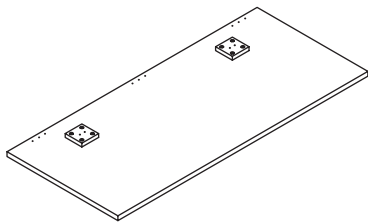


1 - 1pc

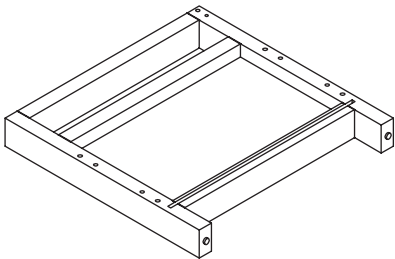 


2 - 1pc

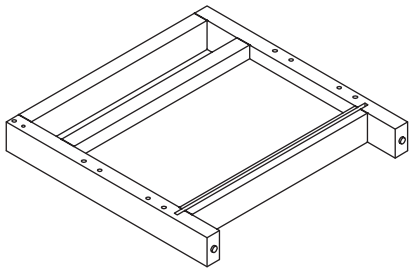 


3 - 1pc

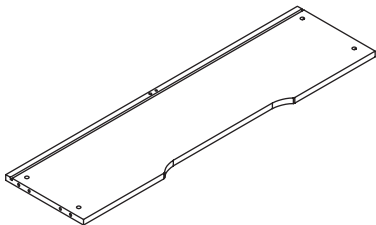 


4 - 1pc

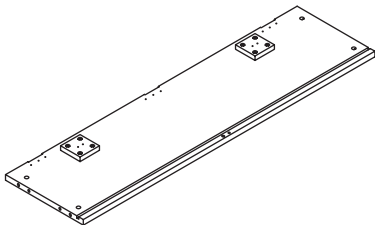 


5 - 1pc

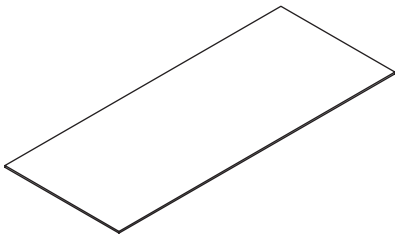 


6 - 1pc

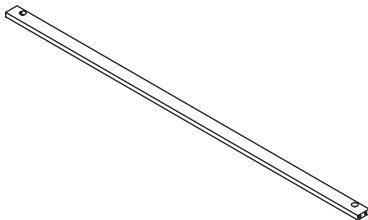 

7 - 1pc

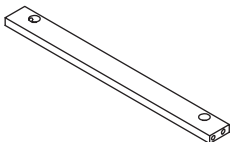 

8 - 1pc

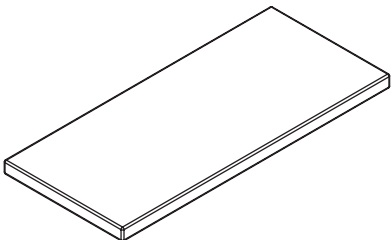 

9 - 1pc



 
Assembly Instructions

Step 1

Fix quickfit screws **A** to parts **4** and **5**.

Insert nuts **E** to parts **4** and **5**.




Fix hinges **F** to part **5** using screws **G** as shown.

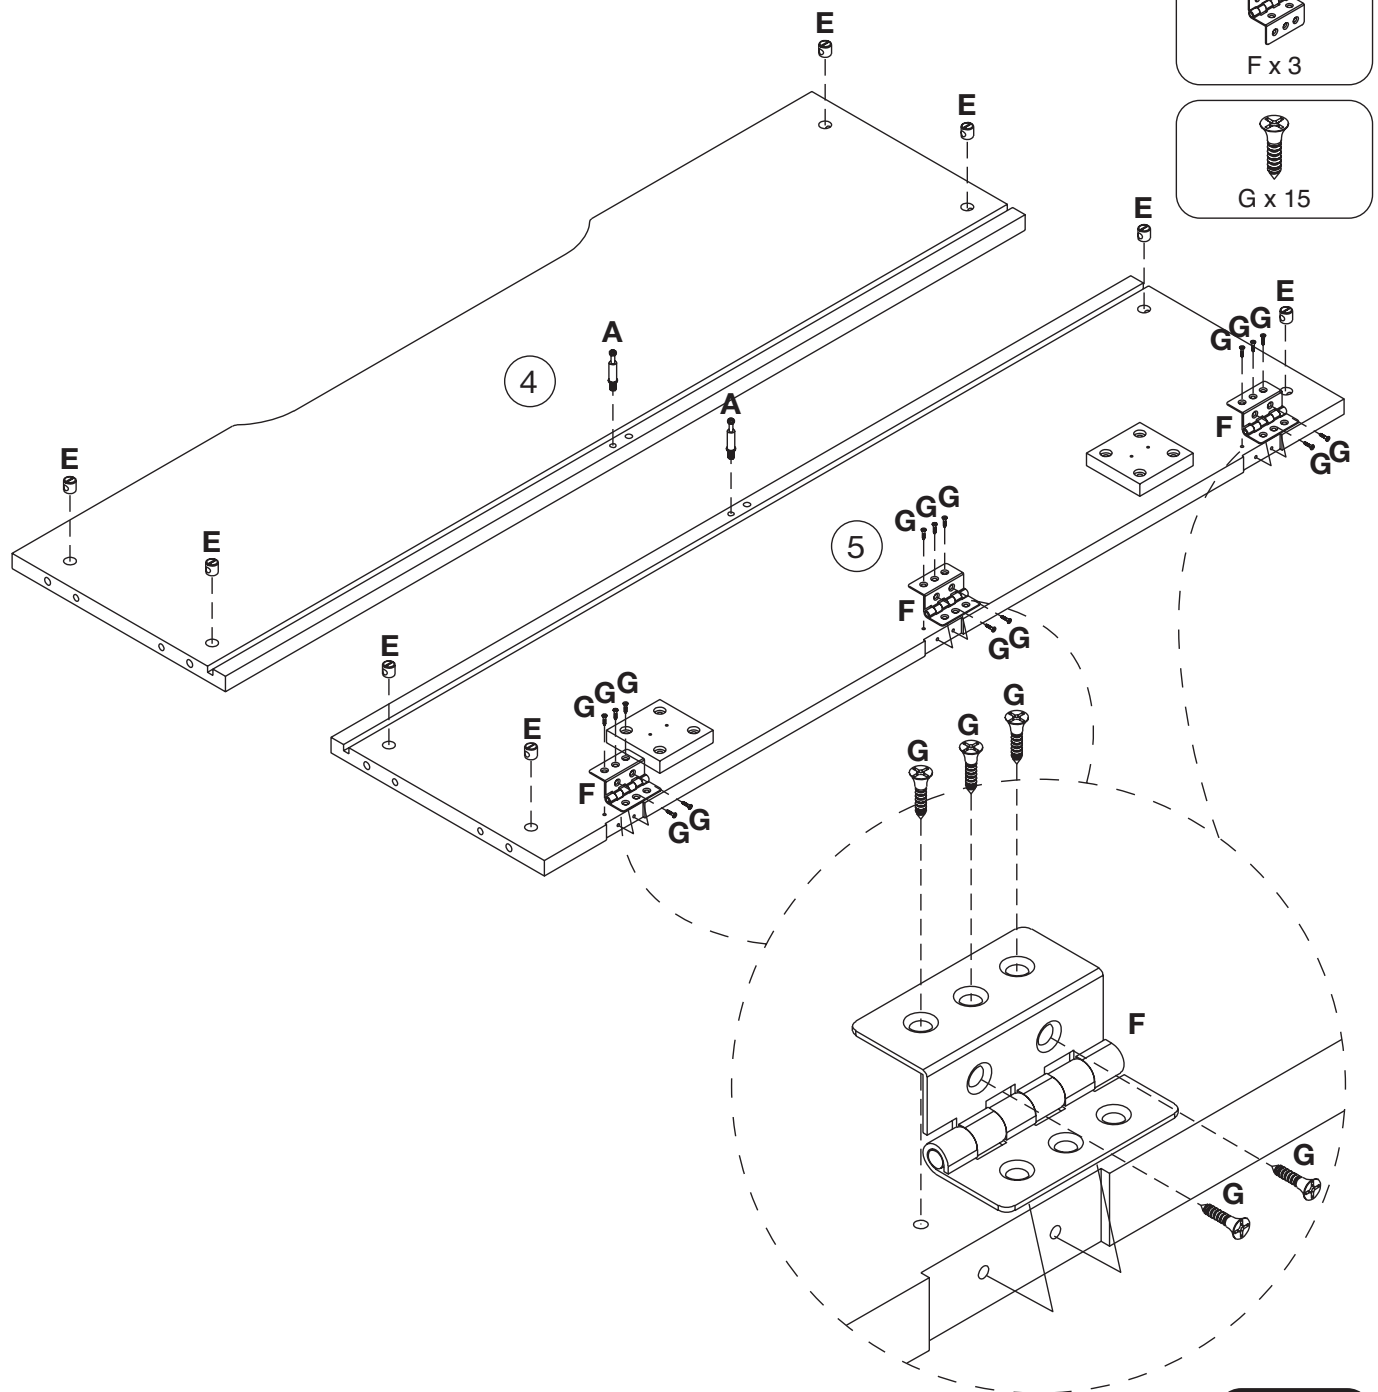

Assembly Instructions (cont)

Step 2

   Insert quickfit screws **A** to parts **2** and **3**.

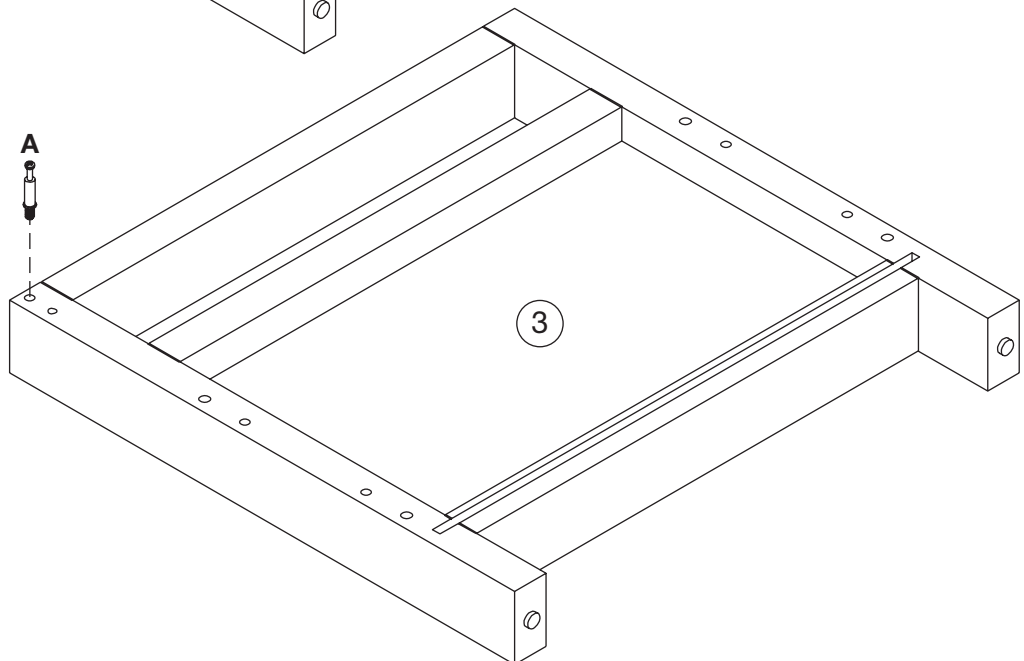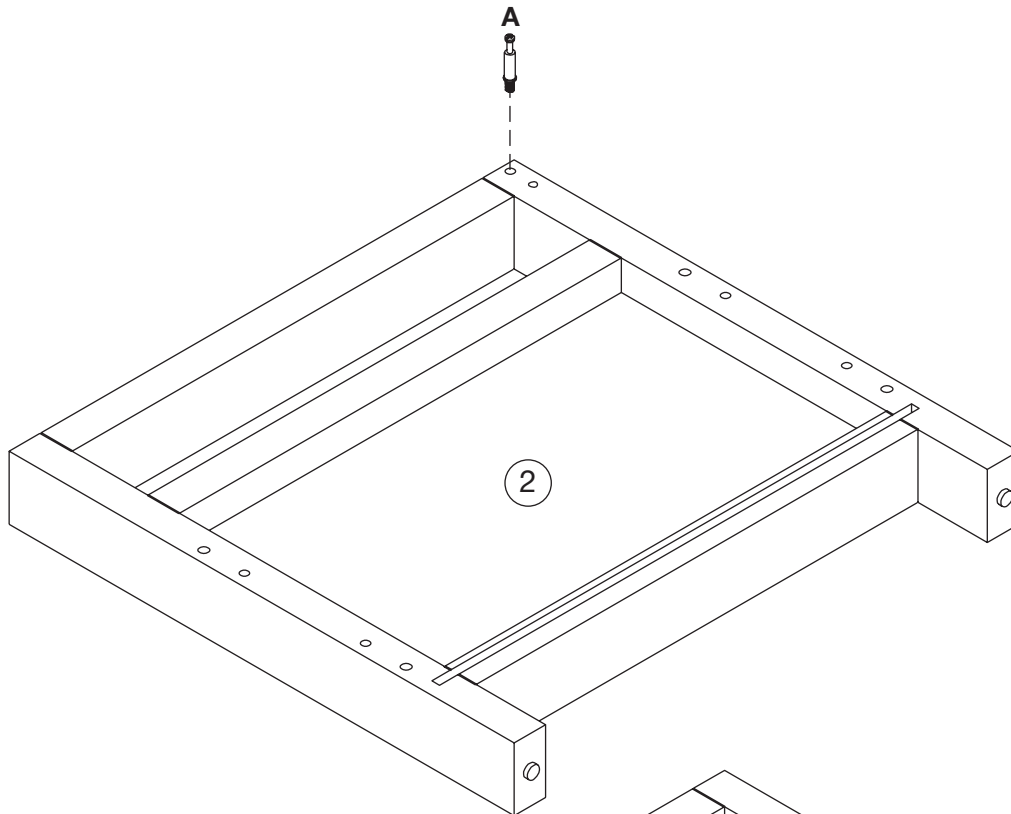


Assembly Instructions (cont)

Step 3

Insert cam locks **B** and wooden dowels **C** to part **8**.

 Attach part **8** to parts **4** and **5**, as shown.

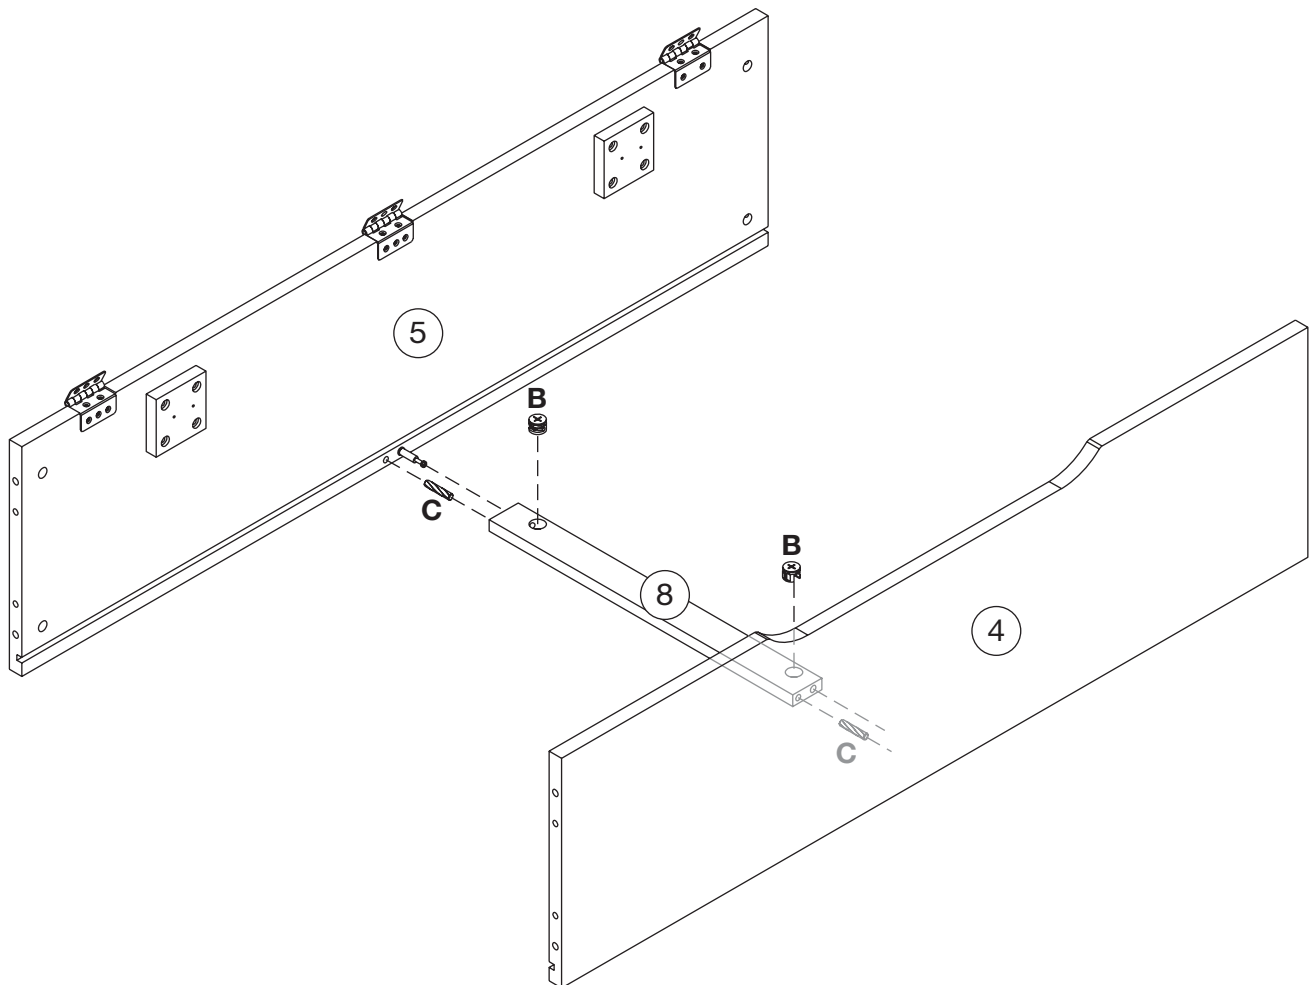




Assembly Instructions (cont)

Step 4

Insert cam lock **B** to part **7**.

Insert wooden dowels **C** to parts **4**, **5** and **7**.

   
Fix part **2** to parts **4**, **5** and **7** using bolts **D** and allen key **J**.

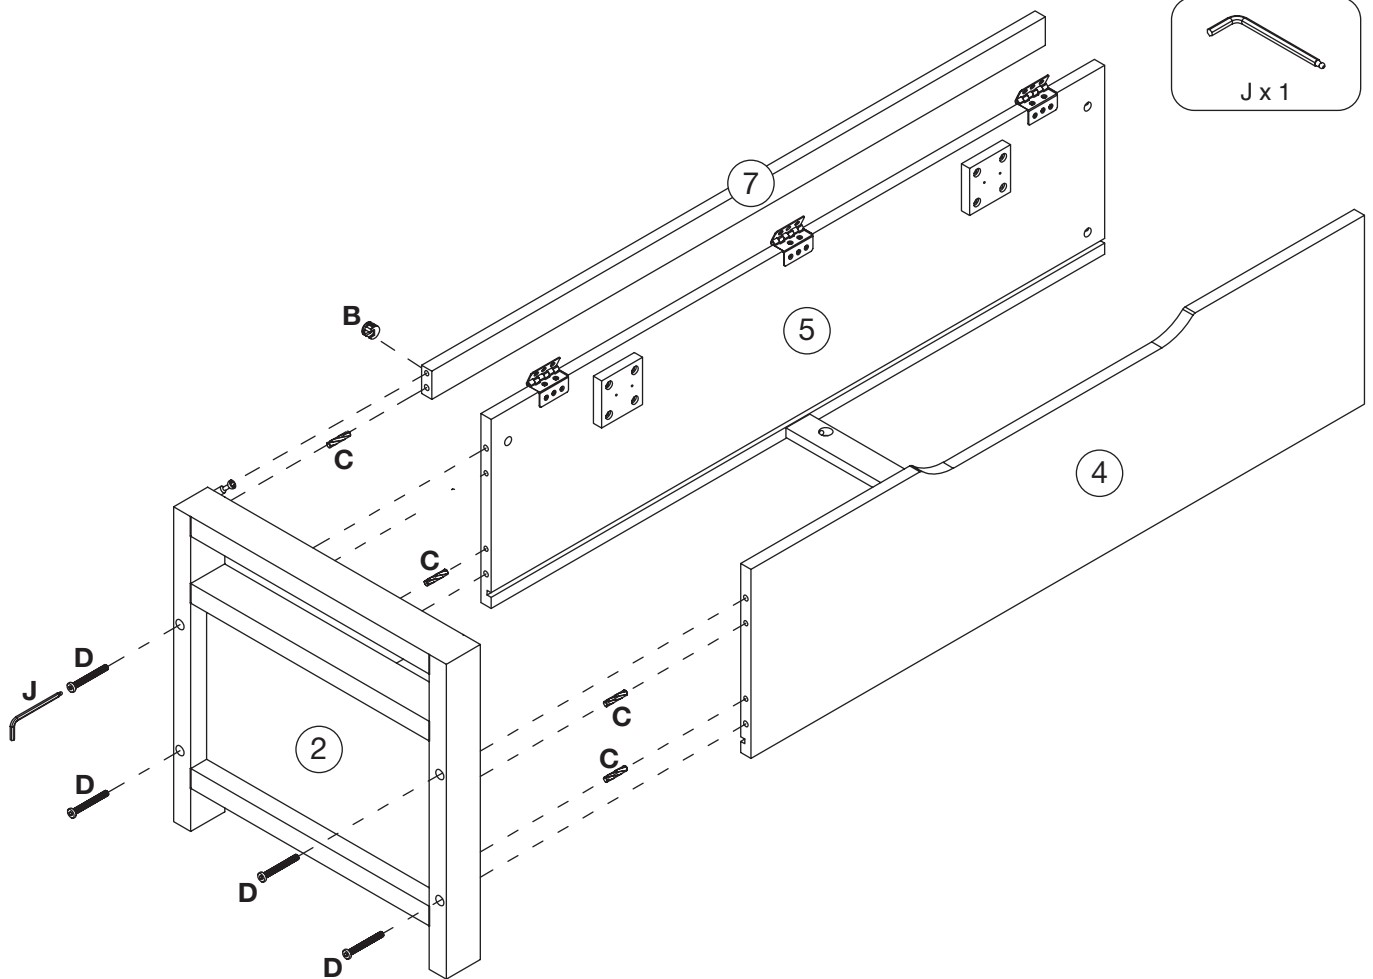

Assembly Instructions (cont)

Step 5

 Insert part **6** into grooves between parts **2**, **4** and **5**, as shown.

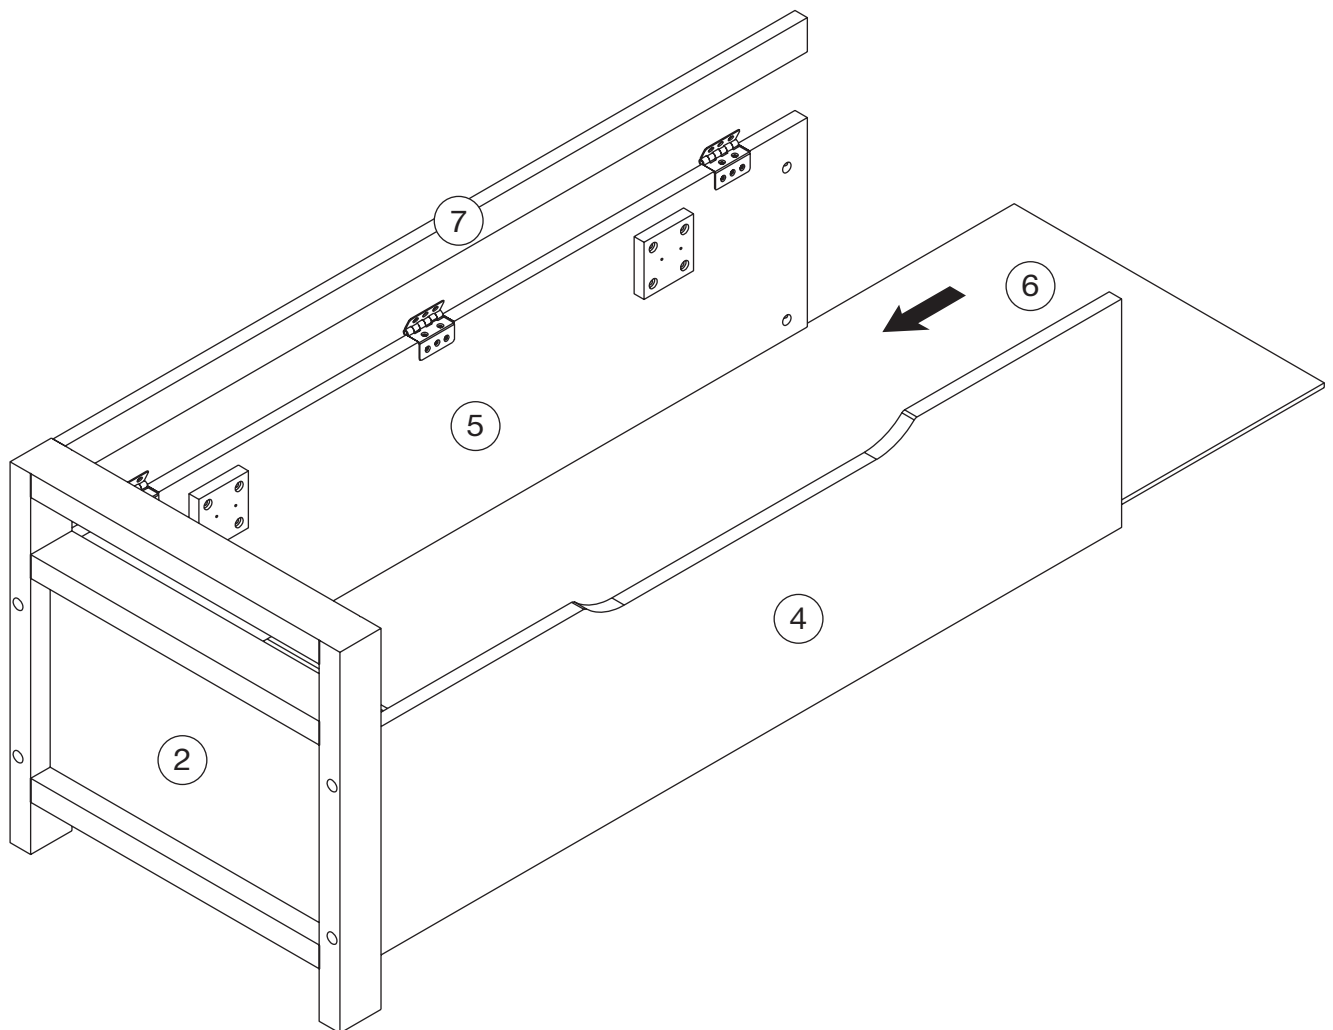





Assembly Instructions (cont)

Step 6

Insert cam lock **B** to part **7**.

Insert wooden dowels **C** to parts **4**, **5** and **7**.

    Fix part **3** to parts **4**, **5** and **7** using bolts **D** and allen key **J**.

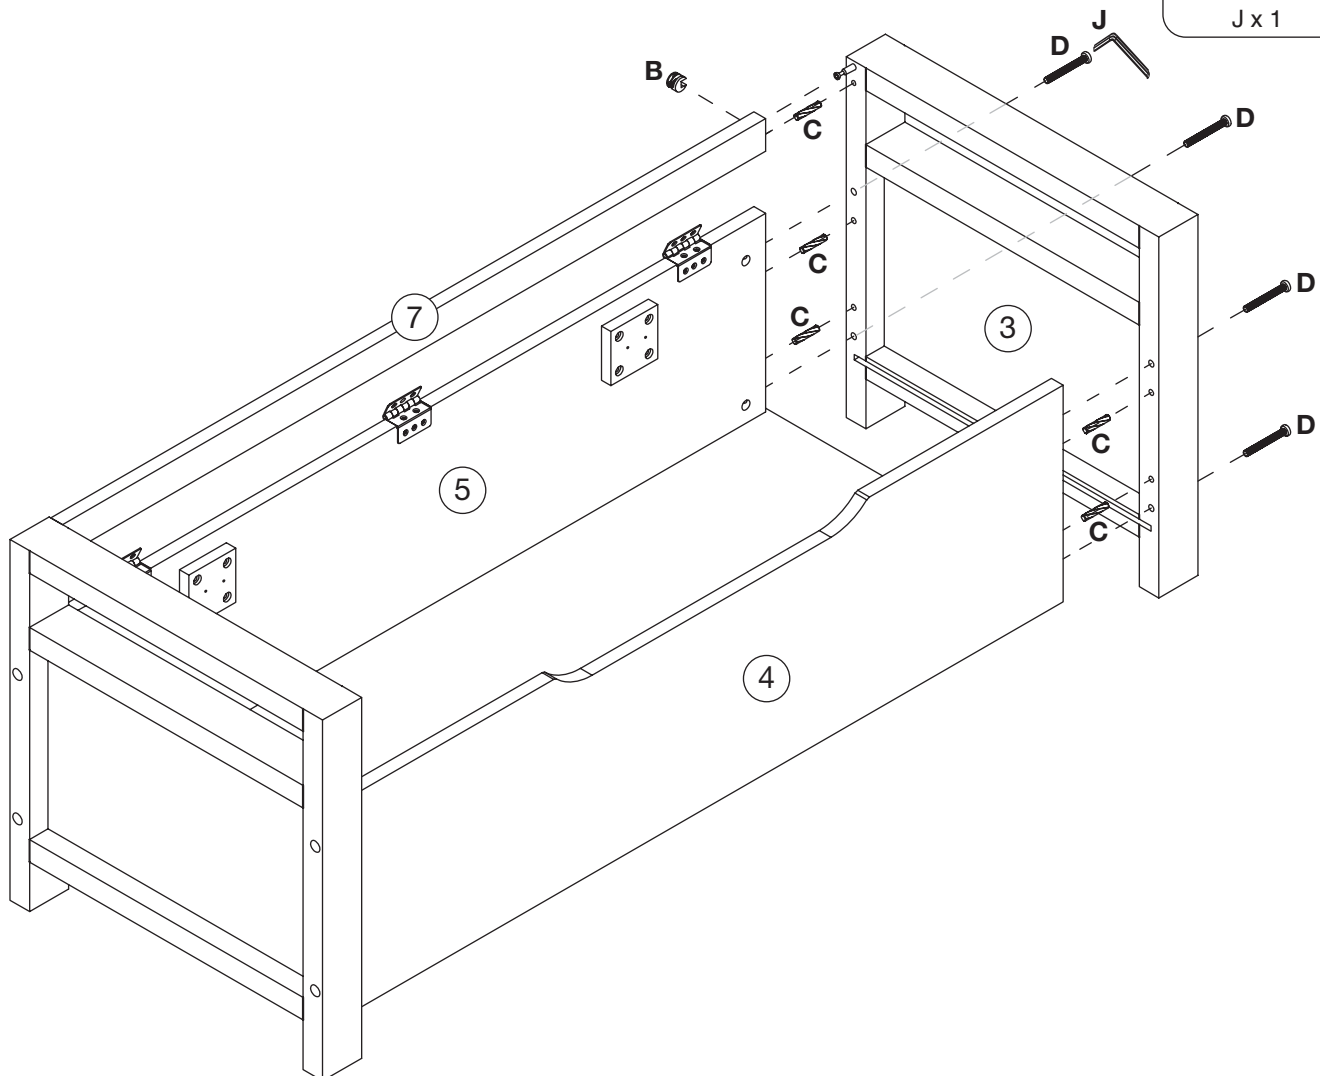


Assembly Instructions (cont)

Step 7

Fix part **1** to part **5** using screws **G**, as shown.



 
G x 9

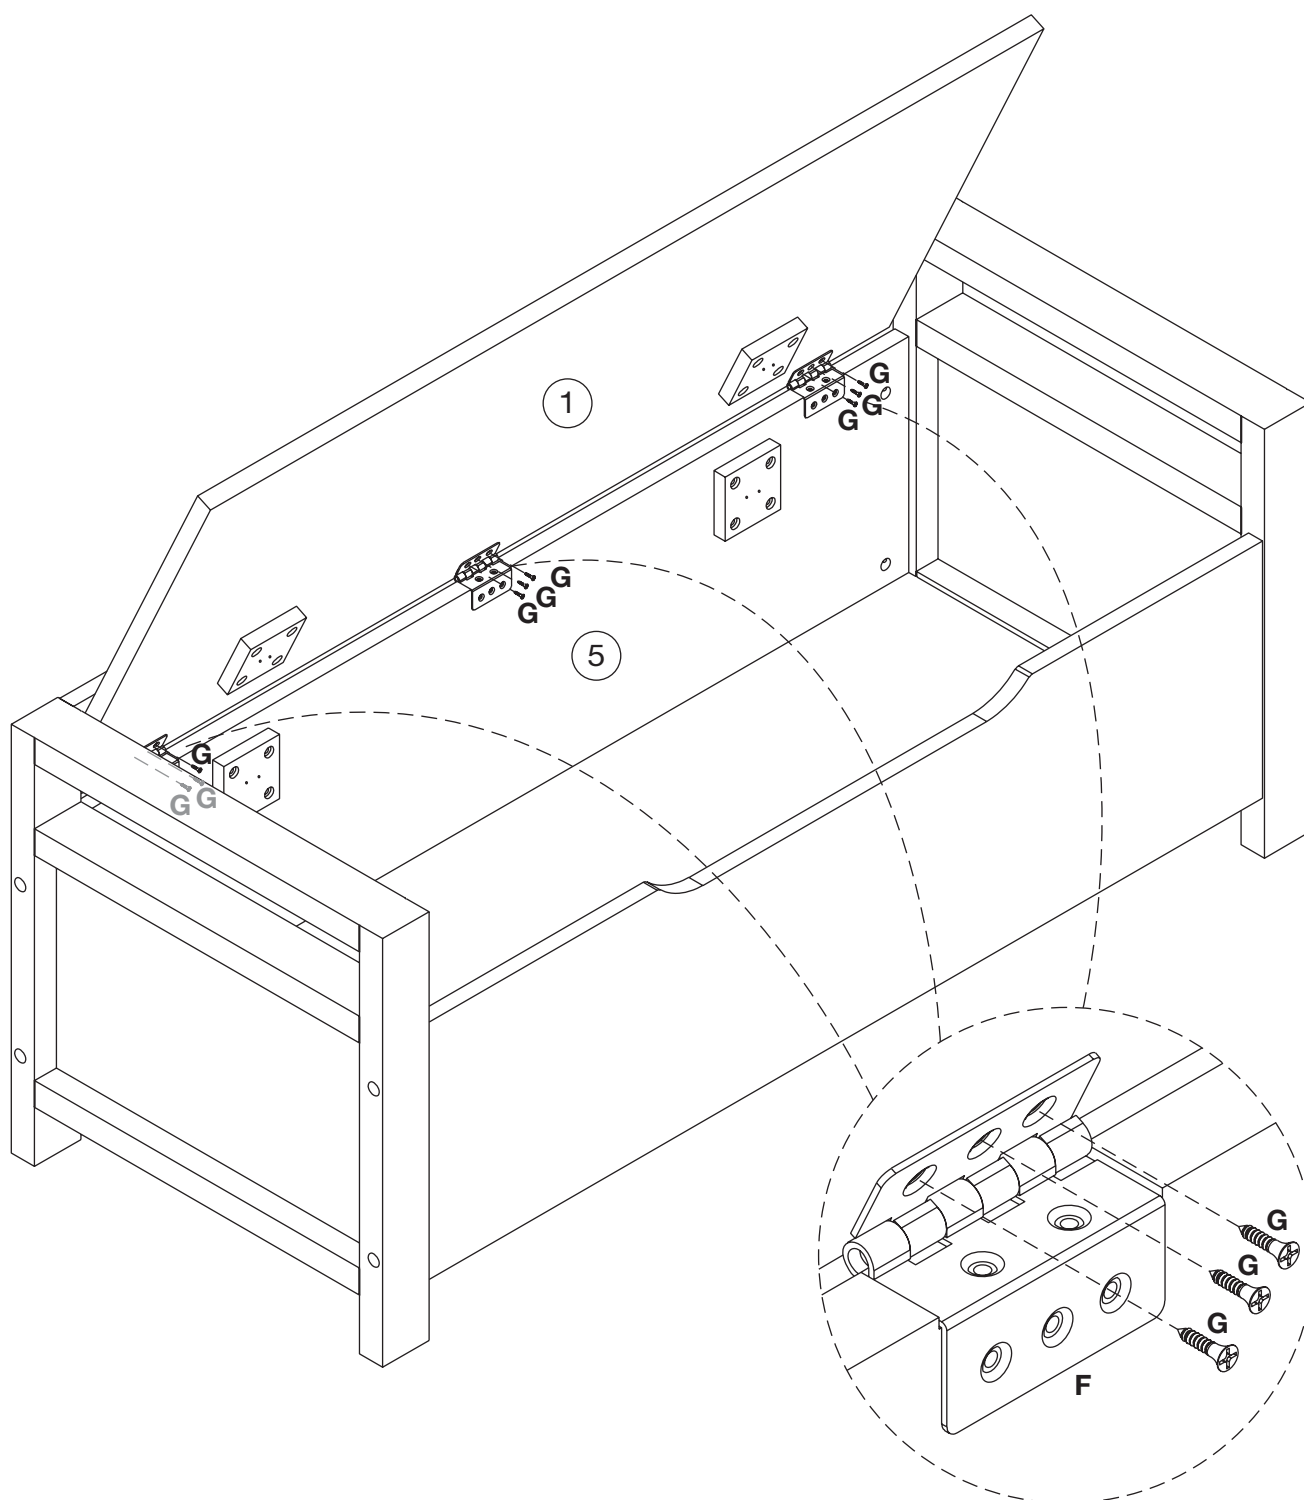

Assembly Instructions (cont)

Step 8

 
Fix lift up hinge **H** to parts **1** and **5** using screws **I**, as shown.

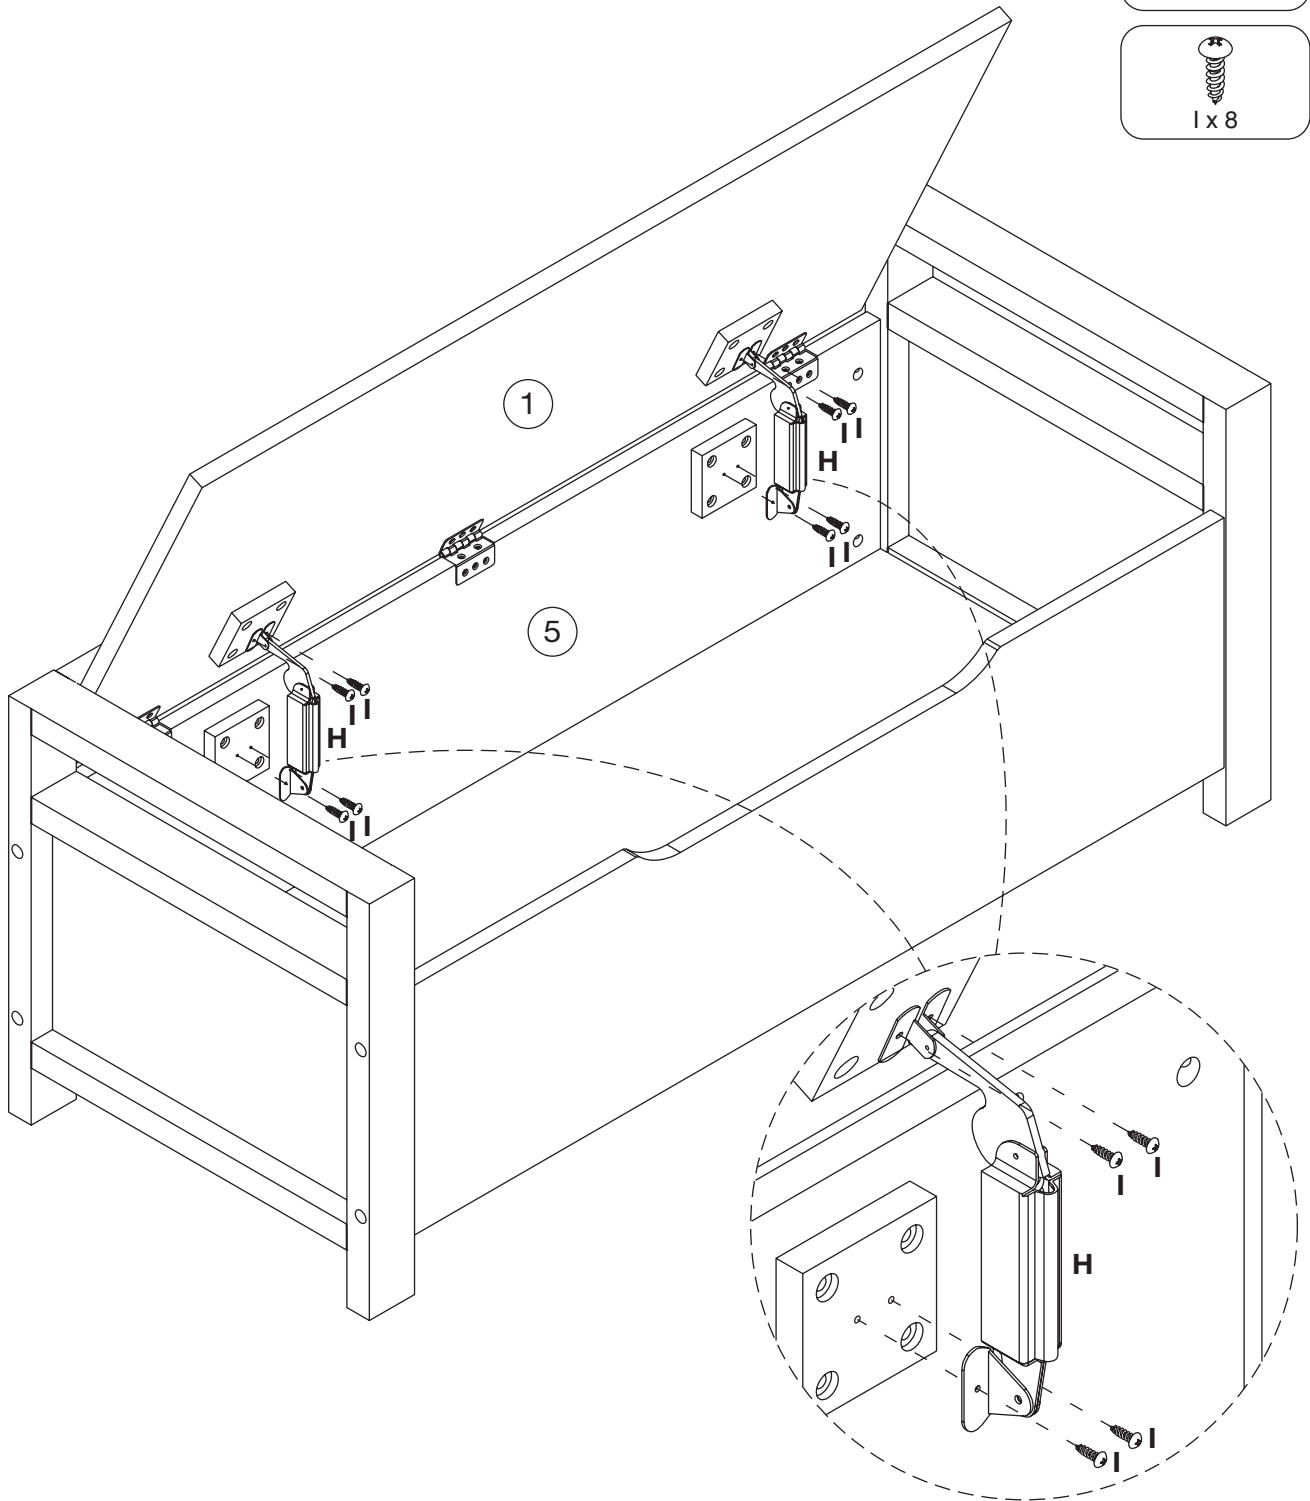

Assembly Instructions (cont)

Step 9

 Place part **9** on top of part **1**, as shown.


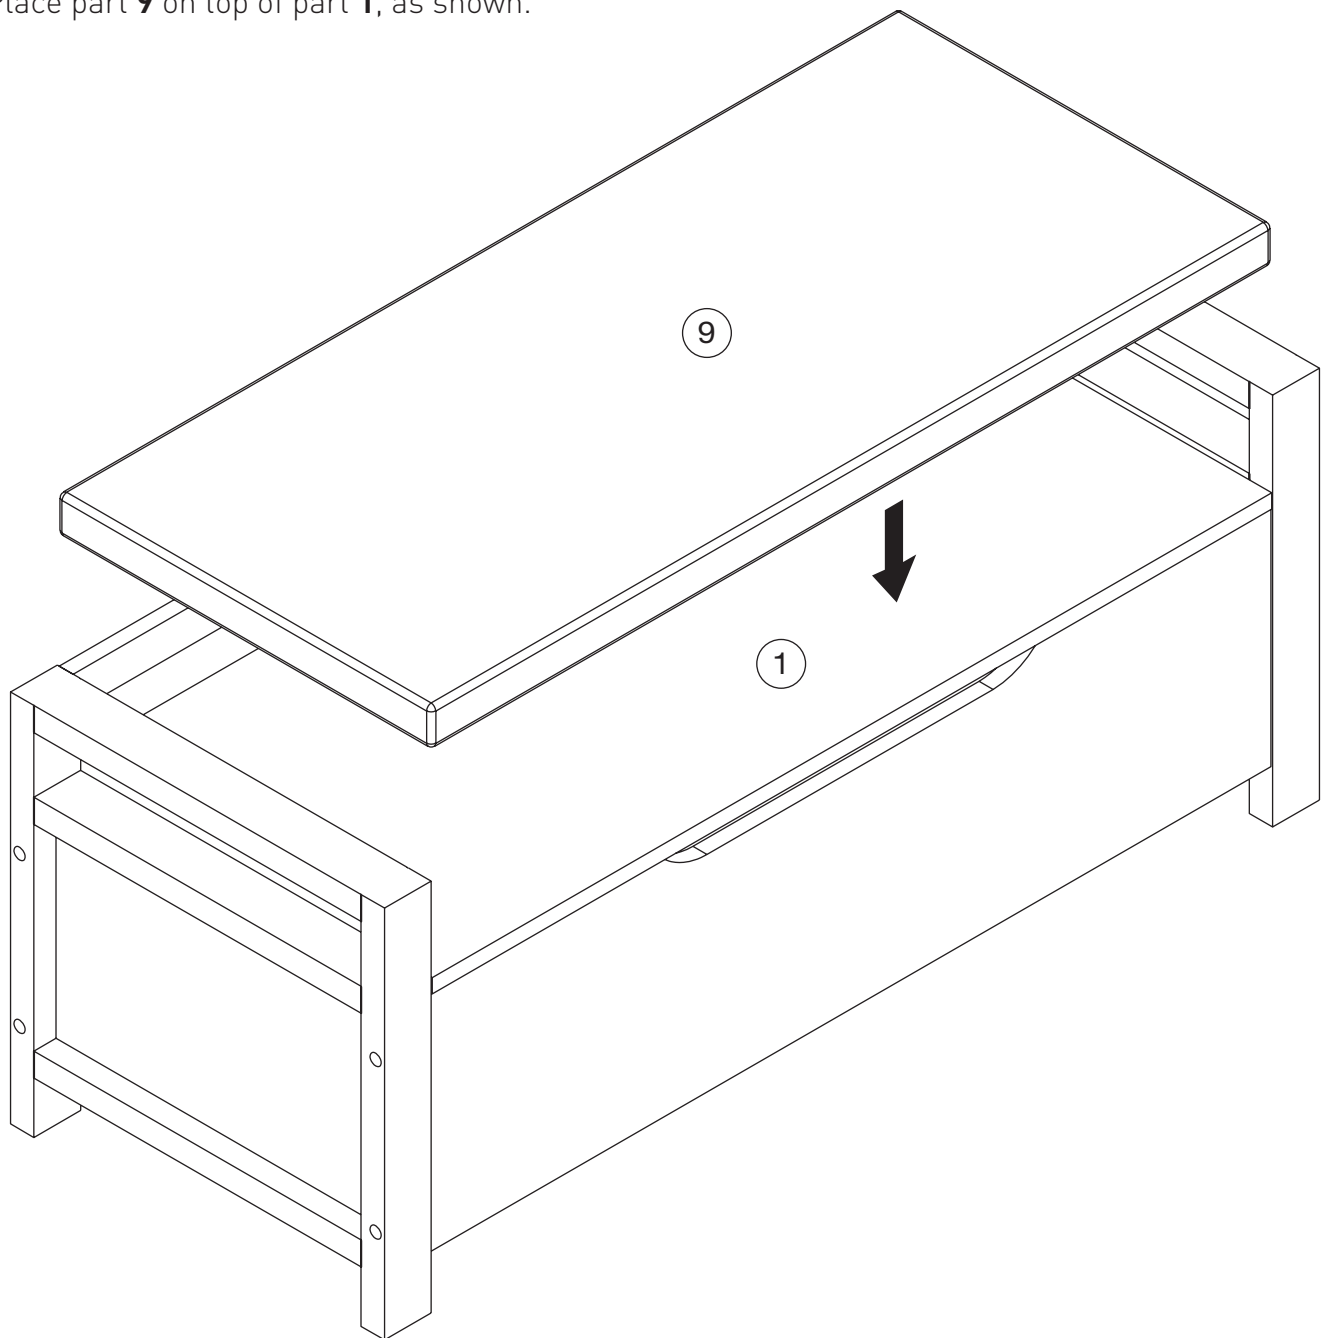


Please note when accessing the inner storage you must remove the cushion prior to opening the lid. Once you are finished, close the lid and return the cushion into position.

Assembly Instructions (cont)

Step 10

  To conceal exposed hardware, attach stickers **K** onto the assembled unit, as shown.

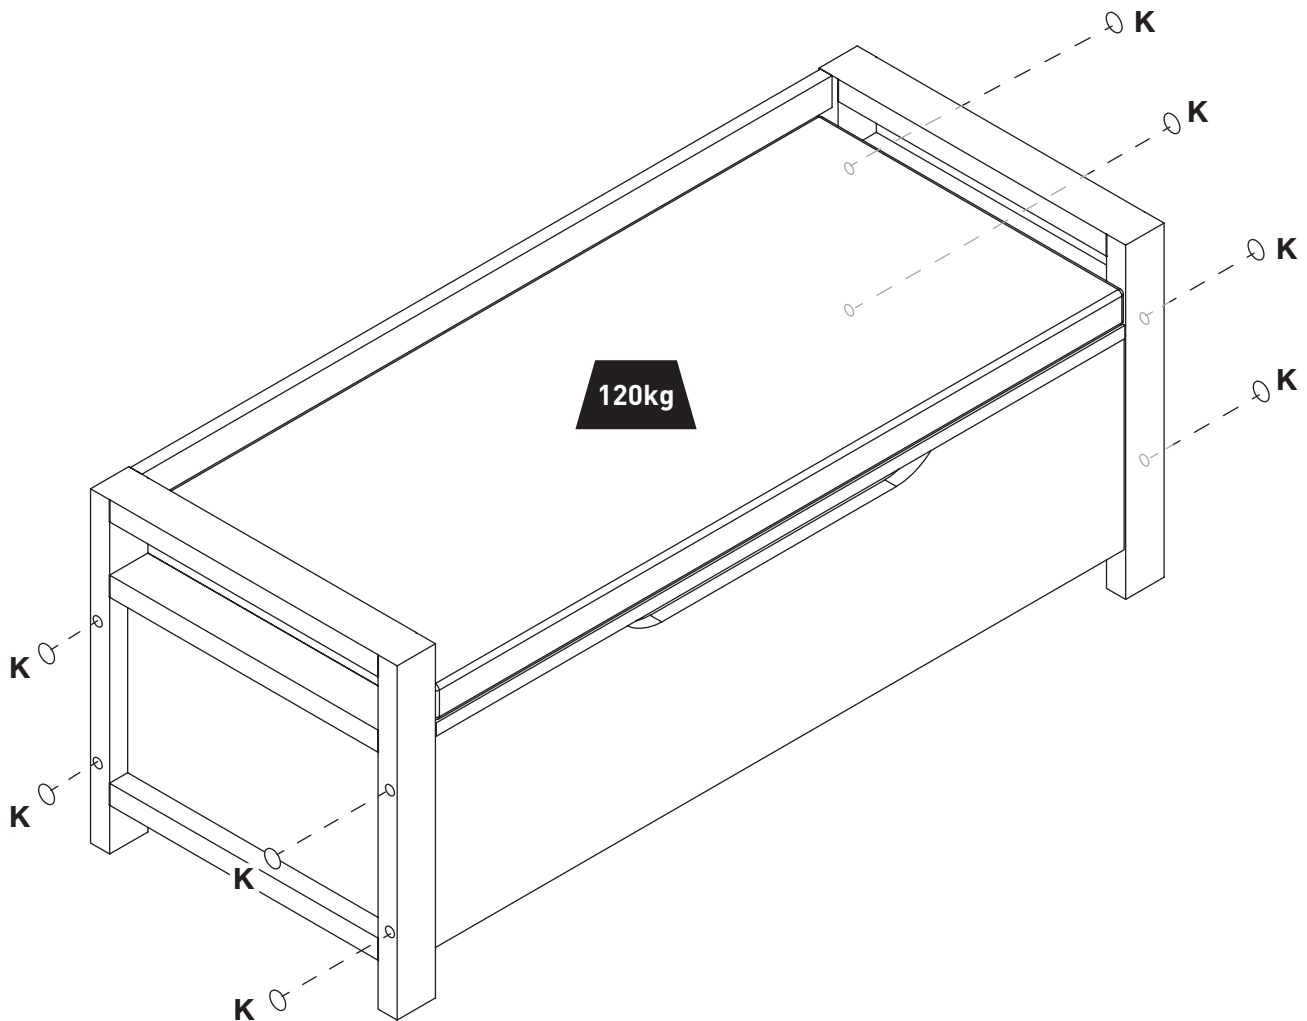

Please note: the maximum recommended weight is 120kg.

Your lift up storage bench is ready for use.

Register your purchase at www.aldi.com.au/en/about-aldi/product-registration/ to keep up-to-date with important product information

Lift Up Storage Bench

Repair and Refurbished
Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD
48B Egerton Street Silverwater NSW 2128 Australia

1300 777 137
service@unclebills.com.au

Opening Hours 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)