

SMP4029

User Manual

Sylvania is a registered trademark of OSRAM Sylvania Inc. Used under license.



2. Unique Features


1. Elegant appearance with LED indicator and card slot.
2. Multi-Code Player - Supporting MP1, MP2, MP3, WMA formats.
3. Drive Free U Disk - You may manage your files directly through "Portable Device" in "My Computer" on Windows 2000 Operating System or above without driver.

4. Function of LED Indicator Light

1. In Power OFF Mode: No Light.
2. In Music Playing Mode: Light flashing (about once per second).
3. In Music Pause Mode: Light bright.
4. In PC Connection / Charging Mode: Light bright.
5. Charging Complete: Light Off

6. USB Disk


1. USB Disk
The player could be use as standard USB disk with operating system of Windows 2000 and above, Mac OS 10.3 and above, Linux Redhat 8.0 and above (no driver needed) while Windows 98 need to set up driver.
2. Charging
 - 2.1 Make sure the power switch is on to charge, or the player could not be charged properly. The LED light is on when the player is charging, the light will be off when the battery is full.
 - 2.2 Disconnect the player and charger if you want to stop charging.
 - 2.3 Turn off the player when you do not use player.
3. Remarks (Additional information for Adaptor purchase)
 - 3.1 The adaptor must be conformed to following standard
 - 3.1.1 Input: 100V ~ 240V, 50/60Hz
 - 3.1.2 Output: 5.2V \pm 0.2V
 - 3.1.3 Max.: 350mA
 - 3.1.4 4 pins adaptor

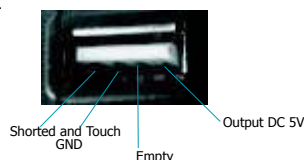

8. Trouble Shooting

No Power	<ul style="list-style-type: none"> - Check to see if battery is low - Check to see if the player is ON
No Sound from earphone	<ul style="list-style-type: none"> - Check to see Volume is set "0" and connect the earphone connects properly. - Make sure earphone is clean and in good status - Damaged MP3 file may make noise and could not be played. Make sure that the music file are not damaged.
Failure of music download	<ul style="list-style-type: none"> - Check to see if USB cable is damaged and connected properly. - Check to see if driver is installed correctly. - Check to see if memory space is enough

1. Overview

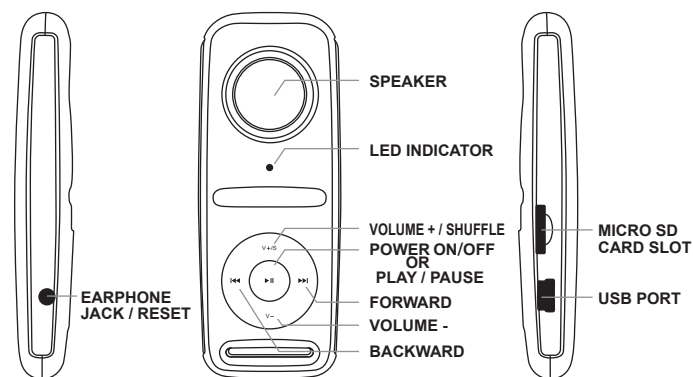

3. Play Music

Connect the earphone to player

1. Press and hold ►|| button for 2-3 seconds to switch ON
 - 1.1 Select music
 - ◀◀ : To select previous music
 - ▶▶ : To select next music
2. To adjust the volume
 - 2.1 Press V+/S / V- to adjust volume
3. To change normal / shuffle play
 - 3.1 Press and hold "V+ /S" button for 2-3 seconds to enter "Random" play mode and the LED light will flashing slow about once per 2 seconds.
 - 3.2 Press and hold "V+ /S" button for 2-3 seconds again to return to "Normal" play mode and the LED light will flashing about once per 1 seconds.

5. External Memory Card

1. Turn OFF the player and then insert memory card into card slot; make sure memory card is firmly and correctly inserted.
2. Turn ON the player by press ►|| button, the player is reading and searching the supported music files from memory card / internal memory, and found music will play automatically.
3. Before taking out / inserting the memory card with player. Please turn OFF the player.

7. File Transfer

1. Connect player to PC by USB cable.
2. The device will be detected automatically.
Choose take no action and close the window.
3. Double click My Computer to choose Removable Disk icon.
4. Drag your media files into the removable disk.
5. Close the removable disk window and disconnect the player from PC after data transfer.

9. Technical Specifications

Capacity	4GB
Display	NA
Interface	USB 2.0 High Speed
Max Playtime	Up to 4hrs
Battery Type & Capacity	Li-Polymer Rechargeable (3.7V) 230mAh
File Type	MP1, MP2, MP3, WMA
S/N Ratio	85 ~ 95 db
Power Output	(L) 5mW + (R) 5mW (320hm)
Operating System	Compatible with Windows 2000 / XP
Dimensions	35 x 90 x 13.8 mm
Weight	40g