





# **BV755B** USER'S MANUAL

**BLUETOOTH®** | DVD/MP3/CD AM/FM RECEIVER

FEATURING 6.2" (157 mm) WIDESCREEN TOUCHSCREEN DIGITAL TFT MONITOR





To ensure safety while driving

and to comply with laws,

drivers should not watch video or

operate the video device while driving.

# Congratulations on your purchase of a **Boss Audio Systems ELITE**® Multimedia Receiver.

It has been designed, engineered and manufactured to bring you the highest level of performance and quality, and will offer you years of entertainment pleasure.

C	NO	IT	Er	T	S

Specifications	1
Safety Notice	2
Accessories	3
Unit Installation	3
Remote Control Operation	4
Wires Connection Description	5
Panel Introduction	6
Main Menu Operation Instruction	
Access Setup Interface	
General Settings	7
Camera Settings	8
Clock Settings	8
Audio Settings	
Tuner Settings	9
Illumination Settings	9
About Settings	10
Tuner Operation	10
DISC/CD/USB/SD Playback	11
DVD Mode Operation	11
Media Playing — CD Audio	12
CD Source Menu	12
USB/SD Music/Video/Picture	12
Bluetooth Operation	13
Bluetooth Operation Menu	13
Bluetooth Dialing	13
Bluetooth Call	13
Bluetooth Phone Book	14
Bluetooth Phone Call History	14
Bluetooth Music Steaming-A2DP	14
Bluetooth Pair device	14
A-LINK(Screen Mirroring) Operation	15
PTT(Push-To-Talk) Operation	
Troubleshooting	16

# **SPECIFICATIONS**

Model No.	BV755B			
General features	Fixed front panel 6.2 inch TFT screen FM/AM Radio RBDS DVD fully compatible with DVD/VCD/CD/MP3/MPEG4/JPEG Front USB&SD reader support Built-in Bluetooth AUX Input AV Input AV output Front/Rear view camera Front,Rear and Subwoofer Pre-Amp.Output 4*80W AMP power output maximum Steering wheel control			
TFT screen	800*480pixel			
SD	64G			
Working power	12V			
Max Output	4*80W			
Working Temperat	ture -20°C~70°C/-4° F~158°F			
Size	178*160*100mm			
Weight	1.57kg/3.46lbs			
Compatible Media				
Picture	JPG/JPEG/BMP			
Disc	CD/CD-R/CD-RW/DVD/DVD±R/DVD±RW			
Audio file	MP3/WAV/FLAC			
	For	mat	Video code	Audio code
Video file	.MF	PEG1	MPEG1	MP2
	.MF	PG .	MPEG2	MP2

Please read and understand the following safety information before operating this unit.

- The device is suitable for 12V power supply (requires grounding). Do not connect it to 24V power supply in trucks or buses, or else it will be damaged.
- Please use genuine discs instead of incompatible discs, or it will damage the device and/or shorten the service life.
- Without the guide of qualified personnel, do not replace the fuse, or else it may damage the device or cause fire.
- A Please follow the traffic laws and regulations and do not watch programs or operate the device when you are driving, to avoid accidents(excluding passengers watching through rear monitor).
- To ensure safety and operate the device normally, please ask qualified personnel to install the device. Do not disassemble or repair the device without authorization, to avoid damage and accidents. please contact a local car audio distributor for details.
- O Do not put the device in a moist environment or water, to avoid electric shock, damage and/or fire due to a short circuit.
- The mechanical drive part of the monitor uses an automatic precision transmission component.Do not pull, push or rotate the device by force or impact the TFT screen to avoid damaging the device.
- Do not insert the audio plug of the vehicle into the master unit directly. Please convert with the dedicated end cable provided by our company.
- When installing the unit, prevent metal objects from falling into the master unit from the vents to avoid a short circuit and damaging the device.


#### **Safety Statement**

- Solution For the safety of yourself and others, do not watch programs or operate the device when you are driving. It is prohibited by law.
- The back up monitor function should be used as an auxiliary view only. We are not responsible for any accidents occurred during backing.

# **ACCESSORIES**


Remote	.1
Power Cable	.1
Mounting Brackets	.2
Screw	.8
Trim Ring	1

# **UNIT INSTALLATION**

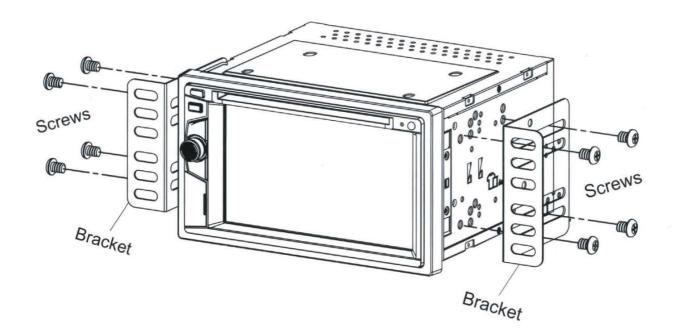

- 1.Put the 2 brackets to the left and right side of the unit;
- 2.Use screws to fix the brackets to the unit.
- 3.Once the screws are attached, the brackets can be adjusted forward or backward depending on the installation requirements.

## REMOTE CONTROL OPERATION

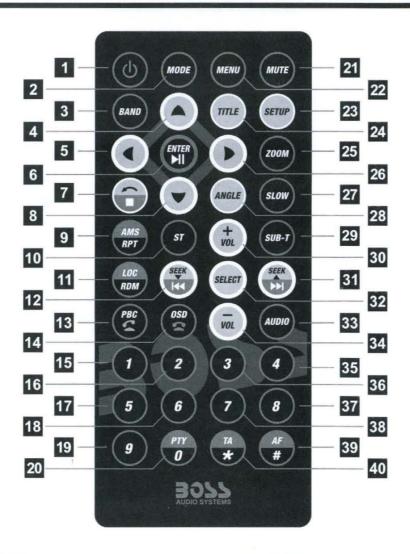


- 1.TURN ON/OFF
- 2.MODE Key
- 3.BAND Key
- 4.5.8.26. Cursor Keys
- 6.ENTER, ►II (Play/Pause) Key
- 7. (STOP), ~ (Return) Key
- 9.AMS(Auto Store/Recall Preset Station), RPT(Repeat) Key
- 10.ST(Stereo/mono) Key
- 11.LOC(LOC/DX), RDM(Random) Key
- 12. I (Tune/Seek Down,
  - Skip to Previous song/video/Photo) Key
- 13. PBC(Playback Control),
- (Answer/Outgoing call/ Redial)
- 14.OSD(On Screen Display),
- ♠ (Reject or End a call) Key
- 15~20, 35~40. Numeric Keypad,

- 20. PTY(Program Types)
- 21.MUTE Key
- 22.MENU Key
- 23.SETUP Key
- 24.Title Key
- 25.ZOOM(Zoom in/out) Key
- 27.SLOW Key
- 28.ANGLE Key
- 29.SUB-T(Subtitle language) Key
- 30.34.VOL+/VOL- Key
- 31. ▶► (Tune/Seek Up,
  - Skip to Next song/video/Photo) Key
- 32.SELECT(Audio Settings) Key
- 33.AUDIO(Audio Language)
- 39.AF(Alternative Frequencies)
- 40.TA(Traffic Announcement)

# **WIRES CONNECTION DESCRIPTION**


## The Description of the Input/Output Interface

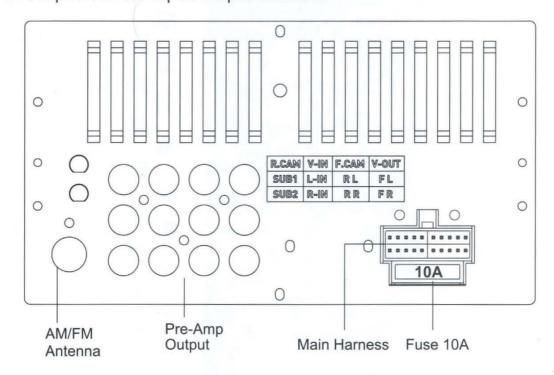

#### Audio/Video Inputs & Outputs

R.CAM	V-IN Video Input (Yellow) L-IN Audio Input Left CH (White) R-IN Audio Input Right CH (Red)
F.CAM Front Camera Input (Yellow) R L Rear Left PRE-AMP Output (White) R R Rear Right PRE-AMP Output (Red)	V-OUT Video Input (Yellow) F L Front Left PRE-AMP Output (White) F R Front Right PRE-AMP Output (Red)

Power	Speaker Outputs
Yellow Constant (+12v)	White Left Front (+)
Red Accessory (+12v)	White/Blk Left Front (-)
Black Ground (-)	Gray Right Front (+)
Orange Illumination Input (+12v)	Gray/Blk Right Front (-)
Violet/Wht Reverse Input (+12v)	Green Left Rear (+)
Blue Ant. Output (+12v, 500 mA)	Green/Blk Left Rear (-)
Blue/WhtRem. Output (+12v, 500 mA)	Purple Right Rear (+)
Lt.Green Parking Brake Input	Purple/BlkRight Rear (-)
Control	Camera Power
3.5mm SWC Input	Red/Blk Front Output (+12v, 500 mA) Red/WhiteRear Output (+12v, 500 mA)

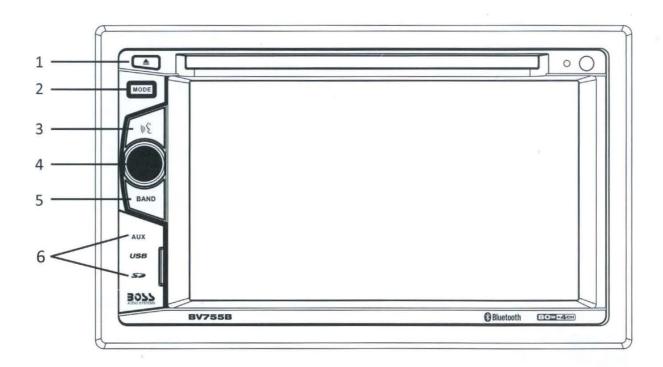

#### 1.Eject key

Press EJECT to remove the Disc

## 2.MODE key

Press to select system mode.

#### 3.PTT(Push-To-Talk) key

Press the of button to access to smartphone voice assistant capability via Bluetooth.

#### 4.TURN ON/OFF&VOLUME UP/DOWN

Long touch to turn ON/OFF the unit. Short touch to activate the MUTE function and silence the audio output. Touch again to restore sound. Rotate to adjust the output volume UP or DOWN.

#### 5.BAND key.

Press BAND to switch between the FM1, FM2, FM3 and AM1, AM2 bands.

6. Open to see AUX IN jack, SD solt, USB port and reset key.


## MAIN MENU OPERATION INSTRUCTION

#### **MAIN MENU 1**

- 1. Tuner Interface
- 2. Streaming Interface
- 3. DISC Interface
- 4. Phone Interface
- 5. USB Interface
- SD Interface
- 7. Front/Rear Camera Interface
- 8. AV INPUT Interface

#### **MAIN MENU 2**

- 9. AUX IN Interface
- 10. Setting Interface
- 11. A-LINK(Autolink) Interface

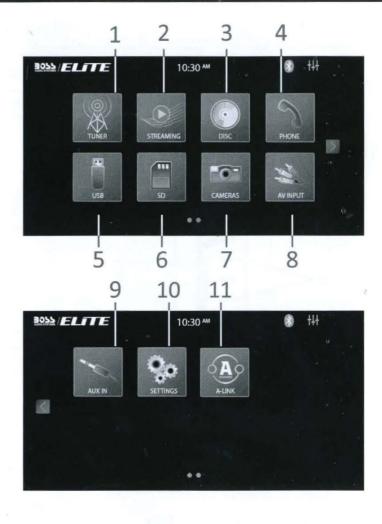

There are seven Setting Menus


#### **GENERAL SETINGS-Menu 1**



- 1. Touch to set wallpaper
- Retain ACC Power: Select how many seconds to delay shut down after the vehicle powers down
- 3. When turned on, an audible beep tone confirms each function selection.
- 4. Touch System Language to select Spanish/English
- 5. Touch to select parental control level, the default passord is "0000".

## **ACCESS SETUP INTERFACE**

#### CAMERA SETTINGS-Menu 2

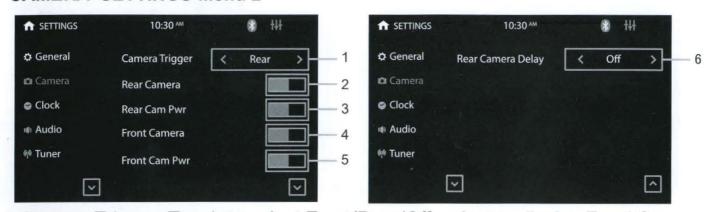

- Camera Trigger: Touch to select Front/Rear/Off, select to display Front Camera, Rear Camera, or no response when reversing.
- 2.Rear Camera: Touch to turn on or turn off the Rear Camera function.
- 3.Rear Cam Pwr: Turn on to power Rear Camera.
- 4. Front Camera: Touch to turn on or turn off the Front Camera function.
- 5. Front Cam Pwr: Turn on to power Front Camera.
- 6.Select the delay setting to define the refresh rate for the Rear Camera image when the vehicle is in reverse gear. Options are off / 1 Sec / 2 Sec / 3 Sec. It can switch to front camera delay or Front Camera delay follow the Camera Trigger change.

#### **CLOCK SETTINGS-Menu 3**

- a. Press to set clock mode:12/24 hr
- b. Press to set hour
- c. Press to set minute
- d. Press to set AM/PM at 12hr mode




#### **AUDIO SETTINGS-Menu 4**





## **ACCESS SETUP INTERFACE**

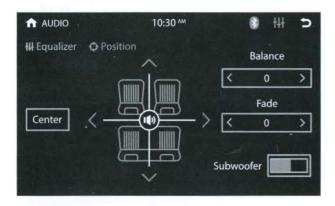



- 1. Touch to select whether to output sound from an external amplifier.
- 2. Startup volume: default volume;
- If the volume at the last shutdown is less than this volume, the volume at the last shutdown will be used when rebooting;
- If the volume at the last shutdown is greater than this volume, this default volume will be used when rebooting.
- 3-10. Press to set preset gain.
- 11. Slide up or down to enter previous functions.

#### **TUNER SETTINGS - Menu 5**

- Touch to choose between America/ EU regions.
- Perform radio auto preset (ps) functionality
- 3. Touch to choose Local or Distance
- Touch to turn on or turn off RBDS;Touch Set to enter RBDS page .
- 5. Touch to choose Stereo or Mono

#### **ILLUMINATION SETTINGS - Menu 6**

- Touch to turn on the illumination detection function
- 2. Touch to set screen brightness
- 3. Touch to set gamma brightness





#### ABOUT SETTINGS -Menu 7

- 1. Touch to enter the touch calibration interface
- 2. Touch to view the version number of the machine.
- 3. Touch to restore the machine to factory status.
- 4. Touch to select whether it is necessary to display a warning interface when booting up.

#### **TUNER OPERATION**

- 1. Touch 🏫 to go back to the home page
- 2. Show PS,PTY and RT messages from RDS
- 3. Short press to seek backwards, long press to enter manual mode.
- 4. Short press to seek forward, long press to enter manual mode.
- 5. Short press to select the preset station, long press to save current Freq.

RBDS: Touch Setting >Tuner > RBDS > Set to enter the RBDS setup menu. You can choose what program type you'd like to listen to: news, sports, information, etc. 10:30 AM

b

C

CT

TA

AF


#### a.CT(Clock Time)

Turn on to automatically correct the current time every time the RBDS is opened.

## b.TA(Traffic Announcement)

ON: When this is turned on the radio will automatically search for traffic station.

it will automatically switch to the previous mode.

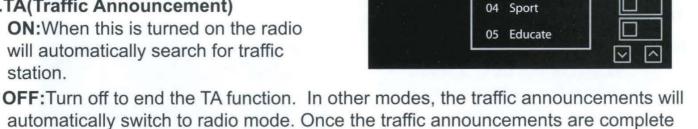

01 News

02 Affairs


d

03 Info

#### c.AF(Auto Frequency)

When the AF function is turned on, the radio will automatically fine tune to other frequencies when the received stations become weak. A warning message will be displayed on the screen when receiving emergency announcements.



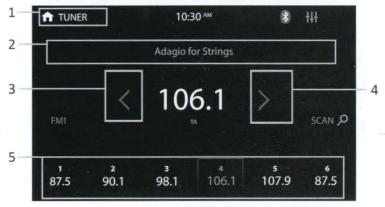

# DISC/CD/USB/SD PLAYBACK

#### d.PTY(Programming Type)


Touch the button to display program types. Search for stations according to program type.

**NOTE:** If RBDS is turned OFF, AF/TA/PTY will not function.

#### **DVD MODE OPERATION**

- 1. Touch to select title/chapter of DVD
- Short press to move to the previous chapter, long press to rewind quickly.
- 3. Touch to playback/pause
- 4. Short press to move to the next chapter, long press to fast forward quickly.
- 5. Touch to enter DVD root menu
- 6. Go to the next page of the menu bar
- 7. Go to the previous page of the menu bar
- Touch to change the repeat mode in the following sequence: DVD:repeat all, repeat off, repeat chapter, repeat title VCD(PBC off):repeat all, repeat off, repeat
- single
  9. Touch to change random play mode
- 10. Touch to enter video adjust page
- 11. Touch to enter DVD title menu
- Touch to select the subtitle language if the disc is recorded in multiple languages
- 13. Go to the next page of menu bar
- 14. Touch to switch video between 4:3 and 16:9
- 15. Touch to select DVD video angle
- 16. Touch to select DVD audio language

NOTE: When properly installed, a video cannot be displayed unless the parking brake is applied. If the parking brake wire is not installed correctly, the following message will appear.

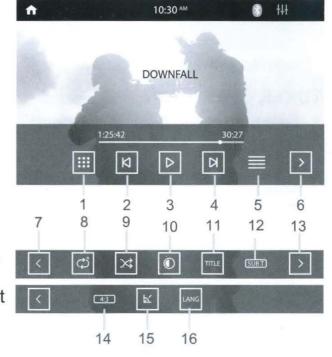




# DISC/CD/USB/SD PLAYBACK

#### MEDIA PLAYING—CD AUDIO

- 1. Show the music's ID3 information
- Time bar:show the total time and playing time of the present song
- Touch to change play mode: repeat all, repeat single, sequential play and shuffle play.
- Touch to return to previous song.
- 5. Touch to playback/pause.
- 6. Touch to go to the next song.
- 7. Touch to enter file list page.

#### **CD SOURCE MENU**

Touch the SOURCE MENU(ICON 5) to access the CD track menu to view or change tracks manually. Touch again to return to playback.

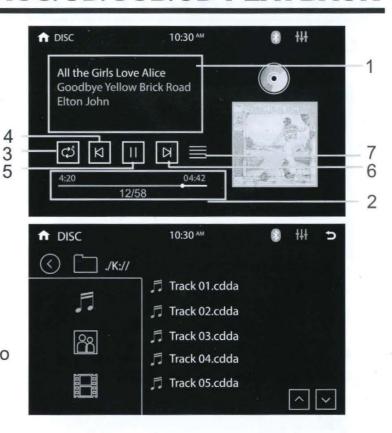

#### USB/SD MUSIC/VIDEO/PICTURE

Press USB/SD in the main menu. The music menu is similar to the disc music menu except there is more ID3 information on it (such as song name & singer).







- 1. Steppad: Enter number to select file.
- 2. Previous Music/Video/Picture
- 3. ▶ Play/Pause
- 4. Next Previous Music/Video/Picture
- 5. \equiv List: Press to enter file list
- 6. > Go to the next page of menu bar
- 7. < Go to the Previous page of menu bar
- 8. Select repeat mode
- 9. Random Play
- 10. Enter Video adjust
- 11. Turn right 90 degree
- 12. Q Zoom In/Out

#### **BLUETOOTH OPERATION**

#### **BLUETOOTH OPERATION MENU**

Click the phone icon to enter the Bluetooth function interface.

#### 1.Bluetooth setting menu:

- a.Turn Bluetooth on and off.

  Turn on and the display loops
  between the gray Bluetooth icon,
  the white Bluetooth icon. The icon
  will turn blue when a phone is paired.
- b.Connect automatically.
- c.Answer automatically.
- d.PIN code: The default password is "0000".
- e.Default Bluetooth name for this unit: BOSS AUDIO BV765B.



#### 2. Function area:

- a.Click to see the dialing keypad. Users can dial phone numbers and make calls.
- b.Click to see the Bluetooth phonebook menu.
- c.Click to see the Bluetooth call history.
- d.Bluetooth pairing interface.
- e.Bluetooth setting menu.

#### **BLUETOOTH DIALING**

- 2.Key area.
- 3. Touch to call out.


#### 

#### **BLUETOOTH CALL**

- 1.Show contact name.
- Touch to select talk through phone or through Bluetooth.
- 3.Keypad area.
- 4. Press to hang up the phone call.




#### **BLUETOOTH PHONE BOOK**

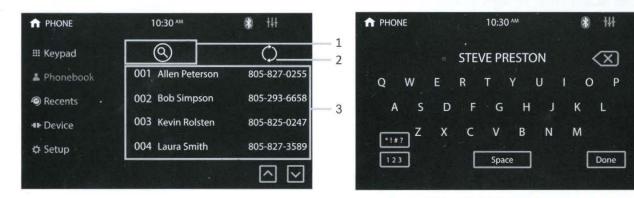

- 1. Touch to search for a name or phone number.
- 2. Click to sync phonebook.
- 3.Contact list.


#### BLUETOOTH PHONE CALL HISTORY

- 1. Click to sync phone call history.
- 2. Touch to show missed calls.
- Touch to show the dialed phone number.
- Touch to show the received phone number.

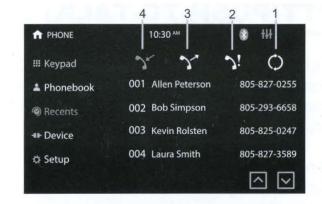

#### **BLUETOOTH MUSIC-A2DP**

- 1.Previous song.
- 2.Play/pause.
- 3.Next song.
- 4.Enter EQ setting menu.

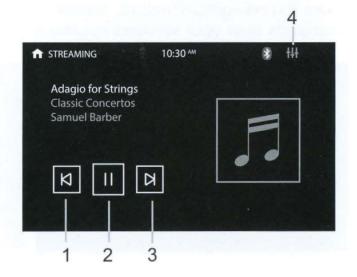

# A-LINK(SCREEN MIRRORING) OPERATION

A-LINK App allows user to mirror the screen of certain Android smartphones on the screen of this car DVD player.

Please scan one of QR code to download the "A-LINK" App in Amazone App Store or Google Play Store and install it to user's smartphone.

Simply connect user's smartphone to the USB port through the original cable of smartphone and user will be able to see the favorite smartphone apps directly on the screen.







Google Play Store

#### Note:

- 1. Supports 2 way control for Android device.
- 2. Supports Android 8.0+ or higher, not all apps are supported.

# PTT(PUSH-TO-TALK) OPERATION

This Push-To-Talk feature allows direct access to Android and IOS smart-phones voice assistant capability when user establish the bluetoothconnection between user's smartphone and this receiver. Simply connect directly from this car DVD via Bluetooth with with the button.

#### Note:

Before using the Push-To-Talk, user must enable the mobile data on user's smartphone.

To use the navigation feature, switch to the BT Audio source to hear voice commands over your vehicles speakers.





# **TROUBLESHOOTING**

No Disc/Bad Disc  Disc is dirty Disc is upside down Unknown Disc Unsupported Disc type Check the disc and change Press EJECT for 5s to reset loading mechanism operation Unit will not power on be unit on power on in good condition Unit will not power on be unit on power power in good condition Unit will not power on Unit will not power on be unit on power power in good condition Unit will not power on Unit will not power on be unit on power power in good condition Unit will not power on be unit on power on in good condition Unit will not power on set on the date of the disc and change Unit will not power on be uni	Media displayed	Cause	Corrective Action
Disc is upside down Unknown Disc Unsupported Disc type Error Illegal mechanism operation Problem Cause Corrective Action Radio fuse blown Install new fuse with right rating Illegal operation Press EJECT for 5s to reset loading mechanism Ocar battery fuse blown Illegal operation Press the RESET button Install new fuse with right rating Illegal operation Press the RESET button Press the RESET button Car battery fuse blown Illegal operation Press the RESET button Press the RESET button Press the RESET button Press the RESET button Car battery fuse blown Install new fuse with right rating Install new fuse with right Install new fuse with right Install new fuse with rating Install new fuse	Loading	Disc is being read	
Disc is upside down Unknown Disc Unsupported Disc type Check the disc and change Error Illegal mechanism operation Press EJECT for 5s to reset loading mechanism Operation Press EJECT for 5s to reset loading mechanism Operation Install new fuse with right rating	No Disc/Rad Disc	Disc is dirty	Clean the disc
Problem   Cause   Corrective Action   Install new fuse with right rating   Illegal operation   Install new fuse with right rating   Install new fuse with rig	INO DISC/Dad DISC	Disc is upside down	Insert Disc in right way
Problem Cause Corrective Action  Radio fuse blown Unit will not power on Illegal operation Screen touch is insensitive No audio output  Low audio output  Poor sound quality or distortion Searching  Poor searching  Car battery fuse blown Illegal operation VOLUME 0  Turn up the volume Check and adiust the channel balance to the center position Speaker power rating not compatible with unit Speaker short circuit  Check wiring Connect proper speakers Connect the auto antenna properly  Check wiring  Connect the auto antenna properly  Check wiring and correct  Check wiring  Connect proper speakers  Connect the auto antenna properly  Check wiring and correct  Check wiring  Connect the auto antenna properly  Check wiring and correct  Check wirin	Unknown Disc	Unsupported Disc type	Check the disc and change
Problem  Cause  Radio fuse blown  Install new fuse with right rating Octoom So on set parking and correct  Check wiring and correct  Use correct aspect ratio setting with ratio display  Cannot insert Disc  Disc already inside unit  Use a new one in good condition warped	Error	Illegal mechanism	Press EJECT for 5s to reset
Unit will not power on Car battery fuse blown Install new fuse with right rating Install new fuse at East pattern in go to to setup Install new fuse with right rating Install new fuse at East pattern in go to to setup Install new fuse alibert rating not calibration Check wiring and correct Check wiring and correct Install new fuse alibert rating not calibration Check wiring and correct Connection to the calibration Check wiring and correct Stop repair pattern in a fuse fuse fuse fuse fuse fuse fuse fu		operation	loading mechanism
Unit will not power on Illegal operation Illegal operation Press the RESET button Screen touch is insensitive Insensitive Improper audio output Connection VOLUME 0 Improper audio output Connection VOLUME 0 Turn up the volume Dalance Dalance to the center position Speaker power rating not compatible with unit Speaker short circuit Check wiring Auto antenna is not properly connected Parking brake is not engaged Incorrect connection to parking wire Parking brake is not engaged Improper video signal connections of setup menu and set the calibration Check wiring and correct Check wiring and correct Check wiring Connect the auto antenna properly Check wiring and correct Check wiring Check wiring and correct Check wiri	Problem	Cause	Corrective Action
Illegal operation   Press the RESET button   Screen touch is insensitive   Place of touch screen is uncalibrated   Connection   Check wiring and correct connection   Check wiring and correct connection   Connect the calibration   Connect proper speakers   Connect proper speakers   Connect the auto antenna properly connected   Connect the auto antenna properly   Check wiring and correct   Check wiring		Radio fuse blown	Install new fuse with right rating
Screen touch is insensitive  No audio output  No audio output  No audio output  Improper audio output connection  VOLUME 0  Low audio output  Poor sound quality or distortion  Weak station searching  No image  Incorrect connection to parking wire  Parking brake is not engaged  Flashing image or interference appears on screen  Improper image, improper height/width radio display  Cannot insert Disc  Disc already inside unit  Improper audio output context is uncalibration  Check wiring and correct calibration  Check wiring and correct  Connect proper speakers  Connect the auto antenna properly  Connect the auto antenna properly  Check wiring and correct  Check wiring  Check wiring and correct  Check wiring and correct  Check wiring and correct  Check wiring and correct  Check wiring and cor	Unit will not power on	Car battery fuse blown	Install new fuse with right rating
Insensitive uncalibrated calibration  No audio output  Improper audio output connection  VOLUME 0  Low audio output  Heavily biased volume balance  Speaker power rating not compatible with unit  Speaker short circuit  Check wiring  Connect proper speakers  Connect the auto antenna properly  Connect the auto antenna properly  LOCAL function is activated  No image  Incorrect connection to parking wire  Parking brake is not engaged  Flashing image or interference appears on screen  Improper image, improper height/width radio display  Cannot insert Disc  Lost of noise during play, and stop then  Improper audio output  Check wiring and correct  Connect the auto antenna properly  Connect the auto antenna properly  Check wiring and correct  Check wiring and correct  Check wiring and correct  Check wiring and correct  Use correct aspect ratio setting  Eject the current Disc and insert the new one  Use a new one in good condition  Use a new one in good condition		Illegal operation	Press the RESET button
No audio output    Connection   VOLUME 0   Turn up the volume	Screen touch is insensitive		
Low audio output  Heavily biased volume balance  Poor sound quality or distortion  Speaker power rating not compatible with unit  Speaker short circuit  Auto antenna is not properly connected  LOCAL function is activated  Incorrect connection to parking wire  Parking brake is not engaged  Improper image, improper height/width radio display  Cannot insert Disc  Lost of noise during play, and stop then  Speaker power rating not compact to the center position  Connect proper speakers  Connect the auto antenna properly  Check wiring  Connect the auto antenna properly  Check wiring and correct  Check wiring and correct  Check wiring and correct  Check wiring and correct  Use correct aspect ratio setting  Eject the current Disc and insert the new one  Use a new one in good condition  Warped	No audio output		Check wiring and correct
balance balance to the center position  Speaker power rating not compatible with unit Speaker short circuit  Check wiring  Auto antenna is not properly connected  Formula activated  Connect the auto antenna properly  Connect the auto antenna properly  Connect the auto antenna properly  Turn LOCAL function OFF  Check wiring and correct  Check wiring and c		VOLUME 0	Turn up the volume
Poor sound quality or distortion  Speaker short circuit  Check wiring  Auto antenna is not properly connected  LOCAL function is activated  Incorrect connection to parking wire  Parking brake is not engaged  Flashing image or interference appears on screen  Improper image, improper height/width radio display  Cannot insert Disc  Local function is activated  Check wiring and correct  Check wiring and correct  Stop vehicle in safe place and set parking brake ON  Check wiring and correct  Check wiring and correct  Use correct aspect ratio setting  Eject the current Disc and insert the new one  Use a new one in good condition warped	Low audio output		
Weak station searching  Auto antenna is not properly connected  LOCAL function is activated  Incorrect connection to parking wire  Parking brake is not engaged  Flashing image or interference appears on screen  Improper image, improper height/width radio display  Cannot insert Disc  Auto antenna is not properly  Connect the auto antenna properly  Turn LOCAL function OFF  Check wiring and correct  Stop vehicle in safe place and set parking brake ON  Check wiring and correct  Use correct aspect ratio setting setup  Eject the current Disc and insert the new one  Disc is scratched or warped  Use a new one in good condition warped	Poor sound quality or distortion		Connect proper speakers
Weak station searching    Docal Function is activated   Disc already inside unit		Speaker short circuit	Check wiring
No image    Incorrect connection to parking wire	Weak station searching	Last House Control And Thomas and Strategic Advances in Control Contro	
No image  to parking wire  Parking brake is not engaged  Flashing image or interference appears on screen  Improper image, improper height/width radio display  Cannot insert Disc  Lost of noise during play, and stop then  to parking wire  Parking brake is not engaged  Stop vehicle in safe place and set parking brake ON  Check wiring and correct  Use correct aspect ratio setting  Eject the current Disc and insert the new one  Use a new one in good condition warped		The control of the co	Turn LOCAL function OFF
Parking brake is not engaged  Flashing image or interference appears on screen  Improper image, improper height/width radio display  Cannot insert Disc  Lost of noise during play, and stop then  Parking brake is not engaged  Stop vehicle in safe place and set parking brake ON  Check wiring and correct  Use correct aspect ratio setting  Eject the current Disc and insert the new one  Use a new one in good condition warped	No image		Check wiring and correct
interference appears connections  Improper image, improper aspect ratio setting setup  Cannot insert Disc  Lost of noise during play, and stop then  Improper video signal connections  Use correct aspect ratio setting setup  Eject the current Disc and insert the new one  Use a new one in good condition warped			
cannot insert Disc  Disc already inside unit  Use a new one in good condition warped	Flashing image or interference appears on screen		Check wiring and correct
Lost of noise during play, and stop then  Disc already inside unit the new one  Use a new one in good condition warped	Improper image, improper height/width radio display		Use correct aspect ratio setting
play, and stop then warped	Cannot insert Disc	Disc already inside unit	Eject the current Disc and insert the new one
	Lost of noise during	AGD	Use a new one in good condition
	play, and stop then	Disc is dirty or wet	Clean the Disc



BOSS Audio Systems
3451 Lunar Court • Oxnard, CA 93030
www.bossaudio.com
805-751-4853 Customer Service
Tech Support: www.bossaudio.com/support



0821

iPod\* and iPhone\* are trademarks of Apple, Inc. registered in the U.S. and other countries. BOSS Audio Systems is not affiliated with Apple, Inc.

The Bluetooth\* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by BOSS Audio Systems is under license.

Other trademarks and trade names are those of their respective owners.



# THIS BOSS AUDIO SYSTEMS HEAD UNIT INCLUDES:

# **PUSH TO TALK**



Our PUSH TO TALK feature allows direct access to Android and IOS smartphones voice assistant capability. Simply connect directly from the receiver via **BLUETOOTH**° with a single push of a button!





BOSS Audio Systems warrants its products purchased in the U.S. against any material or craftsmanship defects in the following categories:

1 Year on Mobile Video, CD/DVD Receivers, Subwoofers, Speakers, Tweeters, ATV/UTV and Motorcycle Sound Systems from date of original purchase. Qualified purchases may receive additional two years (3 years total) when installed by a certified retailer. Proof of purchase is required.

5 Year on Amplifiers. Qualified purchases may receive additional one year (6 years total) when installed by a certified retailer. Proof of purchase is required.

1 Year on all other Electronics and Accessories. There is NO EXTENDED WARRANTY available on these items. Please visit bossaudio.com/policies for more information.

# **Register Your Product Online**



To register your product, scan this QR code with your smart device and fill in the online form. You can also find the online registration form at: www.bossaudio.com/support

Your product may qualify for a FREE EXTENDED WARRANTY.

Please see www.bossaudio.com/policies

for the qualifications and details of this program.

# THANK YOU

Welcome to the BOSS AUDIO SYSTEMS family Proud audiophiles since 1987



# **GET INVOLVED**

# **WE ARE A COMMUNITY!**

We read all product feedback, so please share your experience with us and with others!

# **NEED SUPPORT?**

Our U.S. based Customer Support Team is standing by to help you with your inquiries.

CUSTOMER CARE: (805) 751-4853 & Live Chat ONLINE SUPPORT: www.bossaudio.com/support

# **JOIN OUR COMMUNITY**

Join our #BOSSInsiders Program and have an impact on product updates & releases. Apply at www.bossinsiders.com to test and have an influence on future products.











Stay connected with the BOSS Audio Systems community plus get tips & tricks on products and installs.

@BOSSAudioSystems