Breville

Breville Customer Service Centre

Australian Customers

Mail: PO Box 22

Botany NSW 2019

AUSTRALIA

Phone: 1300 139 798

Fax: (02) 9384 9601

Email: Customer Service:

askus@breville.com.au

New Zealand Customers

Mail: Private Bag 94411

Botany Manukau 2163

Auckland NEW ZEALAND

Phone: 0800 273 845

Fax: 0800 288 513

Email: Customer Service:

askus@breville.com.au

www.breville.com.au

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.

Copyright Breville Pty. Ltd. 2012.

Due to continued product improvement, the products illustrated/photographed in this brochure may vary slightly from the actual product.

BHP150 & BHP250 Issue - A12

Brevile

the Handy Hot Plate™

Instruction Booklet



CONGRATULATIONS

on the purchase of your new Breville product

CONTENTS

- **4** Breville recommends safety first
- **6** Know your Breville product
- 8 Operating your Breville product
- 10 Care & cleaning

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating the appliance and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- The hotplate operates at very high temperatures. Extreme caution should be exercised during operation. Do not touch hot surfaces.
- The temperature of accessible surfaces will be high when the appliance is operating and for some time of use.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not use under curtains or near flammable items. Keep clear of walls for good circulation and to prevent heat damage.
- Always use the appliance on a dry, level, heat resistant surface.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces or become knotted.
- Do not place this appliance on or near a hot gas or electric stove, or where it could touch a heated appliance.

- Do not place metallic objects such as knives, forks, spoons and lids on the hotplate surface as they can become very hot.
- Always turn off at the power outlet and then remove plug before attempting to move the appliance or when not in use or when storing or cleaning.
- Keep the appliance clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- · Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.

BREVILLE RECOMMENDS SAFETY FIRST

- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only.
 Do not use this appliance for anything
 other than its intended use. Do not use
 in moving vehicles or boats. Do not use
 outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.



WARNING

Always keep in mind that the hotplates, after being switched off will continue to radiate residual heat.




WARNING

Do not use these hotplates within reach of young children.

SAVE THESE INSTRUCTIONS

KNOWyour Breville product

KNOW YOUR BREVILLE PRODUCT

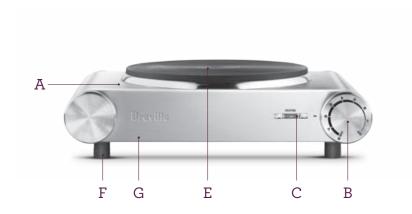





- A. Durable stainless steel surface for easy cleaning
- B. Variable temperature controls with 8 heat settings
- C. On/Off Heating indicator
- D. 16cm diecast iron plate

- E. 19cm diecast iron plate
- F. Non-slip feet
- G. 1600W
- H. 2400W
- I. Cord Wrap

OPERATING

your Breville product

OPERATING YOUR BREVILLE PRODUCT

BEFORE FIRST USE

Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.

Wipe the hotplates with a soft damp cloth and dry thoroughly.

Place hotplate on a dry, level heat resistant surface.

Completely unwind power cord and insert power cord into a 230/240V power outlet. Switch on at the power point.

Place a saucepan, in which the food will be cooked, on the hotplate.

Select the desired temperature setting (from 1-8) using the temperature control dial. The temperature settings are adjustable and can be changed at any time during the cooking.

NOTE

The "heating" indicator light will Illuminate when the hotplate is preheating and cooking. The heating light may cycle on and off during operation. This cycling is normal and indicates that the correct temperature is being maintained.

NOTE

When turned on for the first time, the Breville Hotplate may give off vapours for up to 15 minutes. This is due to the protective substances on the heating elements. There is no need for concern and the vapours will dissipate with use.

NOTE

To achieve optimum performance, ensure the diameter of the cooking pot or pan is no larger than the diameter of the hotplate.

To switch the hotplate off, turn the temperature control dial to the OFF position and turn the power off at the power outlet and unplug power cord.



WARNING

Fully unwind power cord before use. do not allow power cord to come in contact with hot plate. do not move hot plate until it is completely cooled down.



WARNING

Always keep in mind that the hotplates will continue to radiate residual heat after being switched off.



WARNING

No more than 5 litres of water can be boiled at any time. for more efficient performance it is recommended to use a lid when boiling water.

CARE & CLEANING

for your Breville product

CARE & CLEANING FOR YOUR BREVILLE PRODUCT

BEFORE CLEANING

Before cleaning, turn the temperature control dial to the OFF position, turn off at the power outlet and then unplug. Ensure hotplate has completely cooled down before cleaning.

CLEANING

To clean hotplate surface, wipe with a damp cloth. A multi purpose spray cleaner may be used.

If necessary, the exterior of the unit may be wiped with a slightly damp cloth using a mild detergent.

A stainless steel powder cleaner can be used on stubborn stains on the stainless steel surface only. Alternatively, a paste of bicarbonate of soda and water can be rubbed into the stained area and thoroughly washed off.

Do not use abrasives, harsh cleaning solutions or metal scourer pads as continued use will scratch the stainless steel surface and make subsequent cleaning more difficult.

Do not use abrasives or harsh cleaning solutions to clean hotplate surface.

STORAGE

Before storage, turn the temperature control dial to the OFF position, turn off at the power outlet and then unplug.

Ensure the appliance is completely cooled, clean and dry. Store the appliance upright on the bench or in a convenient cupboard.

Do not place anything on top of the appliance during storage.



WARNING

Do not immerse the hotplate or power cord and plug in water or any other liquid.