


# 1 Your mobile .....

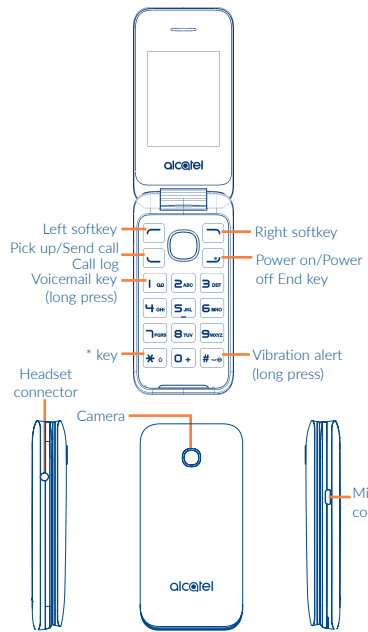

## Quick Start Guide

This product meets applicable national SAR limits of 1.6 W/kg. The specific maximum SAR values can be found on page 24 of this user guide. When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.



**PROTECT YOUR HEARING**  
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

US\_English - CJB1FM002AAA

# 4 Messages .....

**4.1 Create message**  
You can select "Messages/New chat" from the main menu or access from the widget bar and select icon [ ] to create text/multimedia message. You can type a message and you can also modify a predefined message in **Insert template** or customise your message by adding pictures, records, videos, etc (only available while editing a MMS). While writing a message, select "Options" to access all the messaging options.  
For dual SIM model, you can type a message and select to send it to a recipient in either the SIM1 or SIM2 directory.<sup>(1)</sup> One or more recipients can be added from contact list. Press "Contacts" through [ ] key to multi-select recipients from Contacts.

**4.2 Create MMS**  
An SMS will be converted to MMS automatically when images, videos, audio, slides or attachments are inserted.  
An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message. Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

# 5 Contacts .....

**5.1 Consulting your contacts**  
To access the **contacts** from the Home screen, press the [ ] key and select the [ ] icon from the menu.  
For dual SIM model, the complete contacts of both SIM1 and SIM2 are available in this menu.<sup>(1)</sup>  
**5.2 Adding a contact**  
You can add a new contact to phone or SIM card by selecting "Add contact".  
**6 Call log.....**  
**6.1 Access**  
You can access the function using the following options:  
• Select [ ] from main menu  
• Press the send key from main screen  
• For dual SIM model, the contacts of both SIM1 and SIM2 are available in this menu.<sup>(1)</sup>  
**6.2 Available options**  
When you press Options, you can have access to **Details, Call, Write message, Add to Contacts, Add to blacklist, Delete, Delete all, Call timers, GPRS counter**, etc.

**1.1 Keys**  
[ ] Navigation key  
• Press to confirm an option  
• Press to go left/right/up/down  
[ ] Access main menu  
[ ] Pick up/Send a call  
• Press: Enter Call log  
[ ] Access contacts  
[ ] Press: End a call  
• Return to the Home screen  
[ ] Long press: Power on/off  
[ ] Long press: Access your voicemail  
[ ] From Idle screen  
• Press: enter 0  
• Long press: "0/+" and "0/+ /P/W" when in Dial screen.  
[ ] In Edit mode  
• Press: Access symbols table  
• Long press: 0  
[ ] From Idle screen  
• Press: \*  
In Edit mode:  
• Press: Change input methods  
[ ] From Idle screen  
• Press: #  
• Long press: Vibration alert  
In Edit mode  
• Press: (space)

**1.2 Status bar icons**<sup>(1)</sup>  
In 2051X:  
[ ] Battery charge level.  
[ ] Level of network reception.  
[ ] Bluetooth status (Activated).  
[ ] Missed calls.  
[ ] Call forwarding activated: your calls are forwarded.  
[ ] SD card scanning completed.  
[ ] Roaming.  
[ ] Flight mode.  
[ ] GPRS connection status (Activated).  
[ ] Music activated.  
[ ] Radio is on.  
[ ] Headset connected.  
[ ] Alarm or appointments programmed.  
[ ] Receiving an MMS.  
[ ] Sending an MMS.  
[ ] SMS unread.  
In 2051D:  
[ ] Level of network reception.  
[ ] Call forwarding activated: your calls are forwarded.  
[ ] GPRS connection status (Activated).  
[ ] Roaming.

<sup>(1)</sup> The icons and illustrations in this guide are provided for information purposes only.

[ ] MMS unread.  
[ ] Voicemail message arrived.  
[ ] (Flickering) Message is full: your phone can't accept any new message. You must access the message list and delete at least one message on your SIM card or on your phone memory.  
[ ] Vibrate alert: your phone vibrates, but does not ring or beep with the exception of the alarm.  
[ ] Silence mode: your phone does not ring, beep or vibrate with the exception of the alarm.  
In 2051D:  
[ ] Level of network reception.  
[ ] Call forwarding activated: your calls are forwarded.  
[ ] GPRS connection status (Activated).  
[ ] Roaming.

# 11 My files.....

You will have access to all audio and visual files stored in phone or memory card in **My files**. You can access a number of items in **Phone** or **Memory card** with this option: **Alarm, Audio, Photos, Others, Video**, etc.  
**Inserting and removing the memory card:**  
2051X:  
  
2051D:

# 12 Alarm .....

Your mobile phone has a built-in alarm clock with snooze feature.

**1.3 Home screen**  
**1.3.1 Widget bar**  
Widgets are convenient shortcuts for quick access from the Home screen.  
You can customize widget bar by "Settings/Phone settings/Widget bar".  
**1.3.2 Change wallpaper**  
You can select a folder to choose one image as favourite wallpaper by selecting "Options/Set as /Wallpaper" in **My files** or open the picture in **Image** and press [ ] to choose **Set as wallpaper**.

**1.3.3 Home screen**  
**1.3.1 Widget bar**  
Widgets are convenient shortcuts for quick access from the Home screen.  
You can customize widget bar by "Settings/Phone settings/Widget bar".  
**1.3.2 Change wallpaper**  
You can select a folder to choose one image as favourite wallpaper by selecting "Options/Set as /Wallpaper" in **My files** or open the picture in **Image** and press [ ] to choose **Set as wallpaper**.

# 13 Calculator.....

Press the up, down, left, right and OK key to select +, -, ×, ÷ and = respectively. Press [ ] to delete the figure.

# 14 Calendar .....

Once you enter this menu from the main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked.

# 15 Notes .....

You can create a note in text format by accessing "Notes" from the main menu.

# 16 Bluetooth.....

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

# 2 Getting started.....

**2.1 Set up**  
**Removing and installing the back cover**

**Removing and installing the battery**

**Inserting and removing the SIM card**  
SIM1  
  
SIM2

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

# 17 Convertor.....

When select **weight**, You can have a quick check the difference between kg, pound and kg, ounce. Under **length**, you can convert among km and mile, m-yard, m-foot, etc.

# 18 Fake call .....

This program enables you to call yourself by simulating a caller number/name, ringtone at a scheduled time. It helps you to politely escape from social situations at any time you wish. This call can be rejected by [ ] key.

# 19 Call filter.....

Enable blacklist, all callers in the list will be automatically blocked. Enable whitelist, only callers in the list can be connected.

# 20 Wap.....

Access WAP options: Input URL, Bookmarks, History, Offline pages.

**Charging the battery**  
Connect battery charger to your phone and plug into the socket.  
• Charging may take about 20 minutes to start if the battery is out of power.  
• Be careful not to force the plug into the socket.  
• Make sure the battery is correctly inserted before connecting the charger.  
• The mains socket must be near to the phone and easily accessible (avoid electric extension cables).  
• You are advised to charge the battery to its maximum when using the phone for the first time (approximately 3 hours) ( [ ] ).  
• To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth when not in use; reduce the backlight time, etc.  
The charge is complete when the animation stops.

**2.2 Power on your phone**  
Hold down the [ ] key until the phone powers on.

<sup>(1)</sup> 2051D only.  
<sup>(2)</sup> 2051X

**2.3 Power off your phone**  
Hold down the [ ] key from the Home screen.  
**Making an emergency call**  
If your phone is covered by the network, dial emergency number and press the [ ] key to make an emergency call. This works even without a SIM card and without typing the PIN code.  
**3.1 Calling your voicemail**<sup>(1)</sup>  
To access your voicemail, hold down the [ ] key.  
**3.2 Receiving a call**  
When you receive an incoming call, press the [ ] key to talk and then hang up by pressing the [ ] key.  
**3.3 Available functions during the call**  
During a call, you can access your Contacts, Call log, short messages, etc. without hanging up the phone.

<sup>(1)</sup> Contact your network operator to check service availability.

# 3 Making a call.....

Dial the desired number then press the [ ] key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.  
To hang up the call, press the [ ] key.

**Making an emergency call**  
If your phone is covered by the network, dial emergency number and press the [ ] key to make an emergency call. This works even without a SIM card and without typing the PIN code.  
**3.1 Calling your voicemail**<sup>(1)</sup>  
To access your voicemail, hold down the [ ] key.  
**3.2 Receiving a call**  
When you receive an incoming call, press the [ ] key to talk and then hang up by pressing the [ ] key.  
**3.3 Available functions during the call**  
During a call, you can access your Contacts, Call log, short messages, etc. without hanging up the phone.

<sup>(1)</sup> Contact your network operator to check service availability.

# 24 Input mode.....

This mode allows you to type a text by choosing a letter or a sequence of characters associated with a key. Press the key several times until the desired letter is highlighted. When you release the key the highlight character is inserted into the text.

# 21 Profiles .....

With this menu, you may personalise ringtones for different events and environments.

# 22 Settings .....

From the main menu, select the menu icon [ ] and select the function of your choice in order to customise your telephone: **Phone settings, Call settings, Connections, Security, Restore factory settings** <sup>(1)</sup>, **Main SIM settings** <sup>(2)</sup>.

# 23 Services.....

STK service is the tool kit of SIM card. This phone supports the service function. The specific items depend on SIM card and network. Service menu will be automatically added to the phone menu when supported by network and SIM card. Contact your network operator first to check service availability.

<sup>(1)</sup> Make the phone's settings recover to its default value. End-user data will not be erased. Enter its default password 1234 to confirm to restore and reboot.  
<sup>(2)</sup> 2051D only.

