


Panasonic®

Basic Owner's Manual Speaker System

Model No. SC-HTB01

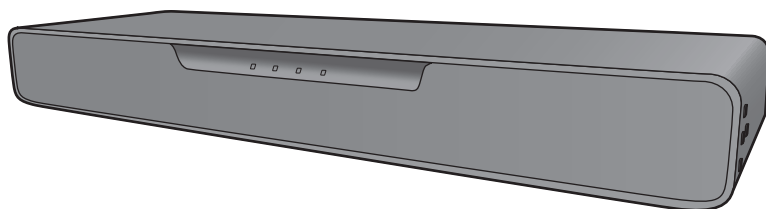

 **SOUND SLAYER™**

Thank you for purchasing this product.

Please read these instructions carefully before using this product, and save this manual for future use.

If you have any questions, visit :

U.S.A.: <http://shop.panasonic.com/support>

Canada: www.panasonic.ca/english/support

Register online at <http://shop.panasonic.com/support> (U.S. customers only)

More detailed operating instructions are available in "Owner's Manual (PDF format)".

To read it, download it from the website.

<https://panasonic.jp/support/global/cs/audio/oi/>



Safety precautions

WARNING

Unit

- To reduce the risk of fire, electric shock or product damage,
 - Do not expose this unit to rain, moisture, dripping or splashing.
 - Do not place objects filled with liquids, such as vases, on this unit.
 - Use the recommended accessories.
 - Do not remove covers.
 - Do not repair this unit by yourself. Refer servicing to qualified service personnel.

AC power supply cord

- To reduce the risk of fire, electric shock or product damage,
 - Ensure that the power supply voltage corresponds to the voltage printed on AC adaptor.
 - Insert the power plug fully into the socket outlet.
 - Do not pull, bend, or place heavy items on the lead.
 - Do not handle the plug with wet hands.
 - Hold onto the power plug body when disconnecting the plug.
 - Do not use a damaged power plug or socket outlet.
- The power plug is the disconnecting device. Install this unit so that the power plug can be unplugged from the socket outlet immediately.

Button-type battery (Lithium battery)

- Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 60 °C (140 °F) or incinerate.



WARNING

**DO NOT INGEST BATTERY,
CHEMICAL BURN HAZARD**

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the remote control and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Avoid the use in the following conditions

- High or low extreme temperatures during use, storage or transportation.
- Replacement of a battery with an incorrect type.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

- **The illustrations shown may differ from your unit.**
- **Operations in this owner's manual are described mainly with the remote control, but you can perform the operations on this system if the controls are the same.**

CAUTION

Unit

- Do not place sources of naked flames, such as lighted candles, on this unit.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- This unit is intended for use in moderate climates.
- Product Identification Marking is located on the rear of the unit.

Placement

- Place this unit on an even surface.
- To reduce the risk of fire, electric shock or product damage,
 - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
 - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
 - Do not expose this unit to direct sunlight, high temperatures, high humidity, and excessive vibration.
- Do not place this unit and other devices (Blu-ray disc recorder, external HDD, etc.) directly on top of each other, as this may cause HDD failure or data damage.

Button-type battery (Lithium battery)

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- Insert with poles aligned.
- Do not touch the terminals (+ and –) with metal objects.
- Do not recharge, disassemble, remodel, heat or throw into fire.
- Keep out of reach of children.
- If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.
- If any electrolyte should come into contact with your eyes, never rub the eyes.
- Rinse eyes thoroughly with water, and then consult a doctor.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
 - Remove the battery if you do not intend to use the remote control for a long period of time. Store in a cool, dark place.
 - Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

AC adaptor

The AC adaptor operates on AC between 100 V and 240 V. But

- In the U.S.A. and Canada, the AC adaptor must be connected to a 120 V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.
- When connecting to a supply of greater than AC 125 V, ensure the cord you use is suited to the voltage of the AC supply and the rated current of the AC adaptor.
- Contact an electrical parts distributor for assistance in selecting a suitable AC plug adaptor or AC cord set.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to peripheral devices. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Supplier's Declaration of Conformity

Trade Name: Panasonic

Model No.: SC-HTB01

Responsible Party: Panasonic Corporation of North America
Two Riverfront Plaza, Newark, NJ 07102-5490

Support Contact: <http://shop.panasonic.com/support>

THE FOLLOWING APPLIES ONLY IN CANADA.

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Model: SC-HTB01

IC: 216A-SCHTB01

CAN ICES-3(B)/NMB-3(B)

THE FOLLOWING APPLIES IN THE U.S.A.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Conforms to UL STD 62368-1.

Certified to CAN/CSA STD C22.2 No.62368-1.

Table of contents

- Safety precautions2
- Accessories3
- Unit care3
- Control reference guide4
- Connections6
- Using this system7
- Bluetooth® connection8
- About Bluetooth®8
- Troubleshooting8
- Specifications9
- Limited Warranty (ONLY FOR U.S.A.) 10
- Limited Warranty (ONLY FOR CANADA) 11
- License Back cover

Accessories

Check the supplied accessory before using this system.

1 Remote control (with a battery)

(N2QAYC000133)

1 AC power supply cord

(K2CA2CA00025)

1 AC adaptor

(TXH0016AA)

- Product numbers are correct as of June 2020. These may be subject to change.
- For U.S.A.: To order accessories, refer to "Limited Warranty (ONLY FOR U.S.A.)".
- For Canada: To order accessories, call the dealer from whom you have made your purchase.
- Do not use AC power supply cord and AC adaptor with other equipment.
- Do not use any other AC power supply cord and AC adaptors except the supplied one.

(ONLY FOR CANADA)

The enclosed Canadian French label sheet corresponds to the English display on the unit.

Unit care

■ Clean this system with a soft, dry cloth

- When dirt is heavy, wring a cloth moistened in water tightly to wipe the dirt, and then wipe it with a dry cloth.
- Never use alcohol, paint thinner or benzine to clean this system.
- Before using chemically-treated cloth, carefully read the instructions that came with the cloth.


■ To dispose or transfer this system

This system may keep the user settings information in this system. If you discard this system either by disposal or transfer, then follow the procedure to return all the settings to the factory presets to delete the user settings.

- The operation history may be recorded in the memory of this system.


Control reference guide

This system (Front / Sides)

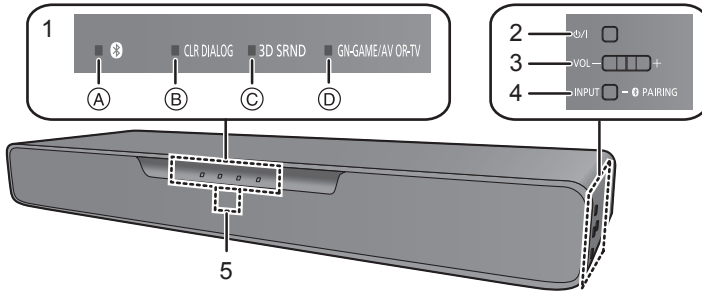

- | | |
|--|---|
| <p>1 LED indicators
The currently-selected device is indicated by the lighting of the corresponding indicator.</p> <ul style="list-style-type: none"> Ⓐ Bluetooth® indicator (lights up blue) Ⓑ CLR DIALOG indicator (lights up green) Ⓒ 3D SRND indicator (lights up green) Ⓓ GN-GAME/AV OR-TV indicator <ul style="list-style-type: none"> – TV: lights up orange (OR) – GAME/AV: lights up green (GN) <p>2 Standby/on switch (⏻/⏻)
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.</p> | <p>3 Adjust the volume of this system (⇔ 5)</p> <p>4 [INPUT / – Bluetooth PAIRING] button</p> <ul style="list-style-type: none"> • Selects the connected device (The device changes each time this button is pressed) • Registers Bluetooth® devices <p>5 Remote control signal sensor</p> <p>Distance: Within approx. 7 m (23 ft) directly in front</p> <p>Angle: Approx. 20° up and down and approx. 30° left and right</p> |
|--|---|

This system (Rear)

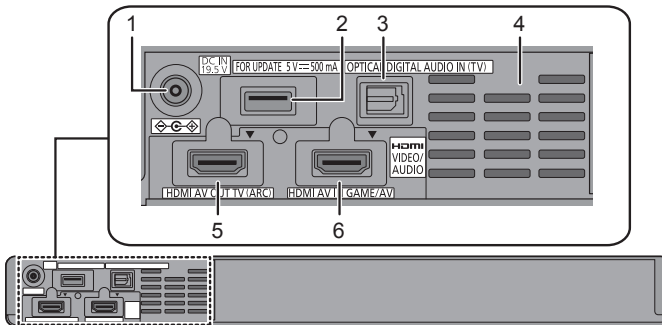


- | | |
|--|--|
| <p>1 DC IN (19.5 V) terminal</p> <p>2 Firmware update (FOR UPDATE 5 V $\overline{\text{---}}$ 500 mA) terminal*</p> <p>3 OPTICAL DIGITAL AUDIO IN (TV) terminal</p> | <p>4 Ventilation holes</p> <p>5 HDMI AV OUT (TV (ARC)) terminal</p> <p>6 HDMI AV IN (GAME/AV) terminal</p> |
|--|--|


* Note about firmware updates

Use the firmware update terminal to update the version of this system through a USB memory device. (Not used for normal operations.) For more details about version updates, refer to the support site below.
<https://panasonic.jp/support/global/cs/>
 (This site is in English only.)

Remote control

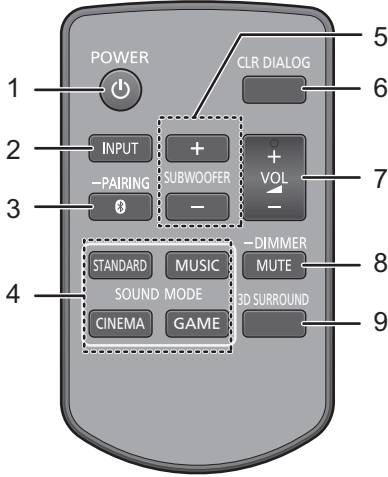

- 1 Turn this system on or off (⇒ 7)
- 2 Select the input source (⇒ 7)
 “GAME/AV” → “TV”
 ↑ “Bluetooth” (Bluetooth®) ↓
- 3 Select the Bluetooth® device as the source (⇒ 7)
- 4 Select the sound mode (⇒ 7)
- 5 Adjust the bass (adjustable in four steps)

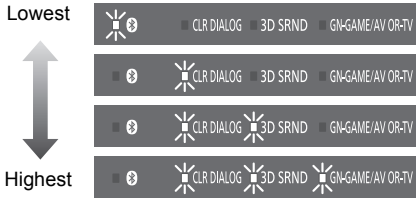

- 6 Turn CLR DIALOG (CLEAR-MODE DIALOG) function on or off
- 7 Adjust the volume of this system (⇒ right)
- 8 Mute the sound (⇒ right)
 - If press and hold this button, switch the brightness of the LED indicators (Dimmer)
- 9 Turn 3D SRND (3D SURROUND) function on or off

■ To mute the sound

Press [MUTE].

- While muting, the CLR DIALOG indicator, 3D SRND indicator, and GN-GAME/AV OR-TV indicator blink simultaneously.
- To cancel, press the button again or adjust the volume.
- Muting is canceled if this system is turned off.


■ To adjust the volume of this system

Press [+ VOL -].

- Each input mode retains a separate volume setting.


■ Before using for the first time

Remove the insulation sheet **A**.

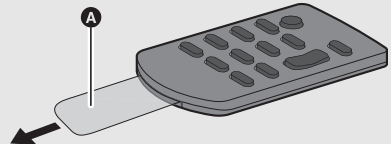

■ To replace a button-type battery

Battery type: CR2025 (Lithium battery)

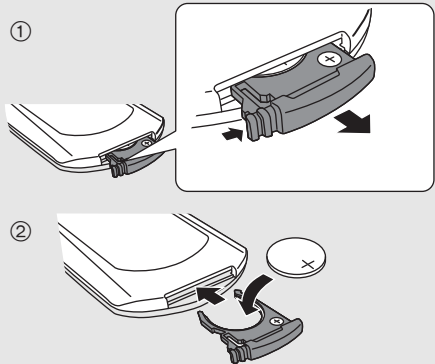

• Set the button-type battery with its (+) mark facing upward.

- The symbols on the supplied remote control represent the following:

⚠ Warning (refer to Operating Instructions for the button cell battery)

<For USA-California only>
 This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material's special handling may apply.
 See www.dtsc.ca.gov/hazardouswaste/perchlorate.


Connections

- Turn off all equipment before connection and read the appropriate operating instructions.

Do not connect the AC power supply cord for this system to the socket outlet until all connections have been completed.

- Purchase an HDMI cable rated as “High-Speed HDMI Cable”. Operation is not possible with a cable that does not meet the HDMI standards.
- This system supports HDR (High Dynamic Range) pass-through of 4K (50p/60p) signals.
 - An HDMI cable that supports 18 Gbps is required to enjoy 4K (50p/60p) HDR content.
- This system supports 3D content.
- When selecting this system from a PC, etc., select “SOUNDSLAYER” as the audio output device.

- Do not place this system directly on top of another device, such as a Blu-ray disc recorder.
- Keep magnetized items away. Magnetized cards, watches, etc., can be damaged if placed too close to this system.
- When connecting with a PC monitor that has a resolution other than Full HD or 4K (WQHD, etc.), connect directly to the PC using a DP cable (A) (optional).

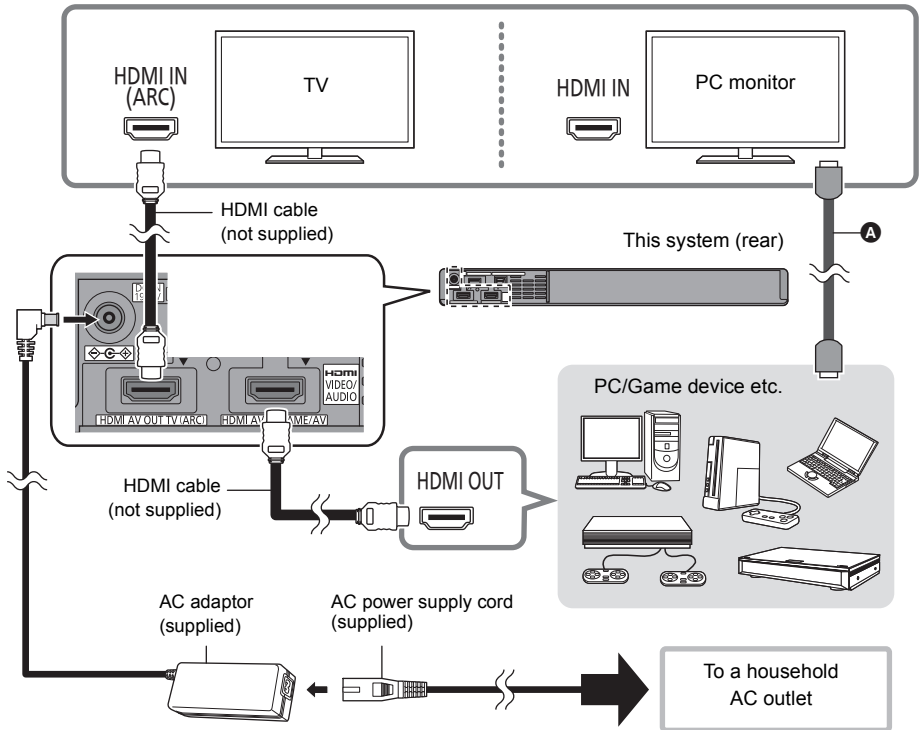


- The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always “live” as long as the AC adaptor is connected to an electrical outlet.
- This system consumes a small amount of AC power (⇒ 9) even when it is turned off. In the interest of power conservation, if you will not be using this system for a long time, unplug it from the household power socket.
- If there is no signal for 20 minutes, this system automatically switches to standby. (Auto Power Down) This function can be turned off. For details, refer to the “Owner’s Manual (PDF format)”.
- The symbols on the supplied AC adaptor represent the following:

~	AC
==	DC
□	Class II equipment (The construction of the product is double-insulated.)

Using this system

Preparation

- Turn on the TV and/or connected device.

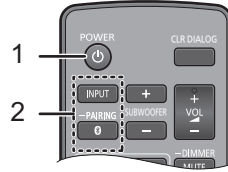

- 1 Press [POWER] to turn on this system.
- 2 Select the source.

Press	To select
[INPUT]	“GAME/AV” → “TV” ← “PAIRING” (Bluetooth®) ←
[PAIRING]	“PAIRING” (Bluetooth®)

■ To select a sound mode

You can change the sound mode by pressing the appropriate button.

- Confirm that the 3D SRND indicator and the GN-GAME/AV OR-TV indicator blink twice.



Switching the [GAME] mode

When you press [GAME], the LED indicators blink and the current mode is displayed. When you press [GAME] again during the setting, the 3D SRND and GN-GAME/AV OR-TV indicators blink twice and the setting changes in the following order:

GAME1 → GAME2 → GAME3 → GAME1 (repeats)

GAME1	Green 3D SRND	Green GN-GAME/AV OR-TV	Mode suited to RPG (role-playing games).
GAME2	Orange 3D SRND	Green GN-GAME/AV OR-TV	Mode suited to FPS (first-person shooter games).
GAME3	Orange 3D SRND	Orange GN-GAME/AV OR-TV	Enhances voices. Mode that makes people's voices easier to hear.

- The setting is maintained until it is changed again.

What is ARC?

ARC is an abbreviation of “Audio Return Channel”, also known as HDMI ARC. It refers to one of the HDMI functions. When you connect the terminal labeled “ARC” and this system, TV pictures and sound can be enjoyed with a single HDMI cable.

- Be sure to connect to the TV’s ARC compatible terminal.

Changing the settings of the PC/ Game device etc.

(The instructions below use a PC as an example.)

To connect this system and the PC with an HDMI cable, you need to change the PC settings to output sound correctly from this system.

- For details, refer to the operating instructions for the PC for details.

- 1 **Connect this system and the PC with an HDMI cable. (⇒ 6)**
 - After connecting this system and the PC, turn them on.
- 2 **Set the PC’s sound output destination to “SOUNDSLAYER”.**

Note

- Confirm that the CEC linking function of each connected device is ON.
- When you connect to a device that does not have the CEC linking function, audio output settings may be required on the connected device.
- Please also follow the steps above after adding a new device, reconnecting to the PC or restoring the default settings.

For more details about other connection methods, refer to the support site below.
<https://panasonic.jp/support/global/cs/>
 (This site is in English only.)

Bluetooth® connection




 



By using the Bluetooth® connection, you can listen to the sound from the Bluetooth® audio device from this system wirelessly.

- Refer to the operating instructions of the Bluetooth® device for further instruction on how to connect a Bluetooth® device.

Preparation




- Turn on the Bluetooth® feature of the device and place the device near this system.

Bluetooth® pairing



- 1 Press [] to select “  ”.**
 - If the “  ” indicator flashes quickly, go to step 3.
- 2 Press and hold [] until the “  ” indicator flashes quickly.**
 - If the “  ” indicator flashes slowly, repeat step 2.
- 3 Select “SOUNDSLAYER” from the Bluetooth® device’s Bluetooth® menu.**
 - If prompted for the passkey on the Bluetooth® device, enter “0000”.
 - Once the Bluetooth® device is connected, the “  ” indicator stops flashing and lights up.

- You can register up to 8 devices with this system. If a 9th device is paired, the device that has not been used for the longest time will be replaced.

Connecting a paired Bluetooth® device

- 1 Press [] to select “  ”.**
 - If the “  ” indicator lights, a Bluetooth® device is already connected with this system. Disconnect it. (⇒ below)
- 2 Select “SOUNDSLAYER” from the Bluetooth® device’s Bluetooth® menu.**

■ Disconnecting a Bluetooth® device

Press and hold [] until the “  ” indicator flashes.

- This system can only be connected to one device at a time.

About Bluetooth®

Panasonic bears no responsibility for data and/or information that is compromised during a wireless transmission.

■ Frequency band used

This system uses the 2.4 GHz frequency band.

■ Certification of this device

- This system conforms to frequency restrictions and has received certification based on frequency laws. Thus, a wireless permit is not necessary.
- The action below are punishable by law in some countries:
 - Taking apart or modifying the unit.
 - Removing specification indications.

■ Restrictions of use

- Wireless transmission and/or usage with all Bluetooth® equipped devices is not guaranteed.
- All devices must conform to standards set by Bluetooth SIG, Inc.
- Depending on the specifications and settings of a device, it can fail to connect or some operations can be different.
- This system supports Bluetooth® security features. But depending on the operating environment and/or settings, this security is possibly not sufficient. Transmit data wirelessly to this system with caution.
- This system cannot transmit data to a Bluetooth® device.

■ Range of use

Use this device at a maximum range of 10 m (33 ft). The range can decrease depending on the environment, obstacles or interference.

■ Interference from other devices

- This system may not function properly and troubles such as noise and sound jumps may arise due to radio wave interference if this system is located too close to other Bluetooth® devices or the devices that use the 2.4 GHz band.
- This system may not function properly if radio waves from a nearby broadcasting station, etc. are too strong.

■ Intended usage

 
- This system is for normal, general use only.
- Do not use this system near equipment or in an environment that is sensitive to radio frequency interference (example: airports, hospitals, laboratories, etc).

Troubleshooting

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated in the following guide do not solve the problem, consult your dealer for instructions.

- More detailed operating instructions are available in “Owner’s Manual (PDF format)”. (⇒ cover)

To return to the factory defaults.

While this system is on, press and hold [] on this system for more than 4 sec. (All the indicators will blink twice when this system is reset.)

For further dedicated help, support and advice about this system please visit:

<https://panasonic.jp/support/global/cs/>
(This site is in English only.)

Specifications

GENERAL

Power supply

DC 19.5 V 3.34 A

(AC adaptor)

AC 100 V to 240 V, ~1.4 A, 50/60 Hz

Power consumption

Approx. 24 W

Power consumption in standby mode

When "Network Standby"* is "OFF"

Approx. 0.22 W

When "Network Standby"* is "ON"

Approx. 0.25 W

Dimensions (W×H×D)

Approx. 430 mm (16 ¹⁵/₁₆") × 52 mm (2 ¹/₁₆") × 130 mm (5 ¹/₈")

(Including protrusion)

Approx. 431 mm (17") × 52 mm (2 ¹/₁₆") × 132 mm (5 ¹/₄")

Mass (Weight)

Approx. 1.8 kg (4.0 lbs)

Operating Condition

Operating temperature range

0 °C to +40 °C (+32 °F to +104 °F)

Operating humidity range

35 % to 80 % RH (no condensation)

AMPLIFIER SECTION

RMS OUTPUT POWER (non-simultaneous drive)

Total RMS OUTPUT POWER 80 W

FRONT SPEAKER (L/R)

25 W+25 W (1 kHz, T.H.D. 10.0 %, 6 Ω, 20 kHz LPF)

SUBWOOFER

30 W (100 Hz, T.H.D. 10.0 %, 3 Ω, 20 kHz LPF)

FTC OUTPUT POWER

FRONT SPEAKER (L/R)

4 W+4 W (1 kHz, T.H.D. 1.0 %, 6 Ω, 20 kHz LPF)

SUBWOOFER

21 W (100 Hz, T.H.D. 1.0 %, 3 Ω, 20 kHz LPF)

Bluetooth® SECTION

Version Bluetooth® Ver. 2.1+EDR

Wireless Equipment Classification Class 1

Supported Profile A2DP

Supported Codec SBC

Frequency Band 2.4 GHz band FH-SS

Operating Distance Approx. 10 m (33 ft) Line of sight

FORMAT SECTION

HDMI

[GAME/AV]

LPCM (Max 7.1 ch)

Dolby® Digital, Dolby® TrueHD,

Dolby Digital Plus™, Dolby Atmos®,

DTS®, DTS® Digital Surround™,

DTS® Digital Surround™ | ES Discrete 6.1,

DTS® Digital Surround™ | ES Matrix 6.1,

DTS® 96/24,

DTS-HD® High Resolution Audio,

DTS-HD® Master Audio, DTS® Express,

DTS:X®

[TV (ARC)]

LPCM (2 ch)

Dolby® Digital, Dolby Digital Plus™,

Dolby Atmos® (Dolby Digital Plus™),

DTS®, DTS® Digital Surround™,

DTS® Digital Surround™ | ES Discrete 6.1,

DTS® Digital Surround™ | ES Matrix 6.1,

DTS® 96/24

Optical digital input

LPCM (2 ch)

Dolby® Digital,

DTS®, DTS® Digital Surround™,

DTS® Digital Surround™ | ES Discrete 6.1,

DTS® Digital Surround™ | ES Matrix 6.1,

DTS® 96/24

Sampling frequency

HDMI

[GAME/AV]

32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz,
176.4 kHz, 192 kHz

[TV (ARC)]

32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz

Optical digital input

32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz

* "Network Standby" means "Bluetooth®" and "VIERA Link" (Control for HDMI function).
When the other connected devices are turned off.

- Design and specifications are subject to change without notice.
- Mass and dimensions are approximate.
- Total harmonic distortion is measured by a digital spectrum analyzer.
- This unit supports "HDAVI Control 5" function.

Limited Warranty (ONLY FOR U.S.A.)

Panasonic Products Limited Warranty

Limited Warranty Coverage (For USA Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Speaker System	1 Year	1 Year
All included Accessories (Except Non-Rechargeable Batteries)	90 Days	Not Applicable
Only Non-Rechargeable Batteries	10 Days	Not Applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

Mail-In Service--Online Repair Request Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at <http://shop.panasonic.com/support>

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid, adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at <http://shop.panasonic.com/support> as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits and Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God. **THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.**

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or

other memory or recorded content. The items listed are not exclusive, but for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to:

Panasonic Corporation of North America
Consumer Affairs Department 8th Fl.
Two Riverfront Plaza
Newark NJ 07102-5490

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Shop Accessories!

for all your Panasonic gear

Go to

<http://shop.panasonic.com/support>

Get everything you need to get the most out of your Panasonic products
Accessories & Parts for your Camera, Phone, A/V products, TV, Computers & Networking, Personal Care, Home Appliances, Headphones, Batteries, Backup Chargers & more...

Customer Services Directory

For Product Information, Operating Assistance, Parts, Owner's Manuals, Dealer and Service info go to <http://shop.panasonic.com/support>

For the hearing or speech impaired TTY: 1- 877-833-8855

As of December 2019

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER _____ SC-HTB01 _____

SERIAL NUMBER _____

User memo:

DATE OF PURCHASE _____

DEALER NAME _____

DEALER ADDRESS _____

TELEPHONE NUMBER _____

Limited Warranty (ONLY FOR CANADA)

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

PANASONIC PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

Panasonic BD/DVD Product - One (1) year, parts and labour

Panasonic Audio Receivers - One (1) year, parts and labour

Home Theater Systems Product - One (1) year, parts and labour

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED

LIMITATIONS AND EXCLUSIONS

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than an Authorized Servicer, or damage that is attributable to acts of God.

Dry cell batteries are also excluded from coverage under this warranty.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

WARRANTY SERVICE

For product operation, repairs and information assistance, please visit our Support page:

www.panasonic.ca/english/support

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton.
Include details of the defect claimed, and proof of date of original purchase.

License

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license.
Other trademarks and trade names are those of their respective owners.

For DTS patents, see <http://patents.dts.com..>
Manufactured under license from DTS, Inc.
DTS, the Symbol, DTS and the Symbol together, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries.
© DTS, Inc. All Rights Reserved.

Manufactured under license from Dolby Laboratories.
Dolby, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.

The product with the Hi-Res Audio logo is conformed to Hi-Res Audio standard defined by Japan Audio Society.
The logo is used under license from Japan Audio Society.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

HDAVI Control™ is a trademark of Panasonic Corporation.

SOUNDSLAYER Logo is a trademark of Panasonic Corporation.

Other system names and product names appearing in this document are in general the registered trademarks or trademarks of the respective developer companies.
Note that the ™ mark and ® mark do not appear in this document.



Panasonic Corporation of
North America

Two Riverfront Plaza, Newark, NJ 07102-5490
<http://shop.panasonic.com>

Panasonic Canada Inc.

5770 Ambler Drive,
Mississauga, Ontario,
L4W 2T3
www.panasonic.com

En