DELUXE ACTIVITY SLEEPER BASSINET



INSTRUCTION MANUAL

27505

STYLES AND COLORS MAY VARY



Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE.

Required Tools: 4 "AA" Batteries (Not included), Screwdriver (Not included)

▲ WARNING

WARNING: Do not use this bassinet if you cannot exactly follow the accompanying instructions. Failure to follow these warnings and instructions could result in serious injury or death.

• Read all instructions before assembling unit.

KEEP INSTRUCTIONS FOR FUTURE USE.

DO NOT USE THIS UNIT IF THE INSTRUCTIONS CANNOT BE STRICTLY FOLLOWED.

Before each usage or assembly, inspect unit for damaged hardware, loose joints, missing parts or sharp edges. NEVER use
this product if there are any loose or missing fasteners, loose joints, broken parts, or torn mesh/fabric. DO NOT substitute
parts. Check before assembly and periodically during use. Contact Delta Children's Products Customer Service Department at
(646) 435-8726 for replacement parts, repair or instructions.

SUFFOCATION HAZARD Infants have suffocated:

- In gaps between an extra padding, a mattress (too small or too thick) and product sides.
- On soft bedding.
- Use only the pad provided by the manufacturer that is no thicker than 25 mm
 (1 in) and is of such a size that, when pushed against any side of the product,
 it does not leave a gap of more than 25 mm (1 in) between the mattress and
 sides.
- NEVER add a pillow, comforter or another mattress for padding.

FALL HAZARD: To help prevent falls, **DO NOT** use this product when the infant begins to push up on hands and knees or has reached 15 lb (6.8 kg) (approximately 5 months of age), whichever comes first.

STRANGULATION HAZARD:

- Strings can cause strangulation! **DO NOT** place items with a string around a child's neck, such as hood strings or pacifier cords. **DO NOT** suspend strings over a product or attach strings to toys.
- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.
- Remove any tools or excess parts including plastic packaging from the bassinet vicinity after assembly.
- Use bassinet with only one child at a time.
- Toys are not to be "mouthed" by the baby and should be positioned clearly out of reach of the baby's face and mouth.
- **DO NOT** place medication, small toys, small items, cords, straps or similar items that could become wound around the child's neck in or near this product and do not place product near a window, patio door, heater, or power outlet.
- **DO NOT** place bassinet near a window where cords from blinds or drapes may strangle a child. Child may fall out of window.
- If a sheet is used with the pad use only the one provided by Delta Children or one made specifically for the dimensions of the bassinet mattress.



Please DO NOT return this product to the store.

If you experience any difficulty with assembly, missing parts or use, please DO NOT return this item to the store. Retail stores are unable to properly assist you. Contact our Customer Service Department directly for assistance (646) 435-8726

www.DeltaChildren.com • gcs@DeltaChildren.com ©2019 Delta Children's Products. Inc. New York, NY 10001



EXTENDED WARRANTY

DON'T MISS YOUR CHANCE TO BE COVERED FOR ALL OF LIFE'S MISHAPS!

With Delta's Extended Warranty, you're covered for mechanical failure from normal use or if your item stops working due to normal wear and tear, plus all those unexpected surprises.


2 YEARS OF PROTECTION

For Additional Information:
Simply visit our Website, register your product, and add the Extended Warranty
https://www.deltachildren.com/pages/product-registration

Extended Warranty only available in the following States: Arkansas, Colorado, Delaware, District of Columbia, Georgia, Idaho, Illinois, Indiana, Iowa, Kansas, Kentucky, Louisiana, Maryland, Michigan, Mississippi, Missouri, Nebraska, Nevada, New Hampshire, New York, North Carolina, North Dakota, Pennsylvania, Rhode Island, South Dakota, Tennessee, Utah, West Virginia

PARTS


IMPORTANT! Please remove all parts from the package and identify them before assembly.

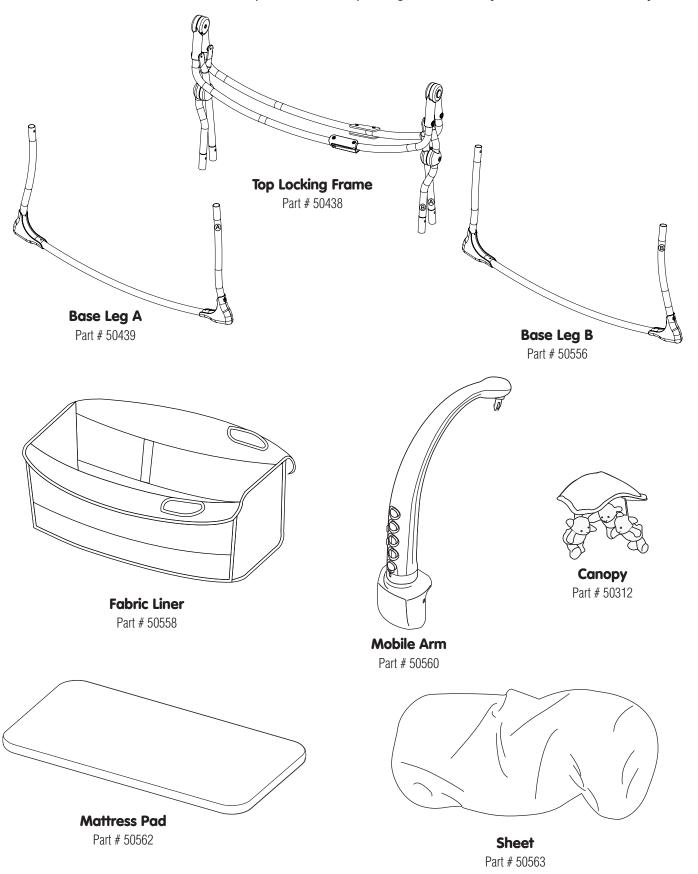



ATTACHING TOP LOCKING FRAME TO BASE LEGS

Open the **top locking frame** by holding the top support tubes until the side joint buttons "click out" in a fully locked position (Fig. 1).

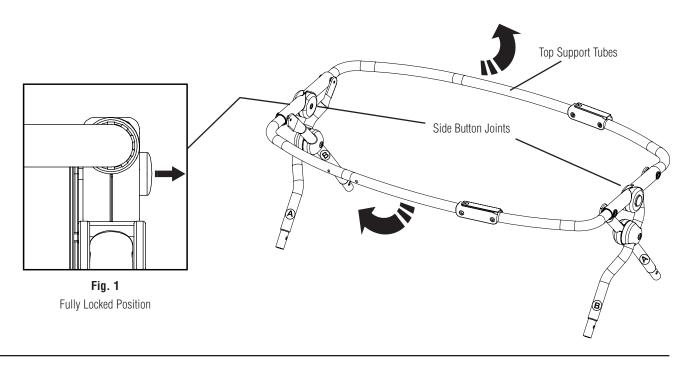


Insert the end of base leg A by lining up the to the top locking frame, until it "clicks" into a fully locked position as shown (Fig 2). The curved side of the base leg should be facing outward.

Top Locking Frame

Fig. 2
Fully Locked Position

Base Leg A


Insert the end of **base leg B** by lining up the **B** to the **B** of the **top locking frame**, until it "clicks" into a fully locked position as shown (Fig. 3). Final base leg assembly should look like (Fig. 4).

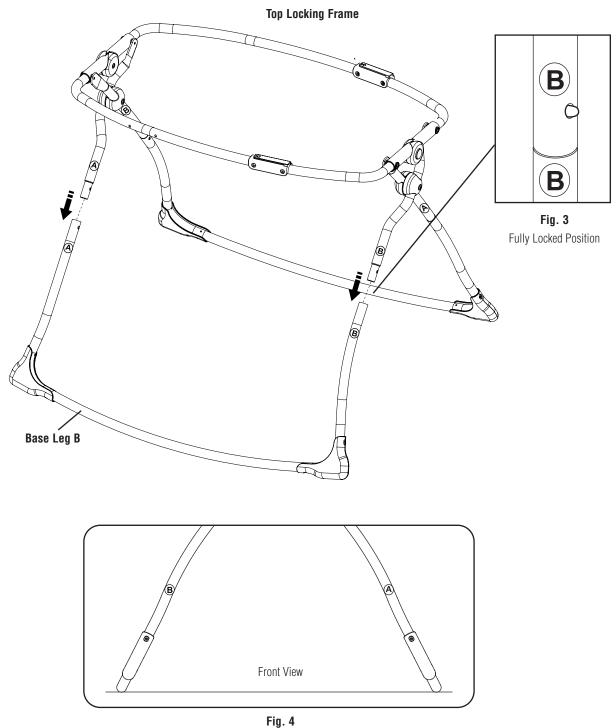


Final Assembly Position

2) ATTACHING FABRIC LINER

Position **fabric liner** so that the mobile arm insert holes align with the mobile arm housing (Fig. 5).

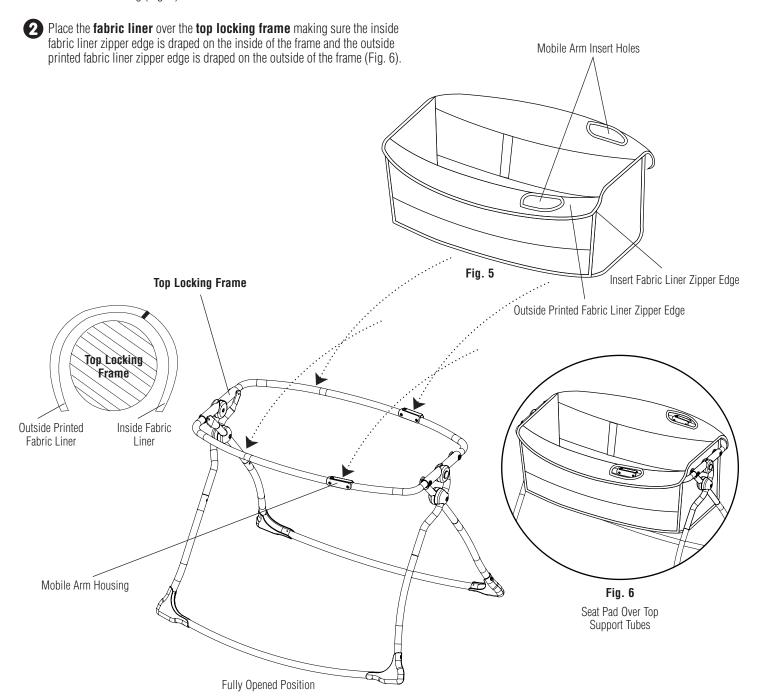


Pull and align the inside fabric liner zipper edge to the outside printed fabric liner zipper edge to allow both edges to be fully zippered closed (Fig. 7). Repeat on other side.

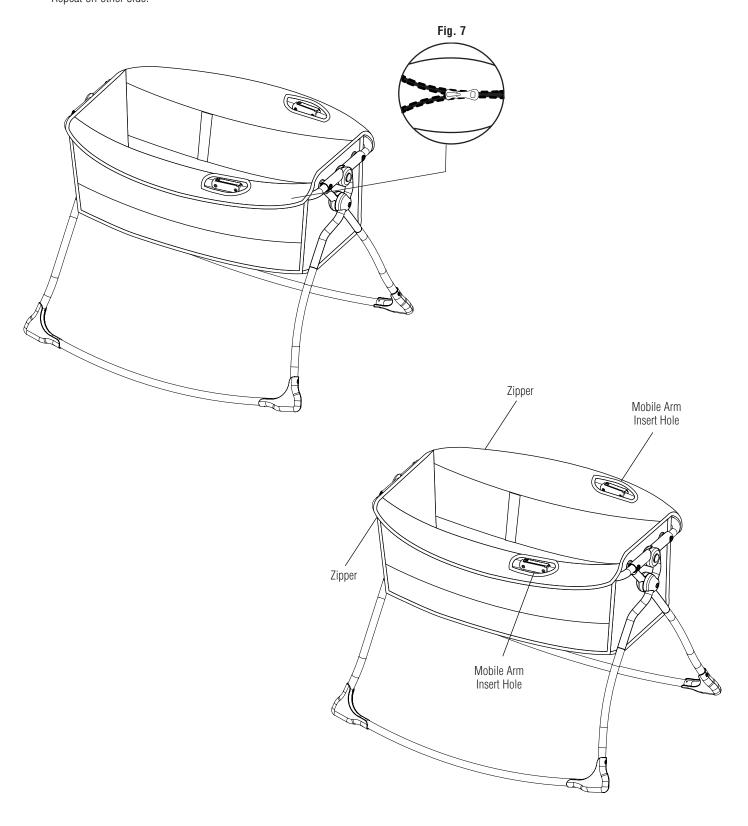




ATTACHING MATTRESS PAD

1 Place the **sheet** over the **mattress pad**.

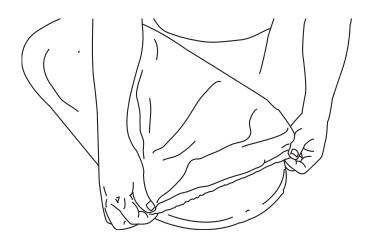


Place the **mattress pad** with **sheet** into the fully assembled bassinet. Make sure the bassinet **mattress pad** is flat.

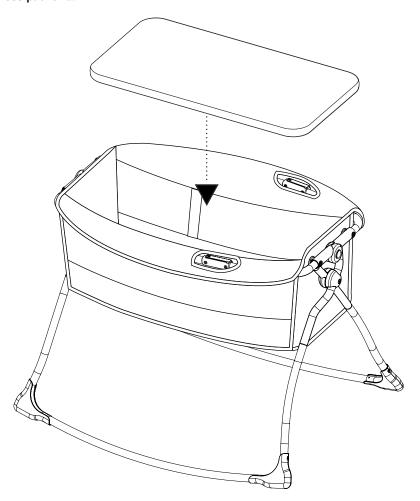



ATTACHING MOBILE ARM

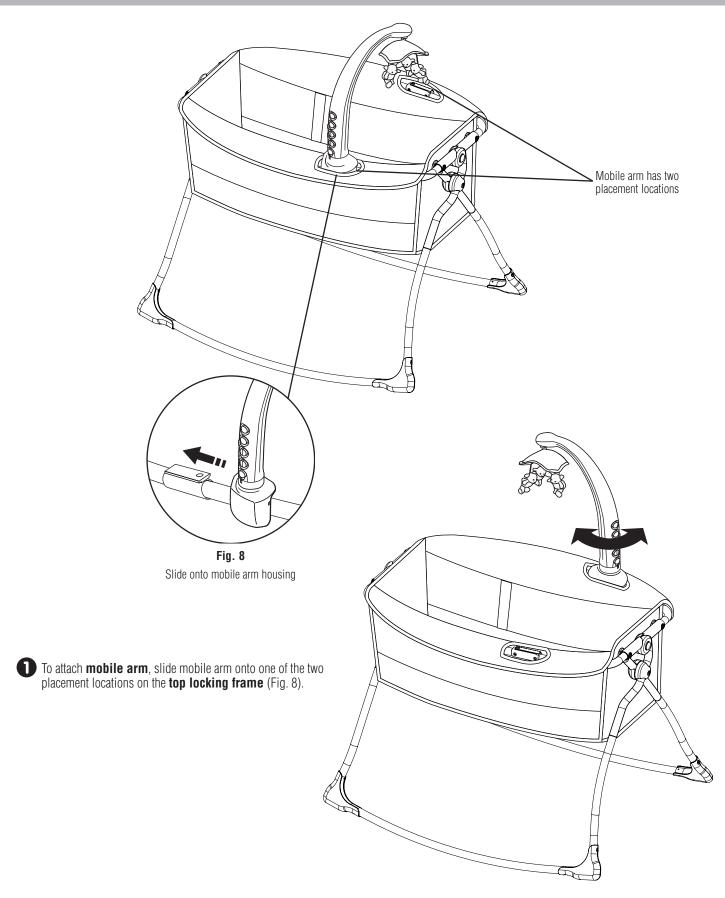




BATTERY INSTALLATION

3

Locate battery compartment on the back of the **mobile arm** base. Loosen screw in battery compartment with Phillips Head screwdriver.

- Lift to remove door. Insert four (4) "AA" alkaline batteries.
- Replace door and tighten screw.

NOTE: We recommend using alkaline batteries for longer battery life.

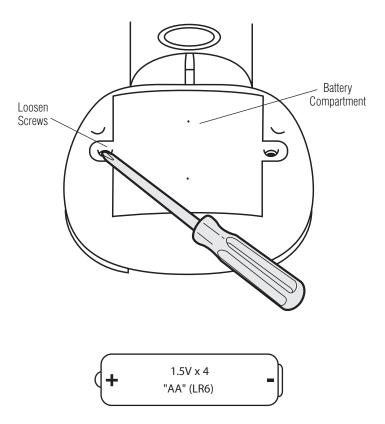

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

MOBILE ARM OPERATION



Mobile Functions On/Off Switch

• Push the Mobile Functions On/Off button at the base of the mobile arm to turn on power. This is the main power switch to the mobile arm and also turns on the power LED on the Night Light button. The LED will stay on in the dark.

Rotate Mobile Toys Button

- Press to begin a 5 minute cycle of rotation.
- Press again to stop the mobile.
- Press to start a new 5-minute cycle. If this button is pressed while mobile is operating, the rotation cycle will restart.

Twinkling Lights Button

- Press to start a 5 minute light show.
- Press again to stop the light show.

Music Button

- Press to start cycle of music.
- Press again to stop the music.

Vibration Button

- Press to start 5-minute cycle of vibration.
- Press again to stop vibration.

Night Light

- Press to turn on mobile light for 5 minutes.
- Press again to turn light off.


Vibration Switch

- Push toward + to increase vibration.
- Push toward to decrease vibration.


Music Volume Switch

- Push toward + to increase volume.
- Push toward to decrease volume.



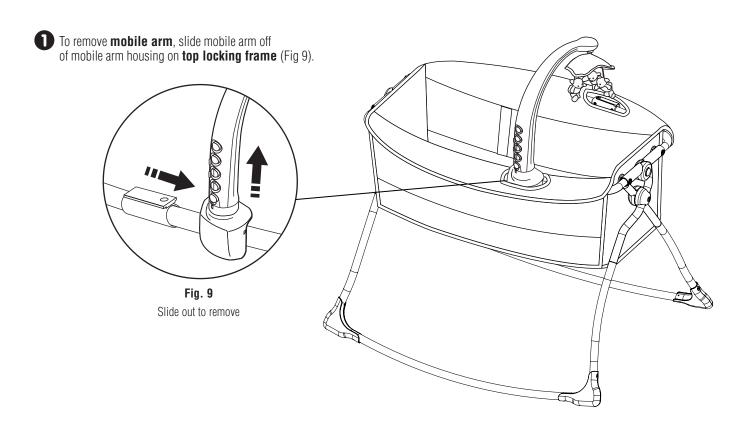


8 REMOVING FABRIC LINER

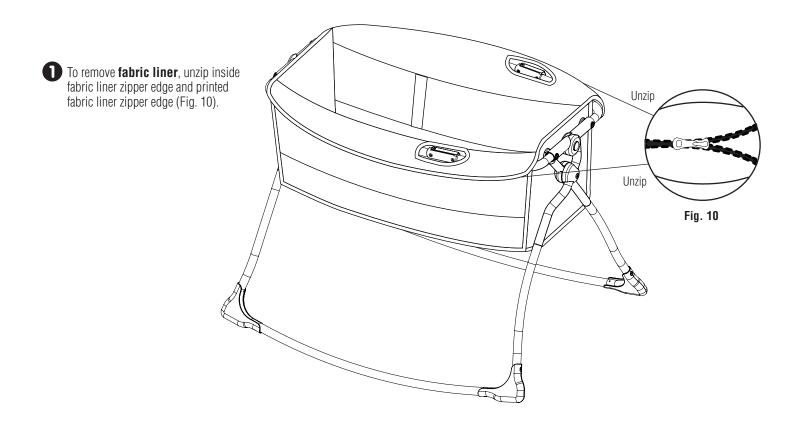



FOLDING SLEEPER WITH OR WITHOUT FABRIC LINER

Press center of the side button joints then lift up (Fig. 11). The top and bottom frame will automatically fold while lifted. NOTE: Sleeper can also be folded with fabric liner attached.

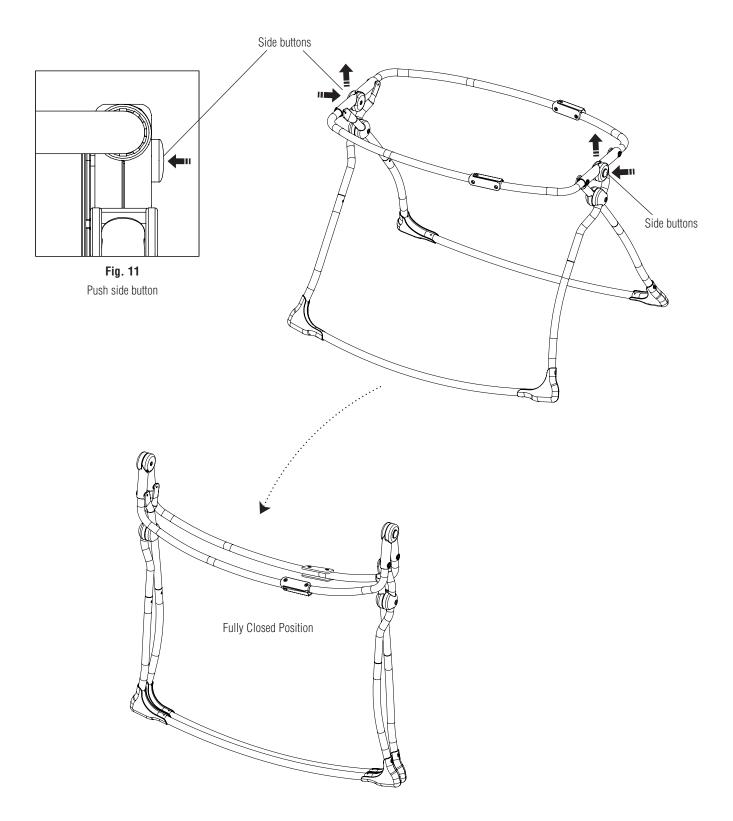




CARE AND MAINTENANCE

- Check Sleeper periodically for worn parts, torn material or stitching. Replace or repair the parts as needed. Use Delta replacement parts.
- The fabric liner and sheet are machine washable. Wash separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- The frame, mattress pad and mobile arm may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse the frame.

Washing Instructions:

- 1. Remove **fabric liner** from bassinet.
- 2. Remove **plastic support** (located underneath fabric liner) and **mattress pad** from fabric liner.
- 3. Remove **sheet** from **mattress pad**.

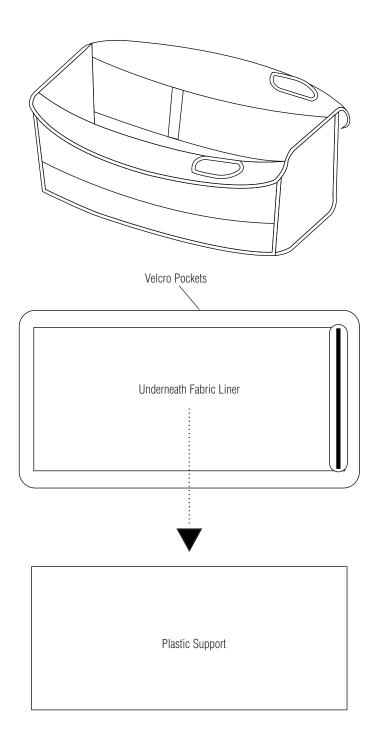



Delta Children

114 West 26th Street New York, NY 10001 (646) 435-8726

www.DeltaChildren.com