

FORD RANGER MONSTER TRUCK



INSTALLATION AND OPERATION MANUAL

Model: DK-MT550
Age Range: 3+ years
Maximum Weight: 35 KGS
**INSTALLATION MUST BE DONE
BY ADULTS.**

AGES 3+



WARNING:
NOT SUITABLE FOR CHILDREN UNDER
3 YEARS. CONTAINS SMALL PARTS.

PLU576985

■ SPARE PARTS LIST



■ INSTALLATION PROCEDURE

1.Installation of wheels

Place a bearing into each wheel.



Remove the nut and flat washer from each shaft, located a wheel on each shaft and then place flat washer followed by nyloc nut. Tighten nut to ensure it is firm. Once assembled attached the silver wheel cover to each wheel.

2.Installation of rear view mirrors



3.Installation of steering wheel



Connect wiring loom for steering wheel
Assemble the steering wheel onto the tube securing with bolt and nut.

4.Installation of window shield




Insert the window shield into holes, and then screw to fix it.

5.Installation of hood



Attach the bonnet to the vehicle by aligning the locators into the grooves.

6.Power connection

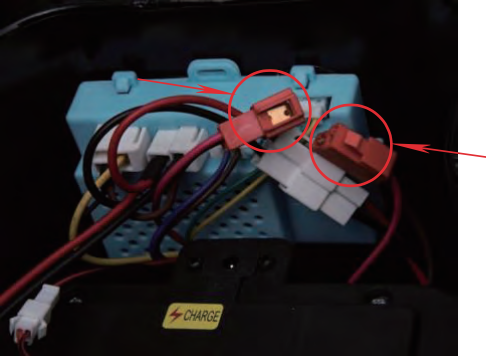

Connect the power wire interface as above picture.

7.Installation of hand rail and searching lights



Connect the wiring loom from roof bar to the vehicle.
Attached the roof bar with lights to the vehicle by locating into grooves.



Insert the handrail hard into the holes to be fixed.

8.Installation of seat



Insert the rotary knobs of the seat into the car, and then screw to be fixed.

SPECIFICATIONS

Item	Specifications
Battery	12V 10AH
Driver Motor	35W x 4
Age	3+
Max. Load Weight	35KG
Size	134 x 105 x 100cm
Speed	3 - 5km/h
Charging Time	8 - 12hours
Remote Controller Battery	2 x AA Battery (not include)
Charger	Input: 100 - 240V
	Output: 12V 1000mA

CHARGING PRECAUTIONS

Battery polarity cannot be reversed, please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal.

- Press the power switch to OFF position to turn the power off.
 - Open the seat,connect the battery plug, red to red.
 - Never drain battery completely or to a crawling speed, recharge the battery when a decrease in speed and power is noticed warranty will be voided if misuse has occurred.
 - Battery charging must be done by adults only. Never allow children to charge the battery. A child could be injured by the electricity involved in charging the battery.
 - Please don't connect the wires to a short circuit.
- The charger and the battery are not a toy. Do not allow children to play with the charger and the battery. Only operate the battery and charger specified according to the manual instructions.
- Please do not open the battery and the charger .
 - To maintain safety of vehicle, always secure the battery with the bracket.
 - The battery must be handled and operated by adults only: the battery is heavy and contains sulfuric acid(electrolyte). Dropping the battery could result in serious injury.
 - Before charging the battery check if wear or damage to the battery, charger, the connectors and other parts. If any damage is found, the charger should be repaired or replaced immediately. Do not use a damaged charger.
 - It is normal for the adaptor to feel warm during charging, but if the charger feels too hot,stop charging immediately and check the battery and adaptor.

When charging turn of the power switch.
Please charge the battery for 8-10 hours after first use.
Subsequent charges should be 6-8 hours but not exceeding 10 hours.
If not being used batteries should still be charged at least once a month to keep the cells active.


1. Plug the charge into the charging socket.
2. Plug the other end of the charger into your wall socket.

Batteries are perishable items that are subject to under and overcharging, please observe the charging times.

TROUBLESHOOTING

Problem: The car will not move

Answer 1: Please make sure the charger has been removed from the car charging point.
Answer 2: The battery is low on charger. Please charger for 6-8 hours but not exceeding 10hours.
Charge at least once a month to keep the cells active.

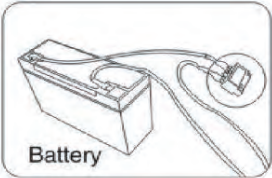

- To avoid fuse cut off the power:
1. Max: 35kgs, overload is forbidden.
 2. Do not drag ay item behind this product.
 3. Do not allow water or other liquids to come into contact with electrical parts the electrical parts.
 4. Do not change electrical wiring from original configuration - only authorised electricians to do so.

Please take the seat away when the car needs to be charged and the battery is under the seat. The battery is removable so that can be charged either inside the car or outside the car.



- Warning**
- For safe driving, please kindly pay attentions to the following warning matters.
 - The product must be assembled and adjusted by adult, please keep children away from moving parts.
 - This product is suitable to children aged 36+ months due to internal small parts.
 - During driving, a child must be fixed by seat belt properly. Do not close to an fire!
 - Any child must be supervised by adult while using the product and such the adult caregiver should not leave during driving process.
 - The battery must be charged only by adult. Please charge the product before using!
 - To avoid any harm to children, please keep plastic bags and other packaging materials away from children! Such the materials may cause suffocation!
 - It is prohibited to use any parts from other manufacturers.
 - The charger should not be played as a toy.
 - The vehicle maximum load weight is 35KG, and please do not use on overload,
 - The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process.
 - This toy does not include brakes.
- Warning: batteries for remote controller**
- Instructions for remote controller batteries.
 - All batteries should be inserted with the correct polarity.
 - Non-rechargeable battery should not be charged, please remove any running-off battery from the toy.
 - Do not use old and new batteries together, or mix different types of batteries. Power terminals should not be short-circuited.
 - Any rechargeable battery must only be charged under adult's supervision. Rechargeable batteries should be removed from the toy before charging.
 - Exhausted batteries are to be removed from the toys.

TROUBLESHOOTING

Problem: The car only runs for a short time

Answer 1: The battery is low on charge. Please change for 6-8 hours but not exceeding 10 hours.
Change at least once a month to keep the active.
Answer 2: Battery ageing.
The battery may need to be replaced depending on it's charging history and age.

Problem: The sounds do not work

Please ensure the volume is turned up and the MP3 lead is not connected. The steering wheel sounds will not work when the MP3 is plugged into the car.

Problem: Charger overheating


It is normal for the battery and charger to warm slightly during Charging, if they feel excessively hot then please check for a current overload or battery short circuit.

- Warning: Vehicle must be charged fully before use.**
- Please read manual carefully before use.
 - Adult assembly required.
 - This toy have no brake.
 - Not to be used in traffic.
 - Always wear a helmet and protective clothing when riding.
 - Adult supervision is required at all times.
 - Plsease keep the manual and packing for future reference as it contains important information.
 - The instructions for used should bear a reminder that the toy should be

used with caution since skill is require to avoid falls or collisions causing injury to the user or third parties.

SAFETY PRECAUTIONS

1. While riding, adult supervision is required all the time.
2. Always wear a helmet when driving.
3. Please dont drive near road or on the footpath.
- 4.It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
5. It is recommended to drive this vehicle on smooth surface only.
6. Please dont driving this vehicle outdoors when it is raining.
7. Make sure that the vehicle stop completely before changing direction from forward to reverse
8. Please dont allow children to operate the charger or play with the battery
9. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children around safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please dont let any child touch the wheels or be near them when the car is moving.
20. Please mind fingers in opening and closing doors.

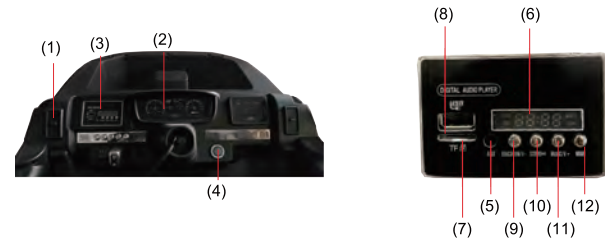

1. Imitation of air conditioner	9. Education/
2. Dashboard	Volume decrease
3. Multi-function display	10. Story
4. Key switch	11. Volume increase
5. MP3	12. Mode
6. Display	
7. TF socket	
8. USB socket	



1. Press the music button on the steering wheel for horn or music.
2. Attach the MP3 lead to your advice to play or own music through the car. Please note the steering wheel sounds wheel not work when the MP3 lead is connected.

USE INSTRUCTION

How to use the remote control?

- Car_select is required for the first time(or replace the battery)
Step 1: Installing the remote control batteries, and the speed indicators will flash continually.
Step 2: Press the Car_select key for about 2 seconds, the Car_select lamp will flash. Power on the car immediately.
Step 3: The Car_select lamp will off if successful, else repeat step 2.


Operation:

1. Speed Selection:
LOW speed: Only one lamp flashing;
MED speed: Two lamps flashing;
HIGH speed: Three lamps flashing. Each owns slow start and stop.

2. Press the STOP key will stop the car; Other keys like it meant.
3. The remote control will power off after 15's without operating, any key will power on.



Entertainment function guide

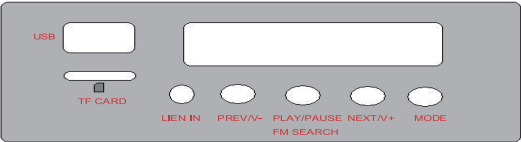

Story/V-: Mode of Story/V-
Pressing slightly and it will be prior music or broadcast channel. Pressing for a longer time and it will lower the volume.

Music/V+: Mode of Music/V+
Pressing slightly and it will be next music or broadcast channel. Pressing for a longer time and it will higher the volume.

Song/XX: Mode of Songs
Pressing longer and it will search broadcasting station automatically.

Education: Earlier education

Mode: Radio, Bluetooth, SD Card, MP3, USB connector

Speaker: Horns of cars