 


User Manual
Stylus Pen
202K-3-D-US

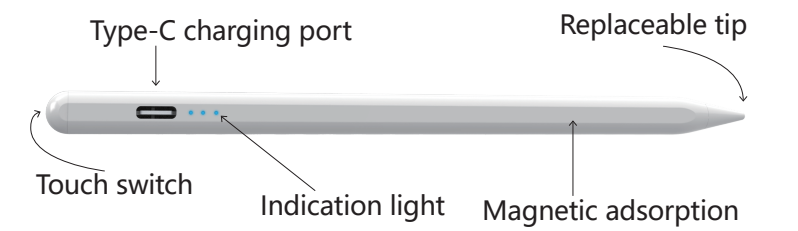

Product Specifications




Parameter

Product dimensions	Pen head Φ1.66mm x Pen body Φ9.1mm
Battery capacity	DC3.7V/130mAh
Charging voltage/ current	DC5V/1A
Charging maximum input voltage	DC5.5V
Charging time	15 mins
Continuous time	10 hours
Compatible devices	iPads 2018 and later (iOS 12.2 or above)
Packaging accessories	TYPE-C charging cable+ Instruction manual

Quick Guide

 - (1) Switch on
Touch the touch switch for 2 seconds, the indicator light will stay on.
- (2) Switch off
Double-click to touch the switch area, the red indicator light flashes twice, then the indicator lights will go out to shut down. Or automatically shut down after 5 minutes of inactivity.
- (3) Remaining battery display
The stylus pen will display the remaining battery through 3 indicator lights.



- (4) Charging
During the charging process, the blue charging indicator lights up and flashes. Charging time is about 15 minutes. After the charging is completed, the blue charging indicator light no longer flashes.
- (5) No need to connect Bluetooth & APP
No need to connect Bluetooth or APP before use, just long touch the top for 2 seconds to start to use easily.
- (6) High sensitivity and pixel-perfect precision
Stable performance. Precise pointing during use, low latency writing.

Applicable Model

iPad 2022 (10th gen) A2757/ A2777/ A2696
iPad 2021 (9th gen) A2602/ A2603/ A2604/ A2605
iPad 2020 (8th gen) A2428/ A2429/ A2270/ A2430
iPad 2019 (7th gen) A2197/ A2198/ A2200
iPad 2018 (6th gen) A1893/ A1954
iPad Air (5th gen) A2588/ A2589/ A2591
iPad Air (4th gen) A2316/ A2324/ A2325/ A2072
iPad Air (3rd gen) A2152/ A2153/ A2154/ A2123
iPad Mini (6th gen) A2567/ A2568/ A2569

 
iPad Mini (5th gen) A2124/ A2125/ A2126/ A2133
iPad Pro 11 inches (2018 - 2022)
A1980/ A2013/ A1934/ A1979/ A2228/ A2068/ A2230/ A2231/ A2377/ A2459/ A2301/ A2460/ A2435/ A2761/ A2762
iPad Pro 12.9 inches (2018 - 2022)
A1876/ A2014/ A1895/ A1983/ A2229/ A2069/ A2232/ A2233/ A2378/ A2461/ A2462/ A2379/ A2437/ A2764/ A2766

Not work with

iPad Pro 12.9 inch (1st gen & 2nd gen) A1584/ A1652/ A1670/ A1671/ A1821
iPad Pro (10.5 inch) A1701/ A1709/ A1852
iPad Pro (9.7inch) A1673/ A1674/ A1675
iPad Air (1st gen & 2nd gen) A1474/ A1475/ A1476/ A1566/ A1567
iPad mini (1st/ 2nd / 3th / 4th gen)
A1432/ A1454/ A1455/ A1489/ A1490/ A1491/ A1599/ A1600/ A1538/ A1550
iPad 2010 (1st gen) A1219/ A1337
iPad 2011 (2nd gen) A1395/ A1396 / A1397
iPad 2012 (3rd gen & 4th gen) A1416/ A1430/ A1403/ A1458/ A1459/ A1460
iPad 2017 (5th gen) A1822/ A1823
[Note] Not work for earlier versions of iPad, iPhone, Android, and Microsoft devices. Please confirm the above models before purchase. Other models are invalid.


How to Check the Model

- (1) Setting > General > About Model > Number
- (2) Please confirm on the back of iPad device.

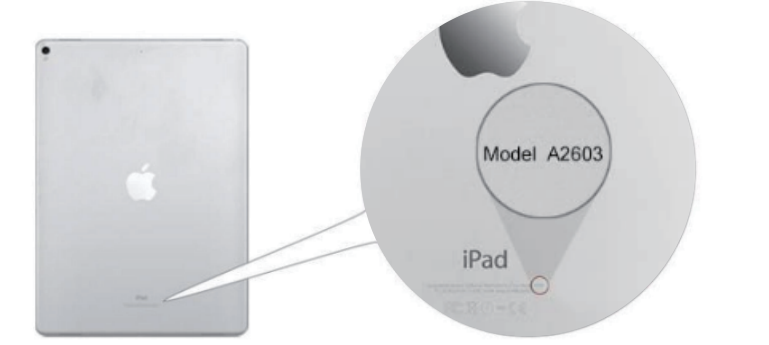

How to Replace the Pen Tips

 - (1) Rotate to the left to remove the tip gently.
- (2) Rotate to the right to install the new tip gently, and please confirm the tip is tight enough.



Attention

- (1) If your iPad has ever used the 【Apple Pencil】 over a Bluetooth connection, which prevents any other stylus from being used with the touchscreen, please forget the Apple Pencil on Bluetooth and turn off the Bluetooth.
- (2) If you cannot use handwriting when using the Apple Pen, please set up on the iPad according to the situation:
a. Go to Settings > Apple Pencil > Turn off "Only Draw with Apple Pencil"
b. Settings > Notes > Turn off "Only Draw with Apple Pencil"
- (3) Please keep your iPad screen dry and clean, water damage or dirt may cause disconnection or delay.
- (4) If your stylus pen become lag, jumper wires, and scratches. Please check whether the nib is not tightened enough, or reinstall the new nib several times.
- (5) We don't recommend you use the pen while your iPad is charging, which may cause break & disconnect issues.
- (6) All iPad IOS systems must be updated to iOS 12.2 or above.
- (7) It has better using experience if used with the tempered glass screen protector. Please do not use thick screen protector because it may affect the sensitivity of stylus.


Care and Maintenance

- 1. Please charge stylus pen by DC5V charger. Do not use fast charger for charging, the instantaneous high voltage of the charger may damage the stylus.
- 2. Please don't let infants play with it. Children should use it under the supervision of adults to avoid swallowing small parts (like nib) of the stylus by mistake.
- 3. To ensure the stylus pen work well, please avoid dropping it from high places and keep it away from hot and humid environments.
- 4. Since the stylus pen has a built-in lithium-ion polymer battery, if you want to dispose of a damaged stylus pen, please follow local laws and ensure environmental protection.

How to Charge



 (FIG 1)

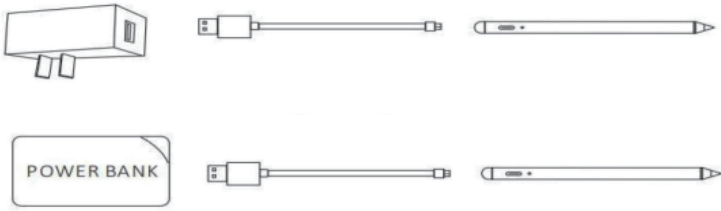

Before first use, please fully charge to ensure the battery life. You can charge it by the attached type-C cable to connect the computer, power bank, or USB chargers.

Seller Warranty Policy

If you have any questions during use, please feel free to contact us!
24-hour On-line Customer Service
-- Email : cooshopping@hotmail.com
-- Go to Amazon Order page
-- [Your orders] -[sold by]-[Contact Seller]