

TP-Link Archer C7 Teardown

Teardown of the the TP-Link Archer C7.

Written By: Lee Hunt



INTRODUCTION

The TP-Link Archer C7 is an AC1750 router for your

internet.



TOOLS:

Pro Tech Toolkit (1)

Step 1 — Antennae Removal







Remove the 3 antennae.

Step 2 — Screw Removal





- There are 4 Philips head screws
- Remove the 4 screws

Step 3 — Top removal



 Remove with a pry tool or your hand.

Step 4 — Results



• The teardown is complete!