

Safety Information

Install your camera

(0)

please refer to the following instructions:

The device can be placed upright on a desktop for use.

. When you need to mount or hang the device on a wall,

- Mounting Surface

Wall Anchors

- Wall Plate

- Camera

Wall Screws

appropriate position.

the installation surface.

05

the hole.

1. Use the installation sticker to

locate and drill holes in the

2. Hammer the expansion bolt into

3. Use the installation screw to

secure the quick installation plate to

4. Align the camera with the quick

installation plate and rotate to fix it.

1. During transportation, storage, and installation, please prevent damage to the product caused by heavy pressure, severe vibration, and immersion, etc.

2. Please use the power adapter that comes with the product to power the device.

3. Do not disassemble the camera yourself to avoid danger or damage to the camera.

4. This model cannot be installed outdoors (including but not limited to corridors, eaves, and courtyards with roofs).

5. Do not place the camera in places with oil fumes, extreme

temperatures, long-term direct sunlight, or a lot of dust. 6. Do not expose the device to rain or use it in wet environments near water.

7. Do not aim the camera at strong light (spotlights, direct sunlight) when using it, as it may reduce the life of the photosensitive element.

8. The camera's pan-tilt rotation is operated on the app side. Do not manually rotate the camera's pan-tilt to avoid damaging the motor.

9. When cleaning the camera, you can use a soft cloth dipped in water (or professional lens cleaner) to gently wipe the lens, and then use a dry soft cloth to wipe it dry.

10. This product packaging contains plastic bags and small parts. To avoid danger, please keep the product packaging away from infants and young children.

06

Warranty Services

Thank you for choosing our product. In order for you to fully enjoy our comprehensive after-sales support, please read carefully and keep safe the warranty card upon purchase.

The user can exchange the product for free within 7 days from the date of purchase if there is a quality issue, and the warranty period is one year.

- The following are not covered by the warranty: · Inability to present a valid warranty certificate and
- purchase receipt. Product malfunction due to inappropriate environment
- or conditions, such as unsuitable power supply,
- temperature, humidity, lightning, etc.
- · Product malfunction caused by accidents, negligence, disasters, improper operation or misuse, cyber attacks, etc. Malfunction or damage caused by unauthorized

personnel who are not authorized by the company to

- install, repair, modify or disassemble the product. • The product is beyond the warranty period specified by
- the company. For more questions or suggestions, please visit our official website at www.eapil.com or send an email to support@camtells.com.

07

Hazardous Element Declaration Table

Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CrVI)	Polybrominated Biphenyls (PBB)	Polybrominate Diphenyl Ethers (PBDE
Metal parts	×	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Printed circuit boards	×	0	0	0	0	0
Sheet metal parts	×	0	0	0	0	0
Lenses	×	0	0	0	0	0
Power supplies	×	0	0	0	0	0

indicates that the content of the restricted substance in at

least one homogeneous material of the component exceeds

08

specified in the SJ/T 11363-2006 standard.

the limit specified in the SJ/T 11363-2006 standard.

Camtel

app guides.

Warranty Card

Date of Sale: Distributor:

User Name: Contact Number:


Email Address:

User Address:

This warranty card is issued by Chengdu Eapil Technology Co., Ltd.

Get the app

Download the free Camtells app to get started.

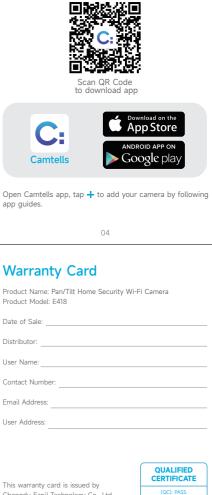

09