

REMOTE CONTROLS COMPATIBILITY CHART



MANUFACTURER	CAMERA MODEL	REMOTE CONTROLS										NOTES		
		MVR901ECP	MVR901ECLA	MVR901EPLA	MVR901ECCX	MVR901EPCX	MVR901ECCN	MVR901EPCN	32AV	32AV	32AV			
SONY	PMW-150													
SONY	PMW-200													
SONY	PMW-300													
SONY	PMW-EX200													
SONY	PMW-EX3													
SONY	PMW-EX1R													
SONY	PMW-EX1													
SONY	FXW-X200													
SONY	FXW-F55	+L												
SONY	FXW-F55 Mark II	+L												
SONY	FXW-F57	+L												
SONY	FXW-F57 Mark II	+L												
SONY	FXW-FX9	+L												
SONY	FXW-Z90	+L												
SONY	FXW-Z150	+L												
SONY	FXW-Z190	+L												
SONY	FXW-Z280	+L												
SONY	HXR-MC1000	+L												
SONY	HXR-MC2500	+L												
SONY	HXR-MC50	+L												
SONY	HXR-MC88	+L												
SONY	HXR-NX50	+L												
SONY	HXR-NX3D1	+L												
SONY	HXR-NX3	+L												
SONY	HXR-NX5	+L												
SONY	HXR-NX6R	+L											(3*)	
SONY	HXR-NX70	+L											(3*)	
SONY	HXR-NX80	+L											(3*)	
SONY	HXR-NX100	+L											(3*)	
SONY	HXR-NX200	+L											(3*)	
SONY	ILME-FX6	+L												
SONY	NEX-EA50	+L											(2*)	
SONY	NEX-FS100	+L											(2*)	
SONY	NEX-FS700	+L												
SONY	NEX-VG20	+L												
SONY	NEX-VG10	+L												
SONY	NEX-VG800	+L												
SONY	HVR-A1	+L												
SONY	HVR-HD1000	+L												
SONY	HVR-S20	+L												
SONY	HVR-V1	+L												
SONY	HVR-Z5	+L												
SONY	HVR-Z7	+L												
SONY	HVR-Z1	+L												
SONY	HDR-AX2000	+L												
SONY	HDR-FX1	+L												
SONY	HDR-FX2	+L												
SONY	HDR-FX1000	+L												
SONY	DSR-PD735P	+L												
SONY	DCR-V1000	+L												
SONY	DCR-SR6x	+L												
SONY	DCR-SKx (except DCR-SK2E)	+L												
SONY	DCR-SKx	+L												
SONY	DCR-VX2000	+L												
SONY	HDR-SR6x	+L												
SONY	HDR-T6x	+L												
SONY	HDR-T6EV	+L												
SONY	HDR-XR6x	+L												
SONY	HDR-LX10	+L												
Canon	EOS C100	+L												(4*)
Canon	EOS C100/C200B	+L												(4*)
Canon	EOS C100 Mark II	+L												(4*)
Canon	EOS C300	+L												(4*)
Canon	EOS C300 Mark II	+L												(4*)
Canon	EOS C300 Mark III	+L												(4*)
Canon	EOS C500	+L												(4*)
Canon	EOS C500 Mark II	+L												(4*)
Canon	EOS C700/C700PL	+L												(4*)
Canon	EOS C700 G5-PL	+L												(4*)
Canon	EOS C700 FF-PL	+L												(4*)
Canon	XF100	+L												
Canon	XF105	+L												
Canon	XF200	+L												
Canon	XF205	+L												
Canon	XF300	+L												
Canon	XF305	+L												
Canon	XF400	+L												
Canon	XF405	+L												
Canon	XF605	+L												
Canon	XF705	+L												
Canon	XA10	+L												(5*)
Canon	XA11	+L												(5*)
Canon	XA15	+L												(5*)
Canon	XA20	+L												(5*)
Canon	XA25	+L												(5*)
Canon	XA30	+L												(5*)
Canon	XA35	+L												(5*)
Canon	XA40	+L												(5*)
Canon	XA45	+L												(5*)
Canon	XA50	+L												(5*)
Canon	XA55	+L												(5*)
Canon	XL H15	+L												
Canon	XL H1A	+L												
Canon	XH A1/A15	+L												
Canon	XH G1/G15	+L												
Canon	XL H1	+L												
Canon	XMA1/XMA2	+L												
Canon	GL1/GL2	+L												
Canon	HF-G25	+L												
Canon	HF-G30	+L												
Canon	HF-G40	+L												
Canon	EOS 1Dx													
Canon	EOS 6D													
Canon	EOS 5D m/III													
Canon	EOS 5D m/II													
Canon	EOS 70D													
Canon	EOS 60D													
Canon	EOS 1D m/IV													
Canon	EOS 7D													
Canon	EOS 600D													
Canon	EOS 550D													
Canon	EOS 500D													
Panasonic	AG-SDX1	+P												(6*)
Panasonic	AG-SP91	+P												(6*)
Panasonic	HDC-210000	+P												(6*)
Panasonic	AG-AC30	+P												(6*)
Panasonic	AG-AC130/130A	+P												(6*)
Panasonic	AG-AC100/100A	+P												(6*)
Panasonic	AG-AC90	+P												(6*)
Panasonic	AG-AF100/100/100A	+P												(6*)
Panasonic	AG-CX30	+L												(7*)
Panasonic	AG-CX350	+L												(7*)
Panasonic	AG-HMC150/151/150P1	+P												(6*)
Panasonic	AG-HMC40/41/40P1	+P												(6*)
Panasonic	AG-HMC60/61/60P1	+P												(6*)
Panasonic	AG-HPX250/251/250P1	+P												(6*)
Panasonic	AG-HPX270P1	+P												(6*)
Panasonic	AG-HVX200/201/200A/201A	+P												(6*)
Panasonic	AG-HPX375	+P												(6*)
Panasonic	AG-DVX100	+P												(6*)
Panasonic	AG-DVX200	+P												(6*)
Panasonic	AG-DVC30													