

 
Television

Téléviseur

Televisor digital a color con pantalla de cristal líquido


Reference Guide

Manuel de référence / Guía de referencia

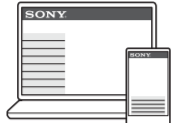

https://rd1.sony.net/help/tv/kusnrn1/h_usltrn/

 KD-85X77L / 85X77CL / 75X77L
 KD-75X77CL / 65X77L / 65X77CL
 KD-55X77L / 55X77CL / 50X77L
 KD-43X77L

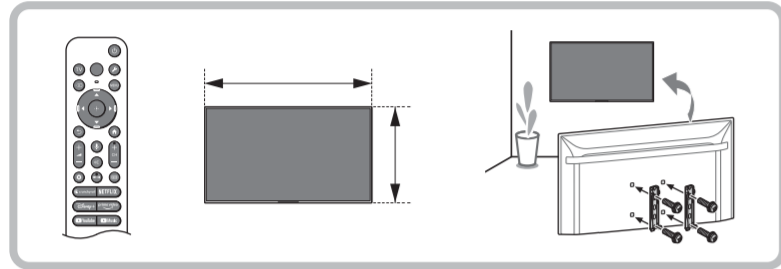

Read this manual before using this product

Lisez ce manuel avant d'utiliser le produit

Lea este manual antes de usar el producto

Sony Customer Support

U.S.A.: <https://www.sony.com/tvsupport>
 Canada: <https://www.sony.ca/support>

United States 1.800.222.SONY
 Canada 1.877.899.SONY

Call the telephone number that appears on your warranty card/policy. Please do not return the product to the store.

Service à la clientèle Sony

Canada: <https://www.sony.ca/support>
 États-Unis: <https://www.sony.com/tvsupport>

Canada 1.877.899.SONY
 États-Unis 1.800.222.SONY

 
Appelez le numéro de téléphone qui apparaît sur votre carte/police de garantie.

Ne retournez pas le produit au magasin.

Centro de Asistencia de Sony

<https://esupport.sony.com/ES/LA/>
 Llame al número de teléfono que aparece en su tarjeta/pólice de garantía.

Por favor no devuelva el producto a la tienda donde adquirió el producto.

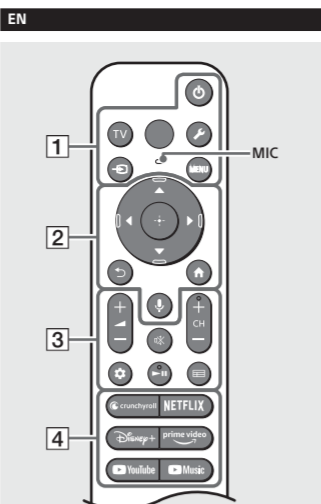

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.*

- (Power)**
 TV: Display TV channel list or switch to input.
 ⬅️ (Quick settings): Display Quick Settings.
 ➡️ (Input): Display and select the input source, etc.
 MENU (Control menu): Display the Control menu.
- ➡️ ⬅️ ⏮️ ⏭️ / ⏪ / ⏩: On screen menu navigation and selection.
 ⬅️ (Back)
 ⬆️ (Home)
 🗉 (Google Assistant / Microphone): Use Google Assistant**.
- ➡️ ⬅️ ⏮️ ⏭️ / ⏪ / ⏩ (-Volume)
 📴 (Mute)**
 ⏮️ ⏭️ / CH + / - (-Channel)
 📊 (Dashboard): Display Dashboard.
- 📺 (Guide): Display the digital program guide by TV or Cable/Satellite box**.

- For other remote control models, refer to the online Help Guide for details.
- Only for limited region/country/model/language.
- Google Assistant requires an Internet connection.
- Accessibility shortcut is available by pressing and holding 📴 (Mute).
- Cable/Satellite box setup setting is required.

About Manuals

Please retain the manuals for future reference.

Paper manual
 Setup Guide (on top of the product) / Reference Guide (this manual) / Safety and Regulatory Booklet.

Help Guide (On screen Manual)
 • To open it, select [Settings] → [Help & Feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].
 • You can refer to the Help Guide with your smartphone (visit website provided on the front cover of Reference Guide).

		(mm)/(inches/pouces/pulgadas)*1			(kg)/(lb.)**1	
		Ⓐ	Ⓑ	Ⓒ	Ⓓ	
KD-85X77L / 85X77CL	1901 / 74 1/8	1090 / 43 1/4	73 / 2 3/4	45.8 / 100.9	45.8 / 100.9	
	1686 / 66 1/2	969 / 38 1/8	72 / 2 3/4	30.4 / 67	30.4 / 67	
	1686 / 66 1/2	969 / 38 1/8	72 / 2 3/4	30.4 / 67	30.4 / 67	
KD-75X77L / 75X77CL	1462 / 57 3/8	842 / 33 1/4	71 / 2 3/4	20.4 / 45	20.4 / 45	
	1462 / 57 3/8	842 / 33 1/4	71 / 2 3/4	20.4 / 45	20.4 / 45	
	1243 / 49	721 / 28 3/8	71 / 2 3/4	15.3 / 33.8	15.3 / 33.8	
KD-65X77L / 65X77CL	1126 / 44 1/8	653 / 25 3/4	70 / 2 3/4	12.1 / 26.7	12.1 / 26.7	
	1126 / 44 1/8	653 / 25 3/4	70 / 2 3/4	12.1 / 26.7	12.1 / 26.7	
	972 / 38 3/8	567 / 22 1/8	70 / 2 3/4	9.3 / 20.5	9.3 / 20.5	
KD-55X77L / 55X77CL	972 / 38 3/8	567 / 22 1/8	70 / 2 3/4	9.3 / 20.5	9.3 / 20.5	
	972 / 38 3/8	567 / 22 1/8	70 / 2 3/4	9.3 / 20.5	9.3 / 20.5	
	1243 / 49	721 / 28 3/8	71 / 2 3/4	15.3 / 33.8	15.3 / 33.8	
KD-50X77L	1126 / 44 1/8	718 / 28 1/4	10 3/8	12.3 / 27.1	12.3 / 27.1	
	1126 / 44 1/8	718 / 28 1/4	10 3/8	12.3 / 27.1	12.3 / 27.1	
	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
KD-43X77L	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
	1243 / 49	721 / 28 3/8	71 / 2 3/4	15.3 / 33.8	15.3 / 33.8	

*1 (Approx. / Environ / Aprox.)

Dimensions and weight (Table-Top Stand) / Dimensiones y peso (soporte de sobremesa)

		(mm)/(inches/pouces/pulgadas)**1			(kg)/(lb.)**1	
		Ⓐ	Ⓑ	Ⓒ	Ⓓ	
KD-85X77L / 85X77CL	1901 / 74 1/8	1170 / 46 1/8	453 / 17 3/8	47.8 / 105.3	47.8 / 105.3	
	1686 / 66 1/2	1045 / 41 1/4	415 / 16 3/8	31.7 / 69.9	31.7 / 69.9	
	1686 / 66 1/2	1045 / 41 1/4	415 / 16 3/8	31.7 / 69.9	31.7 / 69.9	
KD-75X77L / 75X77CL	1462 / 57 3/8	912 / 36	334 / 13 1/4	20.7 / 45.6	20.7 / 45.6	
	1462 / 57 3/8	912 / 36	334 / 13 1/4	20.7 / 45.6	20.7 / 45.6	
	1243 / 49	789 / 31 1/8	334 / 13 1/4	15.6 / 34.4	15.6 / 34.4	
KD-65X77L / 65X77CL	1126 / 44 1/8	653 / 25 3/4	334 / 13 1/4	12.3 / 27.1	12.3 / 27.1	
	1126 / 44 1/8	653 / 25 3/4	334 / 13 1/4	12.3 / 27.1	12.3 / 27.1	
	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
KD-55X77L / 55X77CL	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
	1243 / 49	789 / 31 1/8	334 / 13 1/4	15.6 / 34.4	15.6 / 34.4	
KD-50X77L	1126 / 44 1/8	718 / 28 1/4	10 3/8	12.3 / 27.1	12.3 / 27.1	
	1126 / 44 1/8	718 / 28 1/4	10 3/8	12.3 / 27.1	12.3 / 27.1	
	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
KD-43X77L	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
	1243 / 49	721 / 28 3/8	71 / 2 3/4	15.3 / 33.8	15.3 / 33.8	


*1 (Approx. / Environ / Aprox.)

Dimensions and weight (Table-Top Stand) / Dimensiones y peso (soporte de sobremesa)

		(mm)/(inches/pouces/pulgadas)**1			(kg)/(lb.)**1	
		Ⓐ	Ⓑ	Ⓒ	Ⓓ	
KD-85X77L / 85X77CL	1901 / 74 1/8	1170 / 46 1/8	453 / 17 3/8	47.8 / 105.3	47.8 / 105.3	
	1686 / 66 1/2	1045 / 41 1/4	415 / 16 3/8	31.7 / 69.9	31.7 / 69.9	
	1686 / 66 1/2	1045 / 41 1/4	415 / 16 3/8	31.7 / 69.9	31.7 / 69.9	
KD-75X77L / 75X77CL	1462 / 57 3/8	912 / 36	334 / 13 1/4	20.7 / 45.6	20.7 / 45.6	
	1462 / 57 3/8	912 / 36	334 / 13 1/4	20.7 / 45.6	20.7 / 45.6	
	1243 / 49	789 / 31 1/8	334 / 13 1/4	15.6 / 34.4	15.6 / 34.4	
KD-65X77L / 65X77CL	1126 / 44 1/8	653 / 25 3/4	334 / 13 1/4	12.3 / 27.1	12.3 / 27.1	
	1126 / 44 1/8	653 / 25 3/4	334 / 13 1/4	12.3 / 27.1	12.3 / 27.1	
	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
KD-55X77L / 55X77CL	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
	1243 / 49	789 / 31 1/8	334 / 13 1/4	15.6 / 34.4	15.6 / 34.4	
KD-50X77L	1126 / 44 1/8	718 / 28 1/4	10 3/8	12.3 / 27.1	12.3 / 27.1	
	1126 / 44 1/8	718 / 28 1/4	10 3/8	12.3 / 27.1	12.3 / 27.1	
	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
KD-43X77L	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
	1243 / 49	721 / 28 3/8	71 / 2 3/4	15.3 / 33.8	15.3 / 33.8	

*1 (Approx. / Environ / Aprox.)

 The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness / La longitud de los tornillos para el soporte de montaje mural varía dependiendo del espesor del soporte de montaje mural

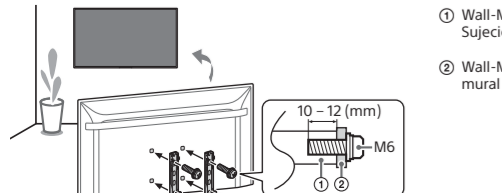

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.*

- (Power)**
 TV: Display TV channel list or switch to input.
 ⬅️ (Quick settings): Display Quick Settings.
 ➡️ (Input): Display and select the input source, etc.
 MENU (Control menu): Display the Control menu.
- ➡️ ⬅️ ⏮️ ⏭️ / ⏪ / ⏩: On screen menu navigation and selection.
 ⬅️ (Back)
 ⬆️ (Home)
 🗉 (Google Assistant / Microphone): Use Google Assistant**.
- ➡️ ⬅️ ⏮️ ⏭️ / ⏪ / ⏩ (-Volume)
 📴 (Mute)**
 ⏮️ ⏭️ / CH + / - (-Channel)
 📊 (Dashboard): Display Dashboard.
- 📺 (Guide): Display the digital program guide by TV or Cable/Satellite box**.

- For other remote control models, refer to the online Help Guide for details.
- Only for limited region/country/model/language.
- Google Assistant requires an Internet connection.
- Accessibility shortcut is available by pressing and holding 📴 (Mute).
- Cable/Satellite box setup setting is required.

About Manuals

Please retain the manuals for future reference.

Paper manual
 Setup Guide (on top of the product) / Reference Guide (this manual) / Safety and Regulatory Booklet.

Help Guide (On screen Manual)
 • To open it, select [Settings] → [Help & Feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].
 • You can refer to the Help Guide with your smartphone (visit website provided on the front cover of Reference Guide).

		(mm)/(inches/pouces/pulgadas)*1			(kg)/(lb.)**1	
		Ⓐ	Ⓑ	Ⓒ	Ⓓ	
KD-85X77L / 85X77CL	1901 / 74 1/8	1090 / 43 1/4	73 / 2 3/4	45.8 / 100.9	45.8 / 100.9	
	1686 / 66 1/2	969 / 38 1/8	72 / 2 3/4	30.4 / 67	30.4 / 67	
	1686 / 66 1/2	969 / 38 1/8	72 / 2 3/4	30.4 / 67	30.4 / 67	
KD-75X77L / 75X77CL	1462 / 57 3/8	842 / 33 1/4	71 / 2 3/4	20.4 / 45	20.4 / 45	
	1462 / 57 3/8	842 / 33 1/4	71 / 2 3/4	20.4 / 45	20.4 / 45	
	1243 / 49	721 / 28 3/8	71 / 2 3/4	15.3 / 33.8	15.3 / 33.8	
KD-65X77L / 65X77CL	1126 / 44 1/8	653 / 25 3/4	70 / 2 3/4	12.1 / 26.7	12.1 / 26.7	
	1126 / 44 1/8	653 / 25 3/4	70 / 2 3/4	12.1 / 26.7	12.1 / 26.7	
	972 / 38 3/8	567 / 22 1/8	70 / 2 3/4	9.3 / 20.5	9.3 / 20.5	
KD-55X77L / 55X77CL	972 / 38 3/8	567 / 22 1/8	70 / 2 3/4	9.3 / 20.5	9.3 / 20.5	
	972 / 38 3/8	567 / 22 1/8	70 / 2 3/4	9.3 / 20.5	9.3 / 20.5	
	1243 / 49	721 / 28 3/8	71 / 2 3/4	15.3 / 33.8	15.3 / 33.8	
KD-50X77L	1126 / 44 1/8	718 / 28 1/4	10 3/8	12.3 / 27.1	12.3 / 27.1	
	1126 / 44 1/8	718 / 28 1/4	10 3/8	12.3 / 27.1	12.3 / 27.1	
	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
KD-43X77L	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
	972 / 38 3/8	632 / 24 9/16	10 1/2	9.5 / 21	9.5 / 21	
	1243 / 49	721 / 28 3/8	71 / 2 3/4	15.3 / 33.8	15.3 / 33.8	

*1 (Approx. / Environ / Aprox.)

Dimensions and weight (support de table) / Dimensiones y peso (soporte de sobremesa)

		(mm)/(inches/pouces/pulgadas)**1			(kg)/(lb.)**1	
		Ⓐ	Ⓑ	Ⓒ	Ⓓ	
KD-85X77L / 85X77CL	1901 / 74 1/8	1170 / 46 1/8	453 / 17 3/8	47.8 / 105.3	47.8 / 105.3	
	1686 / 66 1/2	1045 / 41 1/4	415 / 16 3/8	31.7 / 69.9	31.7 / 69.9	
	1686 / 66 1/2	1045 / 41 1/4	415 / 16 3/8	31.7 / 69.9	31.7 / 69.9	
KD-75X77L / 75X77CL	1462 / 57 3/8	912 / 36	334 / 13 1/4	20.7 / 45.6	20.7 / 45.6	
	1462 / 57 3/8	912 / 36	334 / 13 1/4	20.7 / 45.6	20.7 / 45.6	
	1243 / 49	789 / 31 1/8	334 / 13 1/4	15.6 / 34.4	15.6 / 34.4	
KD-65X77L / 65X77CL	1126 / 44 1/8	653 / 25 3/4	334 / 13 1/4	12.3 / 27.1	12.3 / 27.1	
	1126 / 44 1/8	653 / 25 3/4	334 / 13 1/4	12.3 / 27.1	12.3 / 27.1	
	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
KD-55X77L / 55X77CL	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
	972 / 38 3/8	567 / 22 1/8	334 / 13 1/4	9.5 / 21	9.5 / 21	
	1243 / 49	789 / 31 1/8	334 / 13 1/4	15.6 / 34.4	15.6 / 34.4	
KD-50X77L	1126 /					

