

Overview of programmes

Program/type of laundry/information	Settings
Name of the program: Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (☀ = cold) Spin speed* additional settings that can be selected
 Cottons: hard-wearing textiles, heat-resistant textiles made of cotton or linen  Cottons + Prewash: for heavily soiled washing; pour detergent into compartment I and II	8 kg/5** kg; ☀ - 90 °C ----, 0 - 1200* rpm    
Notes <ul style="list-style-type: none"> For the  Eco setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the  Eco setting or, if necessary, set a higher temperature. The  Speed setting is suitable as a short program for lightly soiled laundry. With the Speed setting, the program will use more energy than without. 	
 Easy Care: textiles made of synthetic materials or blended fabrics	4 kg; ☀ - 60 °C ----, 0 - 1200* rpm    
 Mix: mixed load of cottons and synthetic fabrics	4 kg; ☀ - 40 °C ----, 0 - 1200* rpm    
 Delicates/Silk: for delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf) Note: Use a detergent suitable for machine-washing delicates or silk.	2 kg; ☀ - 40 °C ----, 0 - 800 rpm    
 Wool: hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, long program pauses (textiles rest in wash liquor). Notes <ul style="list-style-type: none"> Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. Use a detergent that is suitable for machine-washing wool. 	2 kg; ☀ - 40 °C ----, 0 - 800 rpm -
* maximum spin speed depends on the program and model ** reduced load for the  Speed setting	

Program/type of laundry/information	Settings
<p> Drum Clean: Programme for cleaning and caring for the drum and the outer tub, e.g. before the 1st wash cycle, if an odour has formed after a prolonged absence or if washing frequently at a low washing temperature (40 °C and lower)</p> <p>Notes</p> <ul style="list-style-type: none"> Run programme without laundry. Use only detergents for front-loading washing machines. Do not use additional cleaning agents. 	<p>: 40 °C; 90 °C</p> <p>1200* rpm</p> <p>-</p>
<p> Spin/Drain : Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.</p> <p>Notes</p> <ul style="list-style-type: none"> The display of the Ready-in time is only updated once the program is started. The program cycle is independent of the chosen amount of load. Decrease the spin speed for delicate fabric and textiles e.g. blouses or laundry made of silk or wool. 	<p>-; -</p> <p>0 - 1200* rpm</p> <p></p>
<p>Super 15'/30' : extra short program of approx. 30 minutes, suitable for small items of lightly soiled laundry</p> <p>Note: When selecting the Speed setting, the program SuperQuick 15' is run.</p>	<p>2/3.5 kg; - 40 °C</p> <p>----, 0 - 1200* rpm</p> <p></p>
<p>Allergy Plus : hard-wearing fabrics made of cotton or linen</p> <p>Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.</p>	<p>6.5 kg; - 60 °C</p> <p>----, 0 - 1200* rpm</p> <p> </p>
<p>Kidswear : hard-wearing fabrics, heat-resistant fabrics made of cotton or linen</p>	<p>8 kg/5** kg; - 90 °C</p> <p>----, 0 - 1200* rpm</p> <p> </p>
<p>Shirts : Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics</p> <p>Notes</p> <ul style="list-style-type: none"> Shirts/blouses are only given a short spin on the Less iron setting. Hang them up to dry while still dripping wet. → Self-smoothing effect Use the Delicates/Silk program to wash shirts/blouses made of silk/delicate fabrics. 	<p>2 kg; - 60 °C</p> <p>----, 0 - 800 rpm</p> <p> </p>
<p>Sportswear : Sportswear and leisure wear made from microfibre fabrics</p> <p>Notes</p> <ul style="list-style-type: none"> Laundry must not be treated with fabric softener. Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue. 	<p>2 kg; - 40 °C</p> <p>---, 0 - 800 rpm</p> <p> </p>
<p>* maximum spin speed depends on the program and model</p> <p>** reduced load for the Speed setting</p>	

Program/type of laundry/information	Settings
Jeans/Dark Wash   : Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	3.5 kg;  - 40 °C ----, 0 - 1200* rpm   ,  , 
Rinse/Freshen up  : extra rinse with selectable spin speed Note: The program cycle is independent of the chosen amount of load. Decrease the spin speed for delicate fabric and textiles e.g. blouses or laundry made of silk or wool.	-;- ----, 0 - 1200* rpm  , 
* maximum spin speed depends on the program and model ** reduced load for the  Speed setting	



Consumption values table

Programme	Load	Energy consumption*	Water*	Programme duration*
Cottons 20 °C	8 kg	0,26 kWh	86 l	2 1/2 h
Cottons 40 °C	8 kg	1,13 kWh	89 l	3 h
Cottons 60 °C	8 kg	1,16 kWh	86 l	2 1/2 h
Cottons 90 °C	8 kg	2,22 kWh	99 l	2 1/2 h
Easy Care 40 °C	4 kg	0,79 kWh	65 l	2 h
Mix 40 °C	4 kg	0,58 kWh	44 l	1 1/4 h
Delicate/Silk 30 °C	2 kg	0,20 kWh	36 l	3/4 h
Wool 30 °C	2 kg	0,12 kWh	41 l	3/4 h

Programme	Additional function	Load	Energy consumption*	Water*	Pro-gramme du-ration*
Cottons 60 °C**	Eco	8 kg	0,83 kWh	68 l	4 3/4 h

Values determined according to IEC60456:2010.

Cottons 60 °C is recommended for a normally soiled load.

* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

** Program setting with maximum spin speed for testing according to AS/NZS 2040.2 and AS/NZS 6400.

WAT24261AU

9001037868 (9505)

