

**SONY**<sup>®</sup>

4-120-181-11(2)  
7925000005A

**BRAVIA**  
**Input Link**  
Operating Instructions

**DMX-SW1**

See reverse for French instructions

## Owner's Record

The serial number is located at the bottom of the product. Record this number in the spaces provided below. Refer to it whenever you call upon your Sony dealer regarding this product.

Serial No. \_\_\_\_\_

### For Your Convenience

#### Please contact Sony directly if you:

- Have questions on the use of your television after reading your manual
- Experience difficulty operating your television

#### Contact Sony Customer Support at:

<http://www.sony.com/tvsupport>

#### or to speak with a support representative:

#### United States

1-800-222-SONY (7669)

#### Canada

1-877-899-SONY (7669)

Sony will work to resolve your questions more quickly than your retailer or place of purchase.

**Please Do Not Return the Product to the Store**

## Specifications

<b>Input</b>	HDMI input x5
<b>Output</b>	HDMI output x1
<b>Compatible Signal</b>	HDMI: 480i, 480p, 720p, 1080i, 1080p
<b>Power Requirement</b>	AC 120V 60Hz
<b>Power Consumption</b>	9W
<b>DC In</b>	9V
<b>Dimensions (W × D × H)</b>	191 × 95 × 25 (mm) 7 1/2 × 3 3/4 × 1 1/8 (inches)
<b>Mass</b>	0.36 kg 12.64 oz
<b>Supplied Accessories</b>	AC power adapter with AC cord x1 Attachment bracket x1 Plastic fasteners x2 HDMI cable x1 Operating Instructions x1 Warranty Card x2



When this unit is connected to a personal computer, operations are not guaranteed.

 
Some Control for HDMI supported equipment work better with direct connection to the HDMI Input on your TV.

The DMX-SW1 compatible TV model names are available at: <http://www.sonystyle.com/dmxsw1>

Design and specifications are subject to change without notice.

## WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

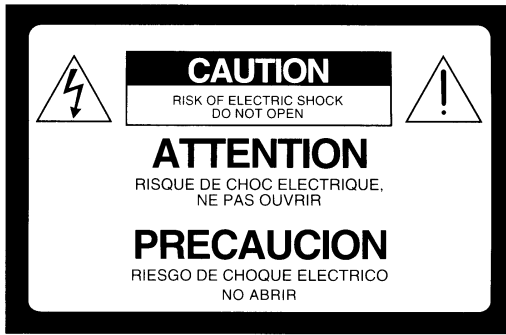

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## CAUTION

To prevent electric shock, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

### Declaration of Conformity

Trade Name: SONY  
Model: DMX-SW1  
Responsible Party: Sony Electronics Inc.  
Address: 16530 Via Esprillo  
San Diego, CA 92127 U.S.A.  
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

# HDMI

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

## Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## USE

Do not move the TV using the Bravia Input Link as a handle.

### AC power cord

If you damage the AC power cord, it may result in a fire or an electric shock. If the AC power cord is damaged, stop using it and ask your dealer or Sony service center to exchange it.

- Do not place the Bravia Input Link where the power cord is subject to wear or abuse.
- Do not pinch, bend, or twist the cord excessively. The core lines may be bared and cut, and cause a short-circuit, resulting in a fire or an electric shock.
- Do not convert or damage the power cord.
- Do not allow anything to rest on or roll over the power cord.
- Do not pull the power cord.
- Do not move the Bravia Input Link with the power cord plugged in.
- Keep the power cord away from heat sources.
- Be sure to grasp the plug when disconnecting the power cord.

## Wiring

For your safety, unplug the AC power cord when wiring cables.

### Cable wiring

Take care when routing the cables so that they do not become entangled and catch on your feet or hands. It may damage the Bravia Input Link.

### Electric shock

Do not touch the AC power cord or the Bravia Input Link with a wet hand. If you plug/unplug the AC power cord from the Bravia Input Link or TV with a wet hand, it may cause electric shock.

### Lightning

For added protection for this Bravia Input Link during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the BRAVIA Input Link or TV due to lightning and power line surges.

## CLEANING

- Clean the AC power plug regularly.  
If the plug is covered with dust and it picks up moisture, its insulation may deteriorate and result in a fire. Unplug the AC power plug and clean it regularly.
- Unplug the AC power cord when cleaning this Bravia Input Link. If not, it may result in electric shock.
- Clean the cabinet of the Bravia Input Link with a dry soft cloth. To remove dust, wipe it gently with a soft cloth. Stubborn stains may be removed with a cloth slightly dampened with a solution of mild soap and warm water. Never use strong solvents such as thinner or benzine for cleaning.
- If using a chemically pretreated cloth, please follow the instruction provided on the package.

## MOISTURE

### Moisture and flammable objects

- Do not use power-line operated sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc. It may result in a fire or an electric shock.
- Do not let this Bravia Input Link get wet. Never spill liquid of any kind on the Bravia Input Link. If any liquid or solid object does fall through, do not operate the Bravia Input Link. It may result in electric shock or damage to the Bravia Input Link. Have it checked immediately by qualified personnel.
- To prevent fire, keep flammable objects or open flame

(e.g. candles) away from the Bravia Input Link.

## SERVICING

### Damage requiring service

If the surface of the Bravia Input Link or AC adapter cracks, do not touch the Bravia Input Link until you unplug the AC power cord.

Do not attempt to service the Bravia Input Link or AC Adapter yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## ACCESSORIES

 
Keep small accessories out of children's reach. Use only the specified accessories with this product.

### On connecting cable


- Use HDMI cables that bears the HDMI logo certified with HDMI Licensing LLC for connection.
- Sony HDMI cables are recommended.
- When watching 1080p resolution picture or Deep Color picture, a HIGH SPEED HDMI cable (cable certified with HDMI Version 1.3 as "category 2") is recommended.
- DVI-to-HDMI cable is not recommended. If you connect the DVI-D device using a DVI-to-HDMI cable:
  - sound will not be output.
  - picture may not appear on the screen.

Thank you for purchasing the BRAVIA Input Link, DMX-SW1. This product allows you to expand the number of HDMI ports on your Sony BRAVIA TV. Using your TV remote control, you can select and view external equipment through your TV's input menu.

## Package Contents

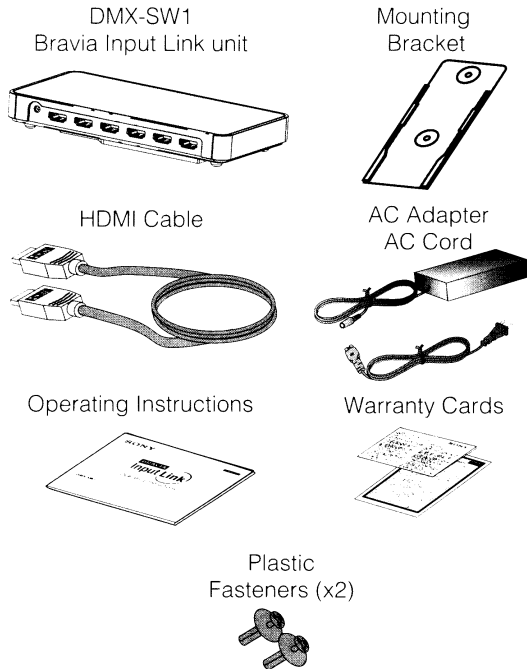

## Product Description

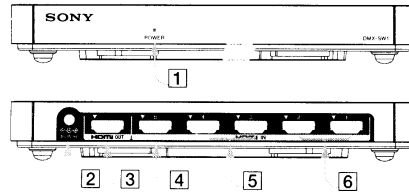 

1	<b>Power LED</b>	Lights up in green when the switcher is connected to a power source and to the TV through HDMI input, and the TV is powered on. Green LED will turned off when the TV is turned off.
2	<b>DC IN</b>	Connect the supplied AC Adapter with AC Cord.
3	<b>HDMI OUT</b>	Connect to any HDMI input of your TV using the supplied HDMI cable.
4	<b>HDMI IN 5 input Tuner</b>	Connect to the HDMI output of your tuner, such as a satellite or cable receiver.
5	<b>HDMI IN 3-4 input Player</b>	Connect to the HDMI output of your video players such as DVD or BD player.
6	<b>HDMI IN 1-2 input Recorder</b>	Connect to the HDMI output of your video recorder such as a DVD-recorder or DVR.


HDMI inputs are pre-assigned to display Tuner (input 5), Player (input 3 & 4) and Recorder (input 1 & 2).

## Attaching to the TV

 
When the cable connection is completed, attach the BRAVIA Input Link unit to the back of your TV.

- Find the attachment location. There are guide pin holes on the back of your TV. The guide pins on the attachment bracket (supplied) should fit into these holes.
- Secure the attachment bracket to the back of your TV with the plastic fasteners (supplied). Do not push the head of the plastic fastener until you have inserted the plastic fastener into the hole on the TV, then press in the head of the fastener until it clicks.
- Align the grooves on the bottom of the unit with groove of the installation bracket.
- Gently slide the switcher unit into place.

To remove the bracket, use a Phillips screwdriver (not supplied) to loosen plastic fasteners.

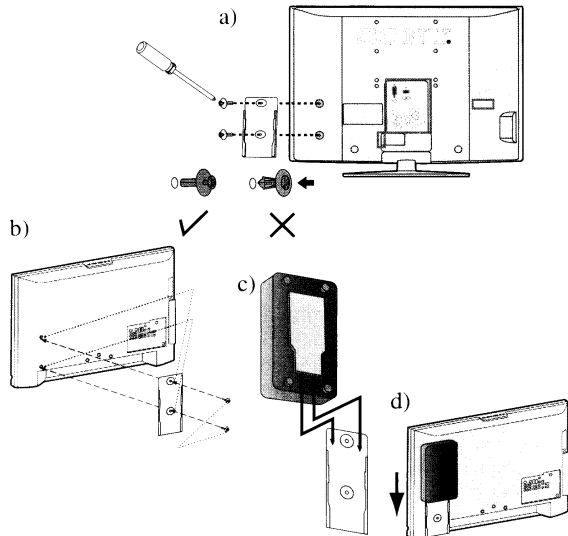

## Connecting Examples for the BRAVIA Input Link

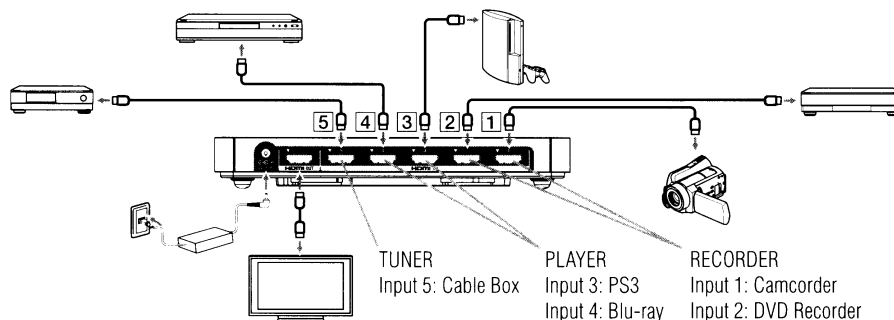 

# Identify Your TV Menu Type

This product works with the Sony TV with **XMB™** menu and Sony TV with panel menu (Fig. 1-1 and Fig. 1-2).

TV with XMB™



Fig. 1-1

TV with Panel Menu



Fig. 1-2

## Configuring your TV to use the BRAVIA Input Link

To begin, the Control for HDMI function of your TV must be set to "On".

- 1) Press **HOME/MENU** to display the **XMB™** or the panel menu.
- 2) Press **←/→/▲/▼** to find the **Settings** menu on the **XMB™** (Fig. 2-1) or the **Setup** menu on the panel menu (Fig. 2-2).
- 3) Press **▲/▼** to highlight **Control for HDMI** and press **⊕**.
- 4) Highlight **On** and press **⊕**.

TV with XMB™



Fig. 2-1

TV with Panel Menu

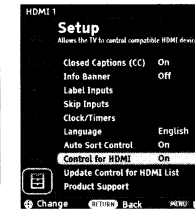 


Fig. 2-2

## Verify your HDMI connection

Accessing the equipment connected to the Bravia Input Link:

### TV with XMB™

- 1) Press **HOME/MENU** to display **XMB™**.
- 2) Press **←/→** to highlight **External Inputs**.
- 3) Press **▲/▼** to highlight the equipment you want, then press **⊕** (Fig. 3-1).

TV with XMB™



Fig. 3-1

### TV with Panel Menu

- 1) Press **Input** button.
- 2) Press **▲/▼** to highlight the equipment you want, then press **⊕** (Fig. 3-2).

TV with Panel Menu

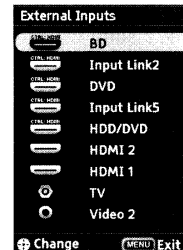 


Fig. 3-2

## Connecting Equipment

The CTRL:HDMI icon shown here will be displayed in the external input menu when the equipment is successfully connected.

### CTRL:HDMI icons



Some TV models may display this icon.

### Equipment with Control for HDMI

The Bravia Input Link is compatible with equipment that supports **Control for HDMI**. The **Control for HDMI** function allows communication between the equipment that supports this function and your TV. When Control for HDMI is properly configured, your TV will display the equipment's pre-assigned name as shown here (Fig. 4-1 and Fig. 4-2).

TV with XMB™



Fig. 4-1

TV with Panel Menu

 


Fig. 4-2

Control for HDMI supported equipment

### Equipment without Control for HDMI

For standard HDMI equipment (without the Control for HDMI function), the Bravia Input Link will act as a **Control for HDMI** proxy and the standard HDMI equipment will be labeled according to the input number on the Bravia Input Link (e.g. Input Link 2) as shown here (Fig. 4-3 and Fig. 4-4). You will be able to select the input but not control with these devices.

TV with XMB™



Fig. 4-3

TV with Panel Menu

 


Fig. 4-4

Standard HDMI equipment

## TV with XMB™

You may categorize your connected equipment with pre-assigned Bravia Input Link categories to organize your External Inputs menu.

Input 1 or 2 are pre-assigned to display “Recorder” and you can connect your DVD-Recorder, DVRs etc.

Inputs 3 or 4 are pre-assigned to display “Player” and you can connect your Blu-ray, DVD, Game Consoles etc.

Input 5 is pre-assigned to display “Tuner” and you can connect your Cable or Satellite boxes.



You may disregard the categories and connect any equipment to any of the HDMI inputs.

### Important Note

Some TV models may require updating the “Device List” or “Update Control for HDMI List” (depending on your menu type) under the Settings, when HDMI input has been connected or disconnected; refer to your TV’s operating instructions.

## Troubleshooting

Most of the problems can be resolved by:

- Setting the Control for HDMI setting on your TV to “On” and/or
- Reconnecting the cables and making sure that both ends are properly connected into the ports.

### **This unit does not turn on.**

The AC power adaptor is disconnected from the wall outlet, or from the power input of this unit.

- Connect the AC power adaptor to a wall outlet securely, and connect its plug to DC IN 9V jack of this unit securely.
- Make sure the Control for HDMI setting on your TV is turned on.

### **No picture/No sound\*.**

- The HDMI output of a playback device is not connected to the HDMI input of this unit properly.
  - Check the connection again.
- The HDMI output of this unit is not connected to the HDMI input of a TV properly.
  - Check the connection again.
- When using a TV equipped with input select, the correct input is not selected.
  - Select the correct input from the External Inputs list. The External Inputs list can be found on the XMB<sub>IN</sub> or on the Panel Menu depending on your TV’s menu type.
- The connected device is not compatible with Highbandwidth Digital Content Protection (HDCP).
  - Use a device compatible with HDCP. For details, refer to the operating instructions supplied with the device.
- The HDMI output signal format of the playback device does not correspond with the HDMI input signal format of the TV.
  - Make sure that signal format of the connected device(s) corresponds. For details, refer to the operating instructions supplied with each device.
- This unit is connected to DVI devices.

- Connection to DVI devices is not recommended. When connecting using a DVI adaptor, make sure that the device is compatible with the DVI adaptor.
- When connected to DVI devices, sound is not output.
- Use an HDMI cable that bears the HDMI logo certified with HDMI Licensing LLC for connection.
- When watching 1080p resolution picture or Deep Color picture, use a HIGH SPEED HDMI cable (cable certified with HDMI Version 1.3 as “category 2”).
- Some playback devices may require some settings on the device. Refer to the operating instructions supplied with the device.

### **Poor picture or sound\*.**

Connection with HDMI cable is not secured.

- Connect the plug of the connecting cord securely.

### **The control function using the extended feature by HDMI (BRAVIA Theatre Sync, etc.) is not available\*.**

- This unit is not turned on, or the connected device is not selected.
  - Before using the function, turn on this unit and switch the input of this unit to the desired device.
  - Make sure your connecting equipment is turned on with Control for HDMI enabled.
- The connected device is not compatible with the function.
  - To use the function, the device connected to the input of this unit must be compatible with the function. Make sure your connecting equipment is turned on with Control for HDMI enabled. Refer to the operating instructions.

\* If above remedies do not solve the problem, connect the devices directly to your TV and check if they operate properly.

**DMX-SW1 Supplement:**  
Setting up your BRAVIA Input Link

Perform this setup when:

- You connect your BRAVIA Input Link for the first time
- If the power is lost or disconnected from your TV or BRAVIA Input Link
- You connect new equipment or switch HDMI inputs on the BRAVIA Input Link
- You move the BRAVIA Input Link to a different HDMI IN on the TV

**Before Beginning**

1. Power on all HDMI equipment.
2. Power on the TV.
3. Connect the BRAVIA Input Link's HDMI OUT to any of the TV's HDMI IN using the supplied HDMI cable.
4. Connect all HDMI equipment to the BRAVIA Input Link.
5. Connect AC Adapter with AC cord from wall to the DC IN on the BRAVIA Input Link.
6. Wait 90 seconds for the BRAVIA Input Link and all equipment to connect with the TV.

**Initial Setup**

Before beginning these steps, make sure that **Control for HDMI** is enabled on your TV. See your TV's Operating Instructions for more details.

**Repeat steps 1-3 below for all connected equipment**

1. Press **HOME/MENU** on the TV's remote control.
2. Press **Left/Right/Up/Down** to navigate to the **External Inputs** menu. (As shown in figures 1 and 2)
3. Highlight and select the equipment with the **Input Link** label from the list (ex: Select **Input Link 1** for a device connected to **HDMI IN 1**).

 
When connecting new equipment only perform Steps 1-3 for that equipment.

**Completing Initial Setup**

Update the **Control for HDMI** list to complete the setup.

**TV with XMB™**


1. Press **HOME** on the remote control and select **HDMI Settings** from the **Settings Menu**.
2. Select **Device List**.
3. Press **Enter** to **Enable** or **Update** the device list and exit the menu.

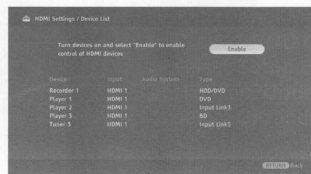


Once the list is updated, the "Input Link" label will be removed for equipment that support Control for HDMI and only the pre-assigned labels are displayed (e.g. DVD, BD, etc).

Initial Setup is complete. See the supplied Operating Instructions for more information on your BRAVIA Input Link.

 TV with XMB™ (Figure 1)

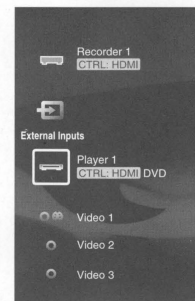


TV with Panel Menu (Figure 2)

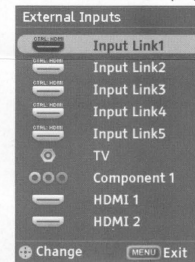 

**TV with Panel Menu**

 1. Press **MENU** on the remote control and select **Setup**.
2. Highlight **Update Control for HDMI List**, select **OK** and exit the menu.

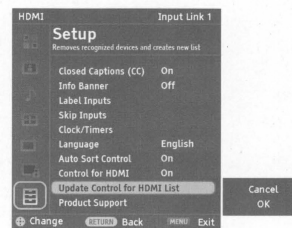



# Consumer 1 Year Warranty

**SONY**<sup>®</sup>

Sony of Canada Ltd. (hereinafter referred to as "Sony") hereby warrants, subject to the terms and conditions herein set forth, this product against defect in material and workmanship during the specified warranty period. In the event of a defect of material or workmanship during the specified warranty period, Sony will repair the same, effecting all necessary parts replacements with either new or refurbished parts, without charge for either parts or labour.

## The warranty period is as follows:

1. Labour: ONE year from the date of original purchase at retail.
2. Parts: ONE year from the date of original purchase at retail. Exception: projector lamps are covered for 90 days from the date of original purchase at retail.
3. Commercial Use or Rental: 90 days from the date of original purchase at retail.

## Conditions

### Unauthorized Modification, Repair, Abuse, Etc.:

This limited warranty is void if: (i) the unit has been previously altered, modified, installed or mounted for commercial use, repaired or serviced by anyone other than the service facilities authorized by Sony to render such services, (ii) the serial number on the unit has been altered or removed, or (iii) the unit has been subject to accident, misuse, abuse or operated contrary to the instructions contained in the Owner's Manual. The opinion of Sony with respect to this matter shall be final.

### Commercial Use or Rental:

This product is not intended for commercial use or rental. Should this unit be used at any time for commercial purposes or as a rental unit, the limited warranty period for parts and labour shall be 90 days from the date of original purchase at retail. The opinion of Sony with respect to this matter shall be final.

### Exclusions:

This limited warranty does not extend to broken or damaged cabinets, accessories, batteries, exposed antennas and styluses, or to parts wearing out due to normal wear and tear. This limited warranty does not cover regular product maintenance such as cleaning, lubrication or check-ups.

### This limited warranty is valid only in Canada.

### Delivery:

The unit must be delivered in person to one of the nearest Sony service facilities in Canada, or shipped, freight prepaid, in either its original package or similar package affording an equal degree of protection and with instructions indicating a location within Canada to which the unit must be returned. If shipped to the service facility, the repaired unit will be returned to customer freight prepaid. All accessories that are enclosed with the unit must be listed individually on the packing slip for the shipping documentation. Sony shall have no liability whatsoever for loss or damage of items shipped to the service facilities. Defective accessories should be returned to Sony as a separate repair item.

### Limited On Site Service:

Sony will provide on site warranty service for Direct-View Television (27 inch and above), LCD TV (33 inch and above) and Projection TV only, as follows. This on site service only applies to customers residing within a 50km radius of an authorized Sony service facility, whose residence can be accessed by an on-road service vehicle.

### Proof of Date Purchase:

This limited warranty applies to the product from the original date of purchase at retail. The owner must furnish proof of original purchase at retail.

### Subject Products:

This limited warranty is applicable to the following Sony products:

CRT Projection Televisions  
Direct-View Televisions  
LCD Rear Projection TV  
LCD Projectors  
LCD TV  
Location Free TV (LFX)  
Plasma TV  
OLED Television  
BRAVIA Link Module

This limited warranty may be applicable to other Sony products, where the limited warranty is enclosed in the product's original packaging.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, AND WHETHER ARISING BY LAW, BY STATUTE, BY COURSE OF DEALING OR USAGE OF TRADE, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY QUALITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. UNDER NO CIRCUMSTANCES SHALL SONY BE LIABLE FOR AN AMOUNT GREATER THAN THE ACTUAL PURCHASE PRICE OF THE UNIT OR FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES SUSTAINED IN CONNECTION WITH SAID UNIT AND SONY NEITHER ASSUMES NOR AUTHORIZES ANY REPRESENTATIVE OR OTHER PERSON TO ASSUME FOR IT ANY OBLIGATION OR LIABILITY OTHER THAN SUCH AS IS EXPRESSLY SET FORTH HEREIN. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES AND CONDITIONS.

### Product Registration:

Thank you for choosing a Sony product. At Sony, we strive to create products of the highest quality to enhance your experience and enjoyment. To provide the best support for your product, we request that you complete a product registration form at [www.SonyStyle.ca/registration](http://www.SonyStyle.ca/registration) within ninety (90) days of purchase.

For service assistance, product information, or product registration please call: 1-877-899-7669.

For information about a Sony Care Extended Warranty, please call 1-800-773-9667.

**For online product support and updates at any time, please visit: [www.sony.ca/support](http://www.sony.ca/support), or call the Sony Customer Information Centre at 1-877-899-7669.**



# Garantie d'un (1) an protégeant les consommateurs

**SONY®**

Sony du Canada Ltée (ci-après désignée Sony), sous réserve des modalités et conditions indiquées aux présentes, garantit le présent produit contre tout défaut de fabrication ou toute défaillance des matériaux entrant dans sa fabrication pour la période de garantie spécifiée. Si un défaut de fabrication ou une défaillance des matériaux survient pendant la période de garantie spécifiée, Sony veillera à réparer le produit en y effectuant tous les remplacements de pièces nécessaires par des pièces neuves ou remises à neuf et ce, sans frais quant aux pièces ou à la main-d'oeuvre.

## La période de garantie est la suivante

1. Main-d'oeuvre : UN an à compter de la date d'achat originelle au détail.

2. Pièces : UN an à compter de la date d'achat originelle au détail.

Exception : les lampes à projection sont couvertes pendant 90 jours à compter de la date d'achat originelle au détail.

3. Location ou usage commercial : 90 jours à compter de la date d'achat originelle au détail.

## Conditions

### Modification, réparation, abus, etc. non autorisés

La présente garantie limitée est nulle si : (i) l'unité avait été antérieurement altérée, modifiée, installée ou montée pour usage commercial, réparée ou entretenue par quiconque autre que les centres de réparation dûment autorisés par Sony à dispenser de tels services, (ii) le numéro de série de l'unité a été modifié ou enlevé, ou (iii) l'unité a été accidentée, a fait l'objet d'un mauvais usage ou d'un abus ou d'une utilisation en contravention des instructions contenues dans le guide d'utilisation. L'opinion de Sony en la matière est définitive.

### Usage commercial ou location

Le présent produit n'est pas destiné à l'usage commercial ou à la location. Si l'unité est utilisée à tout moment à des fins commerciales ou locatives, la période de garantie limitée couvrant les pièces et la main-d'oeuvre sera de 90 jours à compter de la date d'achat originelle au détail. L'opinion de Sony en la matière sera définitive.

### Exclusions

La présente garantie limitée ne s'applique pas aux cabinets, accessoires ou piles cassés ou endommagés; ni aux antennes et stylets exposés, ou aux pièces défectueuses par usure normale. La présente garantie limitée exclut l'entretien normal des produits, tel que le nettoyage, la lubrification ou les vérifications.

### La présente garantie n'est valide qu'au Canada.

### Livraison

L'unité doit être expédiée, fret payé au départ, ou livrée à l'une des installations de service Sony les plus rapprochées au Canada soit dans son emballage d'origine, soit dans un emballage similaire offrant un degré de protection comparable, et accompagnée d'instructions indiquant l'endroit au Canada où l'unité doit être retournée. Si expédiée au centre de réparation, l'unité réparée doit être retournée au client avec fret payé au départ. Tous les accessoires qui sont inclus avec l'unité doivent être énumérés individuellement sur le bon d'accompagnement rattaché au document d'expédition. Sony n'est nullement responsable de la perte des articles expédiés au centre de réparation ou de dommages qu'ils pourraient subir. Les accessoires défectueux devraient être retournés pour réparation à Sony en tant qu'éléments distincts.

### Garantie limitée couvrant le service sur place

Sony offrira une garantie couvrant la réparation des

téléviseurs Direct-View (27 po et plus), Téléviseurs ACL (33 po et plus) et des téléviseurs à projection seulement, selon les modalités suivantes : Ce service sur place ne vaut que pour les clients qui habitent dans un rayon de 50 Km des installations de service Sony, et dont la résidence est accessible à un véhicule de service routier.

### Preuve de la date d'achat

La présente garantie limitée s'applique au produit à compter de la date d'achat originelle au détail. Par conséquent, le propriétaire doit présenter une preuve de date d'achat originelle au détail.

### Produits visés par la présente garantie

La présente garantie limitée s'applique aux produits Sony suivants :

Téléviseurs CRT à projection  
Téléviseurs Direct-View  
Téléviseur ACL à rétroprojection  
Projecteurs ACL  
Téléviseurs ACL  
Téléviseurs Location Free (LFX)  
Téléviseurs à écran plasma  
Téléviseur OLED  
Module BRAVIA Link

La présente garantie limitée peut s'appliquer à d'autres produits Sony lorsque celle-ci est incluse dans l'emballage original du produit.

SAUF DANS LA MESURE OÙ LA LOI APPLICABLE L'INTERDIT, TOUTES LES AUTRES GARANTIES ET CONDITIONS, EXPRESSES OU IMPLICITES, RELEVANT OU NON D'UNE LOI, D'UN ACTE LÉGISLATIF, D'HABITUDES COMMERCIALES ÉTABLIES OU D'USAGES DU COMMERCE, Y COMPRIS, NOTAMMENT, TOUTE GARANTIE IMPLICITE DE QUALITÉ MARCHANDE OU DE L'ADAPTABILITÉ À UNE FIN PARTICULIÈRE, SONT DÉSAVOUÉES. SONY NE SAURAIT EN AUCUN CAS ÊTRE RESPONSABLE D'UN MONTANT SUPÉRIEUR AU PRIX RÉEL D'ACHAT DU PRODUIT; ET SONY NE SAURAIT EN AUCUN CAS ÊTRE RESPONSABLE DE DOMMAGES SPÉCIAUX, ACCESSOIRES OU CONSÉCUTIFS SUBIS RELATIVEMENT AU PRODUIT. SONY N'ASSUME NI N'AUTORISE AUCUN REPRÉSENTANT OU QUICONQUE À ASSUMER EN SON NOM UNE OBLIGATION OU RESPONSABILITÉ AUTRE QUE CELLES QUI SONT EXPRESSÉMENT DÉCRITES AUX PRÉSENTES. L'EXCLUSION DE GARANTIES ET CONDITIONS IMPLICITES N'EST PAS AUTORISÉE DANS CERTAINS TERRITOIRES.

### Enregistrement du produit

Merci d'avoir choisi un produit Sony. Chez Sony, nous nous efforçons de créer des produits de la plus haute qualité afin de renforcer votre expérience et votre satisfaction. Afin d'assurer le meilleur soutien qui soit à votre produit, nous vous demandons de remplir une fiche d'enregistrement de produit sur le site [www.SonyStyle.ca/registration](http://www.SonyStyle.ca/registration) dans les quatre-vingt-dix (90) jours suivant la date d'achat.

Pour obtenir de l'aide concernant le service ou obtenir des renseignements sur le produit ou concernant l'enregistrement du produit, veuillez appeler le 1-877-899-7669.

Pour obtenir des renseignements concernant la garantie prolongée Sony Care, veuillez appeler le 1-800-773-9667.

**Pour le support technique et les mises à jour en ligne en tout temps, vous pouvez visiter le <http://fr.sony.ca/support>, ou appeler le Centre Sony de communication des renseignements aux clients au 1-877-899-7669.**

**SONY**

LCD Television

BRAVIA Link Module

## LIMITED WARRANTY (U.S. ONLY)

SONY ELECTRONICS INC. ("SONY") warrants this product against defects in material or workmanship for the time periods and as set forth below. Pursuant to this Limited Warranty, SONY will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

**Term:** For a period of one (1) year from the original date of purchase of the product (or a period of ninety (90) days for commercial use), SONY will, at its option, repair or replace with new or refurbished product or parts, any product or parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

**Instructions:** In-home diagnostic warranty service is provided during the one (1) year limited warranty term (ninety (90) days for commercial use) for thirty (30) inch (measured diagonally) or larger screen size television products through a SONY-authorized service facility. Otherwise, to obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the SONY authorized service facility specified. A dated purchase receipt or bill of sale is required. For specific instructions on how to obtain warranty service for your product,

Visit SONY's Web Site:  
[www.sony.com/support](http://www.sony.com/support)

Or call the Sony Customer Information Service Center  
1-800-222-SONY (7669)

For an accessory or part not available from your authorized dealer, call:  
1-800-488-SONY (7669)

**Repair / Replacement Warranty:** This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of SONY.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to, product issues due to (i) acts of God, (ii) misuse, (iii) customer instruction, installation, set up adjustments or signal reception issues; (iv) limitations of technology, or (v) modification of or to any part of the SONY product, include the antenna. This Limited Warranty does not cover SONY products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States.

**LIMITATION ON DAMAGES:** SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.