



UNISEN™

IMMERSIVE SOUND LCD HDTV with Integrated Sound Projector

MODELS

151 Series

LT-40151, LT-46151, LT-52151

153 Series

LT-40153, LT-46153, LT-52153

OWNER'S GUIDE

- **Guidelines for setting up and using your new widescreen TV start on page 7.**
- For questions:
 - Visit our website at www.mitsubishi-tv.com.
 - E-mail us at MDEAservice@mdea.com.
 - Call Consumer Relations at 800-332-2119.
- For information on **System Reset**, please see the back cover.
- To order replacement or additional remote controls, visit our website at www.mitsuparts.com or call 800-553-7278.
- **153 Series.** IR emitter cables for NetCommand home-theater control are available for purchase from Mitsubishi. Call 800-553-7278 and request either part number 242D483020 (two-ended cable) or part number 299P254020 (four-ended cable).



For Your Records

Record the model number, serial number, and purchase date of your TV. The model and serial numbers are on the back of the TV. Refer to this page when requesting assistance with the TV.

MODEL NUMBER _____

SERIAL NUMBER _____

PURCHASE DATE _____

RETAILER NAME _____

LOCATION _____

 


CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: This product shall be connected to a MAINS socket outlet with a protective earthing connection.

MAINS DISCONNECTION: The mains plug is used as the disconnect device. The mains plug shall remain readily operable.

TV WEIGHT: This TV is heavy. Exercise extreme care when lifting or moving it. Lift or move the TV with a minimum of two adults. To prevent damage to the TV, avoid jarring or moving it while it is turned on. Always power off your TV, unplug the power cord, and disconnect all cables before moving it.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING: This product contains chemicals known to the State of California to cause cancer and/or birth defects or other reproductive harm.

FCC Declaration of Conformity

Product: LCD Flat Panel HDTV
Models: LT-40151, LT-46151, LT52151
LT-40153, LT-40153, LT-52153
Responsible Party: Mitsubishi Digital Electronics
America, Inc.
9351 Jeronimo Road
Irvine, CA 92618-1904
Telephone: (800) 332-2119

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Mitsubishi could cause harmful interference and would void the user's authority to operate this equipment.

Features and specifications described in this owner's guide are subject to change without notice.

Contents

| | |
|---|----|
| Important Safety Instructions | 4 |
| Important Information About Your TV | 5 |
| Special Features of Your TV | 6 |
| <hr/> | |
| 1 Basic Setup and Operation | |
| Package Contents | 7 |
| Stand Installation | 8 |
| Wall-Mounting | 8 |
| Before You Begin | 9 |
| First-Time Power-On | 9 |
| TV Controls | 10 |
| Setting Up TV Inputs | 12 |
| Basic TV Operation | 14 |
| <hr/> | |
| 2 TV Connections | |
| Before You Begin | 16 |
| Cable Management | 16 |
| Inputs and Outputs | 17 |
| Y Pb Pr Component Video Device | 19 |
| HDMI Device | 19 |
| DVI Video Device | 20 |
| Composite Video Device | 20 |
| Antenna or Cable TV Service | 20 |
| VCR or DVD Recorder to an Antenna or Wall Outlet Cable | 21 |
| VCR or DVD Recorder to a Cable Box | 21 |
| A/V Receiver | 22 |
| A/V Receiver with HDMI Output | 22 |
| Subwoofer | 23 |
| Audio-Only Device | 23 |
| <hr/> | |
| 3 Using TV Features | |
| Selecting an Input | 24 |
| Sleep Timer | 24 |
| ChannelView Channel Listings | 25 |
| Redirecting Audio Output | 25 |
| Controlling A/V Receiver Volume | 25 |
| Status Display | 26 |
| TV Signals and Display Formats | 27 |
| Using the TV with a Personal Computer | 28 |
| Camera Images and Music Files | 30 |
| Sound Projector | 33 |
| Introduction to Home-Theater Control | 36 |
| <hr/> | |
| 4 TV Menus | |
| Main Menu | 37 |
| Menu Navigation | 37 |
| Adjust | 38 |
| Captions | 43 |
| Initial | 44 |
| Inputs | 47 |
| Lock | 49 |
| <hr/> | |
| 5 NetCommand IR Control | |
| About NetCommand IR Control | 52 |
| IR Emitter Placement | 53 |
| Initial NetCommand Setup | 54 |
| Operating NetCommand-Controlled Devices | 55 |
| <hr/> | |
| 6 NetCommand IR Control of an A/V Receiver | |
| Controlling an A/V Receiver after NetCommand Setup | 58 |
| Setting Up A/V Receiver Control Power and Volume | 59 |
| Automatic Switching (Audio or Audio/Video) | 60 |
| <hr/> | |
| Appendices | |
| Appendix A: Bypassing the Parental Lock | 65 |
| Appendix B: Programming the Remote Control | 67 |
| Appendix C: HDMI Control of CEC Devices | 74 |
| Appendix D: TV Care | 77 |
| Appendix E: Troubleshooting | 78 |
| Trademark and License Information | 85 |
| Warranty | 89 |
| Index | 91 |


Important Safety Instructions

Please read the following safeguards for your TV and retain for future reference. Always follow all warnings and instructions marked on the television.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



EXAMPLE OF ANTENNA GROUNDING

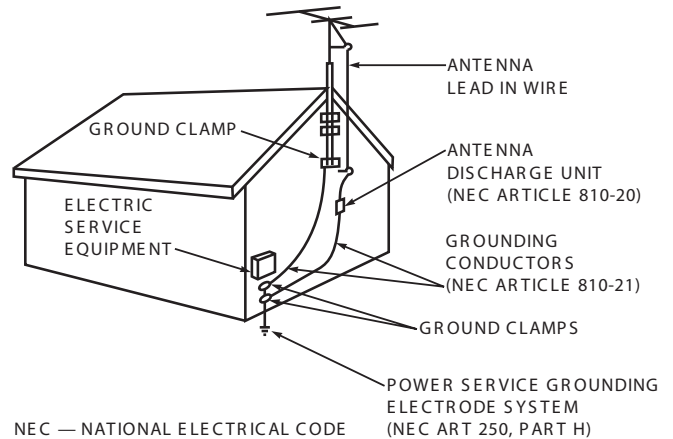

Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Important Information About Your TV

Installation Notes

For stand installation and wall-mounting, see page 8.

Use with other than the authorized accessories may cause the TV to become unstable, which can cause damage to the product or possible injury.

Custom cabinet installation must allow for proper air circulation around the television.

NOTE TO CATV SYSTEM INSTALLER: THIS REMINDER IS PROVIDED TO CALL THE CATV SYSTEM INSTALLER'S ATTENTION TO ARTICLE 820-40 OF THE NEC THAT PROVIDES GUIDELINES FOR THE PROPER GROUNDING AND, IN PARTICULAR, SPECIFIES THAT THE CABLE GROUND SHALL BE CONNECTED TO THE GROUNDING SYSTEM OF THE BUILDING, AS CLOSE TO THE POINT OF CABLE ENTRY AS PRACTICAL.

TV Software

Do not attempt to update the software of this TV with software or USB drives not provided by or authorized by Mitsubishi Digital Electronics America, Inc. Non-authorized software may damage the TV and will not be covered by the warranty.

If Your TV Gets Damaged

Crystalline liquid may leak from the LCD panel and broken glass may be scattered.

CAUTION: The crystalline liquid is toxic. Avoid contact with your skin, eyes, or mouth. DO NOT touch the broken glass or crystalline liquid. DO NOT get glass fragments or crystalline liquid into eyes or mouth. Should either contact with your eyes or mouth, rinse the contacted area thoroughly with water and consult your doctor.

Disposal of Your TV

 = MERCURY

The LCD panel contains a small amount of crystalline liquid and the fluorescent tube in the panel contains mercury. Both are toxic and should not be touched.

DO NOT dispose of the TV with general household waste. THE LAMPS INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE, AND FEDERAL LAWS. For disposal or recycling information, contact your local authorities or the Electronic Industries Alliance at www.eiae.org.

Special Features of Your TV

Your new high-definition widescreen television has many special features that make it the perfect center of your home entertainment system, including:

1080p High-Definition LCD Display System

Your Mitsubishi LCD Flat Panel HDTV uses a full 1920 x 1080 LCD panel to create the picture you see on the screen. All images are displayed at 1080p. The TV uses new Plush 1080p[®] 5G digital video processing to convert lower-resolution signals to 1080p for display.

Smooth120Hz™ Film Motion

Smooth120Hz™ Film Motion makes fast-moving images appear smoother and more fluid, free from motion blur. It does this by doubling the traditional progressive scan frame rate and creates new frames of video between the traditional frames to create smoother moving images. Smooth120Hz™ Film Motion also smooths film judder (image vibration) that may be present in film-based content such as movies.

16:9 Widescreen Picture Format

Enjoy a full theatrical experience in the comfort of your home. View pictures as film directors intended them. Digital TV broadcasts, DVDs and newer video game consoles support this widescreen format.

Integrated HDTV Tuner

Your widescreen Mitsubishi HDTV has an internal HDTV tuner able to receive both over-the-air HDTV broadcasts (received via an antenna) and non-scrambled digital cable broadcasts, including non-scrambled HDTV cable programming.

High-Definition Video Inputs

- **Component Video Inputs.** Also called Y/Pb/Pr inputs, these inputs receive standard analog video formats of 480i, 480p, 720p, and 1080i high-definition signals. This provides a high level of flexibility when connecting DVD players/recorders, cable boxes, and satellite receivers.
- **HDMI Inputs.** These inputs accept digital 480i, 480p, 720p, 1080i, and 1080p video signals plus bitstream and PCM digital stereo signals. The HDMI™ inputs can also accept a variety of PC signals and resolutions. These inputs support HDMI 1.3 Deep Color (up to 36 bits) and the **x.v.Color** extended color gamut.

Used with an adapter, these inputs also accept compatible digital DVI video signals. HDMI inputs provide additional high-performance, high-definition connections for maximum flexibility in your choice of home theater products. The HDMI inputs are HDCP copy-protection compatible.

Easy Connect Auto Input Sensing

Easy Connect™ Auto Input Sensing automatically recognizes when you plug in a device and prompts you to assign a name to it. The TV ignores any unused inputs, so the result is an uncluttered menu where you can easily find and select connected devices by name.

Home-Theater Control

HDMI Control

Available for all models. HDMI devices with Consumer Electronics Control (CEC) capabilities may be compatible with the TV's HDMI Control feature. Compatible devices can receive control signals through the HDMI connection, allowing the TV's remote control to operate some functions of these devices.

NetCommand with IR Learning

153 Series. Your Mitsubishi HDTV offers a new level of networking that seamlessly integrates selected older A/V products with new and future digital products. NetCommand[®] supports IR (infrared) control of products such as VCRs, DVD players, cable boxes, and satellite receivers. NetCommand can "learn" remote control signals directly from many devices, allowing you to create a customized NetCommand-controlled home-theater system.

Sound Projector

Sound Projector technology uses the TV's bank of speakers to create a simulated surround sound effect by reflecting sound off the room walls. Sound Projector lets you customize the effect to match your room dimensions and layout.

ENERGY STAR[®] Compliance

This TV meets ENERGY STAR[®] efficiency standards under all but the following conditions:




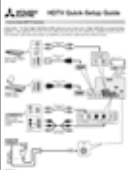



 

| TV Condition | TV Power Status |
|--|--|
| Picture Mode set to Brilliant | While powered on, the TV's power consumption exceeds ENERGY STAR standards. |
| Fast Power On enabled | While powered off, a few components draw power at a level that exceeds ENERGY STAR standards for a powered-off device. |
| 153 Series. External Controller Input enabled | |

1

Basic Setup and Operation


Package Contents

Please take a moment to review the following list of accessory items to ensure that you have received everything.


| | |
|---------------------------------------|---|
| 1. Remote Control |  |
| 2. Two AA Batteries |  |
| 3. Basic Owner's Guide |  |
| 4. HDTV Quick Setup Guide |  |
| 5. Product Registration Card |  |
| 6. Power Cord |  |
| 7. Cable Tie |  |
| 8. Stand Screws |  |
| 9. 153 Series. Calibration Microphone |  |

Remote Control Batteries

1. Remove the remote control back cover.

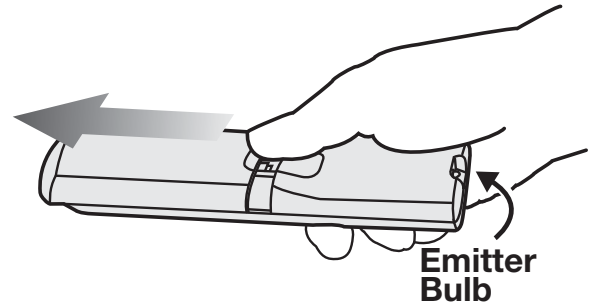

2. Load the batteries, making sure the polarities (+) and (-) are correct. Insert the negative (-) end first.



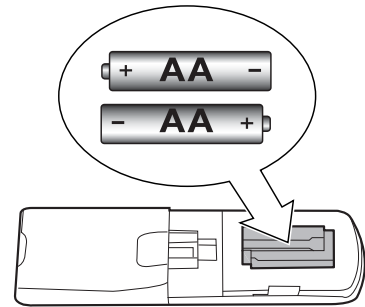


3. Slide the cover back into place.

CAUTION: Using this TV with other than the authorized accessories may cause the TV to become unstable, which can cause damage to the product or possible injury.


Stand Installation

 Required: Phillips Screwdriver

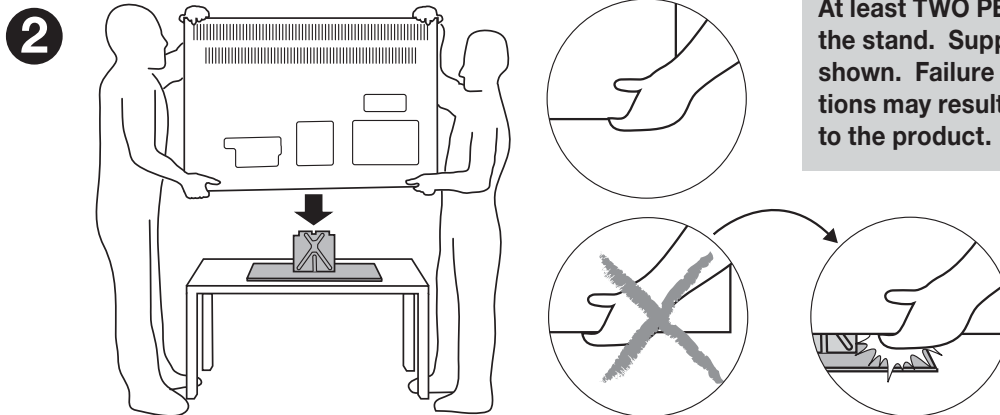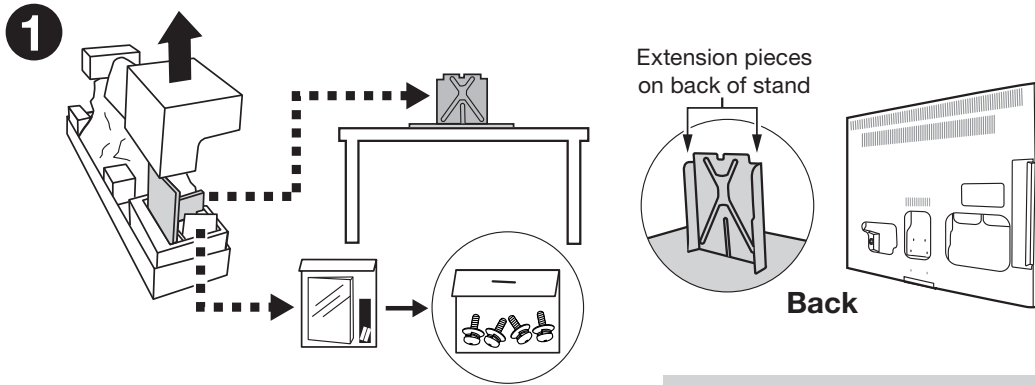

CAUTION

At least **TWO PEOPLE** are required to install the stand. Support the TV near the corners as shown. Failure to follow these recommendations may result in personal injury and damage to the product.

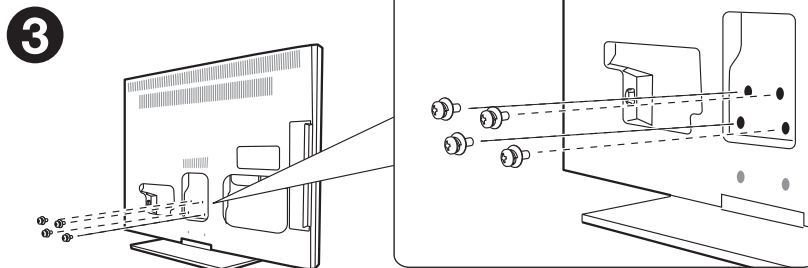

Wall-Mounting


If planning to wall-mount the TV, do not install the stand. To order a wall-mount kit, please contact Peerless Industries, Inc. at (800) 473-3753 or visit www.peerlessmounts.com. Order wall-mount kit model ST650.

To order a wall-mount kit from Mitsubishi Digital Electronics America, Inc., please visit www.mitsuparts.com or call (800) 553-7278.

Complete installation instructions are included with the kit.


 
 

Before You Begin





1. Review the important safety, installation, and operating information at the beginning of this book.
2. Choose a location for your TV.
 - See the stand-installation or wall-mounting requirements on the opposite page.
 - Allow at least four inches of space on all sides of the TV to help prevent overheating. Overheating may cause premature failure of the TV.
 - Avoid locations where light may reflect off the screen.
3. Install the batteries in the remote control.
4. Plug the TV into an AC power outlet.

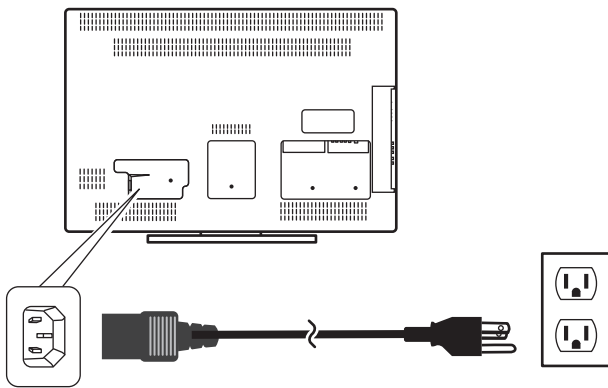

TV power connection

First-Time Power-On

 1. Confirm that the remote control is in **TV** mode.
 - Press the side button once to light the mode indicator and confirm that **TV** mode is active.
 - To change, press the side button additional times to activate **TV** mode.
2. Aim the remote control at the TV and press the **POWER** key . Wait for the **Welcome** screen.
3. Press  if you wish to change the menu language to **Español**.
4. Press  to move to the energy-mode selections. See the information box for details.
5. Press  to highlight **EXIT**. Press **ENTER** to clear the menu.

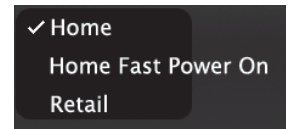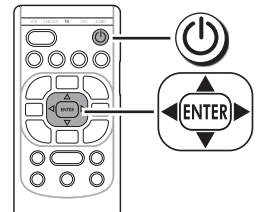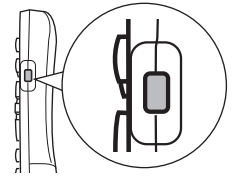

Welcome Screen Energy Options

- Mitsubishi recommends the **Home** setting, which meets ENERGY STAR® efficiency standards.
- **Home Fast Power On** allows the TV to power up quickly. With this setting the small current the TV draws while powered off exceeds ENERGY STAR standards for a powered-down device.
- The **Retail** setting looks best under bright lighting. This mode increases the TV's power consumption beyond ENERGY STAR standards.

This table compares **Welcome** screen energy modes.

| | Home | Home Fast Power On | Retail |
|-------------------------|--------------------|--------------------|------------------|
| Picture Mode | Bright | Bright | Brilliant |
| Backlight Level | Reduced Brightness | Reduced Brightness | Full Brightness |
| Time to Power On | Normal | Fast | Normal |

TV Controls

Remote Control

ACTIVITY Press to select a TV activity and input. See page 24.

GUIDE ChannelView listings, page 25.

MENU TV main menu, page 37

INFO TV status (page 26) or TV help.

BACK Steps back one menu; clears the top menu or Status Display.

VOLUME UP

MUTE

VOLUME DOWN

Record/Playback controls for external devices
When remote control is programmed, page 67
HDMI control, page 76
153 Series: NetCommand, page 55

PAUSE Freezes a broadcast TV picture.

Number/letter keys
Channel tuning, page 14

CANCEL Adds a separator when entering digital channel numbers.
Clears some menu entries.

VCR CABL/SAT TV DVD AUDIO
Control-mode indicator for device type to control. Use the side button to change.

Power Powers TV on or off.

Side button sets the control mode for the type of device to operate. Set mode to **TV** for normal TV viewing.

CHANNEL UP

LAST. Returns to the previously tuned channel.

CHANNEL DOWN

PAGE UP

ENTER Selects a channel number or menu item.


Navigation controls

PAGE DOWN

MORE Displays a menu showing additional functions for the number keys.

- For the **MORE** menu in TV mode, see below.
- With remote control programmed for other device types, page 67. The **MORE** menu in other modes is specific to the device type.
- For CEC-enabled devices, page 74

The **MORE** menu in TV mode

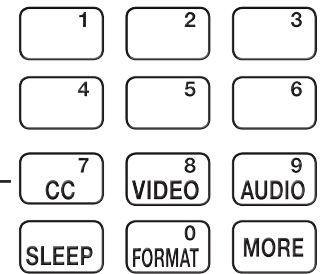

SLEEP Sleep Timer, page 24

FORMAT Picture shape (aspect ratio), page 27

MORE Clears the **MORE** menu.


CC Closed Captions, page 43

VIDEO Video adjustments, page 38

AUDIO Audio adjustments, page 39

Note: To operate other audio/video devices using the TV's remote control:

- See Appendix B, "Programming the Remote Control."
- For HDMI devices compatible with the TV's HDMI Control feature, see Appendix C.
- **153 Series**
 - See page 52 for NetCommand IR "Learning" of device keys.
 - For use of specific keys with NetCommand-controlled devices, see "Special Operation Methods," page 55.

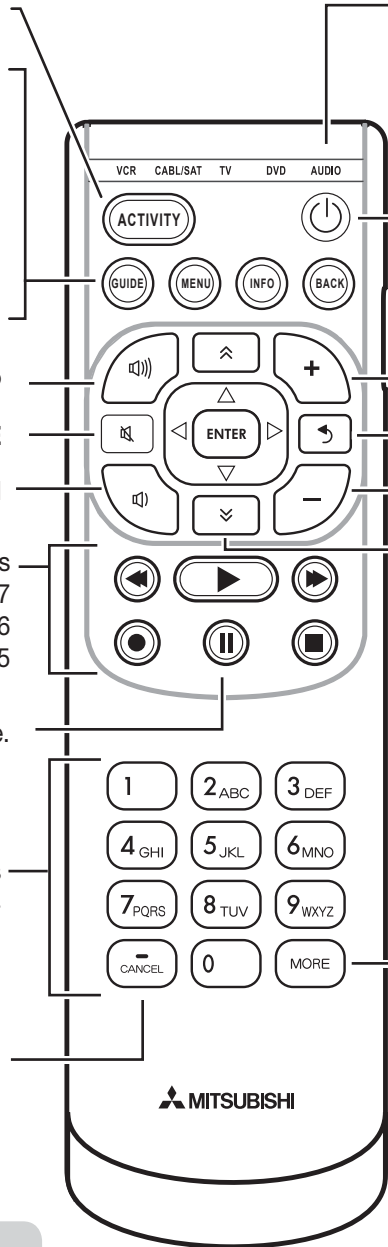

MITSUBISHI

TV Controls, continued

TV Control Panel

Buttons on the control panel duplicate some keys on the remote control.

- **ACTIVITY**, **CH**, and **VOL** are available when no TV menus are displayed.
- **▲▼◀▶** and **ENTER** are available when using TV menus or after activating a special function.


System Reset

If the TV fails to respond to the remote control, the control-panel buttons, or will not power on/off, perform System Reset. Recent setting changes made before using System Reset may be lost.

To perform System Reset, press and hold the **POWER** button on the control panel for ten seconds.

Panel-Lock Release

- To release the Panel Lock using the TV control panel, press and hold the **ACTIVITY** button on the control panel for ten seconds. If the TV is off, press the **POWER** button to have it power on.
- To activate the Panel Lock, use the **Lock** menu, page 51.

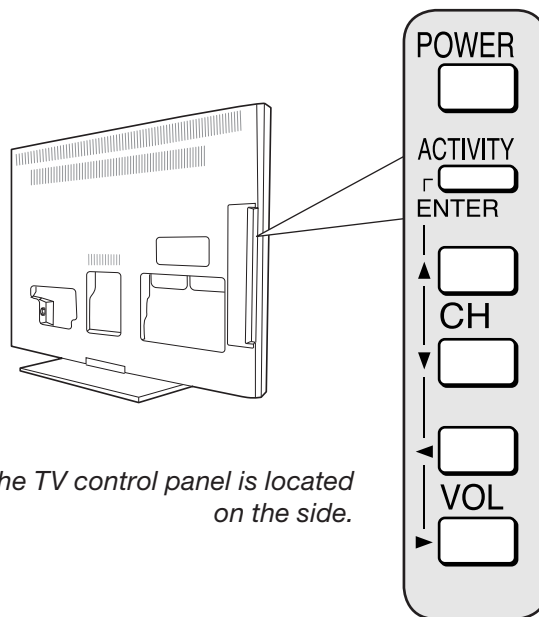

The TV control panel is located on the side.

IR Sensor




The TV's IR (infrared) sensor receives signals from the remote control. Do not cover the sensor.

POWER Indicator

Key

- Off
- Steady On
- ◐ Slow Blinking

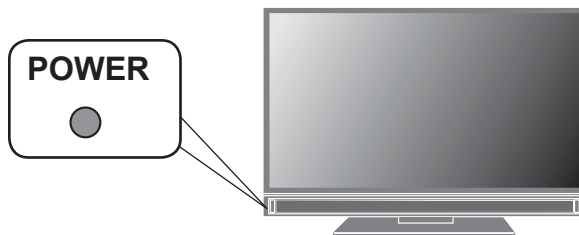

| LED Color | TV Condition | Additional Information |
|-----------|--|--|
| None ○ | TV is powered off. | Normal operation. |
| Green ● | TV is powered on. | Normal operation. |
| Green ◐ | TV powered off, auto-on TV Timer is set. | Normal operation. TV can be turned on at any time. |
| Red ● | TV may require service. | Turn off the TV and unplug the set from the AC power source. Wait one minute and then plug the set back in. See Appendix E. If the red LED is still on, contact your dealer or a Mitsubishi Authorized Service Center. Go to www.mitsubishi-tv.com or call 1-800-332-2119 to receive Authorized Service Center information. |

Setting Up TV Inputs

Channel Scan for Digital Channels

If you skip this step, the TV cannot receive digital channels.

If using an antenna or direct cable service (no cable box), connect the incoming coaxial cable to the TV's **ANT** input. Refer to page 20.

You must perform a channel scan to enable reception of all available high-definition and standard-definition digital channels. The channel scan will search for channels available locally and save them to memory.

Memorizing Channels with Channel Scan For the ANT input

 
 
To start channel memorization

1. Power on the TV.
2. Press **MENU** and open the **Initial > Channel** menu.



Start channel memorization from the **Initial > Channel** menu.

3. Press **ENTER** to enter the menu.
4. Select **Ant Air** if connected to an over-the-air antenna. Select **Ant Cable** for direct cable (service without a cable box).
5. Highlight **Scan** and press **ENTER**. Channel memorization may take up to 15 minutes to complete.




To stop channel memorization before completion, press CANCEL.

Use the **Initial > Channel > Edit** menu (page 45) for additional channel options, such as adding or deleting channels from memory.

Setting Up Other Inputs

1. Connect your devices to the TV, making note of which TV input jack is used for each device. See "TV Connections," page 16, for recommendations.
2. Power on the devices to ensure detection.
3. Power on the TV.
The TV will display the **New Device Found** screen for each new connection it detects. Learn more about Auto Input/Auto Output Sensing on the opposite page.
4. Select the device type if the device is not recognized automatically.

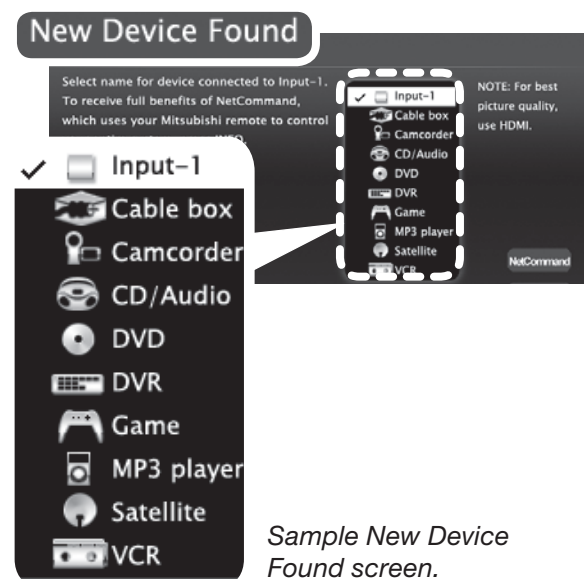

Sample **New Device Found** screen.

5. **153 Series.** You can perform NetCommand IR "learning" after selecting the device type or at a later time when convenient. To perform now, highlight **NetCommand** and press **ENTER**. See "Initial NetCommand Setup," page 54 or "Setting Up A/V Receiver Control," page 59.

Important Note for NetCommand IR Users

153 Series. Be sure to select the correct device type here. Although you can change the device type later in the **Inputs > Name** menu, any "learned" NetCommand IR codes will be erased when you make the change.

6. Press **BACK** to close the **New Device Found** screen. The TV will then display the **New Device Found** screen for the next connection it finds.

Setting Up TV Inputs, continued

About Auto Input Sensing/ Auto Output Sensing

This TV's Easy Connect™ Auto Sensing feature detects most connections automatically.

Auto Sensing for Most Devices

When you first connect a device, the TV will:

- Detect the connected device and automatically switch to it.
- Prompt you to identify the device type.
- 153 Series.** Prompt you to perform NetCommand set-up for the device, if available.
- Repeat these steps for any other newly detected devices.

Which Jacks Trigger Auto Sensing?


| TV Jacks and Auto Sensing | Auto Sensing | No Auto Sensing |
|--|--------------|-----------------|
| Y/VIDEO (detected as composite video) | ✓ | |
| Y/VIDEO plus Pb (detected as component video) | ✓ | |
| HDMI * | ✓ | |
| USB | ✓ | |
| DIGITAL AUDIO OUTPUT (orange jack) | ✓ | |
| AVR AUDIO OUTPUT (red jack) | ✓ | |
| SUBWOOFER OUTPUT (black jack) | ✓ | |
| DIGITAL AUDIO INPUT (orange jack) | ✓ | |
| ANT (Antenna) | | ✓ |
| IR NetCommand Output/External Controller Input (153 series) | ✓ | |

* The TV may not detect an HDMI device when the device is powered off. Detection of the device will occur the next time it is powered on.

When You First Connect a Device

- **Most Device Types.** Select the device type from the on-screen list. The device type you select here will appear as a device icon in the **Activity** menu.
- **A/V Receiver**
 - The TV detects audio connections on the **DIGITAL AUDIO OUTPUT** jack and the right (red) **AVR AUDIO OUTPUT** jack.
 - For an HDMI A/V receiver, select **AVR** from the list of device types if the A/V receiver is not recognized automatically.

- **HDMI CEC Devices Compatible with the TV's HDMI Control Feature.** Compatible CEC-enabled HDMI devices are often recognized automatically by the TV. HDMI Control may allow you to control some functions of a CEC-enabled device. See Appendix C, "HDMI Control of CEC Devices."

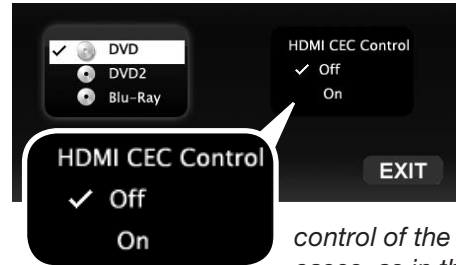

New Device Found screen for a device with HDMI control enabled. Select On to enable the TV's CEC

control of the device. In some cases, as in the example above, you will also be prompted to select a device name.

Tips on Auto Sensing

- Choose a different name for each input.
- The antenna input (**ANT**) is never detected, although you can turn off the unused antenna input in the **Inputs > Name** menu.
- Change the device type displayed in the **Activity** menu in the **Inputs > Name** menu (page 47). You must switch to a different input before changing the device type.
- **153 Series.** Any "learned" NetCommand IR codes will be erased if you change the device type in the **Inputs > Name** menu.

Reactivating Auto Sensing for an HDMI Input

When you disconnect an HDMI device, Auto Sensing is disabled until you perform these steps.

1. Switch to any input other than the one to be disconnected.
2. Disconnect the HDMI device.
3. Delete the removed HDMI device in the **Inputs > Name** menu (see "Removing an HDMI Device," page 76).
4. Connect the new HDMI device and the **New Device Found** screen will display.

Basic TV Operation

Watching Broadcast TV

TV Connected to an Antenna, Direct Cable Service, Cable Box, Set-Top Box, or Satellite Receiver

1. Press **ACTIVITY**.
2. Press **▼▲** and **▶** to select a broadcast source. If you named devices during Auto Input Sensing, select an input from the **Watch TV** group.

Note: For more about the **Activity** menu, see page 24.




Activity menu, antenna input selected

3. Press **ENTER** to switch to the input.
4. Tune to a channel on the ANT input using any of these methods.
 - Enter the channel number using the number keys on the remote control and press **ENTER**. For a two-part digital channel, such as 3-1, press 3 **CANCEL** 1 to enter a dash (separator).
 - Press **CHANNEL UP/CHANNEL DN (+, -)** to change channels one channel at a time.
 - Press **↶ (LAST)** to switch back to the previously tuned channel.
 - **Antenna or Direct Cable Only.** Press **GUIDE** to display ChannelView channel listings, highlight a channel number, and press **ENTER** to tune.

Watching DVDs or Videos

TV Connected to a DVD Player, DVR, or VCR

1. Press **ACTIVITY**.
2. Press **▼▲** and **▶** to select a movie source. If you named devices during Auto Input Sensing, select an input from the **Watch Movie** group.

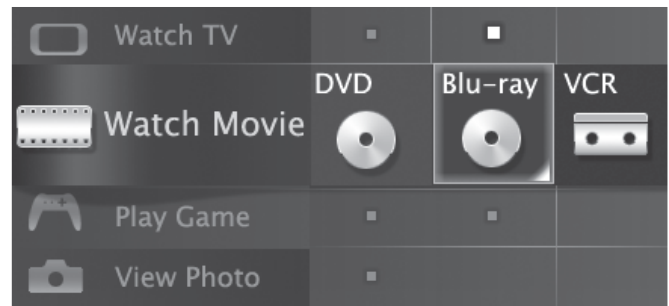

Activity menu, DVD input selected

3. Press **ENTER** to switch to the input.

Basic TV Operation, continued

Making Picture Adjustments

To get the best picture under different viewing conditions, set the Picture Mode before changing other video settings. Picture adjustments are described on pages 38, 41, and 42.

1. Press **MORE**.
2. Press **8 (VIDEO)**.
3. Press **▼ ▲** to display the **Picture Mode** adjustment.
4. Press **◀ ▶** to select a Picture Mode using these guidelines:

| Name | When to Use |
|------------------|----------------------------|
| Brilliant | Under bright light |
| Game | With gaming consoles |
| Bright | For most daytime viewing |
| Natural | For most nighttime viewing |

5. Press **▼ ▲** to display the name of the next adjustment you want.
6. Press **◀ ▶** to make the adjustment.
7. Press **BACK** to clear or just wait for the display to clear after a few seconds of inactivity.

Additional picture adjustments are described on pages 41 and 42.

Audio Settings

Changing Audio Settings

1. Press **MORE**.
2. Press **9 (AUDIO)**.
3. Press **▼ ▲** to display the name of the adjustment you want.
4. Press **◀ ▶** to change the setting.

Changing the Audio Output

To switch audio output from the internal TV speakers to a connected external sound system or headphones:

1. Press **MORE**.
2. Press **9 (AUDIO)**.
3. Press **▼ ▲** until the **Speakers** option is displayed. The **Speakers** option will display only if a connection has been detected on one of the TV's audio outputs.
4. Press **▶** to switch between **TV** and either **AV Receiver** or **Headphones**.

Other TV Features

- To set the TV Clock see page 44. Set the TV Clock if you plan to use the TV Timer (page 44) or ChannelView (page 25) features.
- To set parental controls, see the **Lock** menu, page 49.
- To change the input names that appear in the **Activity** menu, see **Inputs > Name** options, page 47.
- To program the remote control to operate other A/V devices, see Appendix B, "Programming the Remote Control," page 67.
- To activate Audio Lock to control an external sound system with the TV's remote control left in **TV** mode. See page 68.
- To control compatible devices using HDMI CEC control, see Appendix C, "HDMI Control of CEC Devices," page 74.
- To view still and moving digital camera images on the TV, see "Camera Images and Music Files," page 30.
- **153 Series.** To control A/V devices with NetCommand, see chapter 5, "NetCommand IR Control for Most Devices" on (page 52).

Other Information

- **General Cleaning.** See "Cleaning Recommendations," page 77.
- **Troubleshooting, Service, and Product Support.** See Appendix E, page 78.
- **Warranty Information.** See the TV warranty on page 89.

2 TV Connections

Before You Begin

Auto Input/Auto Output Sensing

The TV's Auto Sensing feature automatically recognizes most connections and prompts you to identify the type of device connected. See page 13 for more on Auto Sensing.

Connection Types

Use the connection types available on your input devices that will give the best video quality. For example, choose HDMI over component video, and choose component video over composite video.

Picture Quality

For best picture quality, route signals directly from the input device to the TV whenever possible.

Surround Sound



For best surround sound audio quality, route audio or HDMI cables from the source device directly to your TV (for Sound Projector) or directly to your A/V receiver if using an external sound system.

IMPORTANT


Accessory items such as cables, adapters, splitters, or combiners required for TV connections are not supplied with the TV. These items are available at most electronics stores.

Cable Management


Install the cable tie (supplied) in one of the four mounting holes on the back.

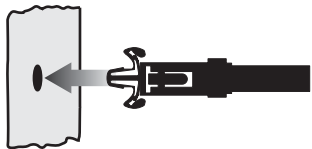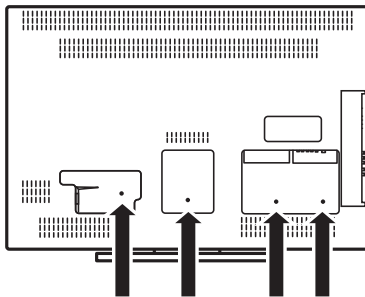


Lock the cable tie in place by pushing the end into the mounting hole.

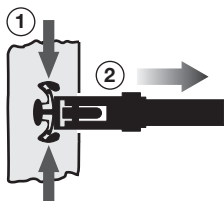

To remove the cable tie, squeeze the side tabs and pull out.

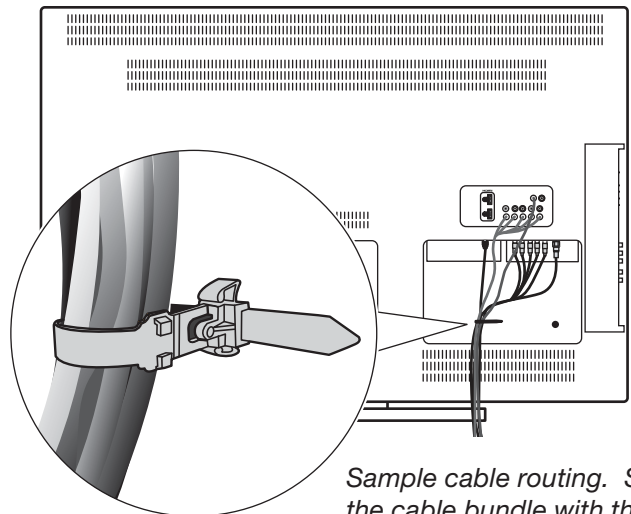

Sample cable routing. Secure the cable bundle with the release tab facing out.




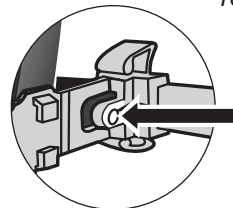


Press the release tab to loosen the cable tie.

Inputs and Outputs

Connector Panels

**IR-NetCommand Output/
External Controller Input**
153 series
NetCommand, page 53
External Controller Input,
page 18

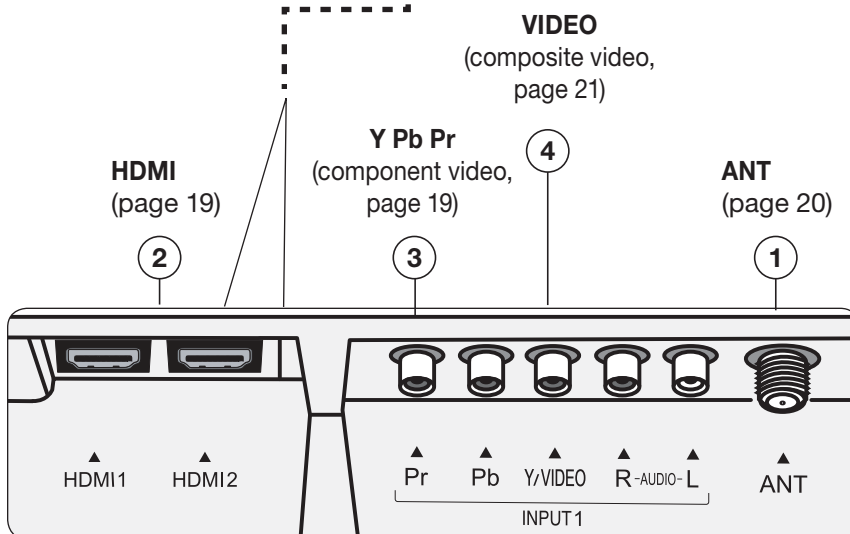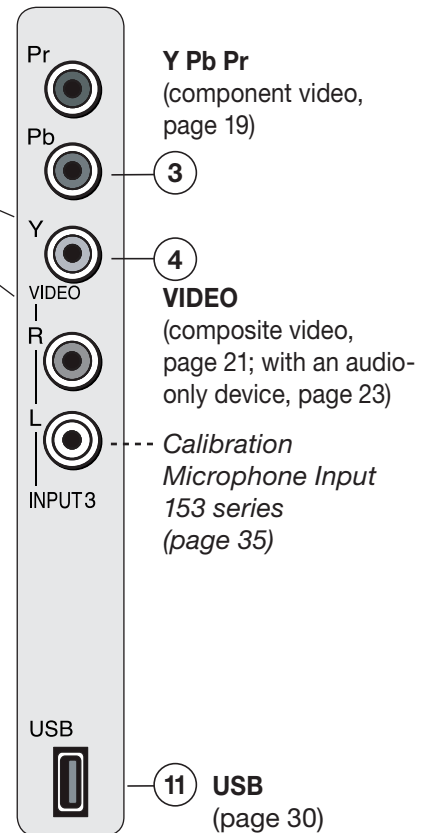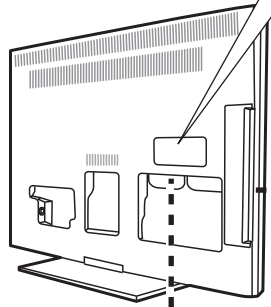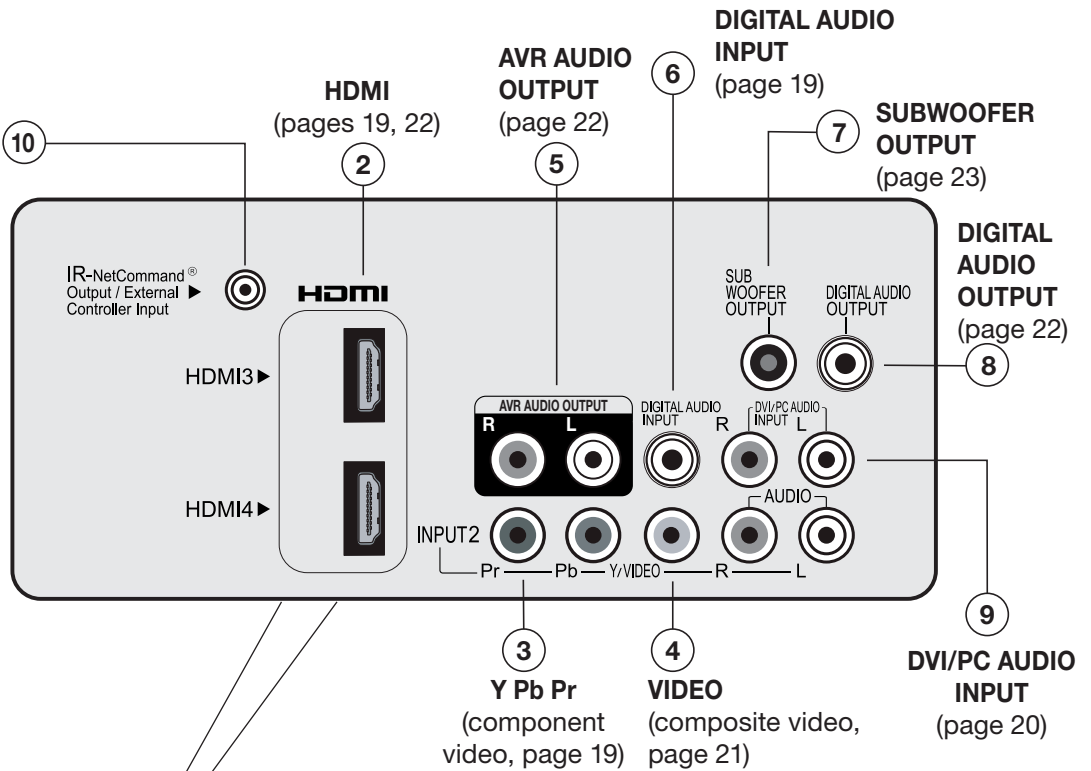

Inputs and Outputs, continued

1. ANT (Antenna)

Connect your main antenna or direct cable service (no cable box) to **ANT**. The **ANT** input can receive digital and analog over-the-air channels from a VHF/UHF antenna or non-scrambled digital/analog cable source.

2. HDMI™ Inputs (High-Definition Multimedia Interface)

The HDMI inputs support uncompressed standard and high-definition digital video formats, PCM digital stereo audio, and digital 5.1 surround sound. These inputs are HDCP (High-Bandwidth Digital Copy Protection) compliant.

Mitsubishi recommends you use category 2 HDMI cables, also called high-speed HDMI cables, to connect HDMI 1.3 source devices. High-speed category 2 cables bring you the full benefits of Deep Color and **x.v.Color**.

The TV's HDMI inputs are compatible with many DVI-D and HDMI computer video signals.

Use the HDMI inputs to connect to CEA-861 HDMI compliant devices such as a high-definition receiver or DVD player. These inputs support 480i, 480p, 720p, 1080i, and 1080p video formats.

These HDMI inputs can also accept digital DVI video signals. To connect a device's DVI output to the TV's HDMI input, use an HDMI-to-DVI adapter or cable plus analog audio cables. Connect the analog audio cables to the **DVI/PC INPUT AUDIO** jacks on the TV to receive left and right stereo audio from your DVI device.

3. Y Pb Pr (Component Video)

Connect devices with component video outputs to this jack. Use the adjacent **AUDIO R** and **L** jacks if you wish to send audio to the TV.

HDMI Cable Categories

HDMI cables are available as Category 1 and Category 2 types.

- **Category 2 Cables** (also called high-speed HDMI cables). Newer, HDMI 1.3-compliant DVD players, video games, and set-top boxes require Category 2 cables, suitable for clock frequencies up to 340 MHz or data rates of up to 10.2 gigabits per second. Use category 2 cables for high-speed 1080p HD signals carrying extended color encodings (i.e., 30 or more bits, also called Deep Color). Category 2 cables are also suitable for standard HDTV signals.
- **Category 1 Cables** (also called standard HDMI cables). Category 1 cables may be unmarked. They are suitable for standard HDTV 720p, 1080i, and 1080p signals with 8-bit color depth. Use category 1 cables for clock frequencies up to 74.25 MHz or data rates of up to 2.23 gigabits per second.

4. VIDEO (Composite Video)

Connect a VCR, DVD player, standard satellite receiver, or other A/V device to the TV. Use the adjacent **AUDIO R** and **L** inputs if you wish to send audio to the TV.

5. AVR AUDIO OUTPUT

Use **AVR AUDIO OUTPUT** to send analog audio of the current program to an analog A/V surround sound receiver or stereo system. Digital audio from digital channels and HDMI devices is converted to analog audio by the TV for output on this jack. This is the only audio connection needed to the TV if using an analog A/V receiver or stereo system.

Headphones. These jacks can also be used for headphones that accept standard line level audio signals. An adapter may be needed.

6. DIGITAL AUDIO INPUT

This input sends digital surround sound to the TV's speaker array from a device, such as a DVD player, connected to **INPUT 2**.

7. SUBWOOFER OUTPUT

Connect a powered subwoofer to complement Sound Projector speaker effects.

8. DIGITAL AUDIO OUTPUT

This output sends Dolby Digital or PCM digital audio to your digital A/V surround sound receiver. Incoming analog audio is converted by the TV to PCM digital audio. If you have a digital A/V receiver, in most cases this is the only audio connection needed between the TV and your A/V receiver.

9. DVI/PC AUDIO INPUT

When connecting a DVI device to one of the TV's HDMI inputs, use these jacks to send left and right analog audio to the TV.

10. IR-NetCommand Output/External Controller Input

153 Series. Use an IR emitter cable with this jack to send control signals to external IR remote-controlled devices. Alternatively, your professional installer can use this jack as the input for an external controller.

Connect to this jack and when the **New Device Found** screen appears, select operation of the jack as either an input (for an external controller) or as an output (for NetCommand IR control). See page 53.

11. USB

The TV can read JPEG photo files and mp3 or wma music files from a USB device connected to the USB port.

Y Pb Pr Component Video Device

HDTV Cable Box, Satellite Receiver, DVD/Blu-ray Player

Suitable for use with Sound Projector surround sound


If your source device has an HDMI output, use the connections for HDMI devices described on this page instead of component video.

Required:

1. RCA-type component video cables
2. Audio cable(s)
 - 2a. Digital audio cable
 - or
 - 2b. Left/right analog stereo audio cables.

Note:

- To hear digital surround sound from the TV's Sound Projector speaker array, connect the digital audio output from the device to the TV's **DIGITAL AUDIO INPUT** jack.
- To hear digital surround sound from an external sound system, connect the digital audio output from the device directly to your digital A/V receiver.

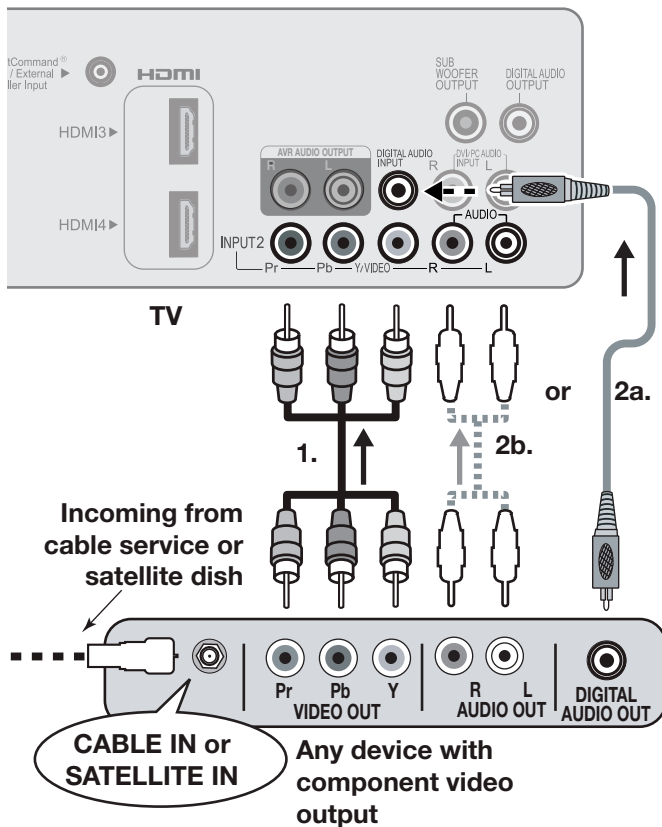

HDMI Device


HDTV Cable Box, Satellite Receiver, DVD/Blu-ray Player

Suitable for use with Sound Projector surround sound

Required: HDMI-to-HDMI cable.

Connect an HDMI cable from the TV back panel to the HDMI device output. HDMI devices provide video and audio through the single cable. This connection sends digital surround sound from the source device to the TV's speaker array.

Mitsubishi recommends you use category 2 (high-speed) HDMI cables to connect HDMI 1.3 source devices. High-speed category 2 cables bring you the full benefits of Deep Color and x.v.Color. See "HDMI Cable Categories" on the opposite page for more on HDMI cable types.

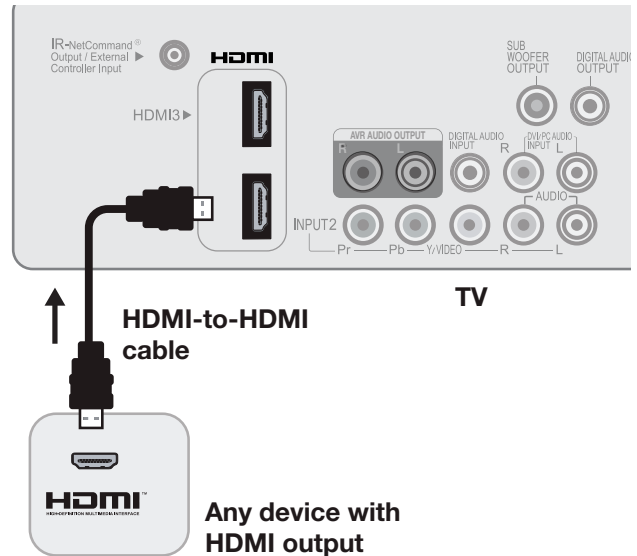

DVI Video Device

Cable Box, Satellite Receiver, DVD Player


Connect DVI devices (digital only) to the TV's HDMI input jacks.

Required:

1. DVI-to-HDMI cable or DVI/HDMI adapter and HDMI cable
2. Left/right analog audio cables.

Some devices require connection to an analog input first in order to view on-screen menus and to select DVI as the output. Please review your equipment instructions for DVI connectivity and compatibility.


Note: The HDMI connection supports copy protection (HDCP).

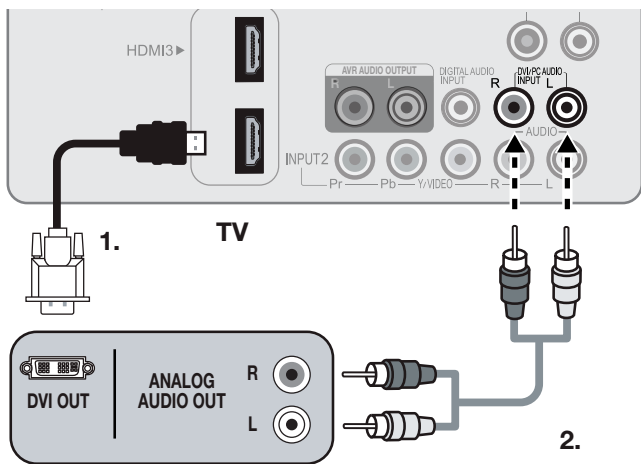

Any device with DVI output

Antenna or Cable TV Service

Connect the incoming cable to the TV's ANT input.

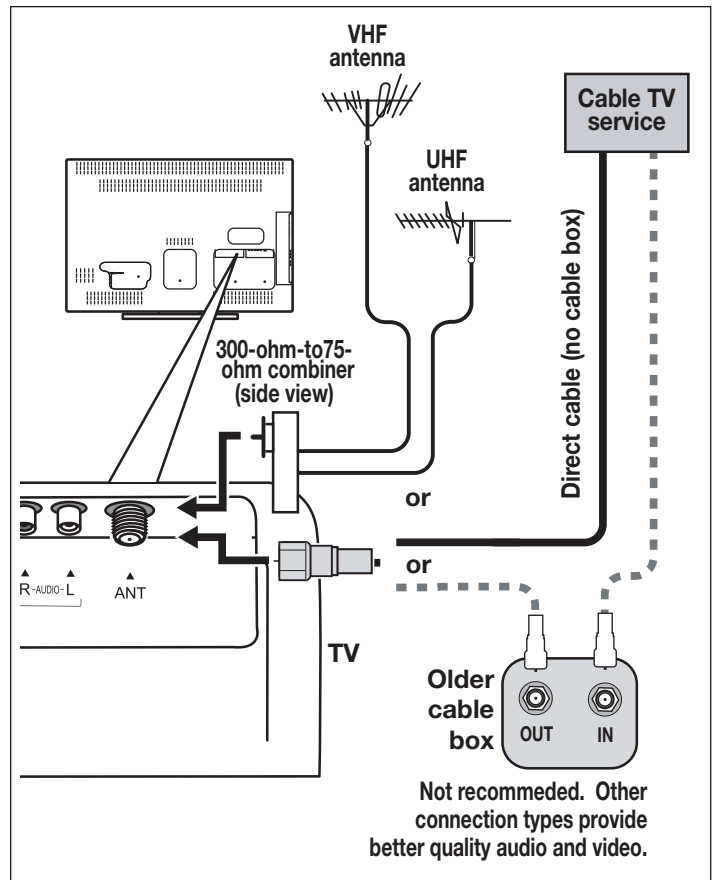


Composite Video Device

VCR or other device with composite video output

Required:

1. Composite video cable (usually yellow)
2. Analog stereo audio cables.

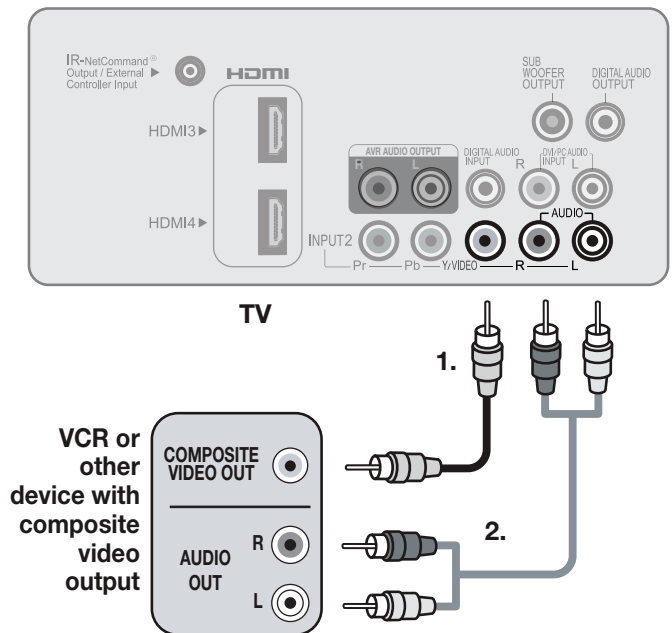

VCR or other device with composite video output


VCR or DVD Recorder to an Antenna or Wall Outlet Cable

Required:

1. Video cables
 - 1a. Component video cables (red/blue/green)
 - or
 - 1b. Composite video cable (usually yellow)
2. Left/right analog audio cables.
3. Two-way RF splitter
4. Two coaxial cables

Note:

- Use composite video only if component video or HDMI are unavailable. For an HDMI connection between the TV and recorder, see page 19.
- If your recording device has an analog-only tuner, you must use a digital converter box to enable recording of digital broadcasts.

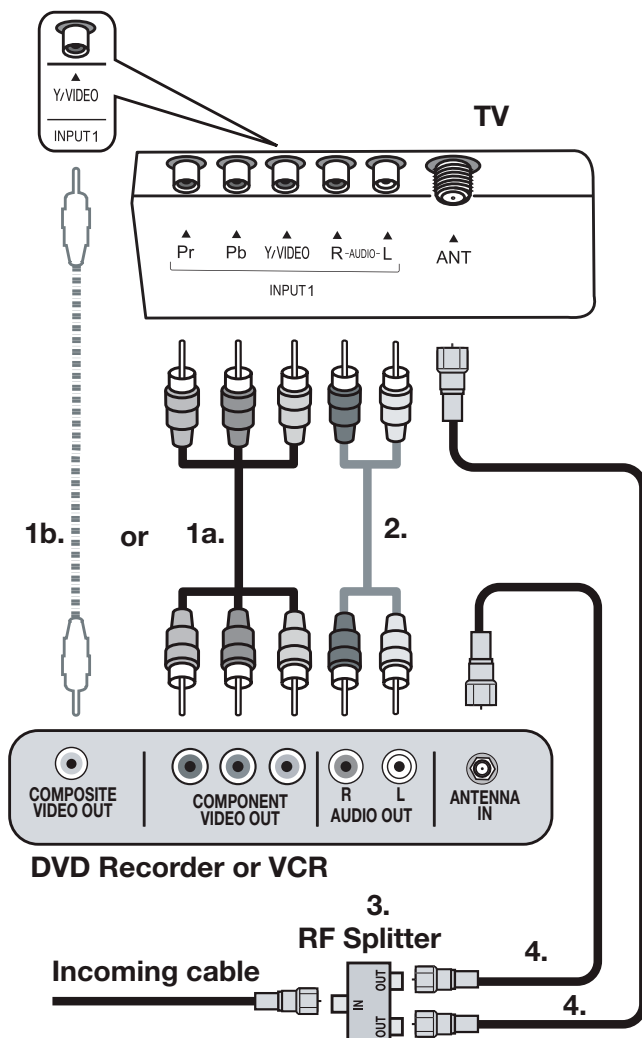


VCR or DVD Recorder to a Cable Box

Required:

- Video cables
 - 1a. Component video cables (red/blue/green)
 - or
 - 1b. Composite video cable (usually yellow)
- 2. Left/right analog audio cables.
- 3. Two-way RF splitter
- 4. Three coaxial cables
- 5. Video and audio cables required to connect the TV to the cable box.

Notes: Use composite video if only if component video or HDMI are unavailable. For an HDMI connection between the TV and recorder, see page 19.

When using this connection configuration, it is possible to view live cable programs through the recording device. For best picture quality always view live cable programs directly from the TV input connected to the cable box device.

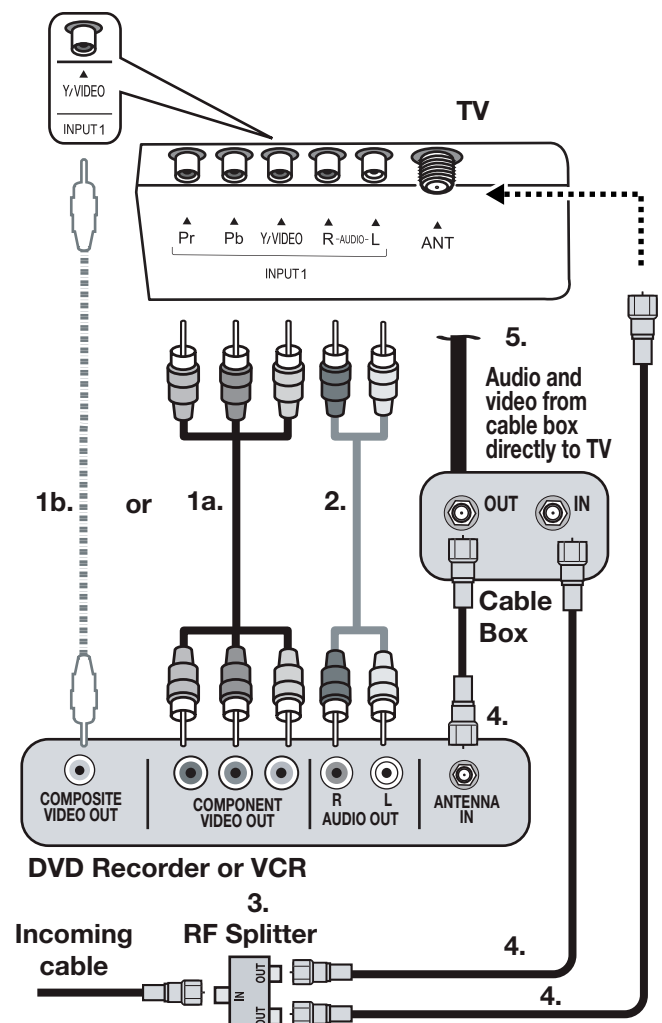


A/V Receiver

Most setups require either a digital audio cable or analog stereo audio cables. To send audio from TV channels received on the **ANT** input or devices connected directly to the TV, you must use one of the connections shown below. Usually, only one of these connections is required.

The TV makes all audio available in digital and analog formats:

- Analog audio coming into the TV is available as output in digital stereo format on the **DIGITAL AUDIO OUTPUT** jack.
- Digital incoming audio is available as analog output on the **AVR AUDIO OUTPUT L** and **R** jacks.

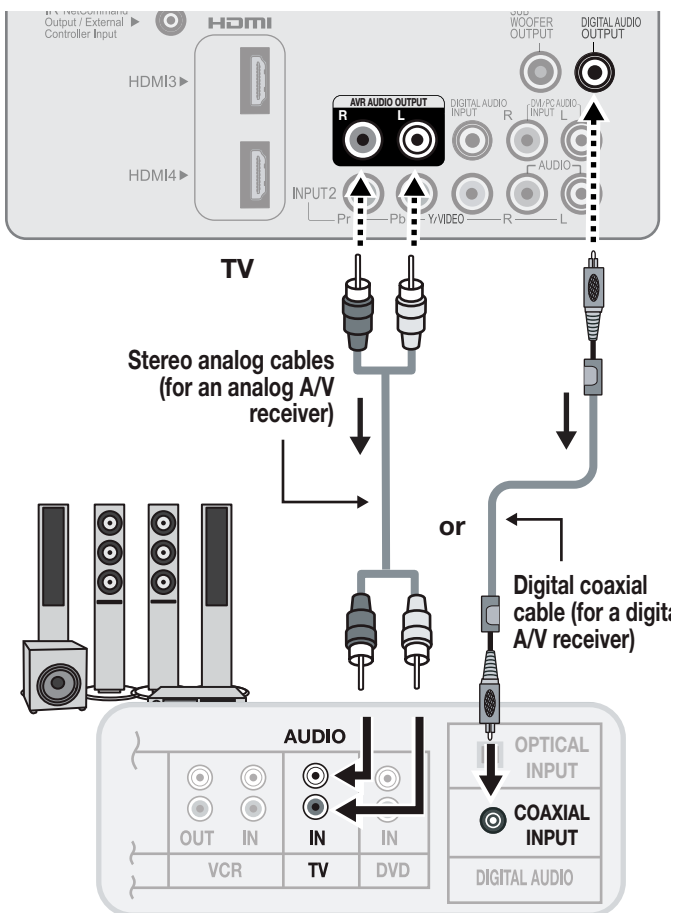

A/V receiver back panel

Note:

- On rare occasions, an HDMI signal may be copy-restricted and cannot be output from the TV as a digital signal. To hear these copy-protected signals through the A/V receiver, use the connection for an analog A/V receiver.
- Check the A/V receiver's Owner's Guide for information concerning use of the digital input and switching between digital sound and analog stereo sound from the TV.

A/V Receiver with HDMI Output

Required: One HDMI-to-HDMI cable


This option allows you to view content from devices connected to an A/V receiver over a single HDMI cable going to the TV. The HDMI cable can transmit both audio and video to the TV.

You can use an HDMI connection as described here in addition to an audio connection from the TV's audio output. The optional audio connection allows you to hear, through the A/V receiver, devices connected to the TV only, e.g., an antenna on the **ANT** input.

You may be able to use the TV's remote control (in **TV mode**) to operate connected CEC-enabled HDMI devices. Experiment with your equipment to determine which functions are available to the TV's remote control. See Appendix C, page 74.


153 Series: This setup allows you to use NetCommand-controlled audio and video switching over the HDMI cable. See "Case 3: Automatic Audio and Video Switching via HDMI" on page 62.

To use NetCommand to supplement HDMI control of a CEC-enabled A/V receiver, note the recommendations under "More About Using an HDMI Connection," page 62.

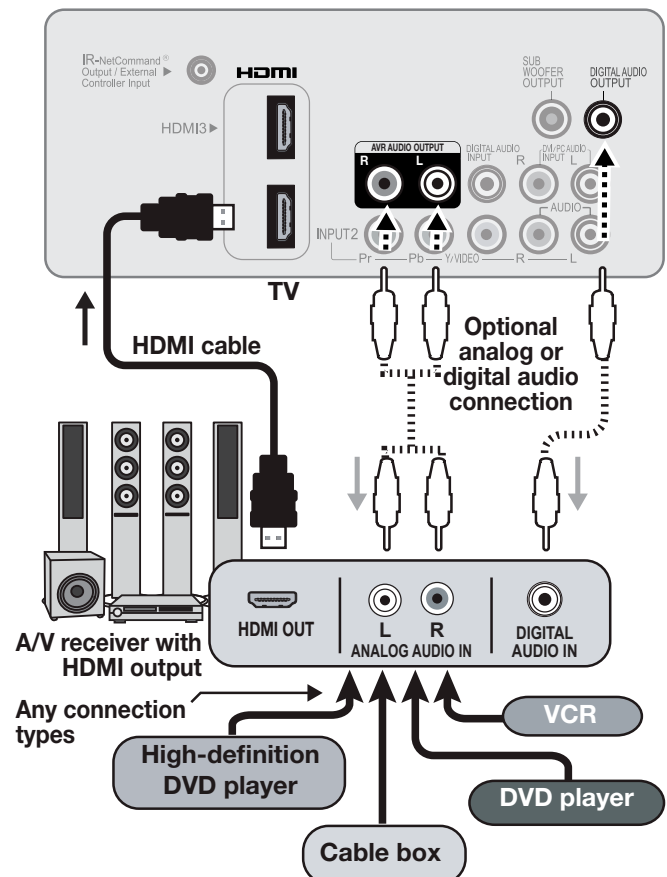


Subwoofer

Required: Audio cable with RCA-style plug

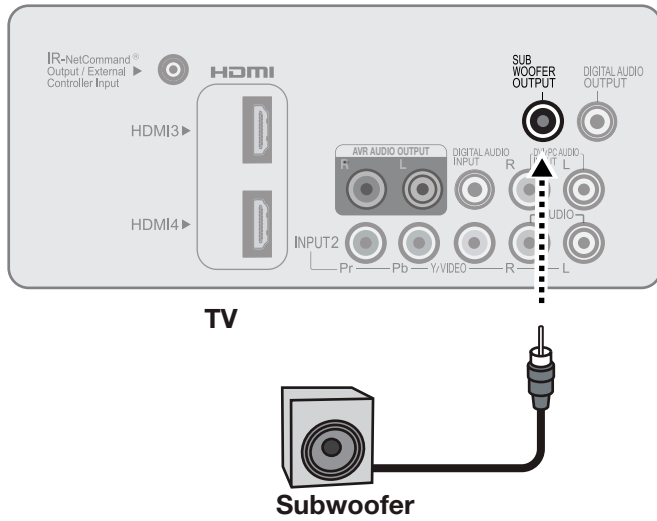

Audio-Only Device

Keep an unused RCA-style connector in the **Y/VIDEO** jack while using an audio-only device such as an MP3 or CD player.

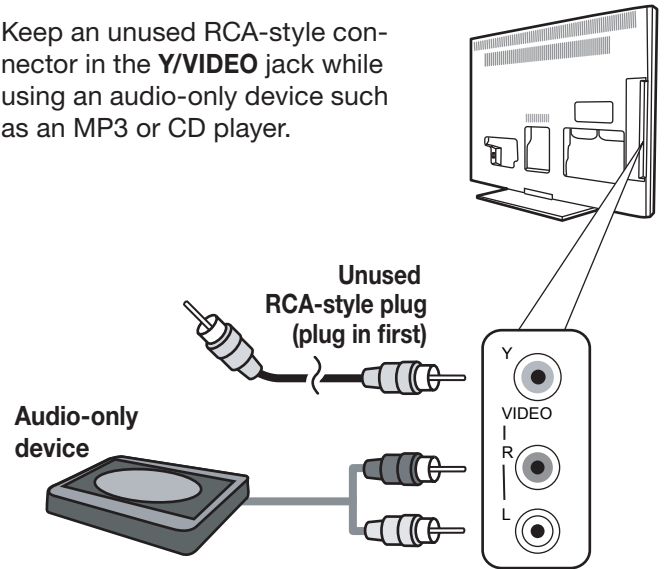


3 Using TV Features

Selecting an Input

The **Activity** menu lets you switch TV inputs. If you named devices during Auto Input Sensing, the inputs are organized into groups based on possible ways to use each device.

1. Press the **ACTIVITY** key.
2. Use **▲▼** to move through groups of TV inputs.
3. Use **◀▶** to select an input.
4. Press **ENTER** to switch to the input.

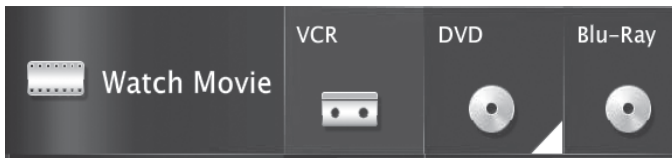

- To change the list of inputs shown in each activity group, see **Inputs > Activity**, page 47.
- To assign or change the names of input icons, use the **Inputs > Name** menu, page 47.

Sleep Timer

The Sleep Timer turns the TV off after the length of time you set.

To set the TV to turn on at a certain time of day, see the **Initial > Timer** menu on page 44.

Setting the Sleep Timer

1. Press **MORE** on the remote control. The TV's **MORE** menu will display.
2. Press **CANCEL (SLEEP)** repeatedly to increase the time in 30-minute increments. The maximum is 120 minutes.
3. Press **BACK** or wait five seconds without pressing any keys for the message to disappear.

Viewing or Changing the Sleep Timer

1. Press **MORE**.
2. Press **CANCEL (SLEEP)**.
3. Press **CANCEL (SLEEP)** additional times to change the number of minutes before the TV powers off.



With the **MORE** menu displayed, press the **CANCEL** key on the remote control to activate or deactivate the Sleep feature.

ChannelView Channel Listings



ChannelView. Programs for the tuned channel are listed on right side of screen.

ChannelView™ shows memorized channels on the **ANT** input. It displays channel names and program information for digital channels as sent by broadcasters or your local cable service provider (information may be incomplete). No program information is displayed for analog channels.

Note: You must set the TV Clock (page 44) to receive ChannelView listings for the current channel.

Using ChannelView

| Feature | Instructions |
|---|--|
| Receive updates for a digital channel. | <ol style="list-style-type: none"> 1. Press ▲▼ to highlight a channel number. 2. Press the INFO key (the screen may briefly go blank). |
| Display/hide ChannelView listings from the ANT input. | GUIDE |
| Scan channels one by one. | Hold ▲ or ▼ . |
| Scan channels quickly. | Hold PAGE UP/PAGE DN |
| Jump to listings for a specific channel. | <ol style="list-style-type: none"> 1. Enter the channel number. 2. Press ENTER. |
| See more of the program description for the current channel (if available). | INFO |
| Tune to the highlighted channel. | ENTER |

Redirecting Audio Output

Selecting an Audio Output Device

1. Press **MORE** and then **9 (AUDIO)**.
2. Press **▲** to show the **Speakers** option. The **Speakers** option will display only if there is a recognized audio device on an audio or HDMI output.
3. Press **▶** to select either **AV Receiver, Headphones, or TV**.

Adjusting an External Subwoofer

1. Play sample video or music containing low-frequency bass sound.
2. Press **MORE** and then **9 (AUDIO)**. Use **▲▼** to display the **Subwoofer** option.
3. With **Subwoofer** set to **On**, press **ENTER** to display a slider for volume.
4. Press **◀▶** to adjust the subwoofer volume.

Disconnecting an Analog A/V Receiver

When you disconnect an analog A/V receiver, change the **Speakers** setting to **TV** to hear sound from the TV speakers. Change the setting using the remote control's **MORE > 9 (AUDIO)** key or the **Adjust > Audio > Speakers** menu.

Controlling A/V Receiver Volume

With a Standard TV Setup

- **Recommended Method:** Program the TV's remote control for your A/V receiver and enable the Audio Lock feature. See page 68.
- Program the TV's remote control for your A/V receiver and set the TV remote control's mode to **AUDIO**. Return the control mode to **TV** to control the TV.
- Use the remote control that came with the A/V receiver.

With HDMI Control (CEC-Enabled HDMI A/V Receiver)

The TV's remote control may control some functions of the A/V receiver. See Appendix C, "HDMI Control of CEC Devices," page 74.


With NetCommand IR Control

153 Series. Set up NetCommand control of the A/V receiver's volume functions in the **Inputs > AVR** menu. The TV's remote will then control A/V receiver volume. See page 59.

Status Display

Press the **INFO** key to see the on-screen status display. The most common displays are shown here.

Sample information from the on-screen status display

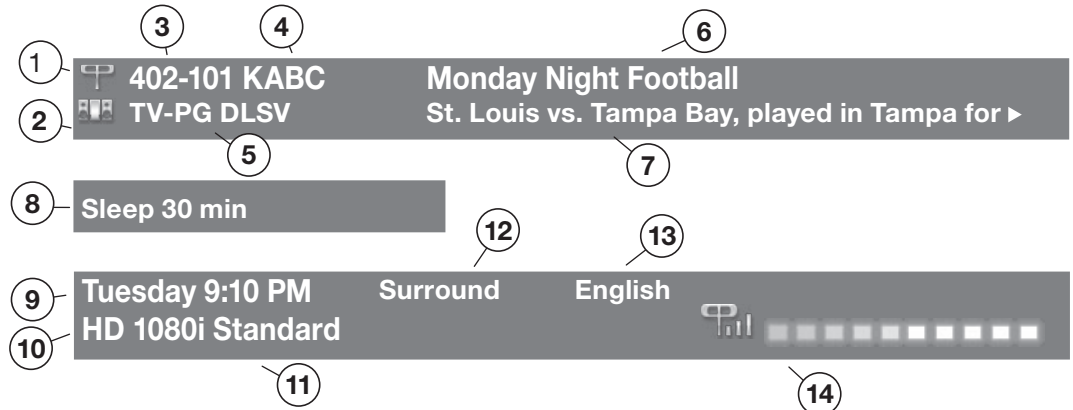

About Channel Numbers

Channel Numbers for Over-the-Air Reception or Reception by Direct Cable

Note: All signals are automatically converted to 1080p for display.

Standard-Definition Analog Channels



(480i) Stretch

Receiving Standard-Definition Analog Signal (480i)

Standard-Definition Digital Channels



(SD 4:3) Stretch


Receiving Standard-Definition Digital Signal (SD)

High-Definition Digital Channels



(HD 16:9) Stretch

Receiving High-Definition Digital Signal (HD)

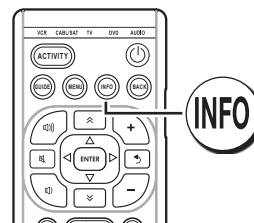

1. Current Input
2. Audio Indicator. Key:
 - TV speakers
 - External sound system
 - Headphones
 - Mute
3. Channel number (antenna source only)
Digital channel includes major and sub-channel numbers.
4. Digital channel name (if broadcast); antenna source only.
5. V-Chip rating
 - Antenna source only for digital signal
 - Antenna or **VIDEO** composite jack for analog signal
6. Program name (if broadcast); digital source only
7. Program description (if broadcast); digital source, antenna only. Press the **INFO** key additional times to see more of the description.
8. Sleep Timer remaining time
9. Day and time
10. Signal type being received
11. Screen format in use
12. **Program Audio** indicator (antenna source only)
 - Digital source: Stereo, Surround
 - Analog source: Stereo, Stereo SAP, SAP
13. Available language (digital source, antenna only)
14. Signal-strength indicator (digital source, antenna only)

TV Signals and Display Formats

This is a 16:9 widescreen TV suitable for images available from HDTV and many DVDs. You can view older-style, squarish images (4:3 aspect ratio) using one of the display formats described on this page. Press the **MORE** key and then the **0** key (**FORMAT**) to cycle through available display formats. The TV remembers the format you last used for each input.

DVD Image Definitions

Image information may be stated on the DVD case. Some DVDs support both formats described below.

Anamorphic (or Enhanced for WideScreen TV). Indicates DVDs recorded to show widescreen images properly on 16:9 TV sets using the TV's Standard format mode (recommended).

Non-Anamorphic (or 4:3, 1.33:1, Letter Box, or Full Screen). Indicates DVDs recorded for viewing on squarish TV screens. They may be full screen (4:3 or 1.33:1) which crops movies to fit the narrow TV, or letter box, which adds black top and bottom bars.

Signal Definitions

480i: Older type of interlaced signals from the **ANT** input, composite **VIDEO**, component **Y Pb Pr**, or **HDMI** jacks.

480p: Progressive-scan DVD signals on component **Y Pb Pr** or **HDMI** jacks.

720p and 1080i: High-definition signals received through component **Y Pb Pr** or **HDMI** jacks. These signals are always 16:9 (widescreen).

1080p: High-definition signals from a PC or Blu-ray player, **HDMI** inputs only.

SD 4:3: Standard-definition squarish-screen-format signals from digital channels on the **ANT** input.

SD 16:9: Standard-definition widescreen-format signals from digital channels on the **ANT** input.

HD 16:9: High-definition 16:9 widescreen signals from digital channels on the **ANT** input.











 

TV Display Format Definitions

Standard: The full-screen format used by HDTV signals. Use this format to display anamorphic DVDs with a 1.78:1 or 1.85:1 aspect ratio. Anamorphic DVDs with a 2.35:1 aspect ratio are displayed correctly but with top and bottom black bars. Squarish (4:3) images are stretched evenly from side to side. Available for all signals.







Expand: Enlarges the picture to fill the screen by cropping the top and bottom; useful for reducing the letter box top and bottom bars of non-anamorphic DVD images.

Zoom: Enlarges the picture to fill the screen by cropping the sides, top, and bottom to eliminate black bars.

 - **480i/480p and SD 4:3 signals:** Eliminates top and bottom bars on anamorphic DVDs with a 2.35:1 aspect ratio.
- **720p, 1080i, SD 16:9, and HD signals:** Eliminates bars added to squarish 4:3 images.

| TV Display | Original Signal | | Anamorphic DVD | |
|---------------------|--|--|---|---|
| | Non-anamorphic or SD 4:3 | | | |
| Standard |  | Distorted. Not recommended. |  | Recommended |
| Expand |  | Recommended for letterbox. See Note 1. |  | Distorted; not recommended. See Note 1. |
| Zoom |  | Distorted. Not recommended. See Note 1. |  | Recommended for anamorphic 2.35:1 images. See Note 1. |
| Stretch |  | Recommended for standard broadcasts. See Note 1. |  | Distorted; not recommended. See Note 1. |
| Stretch Plus |  | Recommended for standard broadcasts. See Note 1. |  | Distorted; not recommended. See Note 1. |
| Narrow |  | See Note 1 |  | Distorted; not recommended. See Note 1. |

Note 1: Available for 480i, 480p, and digital SD 4:3 signals only.

| Original Signal | Display Formats | | |
|--|--|---|---|
| | | | |
| SD 16:9 or HD Digital 720p, 1080i, 1080p Signal |  |  | Wide Expand Recommended to remove side bars. |
| |  |  | Zoom Recommended to remove bars from the top, bottom, and sides. |
| (except 720p) |  |  | Full Native Best for computer or game images (component and HDMI only) |

TV Display Formats. Press **MORE** and then **0 (FORMAT)** to see the displays available for the current program.

Press **INFO** to see the name of the display format in use.

Stretch: Stretches squarish 4:3 images across the screen to display the entire image with less distortion than Standard.

Stretch Plus: Similar to Stretch, but minimizes distortion on the sides by expanding the picture to crop off portions of the top and bottom. Use **▲ ▼** to adjust the vertical position of the picture.

Narrow: Displays narrow 4:3 images in their original shape. Adds black side bars to fill the screen.

Wide Expand: Enlarges the picture, cropping the image on both sides. Removes or reduces black side bars added to narrow images converted to 16:9 signals for digital broadcast.

Note: All high-definition channels send widescreen (16:9) signals, but not all programming was created for the widescreen format. The broadcaster may stretch the image or add side bars to fill the widescreen area.

Full Native: Displays all pixels in the original image

Using the TV with a Personal Computer

Connecting a Computer to the TV

Use one of the connection methods listed below based on your computer's video output.


| Computer Video Output | Video Connection | Audio Connection |
|-----------------------|---|---|
| Digital DVI | DVI-to-HDMI cable or an HDMI cable with an HDMI-to-DVI adapter | Stereo audio cables |
| | Note: If the computer's audio output is a single mini jack, a mini audio-to-RCA-male "Y" adapter cable is also required. | |
| HDMI | HDMI-to-HDMI cable | No additional audio connection is required. |

IMPORTANT


This TV accepts digital computer signals only.

1. Connect the computer's digital signal output to one of the TV's **HDMI** jacks. See the connection diagrams for the method suited to your equipment.
2. Connect the computer's audio output using one of these options:
 - For digital DVI signals, connect analog left/right audio to the TV's **DVI/PC INPUT AUDIO** jacks.
 - For HDMI signals, no additional audio connection is required.
3. Power on the TV and computer. The TV will detect the connection and display the **New Device Found** screen.
4. In the **New Device Found** screen, press **▲▼** to highlight **PC** in the list of device types. It is important to use the name **PC** so that the TV processes the video signal correctly.
5. Press **BACK** to close the **New Device Found** screen.

Note: If your computer provides digital audio output (coaxial or optical), you can connect it directly to a digital A/V receiver and bypass the TV.

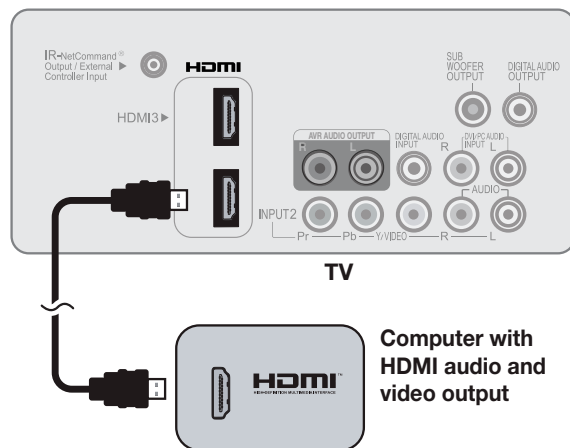

An HDMI-to-HDMI connection carries all video and audio on a single cable.

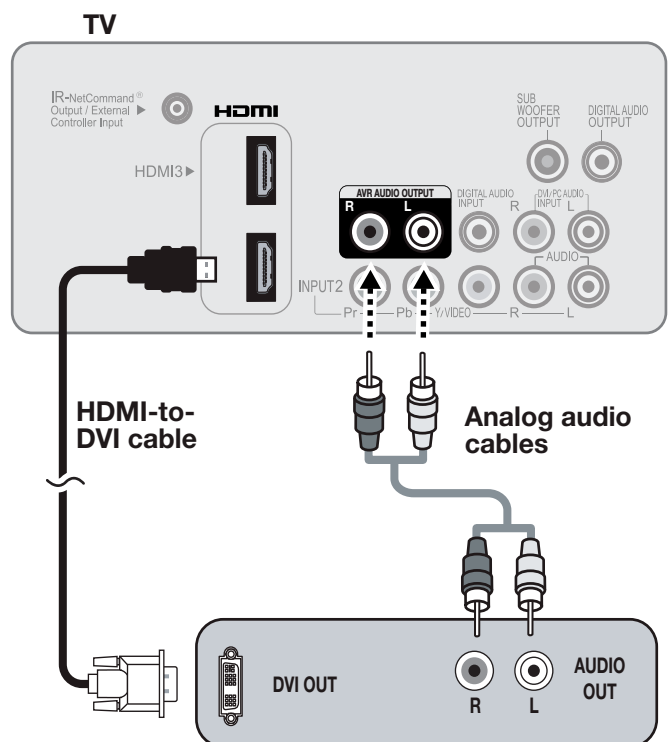

A DVI connection from a personal computer requires a separate audio connection.

Using the TV with a Personal Computer

Computer Video Adjustments

1. Power on the computer.
2. Select **PC** from the **Activity** menu. To do this, press **ACTIVITY** to open the **Activity** menu, move the highlight to the PC icon, and press **ENTER**.
3. Working from the computer, change the resolution of the computer image. View the computer image on the TV and maximize the computer resolution while maintaining a suitable aspect ratio for the image.
4. Perform TV video adjustments. Press **MORE** then press **8 (VIDEO)** repeatedly to access video-adjustment options. The following additional adjustments are available for computer video:

Horiz Position (Horizontal Position). Manually adjust the horizontal position.

Vert Position (Vertical Position). Manually adjust the vertical position.
5. Press **MORE** then press **0 (FORMAT)** repeatedly to find the picture format (aspect ratio) best suited to the image. See the chart on this page showing how different computer resolutions can be displayed on the TV.

Distortion in Computer Images

Computer images may show distortion when viewed on the TV, e.g., lines that should be straight may appear slightly curved.

Image Resolution

Your Mitsubishi TV can display the resolutions shown in the chart from standard VGA (640 x 480) through 1920 x 1080 signals at a refresh rate of 60 Hz.

In most cases, the computer will select the best resolution match to display on the TV. You can override this setting if you wish. Refer to your computer operating system's instructions for information on changing the screen resolution.

You may need to restart the computer for changes to take effect.

Tip

Set the computer's screen saver to display a pattern after several minutes of inactivity. This acts as a reminder that the TV is powered on

Computer Display Formats

Press **MORE** then press **0 (FORMAT)** repeatedly to cycle through the TV displays available for your computer's video signal.

| Computer Signal | As Displayed on TV Screen | | | |
|---------------------|---------------------------|----------------|-----------------|------|
| | Original Format | 4 X 3 Standard | 16 X 9 Standard | Zoom |
| VGA 640 X 480 | | | | |
| WVGA 848 X 480 | | | | |
| SVGA 800 X 600 | | | | |
| WSVGA 1064 X 600 | | | | |


| Original Format | Standard | Zoom |
|-----------------------|----------|------|
| XGA 1024 X 768 | | |
| PC 720p 1280 X 720 | | |
| WXGA 1360 X 768 | | |
| SXGA 1280 X 1024 | | |

| Original Format | Standard |
|-------------------------|----------|
| PC 1080p 1920 X 1080 | |

Camera Images and Music Files


- The TV can read photo or music files from a USB drive. Photos must be in JPEG format and music files must be in mp3 or wma formats. To play music files while displaying a photo slide show, see "USB Media Setup Menu" on the opposite page.
- The TV can display files of still or moving images from a camera through the **Y/VIDEO** port.

The USB Media Player Menu

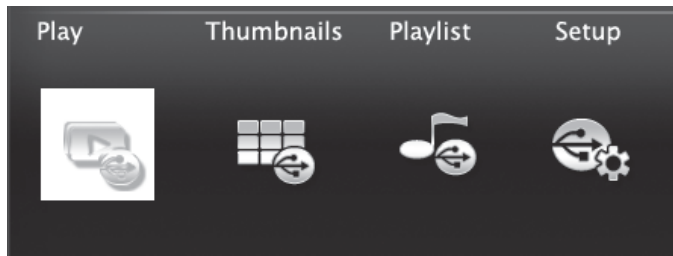

Displaying the Menu

- Back up the data on your USB drive before connecting it to the TV. Mitsubishi is not responsible for any file damage or data loss.
- Connect your USB drive to the TV's USB port. The **USB Media Player** menu displays while files are being read. Wait until the **Play** icon appears highlighted and in full color.

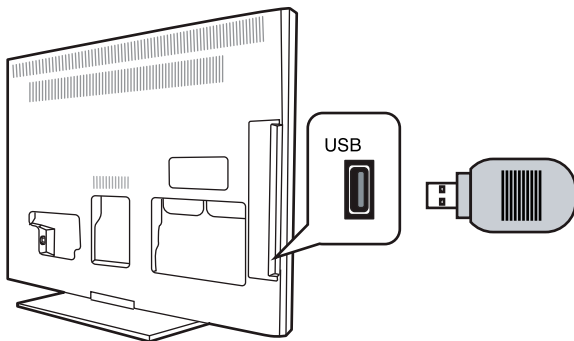

The TV can read photo and music files from the USB port.

- From the USB Menu you can:





| | |
|-------------------------------------|---|
| Activate any of the menu options | Highlight an icon and press ENTER . |
| Display the Activity menu. | Press ACTIVITY . Press again to clear. |
| Display the main menu. | Press MENU . Press again to clear. |
| Display status for the file source. | Press INFO . Press BACK to clear. |

- To resume use of the USB port after switching the TV to a different input, press **ACTIVITY**, choose **View Photos**, and select the USB port.



Playing a Slide Show or Playlist

Use these keys while playing a slide show or playlist.

| | |
|---|---|
|  or ENTER | Replays the slide show or playlist. |
|  | Pauses a slide show or playlist. |
|  | Stops a slide show or playlist. |
|  | Displays the previous or next slide. Plays the previous or next track. |
| GUIDE | Rotates an image clockwise in 90° increments. |
| BACK | Displays the USB Media Player menu. |
| MENU | Displays the main menu and stops play. |
| ACTIVITY | Displays the Activity menu and stops play. |
| INFO | Displays slide name or track name. Press BACK to clear. |

IMPORTANT


Always stop playback with  (STOP) or change to a different TV input before disconnecting your USB device.

The TV can read JPEG files as created by the camera. If you edit a picture file on a computer and resave the image, the TV may be unable to read the resaved file.

Camera Images and Music Files, continued



Thumbnail and Playlist Menus

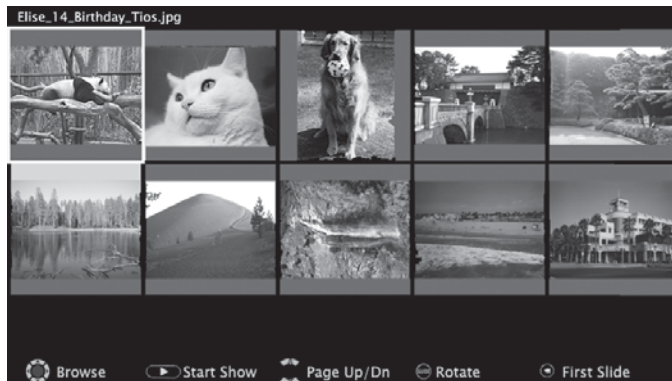

JPEG Thumbnail Menu

Use these keys while viewing JPEG thumbnail images or the music tracks in a playlist.


| | |
|------------|--|
| ▲▼◀▶ | Moves the highlight from item to item. |
| GUIDE | Rotates a thumbnail clockwise in 90° increments |
| ▶ or ENTER | Plays the slide show or playlist starting with the highlighted item. |
| ◀▶ | Selects the last item on the current page. |
| ▶◀ | Selects the first item on the current page. |
| ⏪ ⏩ | Displays the next or previous page of items. |
| BACK | Displays the USB Media Player menu. |
| MENU | Displays the main menu. |
| ACTIVITY | Displays the Activity menu. |

Picture Files Compatible with the USB Port

- Still images recorded on digital cameras using the Exchangeable Image File Format, version 2.1 (EXIF 2.1) standard for digital still cameras and Design Rules for Camera File Systems version 1.0 (DCF 1.0)
- Some images opened and resaved on a computer may not play back or may not display in the thumbnail list. This happens if the files were resaved in an incompatible format.
- Full path file names can be no longer than 50 characters and must end in a .jpg extension. Only the first 20 of the 50 characters will display.



USB Media Setup Menu

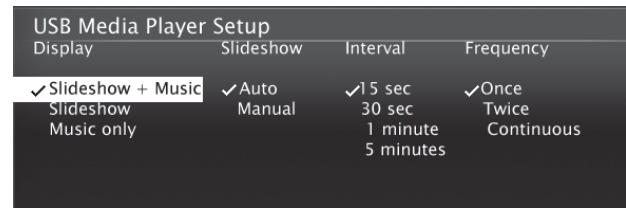

Use the USB **Media Setup** menu set up play of a slide show or playlist.

- If JPEG image files and wma/mp3 files are on the USB device, choose:
 - **Slideshow + Music**
 - **Slideshow**
 - **Music only**
- **Slideshow.** Select either **Auto** or **Manual** advance for the slide show. During manual operation, press **ENTER** to advance to the next slide.
- **Interval.** For automatic advance, select the time interval for display of each slide. The interval you select here is the minimum time between slides; actual time may be longer for larger files.
- **Frequency.** For automatic advance, select the number of times (frequency) to play the complete slide show and/or playlist: **Once**, **Twice**, or **Continuous**.
- Press **BACK** to close the **Media Setup** menu and return to the **Media Player** menu.

Notes on Using the USB Port

- The TV ignores all commands while reading files. Wait until the **Play** icon appears highlighted and in full color before continuing.
- Large files or high-capacity storage devices may take a long time to display.
- The TV can read files up to 10 MB in size with a maximum of 2,500 files stored on the device. The FAT16 or FAT32 file system is recommended.
- Use a USB drive instead of a card reader.
- Back up the data on your USB drive before connecting it to the TV. Mitsubishi is not responsible for any file damage or data loss.
- Some manufacturers' devices may be incompatible with the TV. If the TV is unable to display your photos, you can:
 - Transfer files to a different USB drive.
 - Use your digital camera's composite video output. See page 32.


Photos and Moving Video as Composite Video

Connect the camera to the TV using a composite video cable if:

- You are unable to see images using the USB port.
- You wish to view moving video from the camera.

Control the slide show or movie through the camera as the TV's **USB Media Player** menu will be unavailable. The display resolution will be standard-definition (480i).

1. Refer to the owner's manual supplied with the camera for instructions needed for this setup.
2. Set the camera's output signal type to **NTSC** and put the camera into playback mode.
3. With the camera still turned on, connect your digital camera's composite video cable (usually yellow) to the TV's **Y/VIDEO** jack. To hear audio, connect the camera's audio output cable to the **AUDIO L** jack.

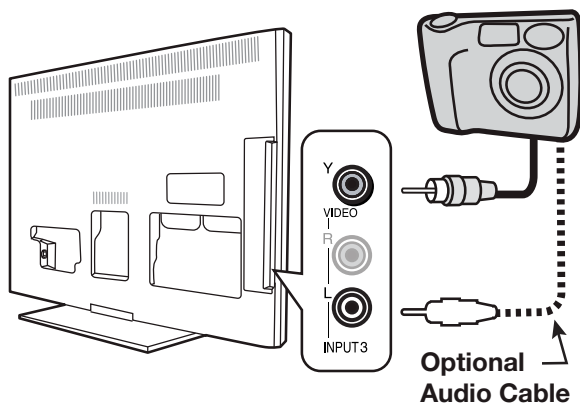

Camera connection using a composite video cable

4. When the **New Device Found** screen displays, assign the name **Camcorder**.
5. Press **BACK** to close the **New Device Found** screen.
6. Press **ACTIVITY**, select **Watch Movie > Cam**, and press **ENTER**.



7. If viewing photos, advance through the images manually or set the camera to advance automatically.

Sound Projector

Sound Projector Technology

The TV's bank of speakers can be adjusted to reflect sound off the room walls to create a surround sound effect.

Setup can be performed manually and/or automatically, depending on your TV model:


| | |
|----------------------|------------|
| Manual setup only | 151 series |
| Manual or Auto setup | 153 series |

- To create the surround sound effect, the room walls must reflect sound and not be covered with sound-absorbant material.
- Repeat the setup procedure if you reconfigure the room's walls or furnishings.


Before You Begin

Positioning the TV


- Center the seating area in front of the TV and at least six feet away from it.
- Arrangements that give good results:

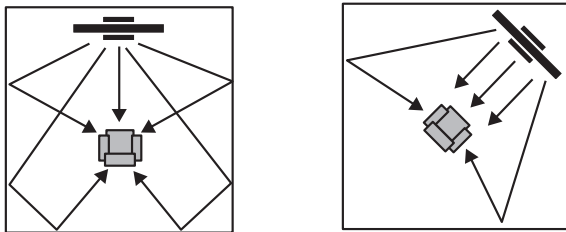

- If the room is an odd shape, locate the TV to take best advantage of wall reflections.

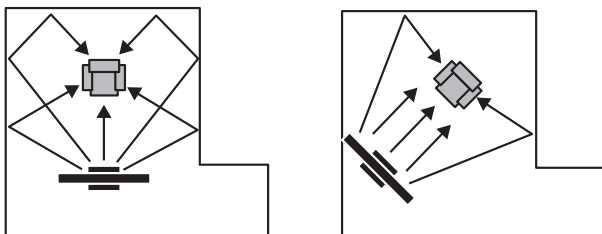

- Avoid locations that may distort sound reflections.

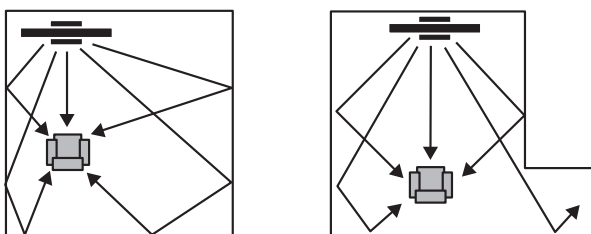

Connecting the TV

To get the full benefit of the TV's Sound Projector, the TV must be connected to a source input providing digital surround sound. The TV can receive digital surround sound on:

- Any HDMI jack
- The **DIGITAL AUDIO INPUT** jack (when used in conjunction with **INPUT 2**)
- The **ANT** input (from some digital broadcasts)

See page 19 for suggestions on connecting your devices.

Basic Setup

Note: 153 Series. If you have already performed Auto setup, any manual adjustments will erase all settings created during Auto setup.

- Press **MENU** and go to **Initial > SoundPro**. Press **ENTER** to enter the menu.



- Enter the room dimensions and layout information requested in the screen. To change measurements, press **▲▼**.

| TV Location | TV Wall Length | Other Wall Length | TV to Sofa |
|-------------|----------------|-------------------|------------|
| Center | 16 feet | 14 feet | 12 feet |
| Left | | | |
| L Corner | | | |
| Right | | | |
| R Corner | | | |

- Press **MENU** to exit.
- Play some sample audio to check sound quality. If further adjustment is needed, use the **Custom** menu as described below.

Custom Menu

Use the **Custom** menu after defining the room layout.

For a room with large areas of curtains that might affect sound reflection, do the following:


- Open the curtains fully to improve sound reflection.
- Set angles by performing the procedure in "Adjusting Beam Angles."

Sound Projector, continued

- c. Close the curtains.
 - d. Set levels by performing the procedure in "Adjusting Levels."
1. From the **Initial > SoundPro** menu go to the **Custom** menu.
 2. Position yourself in your usual viewing location. Remain in this position, looking at the TV, while making the following adjustments.
 3. **Adjusting Beam Angles**
 - a. Adjust **Center Beam Angle** until sound is about equal in both ears.
 - b. Adjust **Left Beam Angle** to maximize sound heard from the front left side.
 - c. Adjust **Right Beam Angle** to maximize sound heard from the front right side.
 - d. Adjust **Left Surround Beam Angle** to where the sound seems to come from the left rear side. If this cannot be achieved, make the setting the same as that for Left Beam Angle.
 - e. Adjust **Right Surround Beam Angle** to where the sound seems to come from the right rear side. If this cannot be achieved, make the setting the same as that for Right Beam Angle.
 4. **Adjusting Levels**
 - a. Adjust **Center Level** to the mid level.
 - b. Adjust the following levels one at a time so that each one sounds about the same as the center level:
 - Left Level**
 - Right Level**
 - Left Surround Level**
 - Right Surround Level**
 - c. Check all sound levels by quickly switching between them using ▲▼.
 - d. Readjust individual levels in small increments and recheck as above until all sound levels seem about the same.
 5. **Adjusting an External Subwoofer**
 - a. Play sample video or music containing low-frequency bass sound.
 - b. Press **MORE** and then **9 (AUDIO)**. Use ▲▼ to display the **Subwoofer** option.
 - c. With **Subwoofer** set to **On**, press **ENTER** to display a slider for volume.
 - d. Press ◀▶ to adjust the subwoofer volume.


How to Make Adjustments in the Custom Menu

- Press ▲▼ to select an audio beam; colors of the adjusters correspond to audio beams in the on-screen diagram.
- Press ◀▶ to redirect the audio beam or change the sound level.

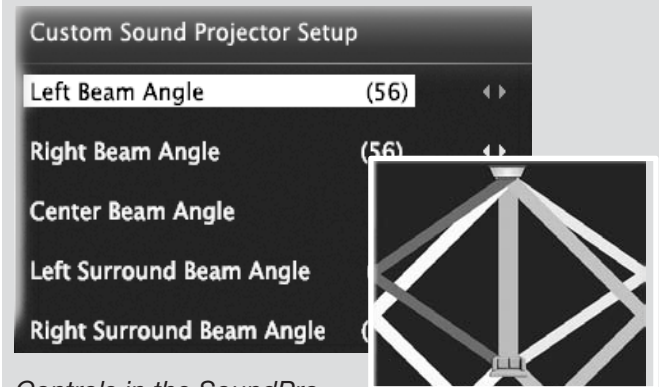

Controls in the SoundPro > Custom menu adjust the direction and focus of the TV's sound output.

At extreme beam angles, adjustment may be limited and the image on screen may not accurately represent the sound beams.

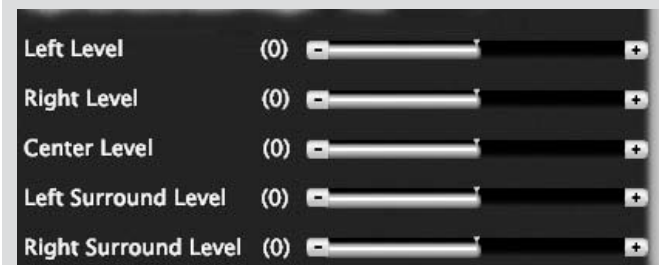

Adjust the volume level of individual audio beams using sliders in the SoundPro > Custom menu.

Resetting Angle and Level Values in the Custom Menu

1. Press **BACK** to clear all menus.
2. Press **MENU**. Go to the **Initial > SoundPro** menu and press **ENTER**.
3. Change any setting (e.g., **TV Location**).
4. Press **BACK** to clear all menus.
5. Press **MENU**. Go to the **Initial > SoundPro** menu and press **ENTER**.
6. Enter the correct values for the room layout.
7. Return to the **Custom** menu to adjust angles and levels.

Sound Projector, continued


Auto Setup

153 Series

Auto setup uses a calibration microphone to optimize Sound Projector performance for most room conditions. If the room is very large or has many obstacles affecting the sound beams, you may wish to try manual setup, which is done without the microphone.

Initial Preparation

1. Position and connect the TV as described under "Before You Begin," page 33.
2. Power on the TV and external subwoofer, if any.
3. Plug the microphone cable into the TV's **INPUT 3** left audio jack.

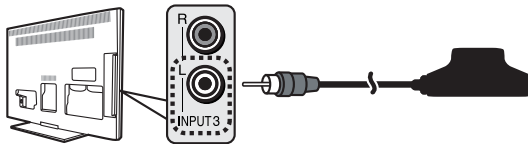


4. Place the microphone as described in the guidelines on this page.

Start Auto Setup

1. Press **MENU** and go to *Initial > SoundPro*.



2. Press **ENTER**. Set **Mode** to **Auto**.

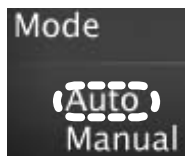

3. Highlight **START** and press **ENTER**.






5. Quietly exit the room right away. The calibration sequence will start in a few seconds and may be loud. It is important to leave the room as your presence will interfere with the calibration process.
6. Wait for completion of setup before returning to the room.
7. Play some sample audio material to check the sound quality.

Note: Do not perform manual adjustments after running Auto setup, as doing so will erase all settings defined during Auto setup.

8. Store the microphone out of direct sunlight and away from heat.

Microphone Placement

- Make sure there are no large obstacles between the TV and microphone.
- Place the microphone
 - On a tripod or on the backrest of your seating.
 - On a flat, level surface at least six feet away from the front of the TV.
 - At the same height yours ears would be when watching TV. The height must be within 3 vertical feet of the height of the TV's speaker array.
 - Centered in front of the TV, not off to the side.

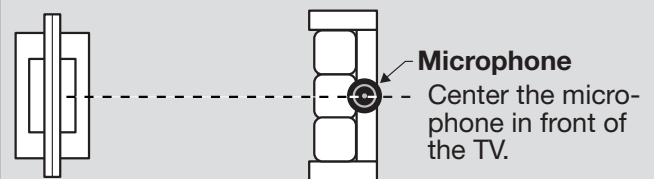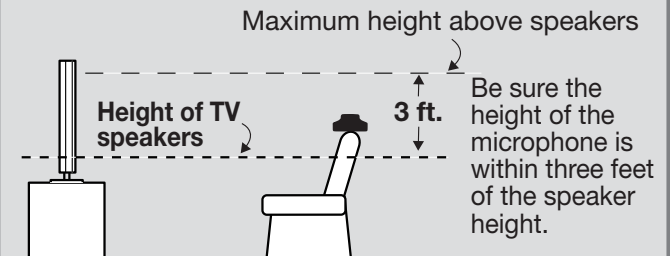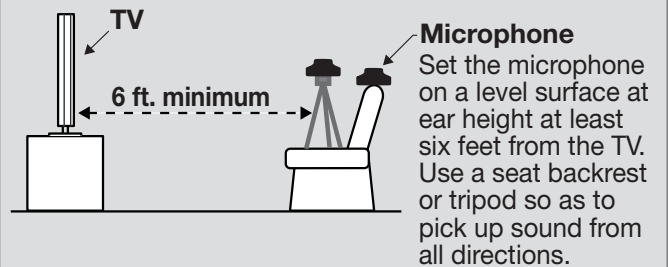


Introduction to Home-Theater Control

This summary offers some examples of control methods available using the **TV's remote control**. You may wish to use one or more of these methods in your home theater after completing Auto Input Sensing.

Source device connected directly to the TV


Remote Control Programming (Any Connection Type)

Program the remote control to operate the A/V device. To control the device, set the remote control to the correct mode for the device type. See Appendix B, "Programming the Remote Control." In the case of an A/V receiver, use the Audio Lock feature, page 68.

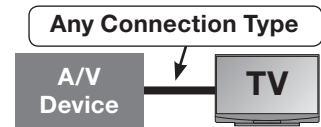


CEC-Enabled HDMI Device (HDMI Connection Only)

See Appendix C, "HDMI Control of CEC Devices," page 74.

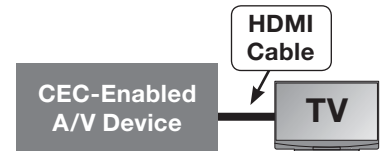

153 Series: NetCommand IR Control (Any Connection Type)


Set up NetCommand IR control of the device's keys as desired. See "IR Emitter Placement," page 53, and "Initial NetCommand Setup," page 54.

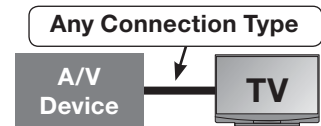

Source device connected to an A/V receiver connected to the TV


CEC-Enabled HDMI A/V Receiver

The TV's remote control may operate some functions of a connected A/V device. You can switch to the device by selecting its icon in the TV's **Activity** menu. See Appendix C, "HDMI Control of CEC Devices," page 74.

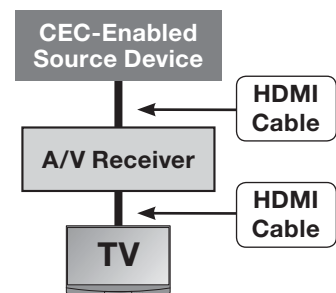

153 Series: A/V Receiver with HDMI Output (no CEC)



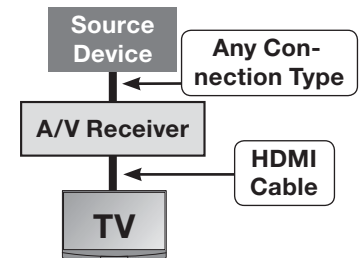


1. Set up NetCommand IR control of the **A/V receiver's** keys as desired. See "IR Emitter Placement," page 53, and "Setting Up A/V Receiver Control," page 59.
2. Set up NetCommand IR control of the **source device's** keys as desired. See "NetCommand Control of a Device Connected to an HDMI A/V Receiver," page 63.








4 TV Menus


Main Menu

Press **MENU** on the remote control to open the main menu and then select from one of these categories.

| | | | |
|---|-----------------|---|----|
|  | Adjust | Customize picture and sound settings. | 38 |
|  | Captions | Turn closed captions on and off; customize caption displays. | 43 |
|  | Initial | Perform basic TV setup. Set language, scan (memorize) channels and edit channel options, set the TV clock, set Energy Mode, set auto-on TV Timer. | 44 |
|  | Input | Assign names to TV inputs, enable HDMI Control, assign activities to inputs. 153 Series. Perform NetCommand IR "learning." | 47 |
|  | Lock | Restrict TV use. Disable the control-panel buttons. Set a pass code. | 49 |

Menu Navigation

-  Displays or clears the main menu.
- 
 - Moves up one menu level.
 - Clears the current menu.
- 
 - Moves navigation into options area.
 - Selects an item.
-  Moves the highlight within menus.
-  Makes adjustments in some menus.

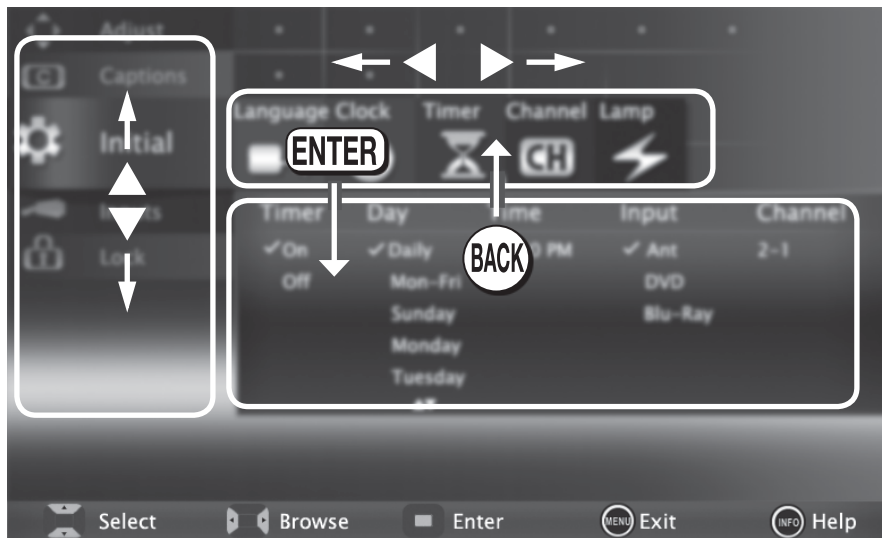

Look for the key guide at the bottom of each menu. →



Adjust



Picture

Assign names to TV inputs before making video adjustments (**New Device Found** or **Inputs > Name** menu). Adjustments will be reset to the defaults if you name or rename inputs afterwards. To make picture adjustments:

- **From the Adjust > Picture menu:**
 1. Press ▲▼ to highlight an option.
 2. Press ◀▶ to adjust.

- **While watching TV:** Press the MORE key and then 8 (VIDEO) in the on-screen menu. Press ▲▼ to select the video option you want to change. Press ◀▶ to change settings.

Note: Changing Picture settings from the default values used in **Home** mode may cause energy use to exceed ENERGY STAR® efficiency standards.

| | | | |
|------------------|---|---|---|
| Picture Mode | Brilliant | For use under bright light; unavailable when the current input is named Game or PC . Power use exceeds ENERGY STAR® standards when Picture Mode is Brilliant. | Set the Picture Mode first before changing other video settings, as some settings are stored independently for each Picture Mode. Use Picture Modes to get the best image under different viewing conditions. |
| | Game | Optimizes picture and video processing for gaming consoles. Available only when the name of the current input is Game or PC . | |
| | Bright | For most daytime viewing and x.v.Color sources | |
| | Natural | For most nighttime viewing and x.v.Color sources | |
| | Special/ADV | Advanced Picture Modes. Contact your professional installer for setup or see "Advanced Picture" page 42. | |
| Contrast | <ul style="list-style-type: none"> • Low contrast shows a variety of shades in darker images • In most home lighting situations, medium contrast looks best. • High contrast shows darker images more uniformly black and makes colors appear more vibrant. High contrast is good for brightly lit environments. | Adjusts the white-to-black level. Settings are stored independently for each Picture Mode. | |
| Brightness | Adjusts overall picture brightness. Settings are stored independently for each Picture Mode. | | |
| Color | Adjusts overall color intensity from monochrome to fully saturated. | | |
| Tint | Adjusts the red-to-green ratio. | | |
| Sharpness | Adjusts picture detail and clarity. | | |
| Color Temp | High | Gives white images a cool cast. May provide the most realistic picture under bright lighting. | Adjusts the white balance. Settings are stored independently for each Picture Mode. |
| | Low | Gives white images a warm cast. Natural/Color Temp at the low setting displays video at approximately the 6500K industry standard for NTSC pictures. | |
| Video Noise | High, Medium, Low, Off | Reduces minor noise (graininess) in the picture. Saved by input. This adjustment is not available if the current input is named PC or Game. Use High with poor-quality signals. Use Medium for moderate noise reduction. Use Low with good-quality signals. Use Off to leave the picture unaltered. | |
| SharpEdge | On, Off | SharpEdge™ adds special edge enhancements to make the image appear sharper. Saved by input. | |
| DeepField Imager | On, Off | 153 Series. DeepField™ Imager dynamically enhances black levels in portions of the screen to provide strong contrast with detail over mixed screen content. | |
| | Demo | For comparison, displays a split picture to show On (right side) and Off (left side). | |
| Backlight | Adjusts peak brightness of the backlight. Press ENTER to turn off the backlight. | | |



Adjust, continued



Audio

To make audio adjustments:

- **From the *Adjust > Audio* menu:**
 1. Press ▲ ▼ to highlight an option
 2. Press ◀ ▶ to adjust.
- **While watching TV:** Press the MORE key and then 9 (AUDIO) in the on-screen menu. Press ▲ ▼ to select the audio option you want to change. Press ◀ ▶ to change settings.

| | | |
|-------------------|---|--|
| Speakers | The Speakers option displays only if an A/V receiver or headphone connection has been detected. Detection occurs on the right AVR AUDIO OUTPUT jack or the DIGITAL AUDIO OUT jack. An A/V receiver can also be detected on an HDMI jack. | |
| | TV | Turns on the internal TV speakers. |
| | AV Receiver | Turns off the TV speakers so you hear sound only from a connected A/V receiver. Note: When you disconnect an analog A/V receiver, be sure to change the Speakers setting to TV to hear sound from the TV speakers. |
| | Headphones | Turns off the TV speakers so you hear sound only from connected headphones. See page 18. This option is not available if DIGITAL AUDIO OUTPUT is connected. |
| Subwoofer | Off, On | The Subwoofer option displays only if a subwoofer connection has been identified on the SUBWOOFER OUTPUT jack. The setting you select is applied to all TV inputs. Use Off to turn off audio to a connected subwoofer. |
| | [Subwoofer level adjustment] | To adjust the subwoofer volume level, highlight Subwoofer and press ENTER to display an adjustment slider. |
| Bass | Controls volume of low-pitched sound from the TV speakers. | |
| Treble | Controls volume of high-pitched sound from the TV speakers. | |
| Balance | Controls audio balance between the left and right TV speakers; available only when Sound Mode is Stereo . | |
| Sound Mode | Stereo | No special audio effects from the TV speakers; monaural programs are played as mono, stereo and surround sound are played as stereo. |
| | Surround | <ul style="list-style-type: none"> • Programs with surround sound are played with Sound Projector surround sound. • Other audio is modified: <ul style="list-style-type: none"> - For monaural (non-stereo) programs, creates a simulated stereo effect. - For stereo programs, creates a simulated surround sound effect. |
| | Music | Optimizes Sound Projector speakers for music listening. |
| | Night | Directs sound to a specific area to lessen the disturbance to others outside the room. Settings are reset to the default when you power down the TV. <ol style="list-style-type: none"> 1. Position yourself in the seating area. 2. Press ENTER to display an adjustment slider. 3. Press ◀ ▶ to adjust the direction of the sound beams until sound seems the loudest. |



Adjust, continued







Audio, continued

| | | |
|---|--|---|
| Listen To Applies only to analog channels from the ANT input | Stereo | The TV plays stereo broadcasts in stereo and mono broadcasts in mono. The word Stereo is displayed when you tune to a channel broadcasting in stereo. |
| | Mono | Reduces background noise. Use when receiving a weak stereo audio signal. All audio is played as mono with this setting. |
| | SAP (Second Audio Program) | Selects an additional monaural sound track not audible during normal TV viewing. The SAP signal might be related to the program (such as a sound track in a foreign language), or it might be unrelated (such as a weather report). If an SAP signal is broadcast, the letters SAP are displayed when you tune to the channel. |
| Language | Selects the current language for a digital program from the ANT input. Each digital program may include from zero to seven language choices. Applies only to digital channels from the ANT input. | |
| Level Sound | On, Off | Reduces differences in sound volume between programming segments, such as the difference between regular broadcast programs and commercial segments. |



Adjust, continued

| | | | |
|--|--|---|--|
| Reset  | <ul style="list-style-type: none"> Resets audio and picture adjustments for the current input. Highlight the Reset icon and press ENTER twice. Reset has no effect on global settings (Balance, Listen To, Language, Film Mode, and Advanced Picture). | | |
| Global  | Global settings apply to all inputs. | | |
| | Video Mute (non-antenna inputs only) | On | Displays a solid colored background when there is no video signal from the current input. The colored screen reminds you that the TV is powered on when there is no picture. The TV will power off after five minutes without receiving a video signal. |
| | | Off | The screen appears black when there is no video signal from the current input. |
| | Screensaver | On, Off | Select On to display a random pattern while playing an audio-only input. To use this feature, the input must be either <ul style="list-style-type: none"> Named as an audio source (e.g., CD or MP3 Player) and selected under the Listen Music activity. or Be the ANT input. |
| | Film Mode (480i and 1080i signals only) | Auto, Off | In Auto , the TV automatically detects and applies film-decoding correction to movies filmed at 24 frames per second. Try the Off setting if images show many jagged edges. |
| | Smooth 120 Film Motion (151 series) | Standard, High, Off | <ul style="list-style-type: none"> Standard: Removes judder (image vibration) and smooths motion scenes in film-based content such as movies. High: Removes more judder in motion scenes in movies. Off: Use this setting if Standard or High create image noise. |
| | Smooth 120 Film Motion (153 series) |  | Removes judder (image vibration) and smooths motion scenes in film-based content such as movies. <ol style="list-style-type: none"> Highlight the icon and press ENTER to display an adjustment screen. Press ▲ ▼ to change the amount of correction or set to zero to turn off the correction. Press BACK to return to normal TV viewing. |
|  | Test Picture | Displays a test picture for use by TV servicers. Press any key on the remote control to clear the test picture. | |



Adjust, continued

Picture+



PerfectColor

PerfectColor Sliders

Adjusts the saturation (intensity) of six colors for the current image source.

PerfectTint Sliders (153 series)

Adjusts six hues for the current image source

Using PerfectColor:

Highlight the PerfectColor™ icon and press **ENTER** to display the **PerfectColor** menu. Settings are retained independently for each TV input.

Using PerfectTint (153 Series):

- To switch between PerfectColor™ and PerfectTint™ adjustments, highlight **Adjust Mode** and press ◀ ▶.
- Press ▲ ▼ to move from one color bar to the next.
- Press ◀ ▶ to change settings.
- Press **CANCEL** to restore default settings.
- Press **MENU** to return to the main menu.



Advanced Picture

Advanced Picture allows you to save highly customized picture adjustments for each input. **Mitsubishi recommends these adjustments be made by a professional installer.**

1. Press **MENU**. Under **Picture+**, highlight the **Advanced Picture** icon and press **ENTER**.
2. With **Picture Mode** highlighted, press **ENTER** to change from blank (undefined) to **ADV**.
3. Use ▲ ▼ to highlight an option you wish to change and press **ENTER** to see the adjustment display.



Sample adjustment display for Advanced Picture options

4. Press ◀ ▶ to change settings.
5. Use ▲ ▼ to navigate to additional options and press ◀ ▶ to change settings.
6. Press **MENU** to return to the **Advanced Picture** menu. The **Advanced Picture** adjustments will be in effect for the current input.

To use the custom Picture Mode at a later time

Press **MENU** and go to **Adjust > Picture > Picture Mode** and

- Select **SPECIAL** if settings were saved by your professional installer.
- Otherwise select **ADV**.

To return to the default values for Advanced Picture

1. Display the **Picture+ > Advanced Picture** menu.
2. Highlight **RESET Pic Mode** and press **ENTER**.



Captions

Captions on Analog Channels

The TV can decode captions from the **ANT INPUT** and the composite **VIDEO** jacks. Broadcasters can send either standard closed captions or text service. Standard closed captions follow the dialogue of the program and display in a small section of the screen. Text-service closed captions often contain information such as weather or news and cover a large portion of the screen.

IMPORTANT

- **Analog text-service options display a large black or gray box on the screen when no signal is being broadcast.**
- **The content of captions is determined by the broadcaster. If captions show strange characters, misspellings, or odd grammar, it is not a malfunction of the TV.**
- **Closed-caption signals are not available through HDMI or component jacks. See the menus for devices connected to these inputs for closed-caption decoding.**

Captions on Digital Channels

The TV can decode captions from the **ANT** input only. Broadcasters can send up to six different captioning selections or can send analog captions for a program that originated in analog format. A TV station may broadcast only one or two types of captions or none at all.

| | | | |
|--|---|---|--|
| Services | Digital | On if Mute Caption 1– Caption 6 Off | <ul style="list-style-type: none"> • On if Mute: Displays digital closed-caption signal Caption 1 when audio from the TV speakers is muted. When watching TV, press MUTE to turn closed captions on/off. • Caption 1–Caption 6: Caption signals sent by the broadcaster |
| | Analog | On if Mute CC 1–CC 4 Text 1–Text 4 Off | <ul style="list-style-type: none"> • On if Mute: Displays analog closed captions signal CC 1 when audio from the TV speakers is muted. When watching TV, press MUTE to turn captions on/off. • CC 1–CC 4: Standard closed-caption signals • Text 1–Text 4: Text-service signals |
| | Analog Back- ground | Gray, Black | Selects either a gray or black text background to make analog closed captions easier to read. |
| Effects (for captions from digital channels) | Font | Default Font 1–Font 7 | Default changes settings to those selected by the captions provider, or, if none, to the TV's own caption defaults. Use Fonts 1 through 7 to give captions on digital channels a custom appearance. |
| | Font Size | Large Medium Small | Large is the recommended size. |
| | Font Color | White, Black, Magenta, etc. | Guidelines for setting digital captions: <ul style="list-style-type: none"> • A white font on a black translucent background makes an easy-to-read combination. • Use contrasting colors for captions and background. |
| | Font Opacity | Translucent, Opaque, Flashing, Transparent | |
| | Background Color | White, Black, Magenta, etc. | |
| Background Opacity | Translucent, Opaque, Flashing, Transparent | | |




Initial

| | | | |
|---|---|---|---------------------------------------|
| Language | English Spanish | Displays on-screen menus in either English or Spanish. Note: To listen to audio in other languages (when available), see Adjust > Audio > Listen To > SAP (analog signal) or Language (digital signal) on page 40. | |
| Clock | Set the TV clock to: <ul style="list-style-type: none"> • Use the TV Timer to power on the TV automatically at a preset time • Receive correct updates to ChannelView listings Note: When the Daylight Savings Time change occurs, you must open this menu and set the TV's clock ahead or back. | | |
| Time | <ol style="list-style-type: none"> 1. With the hour highlighted, press ▲ ▼ to change the hour and the AM/PM indicator. Press and hold to change the hour display quickly. 2. Press ENTER to set the hour. 3. With the minutes highlighted, press ▲ ▼ to change the minutes. Press and hold to change the minutes display quickly. | | |
| Date | <ol style="list-style-type: none"> 1. With the month highlighted, press ▲ ▼ to select. Press ENTER to set. 2. With the day highlighted, press ▲ ▼ to select. Press ENTER to set. 3. With the year highlighted, press ▲ ▼ to select the current year. | | |
| Time Zone | Eastern, Central, Mountain, Pacific , etc. The correct time zone is required for accurate ChannelView updates. | | |
| DST | On, Off | Daylight Savings Time. Select the setting for your area. The correct DST setting is required for accurate ChannelView updates. | |
| Timer | Timer | On, Off | Select On to enable the Timer. |
| The Timer tells the TV to power on automatically at a time you set. Use this menu to set a day, time, input, and channel for the Timer. If the TV is already on at the requested time, the TV will automatically change to the designated channel or input. <ul style="list-style-type: none"> • The TV clock must be set before you can use the Timer feature. • To remind you that the TV Timer has been set, the POWER indicator on the front of the TV flashes slowly while the TV is powered off. • When the Timer turns on the TV, press any key on the remote control to keep it on. Otherwise, the TV will turn off after five minutes. | | | |
| Day | Daily, Mon-Fri , (every) Sunday , (every) Monday , (every) Tuesday , etc. Select the day or days of the week for the Timer to turn on the TV. | | |
| Time | To set the time for the TV to come on: <ol style="list-style-type: none"> 4. With the hour highlighted, press ▲ ▼ repeatedly to change the hour and the AM/PM indicator. Press and hold to change the hour display quickly. 5. Press ENTER to highlight the minutes. 6. Press ▲ ▼ to change the minutes. Press and hold to change the minutes display quickly. | | |
| Input | Ant, DVD, VCR , etc. Select the input you want displayed when the TV comes on. Choose from the defined and enabled inputs that appear in the Activity menu. | | |
| Channel | If the source is the ANT input, select a channel number by pressing ▲ ▼ or press and hold to scroll through channels. | | |



Initial, continued

| | | |
|--|---------------------------|--|
| Channel  (Channel Management) | Ant Air, Ant Cable | You must perform a channel scan to receive digital channels. Scan searches for broadcast channels and adds them to TV memory. To start channel scan: |
| | Scan | <ol style="list-style-type: none"> Highlight one of the input selections based on your connection to the ANT input: <ul style="list-style-type: none"> Air when connected to an indoor or outdoor antenna. Cable when connected to direct cable (no cable box) Press ▶ to highlight SCAN. Press ENTER to start channel memorization. |
| | Edit | After channel scan, Edit lets you add and delete memorized channels. <ul style="list-style-type: none"> Press PAGE DN/UP to jump to the next or previous page of channel numbers. Press ▲▼◀▶ to move through all channel numbers, one at a time. |

Notes on Scan and channel memorization

- Channel memorization may take up to 15 minutes to complete.
- To stop channel memorization before completion, press **CANCEL**. Channels already added are retained.
- When watching TV, press **CH ▲▼** to move through memorized channels.
- To add a digital channel that does not appear in the **Edit** menu without repeating channel memorization:
 - Look up the physical channel number for the new digital channel. See the website www.antennaweb.org for help.
 - Press **ACTIVITY** and select the **ANT** input.

- Use the number keys and **CANCEL** key to enter the physical channel number followed by “-1” and **ENTER**. For example, for physical channel 36, press


3 6 CANCEL 1 ENTER.

The TV will search for a digital channel on the channel 36 frequency. When it finds the channel, it will:

- Add the channel to memory.
 - Change the channel number to the virtual channel number sent by the broadcaster.
 - Add to memory any associated sub-channels.
- Rememorize channels if you move the TV to a different geographic area with a different channel line-up.

Adding/Deleting Channels Using the Channel Edit Menu

- Channels marked with a check are in memory.
- To add or delete a channel from memory, highlight the channel number and press **ENTER**.
- To add a single digital channel not in the list, see the notes under **Scan** on this page.
- Digital channels are listed by virtual channel number with the physical channel number shown in small gray text. See below for an explanation of these terms.
 - **Virtual Channel Number** (digital channels only). A channel number sent by a local broadcaster. Usually the virtual number is associated with the corresponding analog channel number. For example, a broadcaster may associate digital channel 2-1 with their analog channel 2.
 - **Physical Digital Channel Number**. The channel number officially assigned to the actual broadcast frequency; shown on screen in gray text.

| | | | |
|--|---------------------|--------------------------------|--|
| Energy  | Energy Usage | Standard, Fast Power On | Options for power consumption while the TV is powered off. <ul style="list-style-type: none"> Standard keeps the TV in compliance with ENERGY STAR® efficiency standards while powered off. The Fast Power On setting lets the TV power up quickly. The TV draws power while in the off state in excess of ENERGY STAR efficiency standards for a powered-down device. |
|--|---------------------|--------------------------------|--|




Initial, continued

Sound Projector

For full setup instructions, see page 33.

Basic Screen

| | | | | |
|---|---------------------------------------|---|---------------|---|
|  SoundPro | Mode (153 series) | Auto | START | Perform Auto setup using the supplied calibration microphone. See page 35. |
| | | Manual | Custom | To perform manual setup, see page 33. Note: Do not perform manual adjustments after running Auto setup. Doing so will erase all settings created during Auto setup. |
| | TV Location | Center, Left, L Corner, Right, R Corner | | Highlight the item that best describes the TV's location relative to the wall. Required for Manual setup. |
| | TV Wall Length (in feet) | [Enter digits] | | Press ▲ ▼ to change the number or enter digits. Required for Manual setup. |
| | Other Wall Length (in feet) | [Enter digits] | | Press ▲ ▼ to change the number or enter digits. Required for Manual setup. |
| | TV to Sofa (in feet) | [Enter digits] | | Press ▲ ▼ to change the number or enter digits. Enter the distance from the TV to the primary seating area. Required for Manual setup. |
| | Custom (all models) | After defining the room layout, highlight Custom and press ENTER . Use this option to fine-tune Sound Projector to your unique room layout. See details on page 34. | | |


Adjustments in the Custom Menu

Left Beam Angle
 Right Beam Angle
 Center Beam Angle
 Left Surround Beam Angle
 Right Surround Beam Angle
 Left Level
 Right Level
 Center Level
 Left Surround Level
 Right Surround Level


- Press ▲ ▼ to select an audio beam; colors of the adjusters correspond to audio beams in the on-screen diagram.
- Press ◀ ▶ to redirect the audio beam or change the sound level.
- To reset these adjustments, see "Resetting Angle and Level Values in the Custom Menu," page 34.

Controls in the SoundPro > Custom menu adjust the direction and focus of the TV's sound output.

At extreme beam angles, adjustment may be limited and the image on screen may not accurately represent the sound beams.

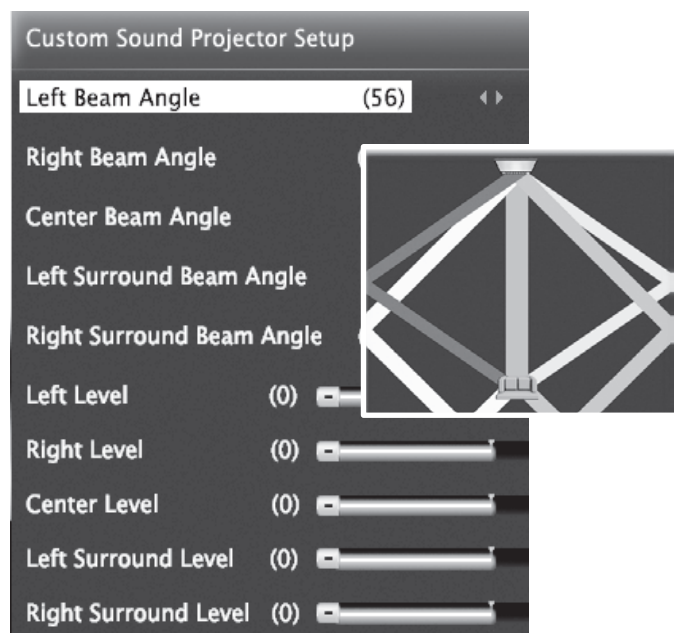

 **Inputs**

| | | |
|--|---|---|
| Name  | Cablebox, Cam(corder), CD, DVD (DVD, DVD2, Blu-ray), DVR, Game (Game, PS, Xbox, Wii), MP3 Player, PC, Satellite, VCR, AVR Delete (deactivated HDMI only) On/Off (ANT only) | <ul style="list-style-type: none"> Lets you assign or change names of inputs appearing in the Activity menu. <ul style="list-style-type: none"> Press ◀ ▶ to move between inputs. Press ▲ ▼ to select a name. You cannot change the name of the current input; you must first switch to another input. If you have only one input, such as a cable box, make sure the Ant input is On and switch to Antenna in the Activity menu before renaming the single input. Lets you turn the Ant input On/Off (to display/hide it in the Activity menu). Lets you delete unused HDMI inputs from the Activity menu. A CEC-enabled tuner can be named either Cable Box or Satellite. A CEC-enabled DVD player can be named DVD, DVD2, or Blu-ray. |
|--|---|---|

General Notes





When you change an input name in the **Name** menu and then exit the **Name** menu:

- The name is changed
- The icon in the **Activity** menu is changed
- Audio and video settings are changed to the defaults for the new device type.
- 153 Series:** All previous NetCommand IR “learning” for the input is erased.

Notes for HDMI devices

- Disconnecting an HDMI device:** When you disconnect an HDMI device, the icon remains in the **Activity** menu until you remove it. Select **Delete** in the **Inputs > Name** menu to remove an unwanted icon for an HDMI input.
- If the **New Device Found** screen does not display as expected when you connect an HDMI device, see the reset instructions under “HDMI Input,” page 13.
- HDMI Control and CEC-Enabled Devices:** See Appendix C, “HDMI Control of CEC Devices,” page 74.
- If case of CEC conflicts:** Turn off CEC signals in one of these ways:
 - Turn off the TV’s HDMI Control signals to the device (see below for **HDMI Control**).
 - Turn off each device’s internal CEC capability.

See Appendix C for the TV’s HDMI Control or, to turn on/off a specific device’s response to CEC signals, see the device owner’s manual.

| | | |
|--|--|--|
| Learn  | 153 Series Sets up or changes NetCommand IR control of the current viewing device. See “About NetCommand IR Control,” page 52. | |
| AVR  | 153 Series Sets up or changes NetCommand IR control of an A/V receiver. See “NetCommand IR Control of an A/V Receiver” on page 58. | |
| HDMI Control  | On, Off | Select On or Off to enable or disable the TV’s control of a CEC-enabled device. See Appendix C for use of this feature. |
| Activity  | <ul style="list-style-type: none"> Lets you customize the Activity menu choices for the current input. Highlight the activity name and press ENTER to make changes. See “How is the Activity Menu Generated?” on the next page. | |

 **Inputs, continued**

How is the Activity Menu Generated?

The TV automatically generates the **Activity** menu. The TV groups recognized device types based on how they can be used. The device names used for the groupings are those assigned in the **New Device Found** menu or the **Inputs > Name** menu, or in some cases, the name the device itself communicated to the TV. The table below summarizes the device groupings that can appear in the **Activity** menu.

Key

- ✓ Activity assignments made automatically by the TV.
- X Activity assignments you can make using the **Inputs > Activity** menu.

| | Watch TV | Watch Movie | Play Game | View Photos | Listen Music |
|-------------|----------|-------------|-----------|-------------|--------------|
| Antenna | ✓ | | | | |
| AV Receiver | ✓ | | | | ✓ |
| Blu-ray | | ✓ | | X | X |
| Cable Box | ✓ | | | | |
| Camcorder | | ✓ | | | |
| CD/Audio | | | | | ✓ |
| DVD | | ✓ | | | X |
| DVD2 | | ✓ | | | X |
| DVR | ✓ | | | | |
| Game | | | ✓ | | |
| MP3 Player | | ✓ | | | ✓ |
| PC | ✓ | X | ✓ | X | X |
| PS | | ✓ | ✓ | X | |
| Satellite | ✓ | | | | |
| USB | | | | ✓ | X |
| VCR | | ✓ | | | |
| Wii | | X | ✓ | | |
| Xbox | | X | ✓ | | |



Lock

TV Locks

| | |
|--|--|
| | Lock by Program Ratings Restricts access using U.S.-based ratings sent by broadcasters. |
| | Lock by Time Restricts TV use by time of day. |
| | Lock Control Panel Disables the buttons on the TV's control panel. Use this option if small children in the home try to press control-panel buttons. |
| | Lock by Other Program Ratings Restricts access using non-U.S.-based ratings sent by broadcasters. |

Pass Codes

Setting a Pass Code

You are prompted to enter a pass code whenever you select **Lock** on the main menu. To set a pass code for the first time:

1. Press **MENU** and highlight **Lock**. A screen prompting you for a pass code will display.
2. Input a four-digit pass code using the number keys on the remote control.
 - Press **CANCEL** to delete a number and move back one space.
 - Press **MENU** or **BACK** to close the menu without setting a pass code.
3. Press **ENTER** to set the pass code.

Resetting a Pass Code

See the procedure in Appendix A.

Parental Menu

The TV comes from the factory with the rating locks turned off and with pre-set U.S. ratings TV-PG and movie rating PG. Turn on blocking for U.S. ratings to activate these rating restrictions. Use the **Lock** > **Parental** menu to change the level of blocking with U.S. ratings.

Any time you change the channel or device, it may take up to five seconds for the rating restrictions to take effect.

Other Menu (Alternate Rating System)

This TV can recognize new rating systems that may come into effect in the future. The **Other** menu allows you to block digital programming when such systems come into effect.

The first time you tune to a channel broadcasting an alternate rating system, the TV defaults to the most restrictive setting if the **Lock** menu > **Other Lock** option is set to **On**. Use this menu to change the allowed rating if you are unable to watch a program rated with an alternate system.

Bypassing TV Locks

- If you try to watch a blocked program or the TV is locked by time, a notice will appear prompting you for a pass code. To use the TV, input your four-digit pass code and press **ENTER**.
 - To reactivate the locks after using a pass code, power the TV off and then on.
 - To reactivate only the parent ratings lock, change to a different channel or device.
- If a program is blocked, you can still use the TV without entering a pass code. Change to a channel airing an allowed program or change to another device.

Important Notes on Rating Locks




- **Parental** menu rating locks apply only to channels and signals received on the **ANT** and composite **VIDEO** jacks.
- **Other** menu rating locks apply only to digital channels received on **ANT**.
- When viewing a cable box, satellite receiver, or other device connected to the component **Y Pb Pr** or **HDMI** inputs, check the device's owner's guide for parental locks.

**Lock, continued****Parental**

| | | | |
|---------------------|---|---|--|
| Lock | Off, On | Disables or enables blocking based on V-Chip signals and the U.S. rating system. | |
| Start Time | Sets the time of day for enforcement of rating restrictions set in the Parental menu. | | |
| Stop Time | <ol style="list-style-type: none"> 1. Highlight the hour digits for Start Time. 2. Press ▲▼ repeatedly to change the hour and associated AM/PM indicator. You can also just press and hold to move quickly through the numbers. 3. Press ENTER to highlight the minutes. 4. With the minutes digits highlighted, press ▲▼ repeatedly to change the minutes. You can also just press and hold to move quickly through the numbers. 5. Highlight the Stop Time digits and set the time as described above. | | |
| | Note: To make rating restrictions active 24 hours a day, make Start Time and Stop Time the same. | | |
| TV Rating | TV-Y | Youth. For children under 7. | Highlight the rating level you wish to change and press ENTER to block it (🔒) or allow it (🔓). You can apply supplemental content blocking to the age-based ratings by using the TV content categories listed below. |
| | TV-Y7 | Youth 7 and older. | |
| | TV-G | General Audience. For the entire family. | |
| | TV-PG | Parental Guidance. Parental Guidance recommended; may not be suitable for some children. | |
| | TV-14 | Adolescent 14 and older. Not recommended for children under 14. | |
| | TV-MA | Mature Audience. For adults only. | |
| FV | Fantasy Violence. Applies to TV-Y7 only. | | TV Content Categories |
| D | Sexual Dialog. Applies in differing degrees to TV-PG and TV-14. | | |
| L | Adult Language. Applies in differing degrees to TV-PG, TV-14, and TV-MA. | | |
| S | Sexual Situations. Applies in differing degrees to TV-PG, TV-14, and TV-MA. | | |
| V | Violence (graphic or realistic). Applies in differing degrees to TV-PG, TV-14, and TV-MA. | | |
| Movie Rating | G | General Audience. Designed for the entire family. | |
| | PG | Parental Guidance. Parental Guidance recommended; may not be suitable for some children. | |
| | PG-13 | Parental Guidance, 13 and Older. Not recommended for children under 13. | |
| | R | Restricted. Restricted in theaters to 17 years old and older unless accompanied by an adult. | |
| | NC-17 | No Children 17 or Under. Restricted in theaters to 18 years old and older. | |
| | X | Adult. Designed for and restricted in theaters to adult audiences only. | |
| | Not Rated | No MPAA rating assigned | |



Lock, continued

| | | |
|--|--|---|
|  Time | Blocks all use of the TV during the time period you specify. You must enter a pass code to use the TV when the time lock is in effect. | |
| | Lock by Time | Enables/disables Lock by Time . |
|  Time | Lock Time, Unlock Time | <p>To set the lock and unlock times:</p> <ol style="list-style-type: none"> 1. Highlight the hour digits for the Lock Time. 2. Press ▲▼ repeatedly to change the hour and associated AM/PM indicator. To move quickly through the numbers, just press and hold. 3. Press ENTER to set the hour and highlight the minutes. 4. With the minutes highlighted, press ▲▼ repeatedly to change the minutes. To move quickly through the numbers, just press and hold. 5. Highlight the Unlock Time digits and set the time as described above. <p>Note: To make Lock by Time active 24 hours a day, make Start Time and Stop Time the same.</p> |
| | Off, On | <p>On locks and Off unlocks the buttons on the TV's control panel. Use this option if small children try to press TV buttons.</p> <ul style="list-style-type: none"> • To release the Panel Lock from the TV's control panel, press and hold the ACTIVITY button for ten seconds. If the TV is powered off, press POWER after the lock releases to make the TV power on. • To reactivate the lock, return to this menu and change the setting to On. |
|  Other | Other Menu Options (alternate rating system) | |
| | This TV can recognize new rating systems that may come into effect in the future. The Other option remains grayed out until the TV receives a signal using an alternate rating system. Such alternate rating systems will apply only to digital programming received on the ANT input. | |
| | Lock | On, Off Enables/disables program blocking. |
| | System Name | The rating system available for the channel |
| | Group | Rating groups available in the rating system shown on the screen. Rating groups are defined by the rating system in effect. |
| Rating | Rating restrictions available in the selected rating system and group. Highlight the rating and press ENTER to check (block) or uncheck (allow) rated content. | |

5

NetCommand IR Control

About NetCommand IR Control

- **NetCommand IR home-theater control is available on 153 series TVs.**
- **IR emitter cables are available for purchase from Mitsubishi.** Visit www.mitsuparts.com or call 800-553-7278 and request one of the following:
 - **242D483020** (two-ended cable)
 - **299P254020** (four-ended cable).
- NetCommand setup is optional.
- You can perform NetCommand setup when the TV first recognizes a device during Auto Input Sensing or at any convenient time afterward.
- NetCommand operates by sending remote control signals from the TV to your other devices via the IR (infrared) emitters, telling the devices to play, record, change inputs, adjust volume, change channels, or perform other functions. All this is accomplished with the TV's remote control left in TV mode.
- You may wish to use NetCommand IR control to supplement control of CEC-enabled devices.

Important Note on NetCommand


Be sure to connect the IR emitter cable to the TV and properly place the emitters so that NetCommand can control your devices.

IR Emitter Placement

The NetCommand system uses emitters connected to the **IR–NetCommand Output** jack to control other devices such as DVD players, cable boxes, satellite receivers, and VCRs.

IR emitter cables are available for purchase from Mitsubishi. Call (800) 553-7278 and request either part number 242D483020 (two-ended cable) or part number 299P254020 (four-ended cable).

1. Connect the plug end of the IR emitter cable to the **IR–NetCommand Output** jack on the TV back panel.
2. When the **New Device Found** screen displays, leave **IR–NetCommand Output** selected.
3. Highlight **EXIT** and press **ENTER**.

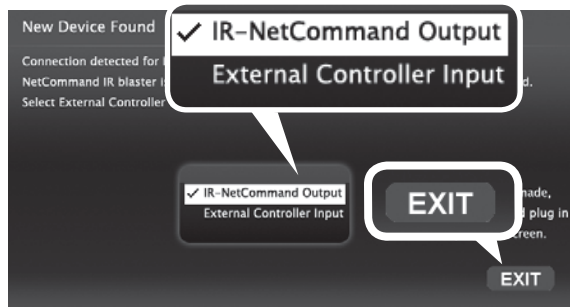


The **New Device Found** screen displays when you connect the IR emitter.


4. Position the emitter end with the emitter bulb facing the device's remote control sensor. The bulb emits infrared light in a cone-shaped pattern. Place the bulb far enough from the sensor to allow the cone pattern to reach the sensor.
In some cases, the emitter works better facing downward from the top of the device. Experiment to find what works best.
5. Secure the emitter ends in place using double-sided tape.
6. Place any unused ends behind the devices to prevent stray signals from reaching the IR sensors.

IMPORTANT

Position IR emitters so that each device's sensor "sees" the signal from only one emitter. Otherwise, a device receiving signals from multiple sources (remote controls, IR emitters) may not respond at all.

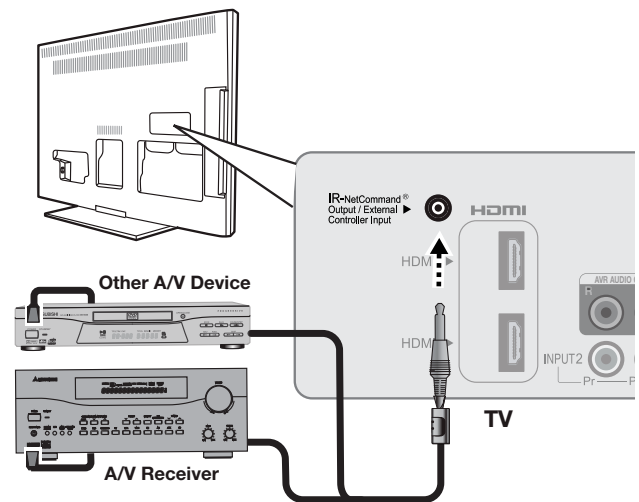

Connecting **IR–NetCommand Output**

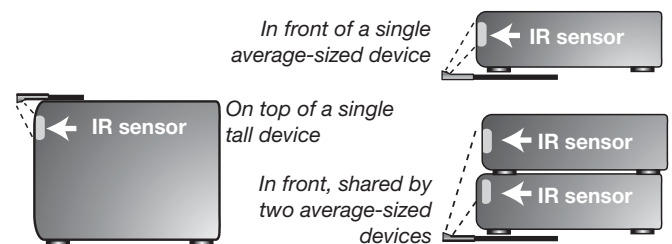

Place IR emitters so the signal can be "seen" by the IR sensor on each device.

If You are Unable to Locate a Device's IR Sensor

- The IR sensor is usually behind the plastic window of the front display panel. Using a flashlight, you may be able to see it as a round or square cutout.
- If you cannot see the sensor and the device's Owner's Guide does not specify the location, do the following using the device's remote control.
 1. Starting at one end of the plastic window, hold the device's remote control about one-half inch from the front of the device and press the **POWER** key.
 2. If the device does not respond, move the remote control one inch toward the center and try again. Repeat until the device responds.
 3. Repeat the previous steps starting at the other end of the window. The sensor will be between these two points.

Initial NetCommand Setup

To perform this procedure, you need:

- The remote controls for both the TV and the device you want to control.
- An IR emitter cable available from Mitsubishi.


Note: To set up an A/V receiver, see “Setting Up A/V Receiver Control,” page 59.

1. Connect and position the IR emitters for the devices you wish to control. See “IR Emitter Placement” on the previous page.
2. Set the **TV’s** remote control to **TV** mode and power on the TV.
3. Open the NetCommand **Learn** screen as follows:
 - If working from the **New Device Found** screen after the device is first detected, highlight **NetCommand** and press **ENTER** to open the **Learn** screen for the device.
 - If performing NetCommand setup at any time after the device has been recognized through Auto Input Sensing:
 - a. Press **ACTIVITY**.
 - b. Highlight the desired input icon and press **ENTER** to switch to that input.
 - c. Press **MENU**, highlight **Inputs**, and highlight **Learn** to open the **Inputs > Learn** screen for the device.

4. The first function highlighted in the **Learn** screen is always **Power On**. Aim the **TV’s** remote control at the TV and press **ENTER** to begin learning for that function.
5. When the **Power On** text starts flashing, aim the **device’s** remote control at the TV and hold the **POWER** key until a check mark appears next to **Power On**.
 - If the text stops flashing before the check mark appears, repeat the previous step.
 - To remove the key from NetCommand control, press the **CANCEL** key while the key name is highlighted.
6. Press the **▲▼◀▶** keys on the **TV’s** remote control to highlight other keys on the list. Repeat steps 4 and 5 for each additional function you wish to control through NetCommand.


Note: Device keys in the far right column will be associated with the remote control’s **MORE** key when “learned.” See the table on page 56.

7. If the device has a separate **POWER OFF** key, press **▲▼◀▶** on the **TV’s** remote to highlight **Power Off**. Repeat the earlier steps to “learn” the **POWER OFF** key. **If the device has no POWER OFF key, skip this step.**
8. Press **BACK** to finish NetCommand “learning” for the current device.

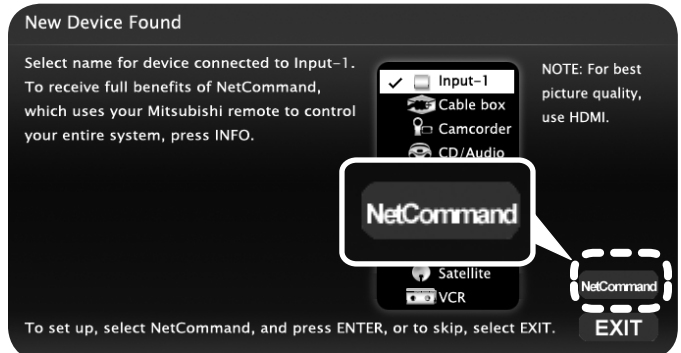

From the **New Device Found** screen, highlight **NetCommand** and press **ENTER** to open the **Learn** screen.

Device-specific keys in the rightmost column can be accessed with the **MORE** key after “learning.”

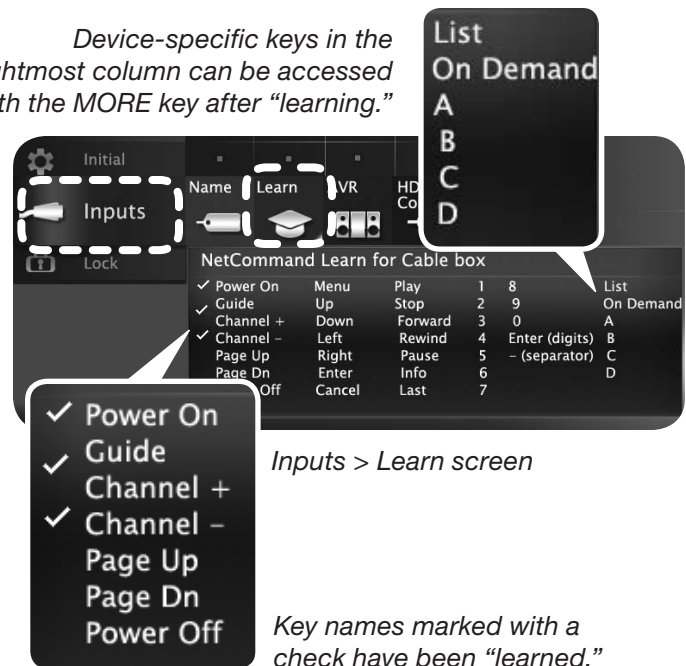

Inputs > Learn screen

Key names marked with a check have been “learned.”

Adding or Removing Device Keys from NetCommand Control

1. Switch the TV to the device. Press **ACTIVITY**, highlight the device’s icon, and press **ENTER**.
2. Open the **Inputs** menu and highlight the **Learn** icon.
3. When the **Learn** screen displays:
 - **To add keys:** Continue as described earlier under “Initial NetCommand Setup” on this page.
 - **To delete keys:** Highlight the name of the key you wish to delete and press **CANCEL** on the **TV’s** remote control to clear the check mark.

Operating NetCommand-Controlled Devices

Controlling Most Device Types

As an example of NetCommand control, if you are watching your cable box and you wish to tune to the next channel higher, press **CHANNEL UP**. NetCommand then sends the “learned” channel-up control signal to the cable box.

1. Perform NetCommand setup for the device as described in this chapter.
2. When you wish to use the device, press **ACTIVITY**.
3. Press **▲▼◀▶** to highlight the icon for the device.
4. Press **ENTER** to switch the TV to the device.

Note: if you have set up automatic input switching for the A/V receiver, the A/V receiver will automatically switch to the correct input for the device.

5. To operate the device using the **TV's** remote control, press the side button to put the remote control into **TV** mode.
6. Point the remote control at the **TV** (not the device) and press the key for the desired function.
7. Press the **MORE** key to access additional key functions you may have “learned” for the device.

Special Operation Methods

| Key Name in Learning Screen | Special Operation Description and Setup | How to Use |
|-------------------------------------|--|--|
| Power On | Manual Power On/Off Use for devices that have only one POWER key. | <ol style="list-style-type: none"> 1. Press ACTIVITY. 2. Press ▲▼◀▶ to highlight the icon for the device to be powered on or off. 3. With the Activity menu still displayed, press POWER to send the power signal; you may need to press POWER twice. <p>Note: If you press POWER without the Activity menu displayed, the TV will turn off.</p> <ol style="list-style-type: none"> 4. Press ENTER to switch the TV to the device. |
| Power On Power Off | Automatic Power On/Off This feature is only for devices that have separate POWER ON and POWER OFF keys on their original remote controls. If your device does not have a separate POWER OFF key, do not use the Power Off learning position; use only the Manual Power ON/OFF method described above. In the NetCommand Learn screen: <ol style="list-style-type: none"> a. “Learn” the Power On command in the Power On learning position. b. “Learn” the Power Off command in the Power Off learning position. | <ul style="list-style-type: none"> • To Power On the Device <ol style="list-style-type: none"> 1. Press ACTIVITY. 2. Press ▲▼◀▶ to highlight the icon for the device to be powered on or off. 3. Press ENTER to switch the TV to the device and NetCommand will send the Power On command to the device. • To Power Off the Device When you turn the TV off, the TV sends all learned Power Off commands to all devices. |
| Menu | Displaying a Menu for the Current Device “Learn” the MENU key on the original remote in the Menu learning position. | Press MORE and then 1 to send the menu command to the current device. |
| Guide | Displaying the On-Screen Program Guide (cable box or satellite receiver) <ol style="list-style-type: none"> 1. “Learn” the GUIDE key on the original remote in the Guide learning position. 2. Learn the PAGE UP and PAGE DOWN keys of the original remote in the Page Up and Page Down learning positions. | <ol style="list-style-type: none"> 1. While watching the device, press GUIDE to display the guide. 2. Press PAGE UP/DOWN (⤴ ⤵) to send the Page Up/Dn commands for the guide. |

| Key Name in Learning Screen | Special Operation Description and Setup | How to Use |
|-----------------------------|--|--|
| Enter | <p>ENTER-Key Functions (cable boxes, satellite receivers, etc.)</p> <p>Some devices have two keys that have “enter” functions. One key is for menus and is often labelled SELECT or OK. A second key is for use with number keys for direct channel selection. NetCommand uses the same ENTER key for both operations.</p> | |
| | <p>When ENTER has a menu or guide function or when the original remote control uses the same key for menus and channel selection:</p> <p>Learn the ENTER, SELECT, or OK key in the NetCommand Enter learning position.</p> | <ol style="list-style-type: none"> 1. Press MENU or GUIDE to display the device’s menu or guide. 2. Press ENTER within the menu and NetCommand will send the Enter signal for menus. |
| Enter (digits) | <p>When ENTER is for channel changes, i.e., the original remote control has a separate ENTER key for this function):</p> <p>Learn the ENTER key for channel selection in the NetCommand Enter (digits) learning position. Use this learning position only if the original remote control has separate keys for Enter in menus and Enter for channel selection.</p> | <p>Press digit key(s) and then press ENTER. NetCommand will send the Enter signal for channel selection.</p> |
| Cancel | <p>CANCEL as the Cancel or Exit Function</p> <p>“Learn” the Cancel or Exit function in the NetCommand Cancel learning position</p> | <ol style="list-style-type: none"> 1. Press MENU or GUIDE to display the menu or guide. 2. Press CANCEL and NetCommand will send the Cancel or Exit signal. |
| — (separator) | <p>The symbol “—” can serve as the separator between a digital channel’s main and sub-channel digits, e.g., digital channel 12-1 (main channel is 12, sub-channel is 1).</p> <p>“Learn” the channel separator function in the NetCommand — (separator) learning position.</p> | <p>Press digit key(s) and press CANCEL. NetCommand will send the channel-separator signal.</p> |

The MORE Key Menu and NetCommand

Perform NetCommand setup for these device-specific keys and then access their functions with the **MORE** key.

| Device Key | VCR | Cable/ SAT | DVD/ DVR | A/V Receiver |
|------------------|-----|---------------|-------------|-----------------|
| Menu | ✓ | ✓ | | ✓ |
| Input | ✓ | | | ✓ |
| SP/EP | ✓ | | | |
| List | | ✓ | | |
| On Demand | | ✓ | | |
| A | | ✓ | | |
| B | | ✓ | | |
| C | | ✓ | | |
| D | | ✓ | | |
























| Device Key | VCR | Cable/ SAT | DVD/ DVR | A/V Receiver |
|--------------------|-----|---------------|-------------|-----------------|
| Top Menu | | | ✓ | |
| Angle | | | ✓ | |
| Audio (DVD) | | | ✓ | |
| Subtitle | | | ✓ | |
| Repeat | | | ✓ | |
| Bonus View | | | ✓ | |
| Setup | | | ✓ | |
| Surround | | | | ✓ |
| Night | | | | ✓ |

Operating NetCommand-Controlled Devices, continued

NetCommand Specialized Device Keys

Refer to this chart when “learning” device keys. “Learn” some, all, or none of the keys used for each device type.

See page 55 for more on keys marked in the “Special Operation Method” column.

| Key Name in Learning Screen | Function | Name on TV Remote Control | See Special Operation Method Table |
|-------------------------------------|--|---|------------------------------------|
| Power On | Power On or Power ON/OFF (toggle) |  | ✓ |
| Guide | On-Screen Program Guide or DVD Disc Menus |  | ✓ |
| Channel +/Skip + | Next Channel Higher/ Skip Forward (Disc) |  | |
| Channel -/Skip - | Next Channel Lower/ Skip Backward (Disc) |  | |
| Page Up | Page Up in Guides |  | |
| Page Dn | Page Down in Guides |  | |
| Up | Arrow up |  | |
| Down | Arrow down |  | |
| Left | Arrow left |  | |
| Right | Arrow right |  | |
| Enter | Enter or Select (menus) |  | ✓ |
| Cancel | Cancel or erase (menus) |  | ✓ |
| Play | Start playback |  | |
| Stop | Stop playback |  | |
| Forward | Fast Forward |  | |
| Rewind | Rewind/Fast Reverse |  | |
| Pause | Pause playback |  | |
| Record | Start Recording |  | |
| 1, 2, 3, 4, 5, 6, 7, 8, 9, 0 | Digits | 1, 2, 3, 4, 5, 6, 7, 8, 9, 0 | |
| Enter (digits) | Use after entering digits to tune directly to a channel by number |  | ✓ |
| - (separator) | Add digital channel separator between main channel number and sub-channel number |  | ✓ |
| Last | Last Channel Recall |  | |
| Info | On-screen status display or information display |  | May require two keypresses |
| Power Off | Power Off |  | ✓ |

6 NetCommand IR Control of an A/V Receiver

NetCommand IR home-theater control is available on 153 series TVs.

Several types of A/V receiver control can be set up using the **Inputs > AVR** menu.

- **Power and volume.** See the opposite page.
- **Audio switching.** For most equipment setups, see “Case 1: Automatic A/V Receiver Switching to the TV Audio Input” page 60.
- **Audio switching and surround sound.** To set up switching to a surround sound device, see “Case 2: Automatic A/V Receiver Switching to a Surround Sound Device” page 61
- **Audio and video switching over HDMI.** If your A/V receiver has an HDMI output, it may be convenient to send audio and video to the TV over a single HDMI cable through the A/V receiver. See “Case 3: Automatic Audio and Video Switching via HDMI,” page 62.

Note: To set up control of other device types, see “Initial NetCommand Setup,” page 54.

Controlling an A/V Receiver after NetCommand Setup

Switching Audio to and from the A/V Receiver

1. Press **MORE** and then 9 (**AUDIO**).
2. Press **▲** to show the **Speakers** option.
3. Press **▶** to select either **AV Receiver** or **TV**.

Controlling A/V Receiver Power

With Any Connection Type

1. Press **MORE** and then 9 (**AUDIO**).
2. Press **▲▼** to show the **Speakers** option.
3. Press **▶** to select **AV Receiver**.
4. Point the remote control at the **TV** (not the A/V receiver) and press **POWER** to power the A/V receiver on or off.

With an HDMI Connection

1. Press **ACTIVITY**.
2. Highlight the A/V receiver icon.
3. Press **POWER**.

Controlling Other A/V Receiver Functions

With the A/V receiver powered on and selected, the TV's remote control operates the volume and mute functions. Also, when you switch to a device in the **Activity** menu, the A/V receiver automatically switches to the correct audio input for the device.

Setting Up A/V Receiver Control

Power and Volume

Perform this setup to control the A/V receiver power and volume with the TV's remote control.

To perform this setup you need:

- The remote controls for both the TV and the A/V receiver.
- An IR emitter cable available from Mitsubishi.


Before You Begin

1. Connect your A/V receiver to the TV and any additional devices. See "Setting Up TV Inputs," page 12 and "TV Connections," page 16.
2. Connect the IR emitter cable to the TV and position the IR emitter where it can send signals to the A/V receiver. See "IR Emitter Placement," page 53.
3. Set the **TV's** remote control to **TV** mode using the side button.

Setup to Control A/V Receiver Power and Volume

1. Open the **Inputs > AVR** screen in one of two ways:
 - If using the **New Device Found** screen for the A/V receiver, highlight **NetCommand** and press **ENTER** to open the **AVR** screen.
 - If performing NetCommand setup at any time after Auto Sensing:

Press **MENU**, highlight **Inputs**, and highlight **AVR** to open the **AVR** menu.
2. The first function highlighted in the **AVR** screen is always **Power**. Aim the **TV's** remote control at the TV and press **ENTER** to begin learning for **Power**.

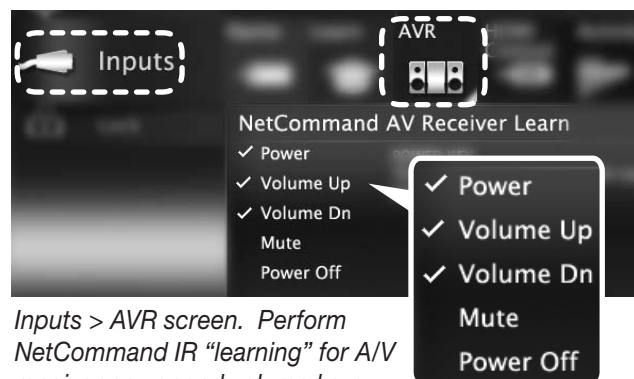

Inputs > AVR screen. Perform NetCommand IR "learning" for A/V receiver power and volume keys.

3. When the **Power** text starts flashing, aim the **A/V receiver's** remote control at the TV and hold the **POWER** or **POWER ON** key until a check mark appears next to **Power**.
 - If the text stops flashing before the check mark appears, repeat this step.
 - To remove the key from NetCommand control, press the **CANCEL** key while the key name is highlighted.
4. Press the **▼** key on the **TV's** remote control to highlight other keys in the list. Repeat steps 2 and 3 for each additional function you wish to control through NetCommand.
5. If the A/V receiver has a separate **POWER OFF** key, press **▼** on the **TV's** remote to highlight **Power Off**. Repeat steps 2 and 3 to "learn" the **POWER OFF** key. **If the device has no POWER OFF key, skip this step.**
6. When finished "learning" the power and volume keys, either
 - To watch TV, press **BACK**.
 - To continue with NetCommand setup to control switching of A/V receiver inputs, highlight **NEXT** and press **ENTER**.

IMPORTANT

To hear audio sent from the TV to the A/V receiver, you must have:

- Physically connected the TV to the A/V receiver via the analog or digital audio output.
- Assigned, if needed, the name AVR if using an HDMI A/V receiver.
- "Learned" the IR codes for the A/V receiver inputs.
- Assigned the TV's audio output to the correct input in the NetCommand **Inputs > AVR** menu.
- Selected the A/V receiver as the audio source. Press **MORE** then **9 (AUDIO)**, then **▲▼** to show the **Speakers** option, then **▶** to select the **A/V Receiver**.

Setting Up A/V Receiver Control, continued

Automatic Switching (Audio or Audio/Video)

The following setups enable the A/V receiver to switch automatically to the correct input when you select a device in the TV's **Activity** menu.

Three different connection arrangements are described here. Review the descriptions to find the setup needed for your equipment.

To hear digital surround sound from a source device you must use the setup described for Case 2.

To set up control of an A/V receiver you need:

- The remote controls for the TV and A/V receiver.
- An IR emitter cable available from Mitsubishi.
- Connecting cables

IMPORTANT

All audio from what you are watching on the TV is always available from both the TV's **AVR AUDIO OUTPUT** and **DIGITAL AUDIO OUTPUT** jacks.

To use the digital surround sound capabilities of your A/V receiver however, you must connect the audio output from your DVD player, satellite receiver, or cable box directly to the A/V receiver.

Before You Begin

1. Connect your A/V devices to the TV and connect your A/V receiver to the audio outputs on the TV and the DVD player. Note the name of the device connected to each A/V receiver input. See initial setup, page 12, and "TV Connections," page 16.
2. Position NetCommand IR emitters as described in "IR Emitter Placement," page 53.
3. Set the TV's remote control to **TV** mode using the side button.
4. Open the **Inputs > AVR** menu, highlight **NEXT** and press **ENTER** to display the device-key-learning menu.


Case 1: Automatic A/V Receiver Switching to the TV Audio Input

Most devices are set up to use the TV's audio output like the VCR in this example; analog audio from the device is sent through the TV to the A/V receiver's TV audio input.

Use this setup for:


- **Analog Stereo Audio.** Audio from sources with only analog stereo output (such as a VCR) can be sent either directly to the A/V receiver or through the TV first. Mitsubishi recommends you send audio through the TV as shown in the example. The TV converts analog audio to digital format to send to a digital A/V receiver.

- **Audio Available from TV only.** Send audio from the **ANT** input to the A/V receiver from the TV's analog or digital audio output. Use this setup to make the A/V receiver switch to its designated TV audio input when viewing programming from the **ANT** input.
- **HDMI Digital Stereo Audio.** Digital stereo audio from an HDMI connection is available both in digital and analog format from the TV's analog and digital audio output jacks.

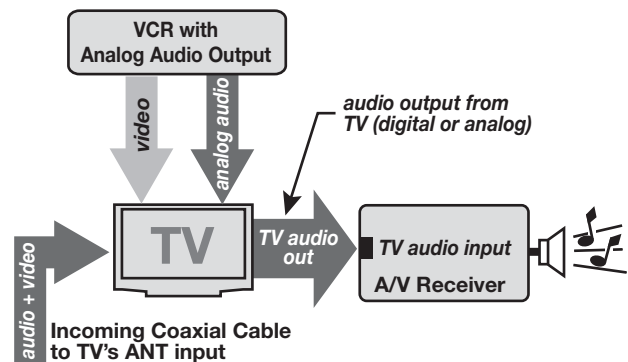

Important: To use this setup, you must connect the TV's audio output to the A/V receiver's TV audio input jack.

1. In the **Inputs > AVR** menu, press **▲ ▼** to highlight **TV audio out** as the A/V receiver input to control.
2. Press **ENTER** on the **TV's** remote control.
3. While the text **TV audio out** is flashing, press and hold the **TV INPUT** key on the **A/V receiver's** remote control.
4. When a check appears next to **TV audio out**, release the **TV INPUT** key.
 - If the text stops flashing before the check mark appears, repeat this step.
 - To erase the IR code just "learned," press **CANCEL** while the name is highlighted.
5. Press **MENU** if finished or continue with Case 2 setup if you want to control surround sound switching for another audio source.

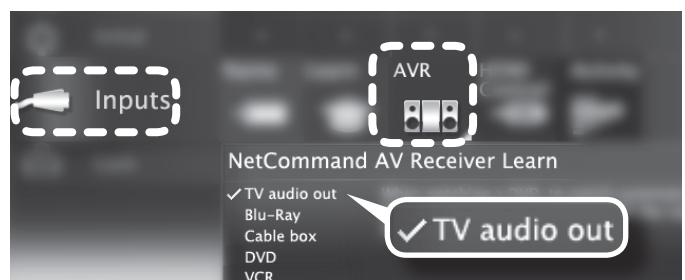

Case 1: NetCommand setup for controlling A/V receiver switching to the A/V receiver's audio input from the TV. The list displayed represents inputs in use. The device names are those you assigned in the New Device Found screen or in the **Inputs > Name** menu.


Setting Up A/V Receiver Control, continued

Case 2: Automatic A/V Receiver Switching to a Surround Sound Device

Note: Use this setup to send digital surround sound from a source device directly to your external sound system. For non-surround sound source devices, Mitsubishi recommends using the setup for Case 1, in which audio is sent through the TV.


A device can send digital surround sound such as Dolby Digital or DTS directly to the A/V receiver. The device might be a DVD player, cable box, or satellite receiver, and could have HDMI output. A DVD player is used in this example.

Your setup may include additional devices with digital surround sound connected directly to the A/V receiver. These devices might be a DVD player plus a cable box or satellite receiver.

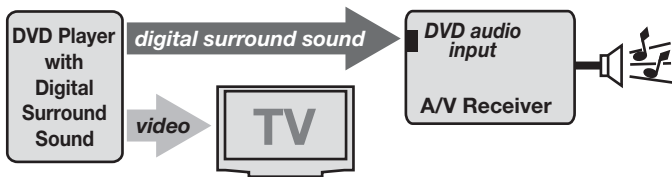

Case 2: A/V receiver audio from a device providing surround sound directly to the A/V receiver

1. In the **Inputs > AVR** menu, press **▲ ▼** to highlight the name of the A/V receiver input to control. In this example, it is the **DVD** input.
2. Press **ENTER** on the **TV's** remote control.

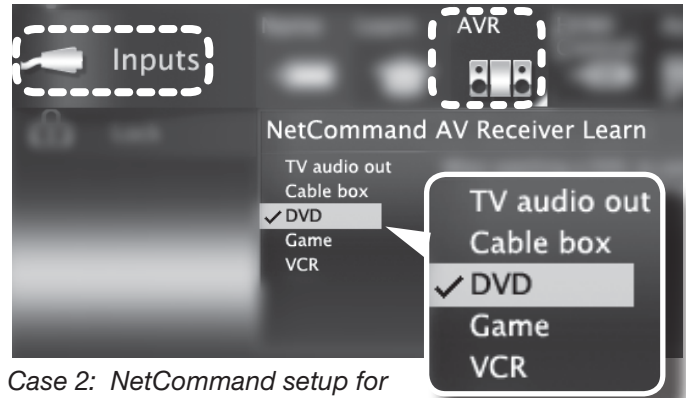


Case 2: NetCommand setup for controlling A/V receiver switching to the A/V receiver's DVD input. The list contains connected inputs with names assigned during Auto Input Sensing.

3. While the text **DVD** is flashing, press and hold the **DVD INPUT** key on the **A/V receiver's** remote control.
4. When a check appears next to **DVD**, release the **DVD INPUT** key.
 - If the text stops flashing before the check mark appears, repeat this step.
 - To erase the IR code just "learned," press **CANCEL** while the name is highlighted.
5. If finished, highlight **EXIT** and press **ENTER** or continue to set up additional A/V receiver audio sources.

Setting Up A/V Receiver Control, continued

Case 3: Automatic Audio and Video Switching via HDMI

If your A/V receiver has an HDMI output, it may be convenient to route video signals from multiple devices over a single cable to the TV. Use this procedure to set up NetCommand control of the A/V receiver's audio and video switching over a single HDMI cable. The connected source devices can be analog, digital, or a mixture of the two. When this setup is complete, you can use the TV's **Activity** menu to select a video device connected to the A/V receiver.

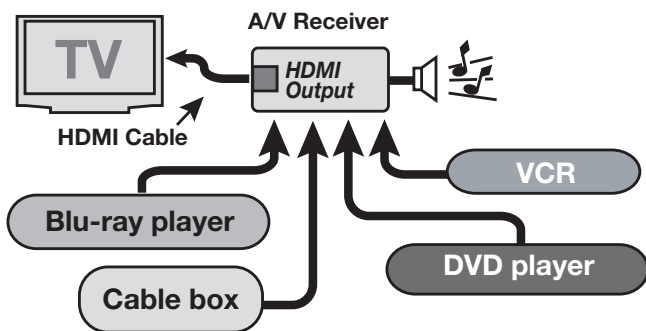

More About Using an HDMI Connection


- Audio from devices connected directly to the TV can be heard from the TV speakers only. To send audio to the A/V receiver from such devices, use one of the optional audio connections shown in the diagram on this page. For example, use an optional audio connection if you wish to use the A/V receiver speakers to hear audio from:
 - The **ANT** input
 - A game or camcorder connected to the convenience input (**INPUT 3**).
- To use NetCommand to supplement HDMI control of a CEC-enabled A/V receiver, the recommended setup sequence is:
 1. Connect the HDMI cable.
 2. Enable HDMI control (**New Device Found** screen).
 3. Connect the secondary digital audio cable, if desired.
 4. Perform NetCommand setup.

If you connect to HDMI after performing NetCommand setup for the A/V receiver, the NetCommand setup will be lost.
- In some circumstances, audio from a device connected to the A/V receiver may not be passed over the HDMI cable to the TV speakers. In these cases you must use the A/V receiver speakers to hear audio.

Before You Begin

To complete these steps you will need:

- The remote controls for both the TV and the A/V receiver.
 - An IR emitter cable available from Mitsubishi.
 - An HDMI-to-HDMI cable to connect the A/V receiver to the TV and cables necessary to connect devices to the A/V receiver.
1. Connect the A/V receiver to the TV with an HDMI-to-HDMI cable. Do not connect the optional audio cable at this time.
 2. If desired, enable HDMI Control of a CEC-enabled A/V receiver. See Appendix C, "HDMI Control of CEC Devices."
 3. Connect your audio/video devices to the A/V receiver. Note the name of the device connected to each A/V receiver input. This information will be needed later to set up NetCommand's automatic input switching.

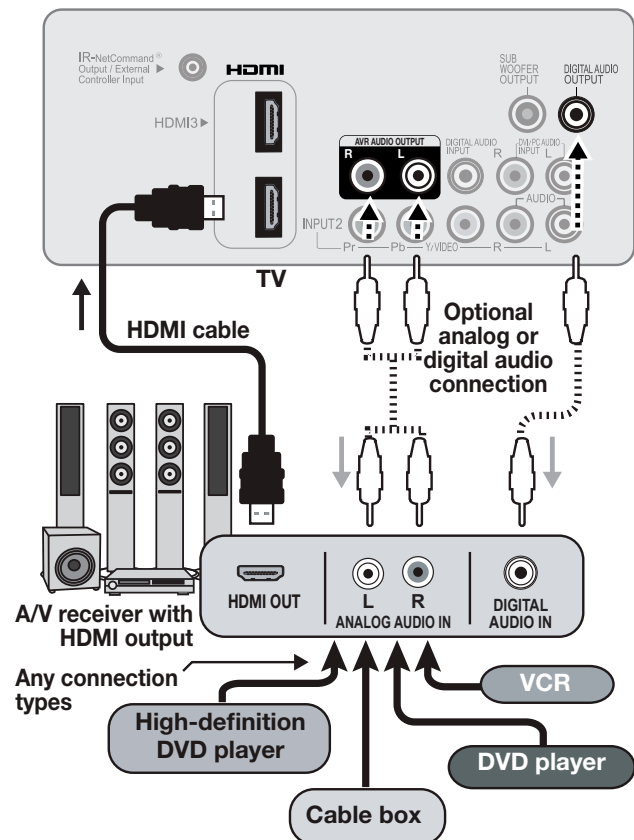

Multiple video inputs through a single HDMI cable. You can connect multiple video devices to an A/V receiver that has an HDMI output. The optional audio connection allows you to hear, through the A/V receiver, devices connected to the TV only, e.g., an antenna on the **ANT** input.

Setting Up A/V Receiver Control, continued

- If using an optional audio cable between the TV and A/V receiver, connect it.
- Connect the IR emitter cable to the TV and position the IR emitter where it can send signals to the A/V receiver. See "IR Emitter Placement," page 53.

Setup to Control Automatic Audio and Video Switching via HDMI

When this setup is complete, the "learned" A/V receiver input will appear in the TV's **Activity** menu as a selectable input.

- Power on the A/V receiver.
- Set the **TV's** remote control to **TV** mode using the side button.
- Power on the TV.
- When the **New Device Found** screen displays, select device name **AVR** if it is not recognized automatically.
- Navigate to the **Inputs > AVR** menu or, from within the **New Device Found** screen, highlight **NetCommand** and press **ENTER**.




To set up A/V switching over HDMI, choose your devices from a list. Unlike the device list described for Case 2, this is a generic list containing more than just the devices detected in your setup.

- In the **Inputs > AVR** menu, press **▲ ▼** to highlight the name of the A/V receiver input to control. In this example, it is the **DVD** input.
- Press **ENTER** on the **TV's** remote control.
- While the text **DVD** is flashing, press and hold the **DVD INPUT** key on the **A/V receiver's** remote control.
- When a check appears next to **DVD**, release the **DVD INPUT** key.
 - If the text stops flashing before the check mark appears, repeat this step.
 - To erase the IR code just "learned," press **CANCEL** while the name is highlighted.
- If there are no more devices to set up, highlight **EXIT** and press **ENTER** or continue to set up additional A/V receiver audio/video sources.

NetCommand Control of a Device Connected to an HDMI A/V Receiver

Use this setup to have NetCommand control a device sending audio and video through the A/V receiver to the TV via HDMI.

You must have already completed the procedure under "Setup to Control Automatic Audio and Video Switching via HDMI" on this page. That procedure places an icon in the **Activity** menu for the device (input) connected to the A/V receiver.

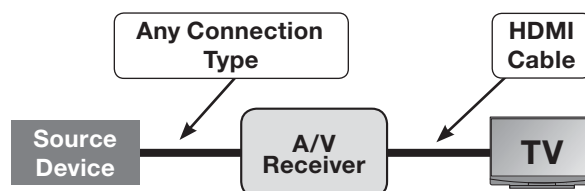

- Set up NetCommand control of A/V receiver audio/video switching via HDMI as described on this page.
- Press **BACK** to close any open menus and return to normal TV viewing.
- Press **ACTIVITY**.
- Highlight the icon for the A/V receiver input you wish to control.
- Press **ENTER** to switch the TV to the A/V receiver and the A/V receiver to the input.
- Open the **Inputs > Learn** menu.
- Perform NetCommand "learning" for the connected device by following the steps in "Initial NetCommand Setup," page 54.

Appendices

| | |
|---|-----------|
| Appendix A: Bypassing the Parental Lock | 65 |
| Appendix B: Programming the Remote Control | 67 |
| Appendix C: HDMI Control of CEC Devices | 74 |
| Appendix D: TV Care | 77 |
| Appendix E: Troubleshooting | 78 |

Appendix A: Bypassing the Parental Lock

Lock Bypass Instructions Have Been Filed for Future Reference

IMPORTANT

Cut along the dotted line and file bypass instructions in a safe place for future reference.


Mitsubishi Unisen LCD HDTV

151 Series
153 Series


Bypassing the Parental Lock

After you set the lock, you must use your pass code to:

- View a locked program
- View the locked TV
- Cancel the lock
- Enter the **Lock** menus

If you forget your pass code, you can view the locked TV without entering your pass code. When prompted for the pass code, press the number **9** and  (**LAST**) keys on the TV remote control at the same time. This process temporarily unlocks the TV.

When entering the **Lock** menu, you are prompted to enter a pass code.

- To change the pass code, press **9** and  (**LAST**) at the same time. Either enter a new pass code to open the **Lock** menu and make changes or press **BACK** to close the menu.
- If any of the locks are turned on and you exit the menus when prompted for a new code, the old code and all lock settings are retained.
- If all locks are turned off and you exit the menus when prompted for a new code, then the previous code is erased.

IMPORTANT

When changing or deleting your pass code, you must use the remote control included with this TV. You cannot use a Mitsubishi remote control from another component or a “universal” remote.


This page intentionally left blank

Appendix B: Programming the Remote Control

This appendix explains programming the TV's remote control to operate other A/V devices. This is distinct from NetCommand control.

Functions Available for Other A/V Devices

The TV's remote control can be programmed to operate other types and brands of A/V products. The functions performed in each switch position vary depending on the product. Not all functions work for all models. The most common functions available are listed on this page.

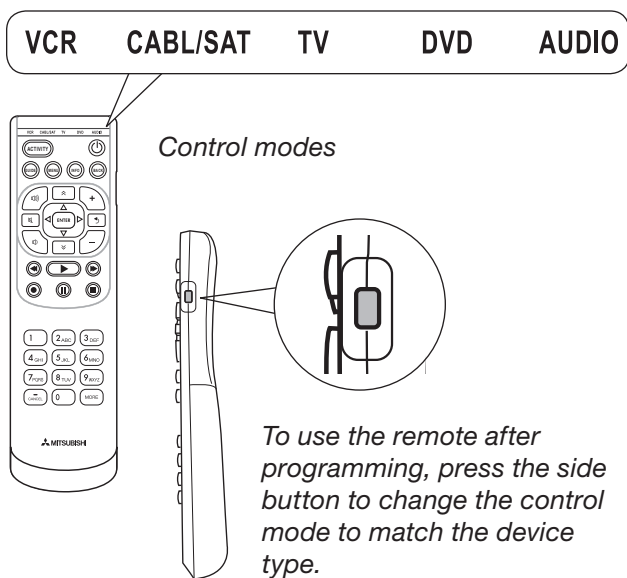

The MORE Menu

The MORE key displays a menu showing additional key functions available for a device type after programming the remote control.

IMPORTANT

Some manufacturers may change their products or they may use more than one remote control system. The TV's remote control may be unable to operate your A/V equipment in these cases.

VCRs and DVRs

- | | |
|---|---|
| <ul style="list-style-type: none"> • CHANNEL UP/DN • POWER • SLEEP (from MORE menu) • ►► (FAST FORWARD) • (PAUSE) • ► (PLAY) | <ul style="list-style-type: none"> • ● (RECORD) • ◀◀ (REVERSE) • ■ (STOP) • GUIDE (DVR only) • MENU (DVR only) • 0-9 Number Buttons |
|---|---|

Mitsubishi VCRs are compatible with some additional keys.

Cable Boxes and Satellite Receivers

(not all functions for all models)

- | | |
|--|--|
| <ul style="list-style-type: none"> • PAGE UP/DOWN • CANCEL • CHANNEL UP/DN • ENTER • GUIDE • POWER • ▲▼◀▶ • LAST (ENTER; for channels on some models) • 0-9 Number Keys | <p>The record/playback keys:</p> <ul style="list-style-type: none"> • ►► (FAST FORWARD) • (PAUSE) • ► (PLAY) • ● (RECORD) • ◀◀ (REVERSE) • ■ (STOP) |
|--|--|

A/V Receivers

- | | |
|---|--|
| <ul style="list-style-type: none"> • MUTE • POWER • SLEEP (from MORE menu) • VOLUME • 0-9 Number Buttons | <ul style="list-style-type: none"> • Direct Input Selection buttons: numbers and LAST (on some Mitsubishi models) |
|---|--|

CD Players

(not all functions for all models)

- | | |
|---|--|
| <ul style="list-style-type: none"> • SLEEP (from MORE menu) • ►► (FAST FORWARD) • (PAUSE) • ► (PLAY) | <ul style="list-style-type: none"> • ◀◀ (REVERSE) • ■ (STOP) • 0-9 Number Buttons |
|---|--|

DVD Players

(not all functions for all models)

- | | |
|--|--|
| <ul style="list-style-type: none"> • CANCEL (on some models) • CHANNEL UP/DN (for track skip on some models) • ENTER • MENU • POWER • SLEEP (from MORE menu) • ▲▼◀▶ | <ul style="list-style-type: none"> • ►► (FAST FORWARD) • (PAUSE) • ► (PLAY) • ● (RECORD) • ◀◀ (REVERSE) • ■ (STOP) • 0-9 Number Keys |
|--|--|

Appendix B: Programming the Remote Control, continued

Programming the Remote Control

1. Press the side button on the remote control to change to the correct mode for the product you want to control. Refer to the table below. Only one of each device type can be controlled in each mode.

| Mode | Affected Device |
|-----------|---|
| CABLE/SAT | Cable Box DTV Receiver Satellite Receiver |
| VCR | VCR DVR DVD Player/Recorder |
| DVD | DVD Player/Recorder DVR VCR |
| AUDIO | A/V Receiver Audio Amplifier CD Player |

2. Press and hold **POWER** on the remote control for several seconds until the mode indicator blinks twice and goes off.
3. Release the **POWER** key.
4. Enter the first five-digit code listed for your equipment.
 - The mode indicator blinks twice when you start to enter the code and then once for each additional keypress.
 - The mode indicator blinks twice when you finish entering a valid code.
 - If you need to start over or wish to exit programming mode, temporarily change to a different mode using the side button.
5. Point the remote control at the equipment and press **POWER**. If the product has no power on/off function, press a different key, such as **▶ (PLAY)**, **■ (STOP)**, **VOLUME UP**, or **MUTE**.
 - If the equipment responds, the remote control is properly programmed.
 - If the equipment does not respond, repeat steps 2–4 with the next five-digit code listed for your equipment.
6. Once you have found the correct code, write it in the space below for future reference.

| Mode | Device Type | Code |
|-----------|-------------|------|
| CABLE/SAT | | |
| VCR | | |
| DVD | | |
| AUDIO | | |

IMPORTANT

You may need to reprogram the remote control after changing the batteries. Record the codes for each mode in the space provided to make this faster.

Code Verification

To determine the code programmed for any mode:

1. Set the mode to the one you wish to verify.
2. Press and hold **POWER** on the remote control for several seconds until the mode indicator blinks twice and goes off.
3. Press keys **9 9 0**
4. Press **1** and count the blinks of the power key. Write down the number of blinks as the first digit of the code.
5. Repeat step 4 for the second, third, fourth, and fifth digits of the code.

Audio Lock: Universal A/V Receiver Control

With Audio Lock enabled, the remote control operates volume and mute on the A/V receiver in all modes set by the side button. Activate Audio Lock if you normally use an A/V receiver with your TV and other A/V equipment.

1. Program **AUDIO** mode for your A/V receiver as described in “Programming the Remote Control” on this page.
2. With the remote control in **AUDIO** mode, hold **POWER** on the remote control for several seconds until the mode indicator blinks twice and goes off.
3. Press keys **9 9 3 ENTER**
The mode indicator will blink twice to indicate Audio Lock is active.

To Reset the Remote Control to Operate Volume and Mute for the TV Speakers

1. Press and hold **POWER** for several seconds until the mode indicator blinks twice and goes off.
2. Press keys **9 9 3 VOLUME UP**.
The mode indicator will blink four times to indicate Audio Lock has cleared.

Appendix B: Programming the Remote Control, continued

Programming Codes

Audio Amplifiers

| | |
|---------------|--------------|
| Adcom | 41100, 40577 |
| Altec Lansing | 41742 |
| Bel Canto | 41583 |
| Design | |
| Bose | 40674 |
| Carver | 40892 |
| Cary Audio | 41879 |
| Design | |
| Classe | 41461 |
| Flextronics | 41879 |
| Halcro | 41934 |
| Harman/ | 40892 |
| Kardon | |
| JVC | 40331 |
| Krell | 41837 |
| Left Coast | 40892 |
| Lexicon | 41802, 41145 |
| Marantz | 40892 |
| Mark | 41483 |
| Levinson | |
| Parasound | 41934 |
| Philips | 40892 |
| Polk Audio | 40892 |
| Victor | 40331 |
| Yamaha | 40354 |

Cable Boxes

| | |
|-------------|-------------------------------|
| A-Mark | 10144, 10008 |
| ABC | 10237, 10008 |
| Acorn | 10237 |
| Action | 10237 |
| Active | 10237 |
| Americast | 10899 |
| Amino | 11822, 11602 |
| Archer | 10237 |
| Bell South | 10899 |
| Century | 10008 |
| Cisco | 11982, 11877, 10877 |
| Comcast | 11982 |
| Digeo | 12187 |
| Director | 10476 |
| GE | 10144 |
| General | 10476 |
| Instrument | |
| GoldStar | 10144 |
| Hitachi | 10008 |
| i3 Micro | 11602 |
| Insight | 10476 |
| Jerrold | 10476 |
| Memorex | 10000 |
| Motorola | 11376, 11254, 10476 |
| Myrio | 11822, 11602 |
| Nova Vision | 10008 |
| Novaplex | 10008 |
| Pace | 11877, 10877, 10237, 10008 |
| Panasonic | 11982, 10144, 10008, 10000 |

Cable Boxes

| | |
|---------------------|-------------------------------|
| Paragon | 10525, 10008, 10000 |
| Penney | 10000 |
| Philips | 11305 |
| Pioneer | 11877, 10877, 10533, 10144 |
| Pulsar | 10000 |
| Quasar | 10000 |
| Runco | 10000 |
| Samsung | 10144 |
| Scientific | 11877, 10877, 10477, |
| Atlanta | 10237, 10008, 10000 |
| Sejin | 11602 |
| Sony | 11006 |
| Sprucer | 10144 |
| Toshiba | 10000 |
| US Elec- tronics | 10008 |
| Videoway | 10000 |
| Zenith | 10899, 10525, 10000 |

CD Players

| | |
|------------|--------------------------------------|
| Acoustic | 40420 |
| Research | |
| Akai | 40083 |
| Burmester | 40420 |
| California | 40029 |
| Audio Labs | |
| DKK | 40000 |
| Fisher | 40000 |
| Garrard | 40420 |
| Hafner | 40173 |
| Harman/ | 41202, 40173, 40100, |
| Kardon | 40083 |
| Inkel | 40180 |
| Integra | 40101 |
| JVC | 41294, 40072 |
| Kenwood | 40626, 40190, 40037, 40029, 40000 |
| KLH | 41711, 41318 |
| Koss | 41317 |
| LG | 41208 |
| Magnavox | 40038 |
| Marantz | 40626, 40435, 40180, 40038, 40029 |
| McIntosh | 41703 |
| MCS | 40029 |
| Memorex | 40420, 40000 |
| MGA | 40083 |
| Miro | 40000 |
| Mitsubishi | 40098, 40083 |
| Modulaire | 40420, 40180, 40087, 40000 |
| MTC | 40420 |
| NAD | 41208 |
| Onkyo | 41327, 40101 |
| Optimus | 40420, 40087, 40037, 40000 |
| Panasonic | 40752, 40388, 40029 |

CD Players

| | |
|------------|--------------------------------------|
| Parasound | 40420 |
| Penney | 40029 |
| Philips | 40626 |
| Pioneer | 41087 |
| Proceed | 40420 |
| Quasar | 40029 |
| RadioShack | 40420, 40180, 40000 |
| RCA | 40420 |
| Realistic | 40420, 40180, 40087, 40000 |
| Roksan | 40435 |
| Rotel | 40420 |
| Sansui | 40000 |
| Sanyo | 40087, 40000 |
| Sharp | 40180, 40037 |
| Sherwood | 41950, 40180 |
| Sony | 41364, 40490, 40185, 40100, 40000 |
| Symphonic | 40180 |
| Tascam | 40420 |
| TDK | 41208 |
| Teac | 40490, 40420, 40180 |
| Technics | 40029 |
| Victor | 40072 |
| Wards | 40087 |
| Yamaha | 41292, 40490, 40036 |
| Yorx | 40000 |

A/V Receivers

| | |
|-------------|---|
| ADC | 40531 |
| Aiwa | 41641, 41405, 41388, 41243, 40189, 40121 |
| Alco | 41390 |
| AMC | 41077 |
| Anam | 41609, 41074 |
| Arcam | 41189 |
| Audiotronic | 41189 |
| Audiovox | 41390 |
| Bose | 41933, 41841, 41629, 41253, 41229, 40639 |
| Cairn | 40189 |
| Capetronic | 40531 |
| Carver | 41289, 41189, 40189, 40121 |
| Curtis | 40014 |
| Mathes | |
| Daewoo | 41250 |
| Denon | 41360, 41306, 41142, 40121 |
| Emerson | 40531 |
| Fisher | 41801 |
| Grundig | 40189 |
| Harman/ | 41306, 41304, 41289, |
| Kardon | 40891, 40189, 40110 |
| Hitachi | 41801 |
| Insignia | 42169, 41893, 41077, 41030 |

Appendix B: Programming the Remote Control, continued

Programming Codes, continued

| A/V Receivers | | A/V Receivers | | Satellite Receivers | |
|---------------|--|---------------------|--|---------------------|--|
| Integra | 41805, 41320, 41298, 40842 | Technics | 41518, 41308 | SKY | 10099 |
| JBL | 41306, 40110 | Thorens | 41189 | Sony | 11640, 11639, 10639 |
| JVC | 42331, 41643, 41495, 41374, 41282, 41058 | Toshiba | 41788, 41123, 40842 | Thomson | 10566, 10392 |
| Kawasaki | 41390 | Venturer | 41390 | Tivo | 11442, 11142 |
| Kenwood | 41570, 41569, 41313 | Wards | 40189, 40014 | Toshiba | 11749, 10790, 10749 |
| KLH | 41428, 41390 | Yamaha | 41815, 41476, 41376, 41375, 41331, 41276, 41176, 41023, 40176 | UltimateTV | 11640, 11392 |
| LG | 42197, 41293 | YBA | 41921 | Uniden | 10722 |
| Linn | 40189 | Zenith | 41293 | Zenith | 11856, 11810 |
| Magnavox | 41514, 41269, 41266, 41189, 40531, 40189 | Satellite Receivers | | VCRs | |
| Marantz | 41289, 41269, 41189, 40891, 40189 | Bell ExpressVu | 11170, 10775 | A-Mark | 20278, 20046, 20037, 20000 |
| McIntosh | 41289 | Chaparral | 10216 | ABS | 21972 |
| Micromega | 41189, 40189 | Crossdigital | 11109 | Accurian | 20000 |
| Mitsubishi | 41957, 41922, 41921, 41920, 41393 | DirecTV | 11856, 11749, 11640, 11639, 11609, 11442, 11414, 11392, 11377, 11142, 11109, 10819, 10749, 10639, 10566, 10392, 10247, 10099 | Admiral | 20479, 20209, 20060, 20048, 20047, 20039 |
| Myryad | 41189 | Dish | 11775, 11505, 11170, 10775 | Adventura | 20037, 20000 |
| Nakamichi | 41313 | Network System | 10775 | Aiko | 20278 |
| Onkyo | 41905, 41805, 41320, 41298, 40842 | Dishpro | 11775, 11505, 10775 | Aiwa | 20124, 20037, 20000 |
| Optimus | 41074, 41023, 40531, 40121, 40014 | Echostar | 11775, 11505, 11170, 10775 | Akai | 20242, 20175 |
| Panasonic | 42967, 41764, 41763, 41633, 41548, 41518, 41509, 41316, 41308, 41288, 41275 | Expressvu | 11775, 10775 | Alba | 20278, 20209 |
| Philips | 41269, 41266, 41189, 40891, 40531, 40189 | Fortec Star | 11821 | Alienware | 21972 |
| Pioneer | 41935, 41384, 41123, 41023, 40630, 40531, 40150, 40014 | Funai | 11377 | Allegro | 20039 |
| Polaroid | 41508 | GE | 10566 | America | 20278 |
| Polk Audio | 41289, 40189 | GOI | 11775, 10775 | Action | |
| Proscan | 41254 | Hitachi | 11250, 10819, 10749 | American | 20081, 20035 |
| RadioShack | 41609 | Houston | 10775 | High | |
| RCA | 41609, 41511, 41390, 41254, 41123, 41074, 41023, 40531 | HTS | 11775, 10775 | Amstrad | 20000 |
| Realistic | 41609, 40121 | Hughes | 11749, 11442, 11142, 10749 | Astra | 20035 |
| Revox | 40189 | Network Systems | | Audiovox | 20278, 20038, 20037 |
| Rio | 41869 | Humax | 11790, 11781 | Avis | 20000 |
| Samsung | 41500, 41304, 41295 | Innova | 10099 | Bell & | 20479, 20048, 20046, 20039, 20035, 20000 |
| Sansui | 41189, 40189 | JVC | 11775, 11170, 10775 | Howell | 20039, 20035, 20000 |
| Sanyo | 41801 | LG | 11414 | Bell | 21944 |
| Sherwood | 42169, 41905, 41077 | Magnavox | 10722 | ExpressVu | |
| Sherwood | 42169 | Mitsubishi | 10749 | Broksonic | 20479, 20209, 20184, 20121 |
| Newcastle | | Netsat | 10099 | Calix | 20037 |
| Sonic Blue | 41869 | Panasonic | 10701, 10247 | Candle | 20038, 20037 |
| Sony | 41858, 41822, 41759, 41758, 41658, 41622, 41558, 41441, 41382, 41258, 41131, 41058 | Pansat | 11807 | Canon | 20035 |
| Stereophonics | 41023 | Philips | 11749, 11442, 11142, 10775, 10749, 10722, 10099 | Carver | 20081, 20035 |
| Sunfire | 41313 | Proscan | 10566, 10392 | CCE | 20278 |
| Teac | 41390, 41074 | RadioShack | 10775, 10566 | Cineral | 20278 |
| | | RCA | 11442, 11392, 11142, 10855, 10775, 10566, 10392, 10143 | Citizen | 20479, 20278, 20209, 20037, 20035, 20000 |
| | | Samsung | 11609, 11442, 11377, 11276, 11142, 11109 | Classic | 20037 |
| | | | | Colortyme | 20278, 20060, 20045, 20035 |
| | | | | Colt | 20000 |
| | | | | Craig | 20047, 20037 |
| | | | | Criterion | 20000 |
| | | | | Crosley | 20081, 20035, 20000 |
| | | | | Crown | 20278 |
| | | | | Curtis | 20432, 20278, 20162, 20060, 20035, 20000 |
| | | | | CyberPower | 21972 |
| | | | | Daewoo | 20278, 20046, 20045, 20037 |

Appendix B: Programming the Remote Control, continued

Programming Codes, continued

| VCRs | | VCRs | | VCRs | |
|-------------|---|------------|---|------------|---|
| Daytron | 20278, 20037 | HTS | 21944 | Nikkodo | 20278, 20037 |
| Dell | 21972 | Hughes | 20739, 20042 | Niveus | 21972 |
| Denon | 20081, 20042 | Network | | Media | |
| DirecTV | 20739 | Systems | | Northgate | 21972 |
| Dish | 21944 | Humax | 21988, 21797, 20739 | Olympus | 20162, 20035 |
| Network | | Hush | 21972 | Onkyo | 20222 |
| System | | Hytek | 20047, 20000 | Optimus | 21062, 21048, 20593, 20432, 20162, 20048, 20047, 20037, 20035, 20000 |
| Dishpro | 21944 | iBUYPOWER | 21972 | Orion | 20479, 20278, 20209, 20184, 20121, 20000 |
| Dual | 20000 | Instant | 20035 | Panama | 20035 |
| Durabrand | 20039, 20038 | Replay | | Panasonic | 21062, 20616, 20614, 20225, 20162, 20035, 20000 |
| Dynatech | 20000 | Jensen | 20067 | Penney | 20162, 20081, 20067, 20047, 20042, 20038, 20037, 20035, 20000 |
| Echostar | 21944 | JVC | 21944, 20067 | Pentax | 20042 |
| Electrohome | 20209, 20060, 20043, 20037, 20000 | KEC | 20278, 20037 | Philco | 20479, 20209, 20081, 20035, 20000 |
| Electrohome | 20037 | Kenwood | 20067, 20046, 20038 | Philips | 21181, 21081, 20739, 20618, 20616, 20209, 20162, 20081, 20048, 20045, 20035, 20000 |
| Emerald | 20184, 20121 | Kodak | 20037, 20035 | Pilot | 20037 |
| Emerex | 20032 | KTV | 20000 | Pioneer | 20162, 20081, 20067, 20042 |
| Emerson | 21593, 20593, 20479, 20278, 20209, 20184, 20121, 20043, 20037, 20000 | LG | 20038, 20037 | Polk Audio | 20081 |
| Expressvu | 21944 | Linksys | 21972 | Portland | 20278 |
| Fisher | 20047, 20046, 20039, 20000 | Lloyd's | 20038, 20000 | Presidian | 21593 |
| Fuji | 20035, 20033 | Loewe | 20081 | Proscan | 20060 |
| Fujitsu | 20000 | Logik | 20000 | Protac | 20000 |
| Funai | 21593, 20593, 20278, 20037, 20000 | Lumatron | 20278 | Pulsar | 20278, 20039 |
| Garrard | 20000 | Luxor | 20046 | Quarter | 20046 |
| Gateway | 21972 | LXI | 20067, 20042, 20037, 20000 | Quartz | 20047, 20046, 20035 |
| GE | 20060, 20048, 20035, 20000 | Magnasonic | 20593, 20278, 20037, 20000 | Quasar | 20162, 20035 |
| Gemini | 20060 | Magnavox | 21593, 20618, 20593, 20563, 20081, 20048, 20039, 20037, 20035, 20000 | RadioShack | 20162, 20048, 20047, 20046, 20037, 20035, 20000 |
| Genexxa | 20278, 20037, 20000 | Marantz | 20081, 20038, 20035 | Radix | 20037 |
| GFM | 21593 | Marta | 20037 | Randex | 20037 |
| Go Video | 20614, 20432 | Matsui | 20209, 20037 | RCA | 20880, 20060, 20048, 20045, 20042, 20035, 20000 |
| GOI | 21944 | Matsushita | 20162, 20081, 20035 | Realistic | 20278, 20162, 20121, 20048, 20047, 20046, 20037, 20035, 20000 |
| GoldStar | 20278, 20039, 20038, 20037, 20035, 20000 | Media | 21972 | ReplayTV | 20616, 20614 |
| Goodmans | 20278, 20081, 20037, 20000 | Center PC | | Ricavision | 21972 |
| Gradiente | 20000 | MEI | 20035 | Runco | 20039 |
| Granada | 20081, 20042 | Memorex | 20479, 20278, 20209, 20162, 20048, 20047, 20046, 20039, 20037, 20035, 20000 | Salora | 20075 |
| Grundig | 20081 | Metz | 20037 | Samsung | 20739, 20432, 20060, 20045, 20038, 20000 |
| Harley | 20000 | MGA | 20060, 20043 | Sanky | 20048, 20039 |
| Davidson | | Microsoft | 21972 | | |
| Harman/ | 20081, 20075, 20038 | Mind | 21972 | | |
| Kardon | | Minolta | 20042 | | |
| Headquarter | 20046 | Mitsubishi | 20443, 20242, 20214, 20173, 20075, 20067, 20060, 20048, 20047, 20043, 20042, 20000 | | |
| Hewlett | 21972 | Motorola | 20048, 20035 | | |
| Packard | | MTC | 20000 | | |
| HI-Q | 20047, 20035, 20000 | MTX | 20000 | | |
| Hitachi | 20089, 20045, 20042, 20037, 20035, 20000 | Multitech | 20039, 20000 | | |
| Howard | 21972 | NEC | 20067, 20038 | | |
| Computers | | Nikko | 20278, 20037 | | |
| HP | 21972 | | | | |

Appendix B: Programming the Remote Control, continued

Programming Codes, continued

| VCRs | | VCRs | | DVD and Blu-ray Players | |
|-------------|---|--------------------------------|--|-------------------------|---|
| Sansui | 20479, 20209, 20067, 20000 | Touch | 21972 | B & K | 30662, 30655 |
| Sanyo | 20479, 20159, 20047, 20046, 20000 | Trix | 20037 | BBK | 31224 |
| Scott | 20184, 20121, 20045, 20043 | Ultra | 20278, 20045 | Bel Canto | 31571 |
| Sears | 20209, 20162, 20067, 20060, 20048, 20047, 20046, 20045, 20043, 20042, 20039, 20037, 20035, 20033, 20000 | Vector | 20045 | Design | |
| Sharp | 20848, 20048, 20047, 20032, 20000 | Vector Research | 20184, 20038 | Blaupunkt | 30717 |
| Shintom | 20039, 20000 | Victor | 20067 | Blue Parade | 30571 |
| Siemens | 20037 | Video Concepts | 20242, 20045 | Blue Sky | 30699, 30695 |
| Signature | 20479, 20060, 20048, 20046, 20037, 20035, 20000 | Videomagic | 20037 | Bose | 32023, 31895 |
| Singer | 20037 | Videosonic | 20000 | Brandt | 30651 |
| Sonic Blue | 20616, 20614 | Viewsonic | 21972 | Broksonic | 30695 |
| Sonographe | 20046 | Villain | 20000 | California | 30490 |
| Sony | 21972, 21032, 20636, 20067, 20047, 20046, 20035, 20033, 20032, 20000 | Voodoo | 21972 | Audio Labs | |
| Soundmaster | 20000 | Wards | 20479, 20081, 20060, 20048, 20047, 20046, 20045, 20043, 20042, 20038, 20037, 20035, 20033, 20000 | Celestial | 31020 |
| Stack 9 | 21972 | Wharfedale | 20593 | Centrex | 31004, 30672 |
| STS | 20042 | White | 20479, 20278, 20209, 20000 | Cinea | 30831 |
| SV2000 | 20000 | Westinghouse | 20000 | CineVision | 30869, 30833 |
| SVA | 20000 | World | 20479, 20209 | Citizen | 32116, 31587, 31277, 31003, 30695 |
| Sylvania | 21593, 20593, 20081, 20043, 20035, 20000 | XR-1000 | 20035, 20000 | Clairtone | 30571 |
| Symphonic | 21593, 20593, 20000 | Yamaha | 20038 | Coby | 31351, 31177, 31165, 31107, 31086, 31077, 30852, 30778 |
| Systemax | 21972 | Zenith | 21139, 20479, 20278, 20209, 20039, 20037, 20033, 20000 | Craig | 30831 |
| Tagar | 21972 | ZT Group | 21972 | Creative | 30539, 30503 |
| Systems | | | | Curtis | 31087 |
| Tandy | 20000 | DVD and Blu-ray Players | | Mathes | |
| Tashiko | 20037 | 3D LAB | 30539, 30503 | CyberHome | 31537, 31502, 31129, 31117, 31024, 31023, 30874, 30816 |
| Tatung | 20081, 20067, 20048, 20000 | Accurian | 31416, 30675 | Cytron | 30705 |
| Teac | 20067, 20000 | Acoustic Solutions | 30730 | Daewoo | 31242, 31234, 31172, 31169, 30869, 30833, 30784, 30770, 30705 |
| Technics | 20162, 20037, 20035, 20000 | Adcom | 31094 | Dansai | 30770 |
| Teknika | 20037, 20035, 20000 | Afreey | 30698 | Daytek | 30872 |
| Tevion | 20479 | Aiwa | 30641, 30533 | Decca | 30770 |
| Thomas | 20000 | Akai | 31089, 30770, 30705, 30695 | Denon | 32258, 30634, 30490 |
| Thomson | 20060 | Alba | 30717, 30672 | Denver | 30778 |
| Tisonic | 20278 | Alco | 30790 | Desay | 31407 |
| Tivo | 21944, 20739, 20636, 20618 | Allegro | 30869 | DigitalMax | 31738 |
| TMK | 20000 | Amphion | 30872 | Digitrex | 30672 |
| TNIX | 20037 | Media Works | | Disney | 31270, 30675 |
| Toshiba | 21988, 21972, 21008, 20209, 20045, 20043, 20000 | AMW | 30872 | DiViDo | 30705 |
| Tosonic | 20278 | Apex Digital | 31061, 31056, 31020, 31004, 30797, 30796, 30794, 30755, 30717, 30672, 30533 | Dual | 31068, 30675 |
| Totevision | 20037 | Arrgo | 31023 | Durabrand | 31127, 31023 |
| | | Aspire | 31168, 31407 | DVD2000 | 30521 |
| | | Digital | | Electrohome | 32116, 31003 |
| | | Astar | 31489 | Emerson | 31268, 30675, 30591 |
| | | Audiovox | 31041, 30790, 30717 | Enterprise | 30591 |
| | | Awa | 30730 | Entivo | 30539, 30503 |
| | | | | Enzer | 30770 |
| | | | | ESA | 31268 |
| | | | | Firstline | 30651 |
| | | | | Fisher | 30670 |
| | | | | Funai | 31268, 30675 |
| | | | | Gateway | 31158, 31077, 31073 |
| | | | | GE | 30815, 30717, 30522 |

Appendix B: Programming the Remote Control, continued

Programming Codes, continued

| DVD and Blu-ray Players | | DVD and Blu-ray Players | | DVD and Blu-ray Players | |
|-------------------------|---|-------------------------|---|-------------------------|---|
| GFM | 31268, 30675 | Myryad | 30894 | Sharp | 32250, 31256, 30752, 30675, 30630 |
| Go Video | 31730, 31304, 31158, 31144, 31099, 31075, 31044, 30869, 30833, 30783, 30744, 30741, 30717, 30715, 30573 | NAD | 30741 | Sharper | 31117 |
| GoldStar | 30869, 30741 | Naiko | 30770 | Image | |
| Goodmans | 30790 | NEC | 30869, 30785 | Sherwood | 31077, 31043, 30770, 30633 |
| GPX | 30769, 30699 | Nesa | 30717 | Sherwood | 31077 |
| Gradiente | 30651, 30490 | NexxTech | 31402 | Newcastle | |
| Greenhill | 30717 | Norcent | 31265, 31107, 31003, 30872 | Shinonic | 30839, 30533 |
| Grundig | 30705, 30539 | Onkyo | 31769, 30627, 30503 | Slim Art | 30784 |
| Harman/ Kardon | 30702, 30582 | Oppo | 31224, 30575 | SM Elec- tronic | 30730 |
| Hello Kitty | 30831 | Optimus | 30571 | Sonic Blue | 31099, 30869, 30783, 30715, 30573 |
| Hitachi | 30664, 30573 | Oritron | 30651 | Sony | 31536, 31533, 31516, 31431, 31070, 31033, 30864, 30533 |
| Hiteker | 30672 | Palsonic | 30852, 30672 | Sungale | 31074 |
| Humax | 31588, 31500 | Panasonic | 31762, 31641, 30703, 30632, 30571, 30503, 30490 | SVA | 30860, 30717 |
| iLo | 31348 | Philco | 30675 | Sylvania | 31268, 30675 |
| Initial | 30717 | Philips | 32084, 32056, 31506, 31354, 31340, 31267, 31158, 30675, 30646, 30539, 30503 | Symphonic | 31268, 30675 |
| Insignia | 32095, 31268, 30675 | Phonotrend | 30699 | TAG | 30894 |
| Integra | 31769, 30627, 30571 | PianoDisc | 31024 | McLaren | |
| IRT | 30783 | Pioneer | 31571, 31512, 31460, 30632, 30631, 30571, 30525, 30142 | Tatung | 30770 |
| JBL | 30702 | Polaroid | 31086, 31061, 31020 | Teac | 30790, 30717, 30571 |
| JMB | 30695 | Polk Audio | 30539 | Technics | 30703, 30490 |
| JSI | 31423 | Portland | 30770 | Technika | 30770 |
| JVC | 31550, 31275, 31164, 30867, 30623, 30558 | Presidian | 31738, 30675 | Technosonic | 30730 |
| jWin | 31049 | Proceed | 30672 | Tevion | 30651 |
| Kawasaki | 30790 | Proscan | 30522 | Theta Digital | 30571 |
| Kenwood | 30534, 30490 | Prosonic | 30699 | Thomson | 30522, 30511 |
| KLH | 31149, 31020, 30790, 30717 | ProVision | 30778 | Tivo | 31588, 31512, 31503 |
| Kloss | 30533 | Qwestar | 30651 | Toshiba | 31769, 31608, 31588, 31515, 31510, 31503, 31154, 30695, 30573, 30539, 30503 |
| Koss | 31423, 31061, 30769, 30651 | Radionette | 30741 | Tredex | 30800 |
| Lasonic | 30798, 30627 | RadioShack | 30571 | Unimax | 30770 |
| Lecson | 31533 | RCA | 31769, 30822, 30790, 30717, 30571, 30522 | United | 30730 |
| Lenoxx | 31127 | Realistic | 30571 | Universum | 30591 |
| LG | 30869, 30741, 30591 | Reoc | 30752 | Urban Con- cepts | 30539, 30503 |
| LiteOn | 31738, 31656, 31440, 31416, 31158, 31058 | Revoy | 30699 | US Logic | 30839 |
| Loewe | 30741, 30511 | Rio | 30869 | V | 31226, 31064 |
| Logix | 30783 | Rotel | 31178, 30623 | Venturer | 30790 |
| Magnasonic | 30675, 30651 | Rowa | 31004 | Vizio | 31226, 31064 |
| Magnavox | 31506, 31354, 31268, 30675, 30646, 30539, 30503 | Saba | 30651 | Wesder | 30699 |
| Marantz | 30675, 30539, 30503 | Sampo | 30752, 30698 | Xbox | 32083, 30522 |
| McIntosh | 31533, 31273 | Samsung | 31075, 31044, 30820, 30744, 30573, 30490, 30199 | Yamaha | 30646, 30545, 30539, 30497, 30490 |
| Medion | 30651 | Sansui | 30695 | Yamakawa | 30872 |
| Memorex | 31270, 30831, 30695 | Sanyo | 30873, 30695, 30675, 30670 | Zenith | 30869, 30741, 30591, 30503 |
| Microsoft | 32083, 30522 | Schneider | 30783 | Zeus | 30784 |
| Minato | 30752 | Schwaiger | 30752 | Zoece | 31265 |
| Mintek | 30839, 30717 | Sensory | 31158 | | |
| Mitsubishi | 31521, 30521 | Science | | | |
| Mustek | 30730 | | | | |

Appendix C: HDMI Control of CEC Devices

Many new HDMI devices have a feature called Consumer Electronics Control (CEC) or HDMI Control. HDMI Control allows one device, such as the TV, to control other devices, such as an A/V receiver or disc player. Use of CEC is optional.

Each manufacturer chooses which CEC functions to support so it is difficult to predict which devices and features are compatible with Mitsubishi's HDMI Control. You may find that CEC functions for a specific device are limited.

To use HDMI Control, you must enable it in both the TV and the device.

- **In the TV.** Enable HDMI control from the **New Device Found** screen or from the **Inputs > HDMI Control** menu.
- **In the Device.** Most devices with HDMI CEC compatibility let you turn it on or off in the device menus, where it is typically listed as "HDMI Control."

Enabling HDMI Control of CEC Devices

To ensure proper detection

- Power on HDMI devices before connecting them to the TV.
 - Connect and set up HDMI devices one at a time.
1. Power on the device and allow it to complete the power-on sequence (boot up). Stop any playback.
 2. Connect the device to one of the TV's HDMI inputs.
 3. When the TV detects the connection, the **New Device Found** screen will appear.

Note: See "If the New Device Found Screen Displays No HDMI Control Option" on this page if there is no HDMI Control option.




New Device Found screen with HDMI Control option. This screen displays only if the device's HDMI Control is enabled.

4. If prompted for a name, highlight the name you want to assign the device.



5. Highlight **On**.

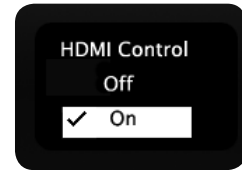

7. Highlight **EXIT** and press **ENTER** to close the **New Device Found** screen.

Note: At any time after completing Auto Input Sensing, you can set the TV's HDMI control on or off in the **Inputs > HDMI Control** menu.

8. **153 Series.** To supplement HDMI control with NetCommand IR control, see page 52.

If the **New Device Found** Screen Displays No HDMI Control Option

If the **New Device Found** screen shows no option for HDMI Control, one of these conditions applies:

- **HDMI Control is turned off in the menus of the new device**
Action:
 - a. Highlight **EXIT** and press **ENTER** to close the **New Device Found** screen.
 - b. Display the device's setup menus and enable the device's CEC capabilities.
 - c. Wait for the TV's **New Device Found** screen to appear again.
 - d. If the **New Device Found** screen does not appear, power off the device. Power on the device and wait for the **New Device Found** screen to display with the HDMI Control option.
- **The device does not have CEC compatibility**
Action:
 - Control the device with its own remote control or program the TV's remote control to operate the device.
 - **153 Series.** Use the TV's NetCommand IR control (page 52).


HDMI Control of an HDMI A/V Receiver and Connected Devices

Note: Connect the A/V receiver to the TV with an HDMI cable before making other connections.


1. Enable HDMI Control for the A/V receiver as described in “Enabling HDMI Control of CEC Devices” on the opposite page.
2. Power on the HDMI device you wish to connect to the A/V receiver (such as a disc player, cable box, or satellite receiver). Allow the device to complete the power-on sequence (boot up). Stop playback if the device starts playing.
3. Connect the device to the A/V receiver with an HDMI cable.
4. Select the device’s HDMI input on the A/V receiver’s front panel controls or remote control.
5. When the TV detects the connection, the **New Device Found** screen will appear.

Note: If the TV is unable to detect the device, either the device’s CEC capability is not enabled or the device is not CEC compatible. Enable HDMI control through the device’s menus before continuing. You may need to temporarily connect the device directly to the TV to view device menus.

6. Highlight **On**.

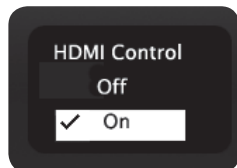

7. Highlight **EXIT** and press **ENTER** to close the **New Device Found** screen.
8. Optional: Connect the TV’s **DIGITAL AUDIO OUTPUT** to an input on the A/V receiver. Use this additional connection if:
 - You want the ability to switch between the A/V receiver speakers and the TV speakers.
 - You want to use the A/V receiver to listen to devices connected to the TV only, e.g., an antenna input or camcorder.
9. **153 Series.** If desired, perform NetCommand IR Learning to supplement CEC functions. You must first connect and place IR emitters for the devices. See page 52.

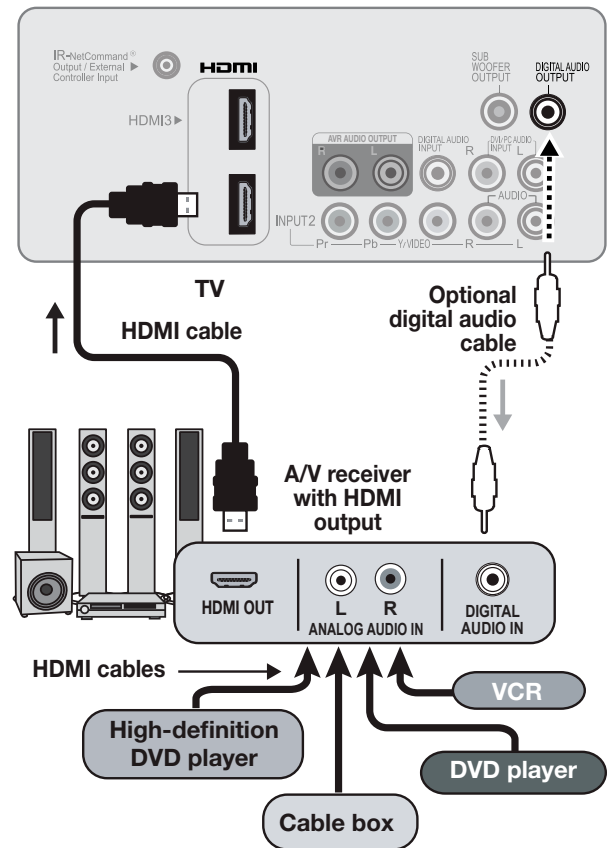

Connecting HDMI devices. The optional digital audio connection allows you to hear audio through the A/V receiver from devices connected to the TV only.


Resolving CEC Conflicts

Because each manufacturer selects which CEC functions to support, some devices can conflict with other devices. If control conflicts arise, you can:

- Turn off TV control of an individual CEC-enabled device (see below).
- Turn off CEC in the setup menu of one of the devices.

Turning Off the TV's HDMI Control of a CEC Device


1. Press **MENU** on the TV remote control.
2. Highlight **Inputs > HDMI Control** and press **ENTER** to open the menu.
3. Move to the device name and press **▲▼** to select **Off** to turn off the TV's ability to control the device.
4. Press **MENU** to clear the menu.

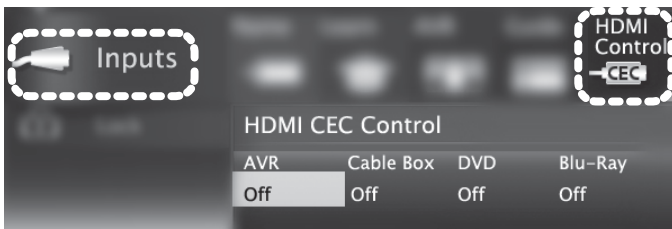

Inputs > HDMI Control menu

Removing an HDMI Device

1. Power off the device.
2. Disconnect the HDMI cable.
3. Press **MENU** on the TV remote control to enter the TV main menu.
4. Highlight **Inputs > Name** and press **ENTER** to open the menu.
5. Select **Delete** from the HDMI input names.
6. Press **MENU** to clear the menus.

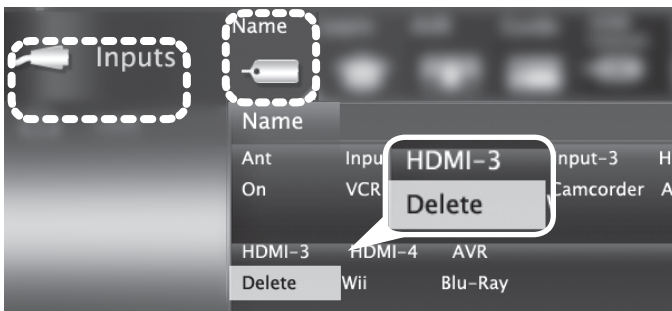

Inputs > Name menu with **Delete** selected for HDMI-3.

Using HDMI Control

As an example of using HDMI Control, press **PLAY** on the device itself to:

- Power on the TV
- Switch to the device (no need to display the **Activity** menu)
- Begin play of the device

Direct Keys

Test your equipment with the TV's remote control to find additional supported commands. See the table below for commands that may be available, depending on the individual device.

CEC-enabled VCR, DVD, and DVR functions that may be available:

| Record/Playback | Menu Navigation | Channel Tuning | Other |
|-----------------|--------------------|--------------------|-------|
| | | CHANNEL UP/DN | GUIDE |
| | ENTER | Digits 0-9, CANCEL | MENU |
| | CANCEL (to cancel) | ENTER | |


If you have a CEC-enabled A/V receiver, CEC-enabled devices connected to the A/V receiver with an HDMI cable may also be controllable. They can be selected from the TV's **Activity** menu.

CEC-enabled A/V receiver functions that may be available:

- Try the **VOLUME UP/DOWN**, **MUTE**, and menu-navigation keys.
- To open the A/V receiver menu, follow these steps:
 1. While watching TV, press **MORE** then **9 (AUDIO)**.
 2. Press **▲** until the **Speakers** option displays.
 3. Press **▶** to select **AVR** as the source.
 4. Press **MORE** and then **1 (MENU)** to display the menu.

The MORE Menu and HDMI Control

Press **MORE** on the TV's remote control to see a menu of additional supported functions for the current CEC-enabled device. To issue a command, press the number key indicated in the menu.

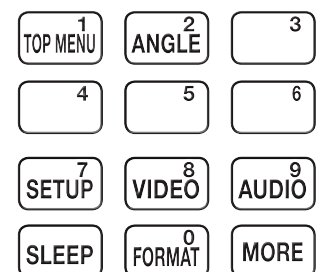

MORE key: Sample menu for a CEC-enabled DVD player

Appendix D: TV Care


Cleaning Recommendations

Normally, light dusting with a dry, non-scratching duster will keep your TV clean. If cleaning beyond this is needed, please use the following guidelines:

First, turn off the TV and unplug the power cord from the power outlet.

Top and Sides of the TV

- Occasionally clean dust build-up from the air-intake grilles on the back and sides of the TV. Clean using a vacuum cleaner with a brush attachment.
- Gently wipe down your TV with a soft, non-abrasive cloth such as cotton flannel, microfiber, or a clean cloth diaper, lightly moistened with water. Dry with a second dry, soft, non-abrasive cloth.

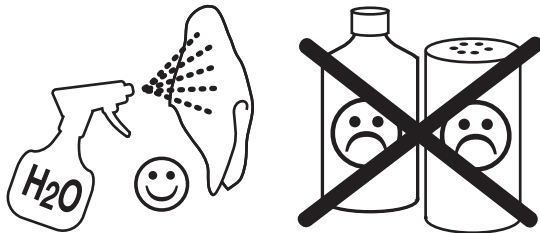

- For oily dirt, add a few drops of mild liquid detergent, such as dishwashing detergent, to the water used to moisten the cloth. Rinse with a second cloth moistened only with water. Dry with a third dry, soft, non-abrasive cloth.
- Glossy Surfaces:** Take special care when cleaning the TV's glossy surfaces.
 - Always shake or brush the cleaning cloth first to remove any dirt particles.
 - Wipe the glossy areas gently, without applying pressure.
 - If necessary, lightly dampen the cloth with water. Use no chemical or abrasive cleaners.

LCD Screen Cleaning

IMPORTANT

DO NOT apply any type of liquid to the surface of the TV screen.

- Use only a soft, dry cloth to clean the LCD screen. Do not use any liquids.**
- Wipe the screen gently with an up and down motion.
- Clean the entire screen evenly, not just sections of the screen.

General Cleaning Precautions

- DO NOT allow liquid to enter the TV through the ventilation slots or any crevice.
- DO NOT use any strong or abrasive cleaners, as these can scratch the surfaces.
- DO NOT use any cleaners containing ammonia, bleach, alcohol, benzene, or thinners, as these can dull the surfaces.
- DO NOT spray liquids or cleaners directly on the TV's surfaces.
- DO NOT scrub or rub the TV harshly. Wipe it gently.

Care of the Remote Control

Remote Control Tips

- For longer life, use alkaline batteries.
- Do not mix old and new batteries.
- Be within 20 feet of the equipment.
- Do not press two or more keys at the same time unless instructed to do so.
- Do not allow the unit to get wet or become heated.
- Keep the unit out of direct sunlight.
- Avoid dropping on hard surfaces.
- Do not use harsh chemicals to clean. Use only a soft, lightly moistened cloth.

Resetting the Remote Control

If **TV** mode is selected and the TV does not respond properly, reset the remote control.

- Press and hold **POWER** for several seconds until the mode indicator blinks twice and goes off.
- Release the **POWER** key.
- Press keys **0 0 9 3 5** and the mode indicator will blink twice when you finish entering the code. When entering the code, pause for a moment between each key press to ensure it is recognized.

Low-Battery Indicator

If you press a key and the mode indicator blinks five times, replace the remote control's batteries.

Appendix E: Troubleshooting

TV Reset Comparison Guide

You can resolve many common TV problems using the reset functions described in the following table. See also the troubleshooting suggestions later in this appendix.

IMPORTANT

Before you change sound or picture settings: If picture or sound settings seem wrong for a broadcast

channel (a channel from the **ANT** input, a cable box, or satellite receiver), first check other channels from the same input before changing settings. If most other channels from the same input seem correct, there is likely a problem with the broadcast rather than with the TV. Use care in this case, as changes you make to fix problems on individual channels also affect all other channels on the same input.

| Reset Name | When to Use | How to Use | Resulting Action |
|---|--|---|---|
| Format | When the picture shape seems incorrect, use MORE > 0 (FORMAT) to change the shape of the picture. | Press the MORE key and then repeatedly press 0 (FORMAT) to cycle through the available aspect ratios. | The last-used format for a signal type is memorized for each input. The next time the same input and the same signal type is viewed, the last-used format will be recalled. |
| PerfectColor™ Reset or PerfectColor™/PerfectTint™ Reset (153 Series) (for the single input currently being watched) | When the color intensities seem out of balance, use the PerfectColor/PerfectTint reset to reset the color balances to the original factory settings. Both PerfectColor and PerfectTint are reset at the same time. | <ol style="list-style-type: none"> 1. While viewing the input to be reset, press MENU and go to Adjust > Picture+ > PerfectColor. 2. Press ENTER to display the PerfectColor adjustment screen. 3. Press CANCEL to reset the colors. | All PerfectColor/PerfectTint sliders are reset to the original center position. The PerfectColor/PerfectTint settings for other inputs remain unchanged. |
| A/V Memory Reset (for the single input currently being watched) | When audio and/or video settings for a single input seem incorrect, use A/V Memory Reset to return the input to the original factory settings. | <ol style="list-style-type: none"> 1. While viewing the input to reset, press MENU and go to Adjust > Reset. 2. Press ENTER to highlight the Reset icon. 3. Press ENTER again to reset. | All Audio and Video settings for the individual input are reset except for the Listen To, Language, audio Balance, Closed Caption, and Advanced Picture settings. |

Service and Customer Support

Service

If you are unable to correct a problem with your TV, consult your Mitsubishi dealer or Mitsubishi Consumer Relations at (800) 332-2119.

- DO NOT adjust any controls other than those described in this Owner's Guide.
- DO NOT remove the protective back cover of your TV.

Customer Support

- To order replacement or additional remote controls or to purchase an IR emitter cable, visit our website at www.mitsuparts.com or call (800) 553-7278.
- For questions:
 - ◆ Call Consumer Relations at 800-332-2119.
 - ◆ E-mail: MDEAservice@mdea.com
 - ◆ Website: www.mitsubishi-tv.com

Appendix E: Troubleshooting, continued

| Reset Name | When to Use | How to Use | Resulting Action |
|---|--|--|--|
| A/V Reset (for all inputs) | To reset audio and video adjustments for all inputs to the original factory settings. | While viewing the TV, press the control-panel buttons ACTIVITY and VOLUME DOWN at the same time for at least two seconds. | All Audio and Video settings are returned to the original factory settings, including Listen To, Language, audio Balance, Closed Captions, and Format. |
| Channel Memorization | To erase and re-memorize channels on the ANT input. | <ol style="list-style-type: none"> 1. While viewing the TV, press MENU to display the main menu. 2. Navigate to the Initial > Channel menu. 3. Press ENTER. 4. Highlight the reception mode, e.g. Ant Air. 5. Highlight Scan. 6. Press ENTER to start channel memorization. | All previously memorized channels for the antenna input are erased and a new set of memorized channels is created. To add or delete individual channels, see Initial > Channel > Edit menu instructions on page 45. |
| Lock Menu Pass Code | To change your Lock menu pass code | See the cutout page from Appendix A, page 65. | Allows establishment of a new code. |
| Control-Panel Lock Release | To re-enable the control-panel buttons after activation of the Control-Panel Lock | Press and hold the ACTIVITY button on the control panel for ten seconds. If the TV is powered off, you can now press the POWER button to turn it on. | Allows the control panel to be unlocked if the remote control is misplaced. |
| Auto Input Sensing for HDMI | If the New Device Found screen does not appear when you connect an HDMI device. | <ol style="list-style-type: none"> 1. Disconnect the HDMI device. 2. Delete the HDMI input in the Inputs > Name menu (see page 47). 3. Power on and connect the new device. | The New Device Found screen will display. |
| System Reset | If the TV does not turn on or off, does not respond to the remote control or control-panel buttons, or has audio but no video. | Press and hold the POWER button on the control panel for ten seconds. | The TV will turn off. Power on the TV and the green LED will flash quickly for about one minute. The changes you made most recently, before using SYSTEM RESET , may be lost. |
| TV Reset IMPORTANT: Use this reset only if other troubleshooting has been unsuccessful. | <p>To reset all consumer-accessible settings and all memories to the original factory defaults.</p> <p>Use TV Reset if the TV can respond to controls but TV behavior is abnormal.</p> <p>CAUTION: All owner-performed setups and adjustments will be erased.</p> | <ol style="list-style-type: none"> 1. While viewing the TV, press MENU to display the TV main menu. 2. With the main menu displayed, press number keys 1 2 3 to display the Reset menu. 3. READ THE ON-SCREEN WARNING AND INSTRUCTIONS. <ul style="list-style-type: none"> • If you do not wish to use this reset, press BACK or MENU to back out. • If you do wish to use the reset, press ENTER to erase all memories and settings. | The TV will start the initialization process and then turn off. Power on the TV and the front green LED will start flashing. All memory and settings outlined in this Owner's Guide will need to be set again. |

Appendix E: Troubleshooting, continued

| General TV Operation | | |
|----------------------|--|---|
| | Symptom | Remarks |
| 1. | The TV remote control does not work. | <ul style="list-style-type: none"> • Check that the batteries are fresh and installed correctly. • Check that the control mode on the remote is set to TV. • Be no more than 20 feet from the TV when using the remote control. • Program the remote control to operate the TV or other device. • Reset the remote control. |
| 2. | When I try to use the remote control, the POWER key blinks five times. | Replace the batteries. |
| 3. | TV does not respond to the remote control or to control-panel buttons and TV will not power on or off. | <ul style="list-style-type: none"> • Unplug the AC power cord for 10 seconds. • Press and hold the POWER button on the control panel to perform system reset. |
| 4. | When a device is selected from the Activity menu, the screen is blue or black (no signal source). | <ul style="list-style-type: none"> • Make sure the selected device is turned on. • Begin play of the device. |
| 5. | You have forgotten your Lock menu pass code. | See "Bypassing the Parental Lock", Appendix A. |
| 6. | Rating restrictions are not working. | Open the Lock > Parental Lock menu and: <ul style="list-style-type: none"> • Verify that the ratings locks are active. • Check the Lock Time/Unlock Time to check if rating restrictions are disabled. • Rating restrictions apply only to content on the ANT input. |
| 7. | On-screen displays appear each time you change a function. | Normal TV operation. |
| 8. | | |
| 9. | I have turned on CEC for my HDMI devices but control is erratic and I wish to disable it. | <ul style="list-style-type: none"> • First turn off the TV's HDMI control for the specific device. Open the Inputs > HDMI Control menu, select the device, select Off. • Disable CEC on the device itself. See the device's instructions. • If the problem persists, do the following: <ol style="list-style-type: none"> 1. Disconnect the device from the TV. 2. Open the Inputs > Name menu and select Delete for the device. 3. Reconnect the device to the TV and Auto Input Sensing will recognize the device with CEC disabled. |

Appendix E: Troubleshooting, continued

| TV Channels | | |
|-------------|--|--|
| | Symptom | Remarks |
| 1. | The TV takes several seconds to respond to channel changes. | <ul style="list-style-type: none"> • It is normal for digital channels to take longer to tune in. • Press ENTER after entering a channel number to avoid delays. • Use a 4-digit number for an over-the-air digital channel. • Use a 6-digit number for digital cable channels if your cable service is able to recognize 6-digit channel numbers. |
| 2. | You cannot access a channel. | <ul style="list-style-type: none"> • Use number keys instead of CHANNEL Up/Down. • Be sure the channel you want to view is in memory. • Check that the TV is switched to the correct device or antenna for that channel by pressing the ACTIVITY key. • Make sure the Lock > Parent menu lock is set to Off. • If you cannot tune to a virtual digital channel even though the TV has already memorized digital channels, tune to the physical channel number used by the broadcaster. The virtual channel will then be automatically added to memory. • You may be trying to tune to an analog channel that is no longer broadcasting. |
| 3. | When ChannelView list is displayed, information appears incomplete | <ul style="list-style-type: none"> • Press INFO to update the display for the highlighted channel. • Program information is displayed only for the currently tuned channel. • Available information is sent from the broadcaster or cable provider. No other data is available. • Make sure the TV clock is set correctly. |

| TV Power On/Off | | |
|-----------------|---|--|
| | Symptom | Remarks |
| 1. | TV takes an excessively long time to power on. | <ul style="list-style-type: none"> • When powered on, the TV needs time to boot up, just as does a computer. • For faster power-up, change the Energy setting to Fast Power On (Initial > Energy menu). With this setting the TV's power usage when off exceeds ENERGY STAR[®] recommended levels for a powered-down device. |
| 2. | You cannot program the TV to turn on automatically (Timer function) | <ul style="list-style-type: none"> • The TV may be locked. • The clock may not be set. |
| 3. | TV turned itself off and the light on the front panel started to blink. | <ul style="list-style-type: none"> • Momentary power fluctuation caused the TV to turn off to prevent damage. Wait for the green light to stop flashing and turn the TV on again. • If the TV does not stay on, press the POWER button on the control panel for at least eight seconds to perform System Reset. If this happens frequently, obtain an AC line power conditioner/surge protector. • An unusual digital signal may have been received, triggering a protection circuit. Wait for the light to stop flashing and turn TV on. |
| 4. | TV will not power off. | Press the POWER button on the control panel for ten seconds to perform System Reset. |

Appendix E: Troubleshooting, continued

| Picture | | |
|---------|--|---|
| | Symptom | Remarks |
| 1. | Picture does not look like a high-definition picture. | Not all signals are high-definition signals. To receive high-definition programming from your cable or satellite provider, you must subscribe to the provider's high-definition service. Some over-the-air broadcasts are in high-definition and can be received with a high-quality antenna suited to your location. |
| 2. | TV has sound but no picture. | <ul style="list-style-type: none"> • Check that all video inputs are plugged in firmly. • Press and hold the POWER button on the control panel for ten seconds to perform System Reset. |
| 3. | Picture has become dimmer. | Adjust picture brightness and contrast to maximum levels. |
| 4. | There is a large black or gray rectangle on the screen. | The TV's analog closed captioning has been set to "text" mode in the Captions menu. Turn off because there is no text information being broadcast. |
| 5. | You cannot view a picture when playing a VHS tape. | Check your VCR's owner's guide for further troubleshooting. |
| 6. | VCR or DVD player's on-screen menus jitter up and down. | Stop playback. Possible cause: Many VCRs and DVD players provide on-screen menus at only half-resolution that may appear to jitter up and down. |
| 7. | When viewing a stopped VCR, white lines are rolling on the screen. | <ul style="list-style-type: none"> • Turn off video mute for the VCR. • Begin playing the tape. • Change the VCR input from Line 1 to the VCR antenna input. |
| 8. | A color program appears as a black and white image, or the colors are dim, or the screen is black. | The PerfectColor color balance has been incorrectly set. Reset the PerfectColor balance. |
| 9. | Picture from an HDMI input is noisy (poor quality). | Upgrade a Category 1 (unmarked) HDMI cable to a Category 2 high-speed HDMI cable. |
| 10. | The image from a computer appears distorted when viewed on the TV. | <ul style="list-style-type: none"> • Normal TV operation. The TV does not correct distortion in the picture from a computer because the correction process may cut off the edges of the image. • The aspect ratio may be wrong for the image. Press MORE and then 0 (FORMAT) to change. |

| Sound | | |
|-------|--|---|
| | Symptom | Remarks |
| 1. | There is no sound even when the volume is turned up. | <ul style="list-style-type: none"> • Check if the MUTE key is on. • The TV's "Listen to:" setting may be set to SAP (analog program from the ANT input) but no SAP is being broadcast. • Check that the Speakers option is set to TV to hear sound from the TV speakers. Possibly sound is being sent to one of the audio outputs for an A/V receiver or headphones. • If using an A/V receiver, check that the Speakers option is set to AV Receiver to hear sound from the A/V receiver speakers. • Press and hold the POWER button on the control panel for 10 seconds to perform System Reset. |

Appendix E: Troubleshooting, continued

| Sound | | |
|-------|--|---|
| | Symptom | Remarks |
| 2. | The sound does not match the screen picture. | The TV's "Listen to:" setting may be set to SAP (analog program from the ANT input). |
| 3. | The sound from my A/V receiver does not match the screen picture (I should hear the correct audio from my A/V receiver). | <ul style="list-style-type: none"> Check that DIGITAL AUDIO OUTPUT and/or AVR AUDIO OUTPUT on TV's main panel is connected to the A/V receiver. Without this connection, devices connected only to the TV (and not the A/V receiver) can be heard only from the TV speakers. Note that this includes the ANT input, a device (such as a camcorder) connected to the convenience panel, and any other device sending audio to the TV only. If using a NetCommand-controlled A/V receiver, NetCommand may be selecting the wrong A/V receiver audio input. Check the A/V receiver's NetCommand setup in the Inputs > AVR menu. |
| 4. | Cannot select an audio-only device; it does not appear in the Activity menu. | Plug an unused video plug into the Y/VIDEO jack to activate Auto Input Sensing and make the audio device selectable in the Activity menu. |
| 5. | Sound is coming from the TV speakers instead of the A/V receiver. | Disconnect headphones. Connect the TV's AUDIO OUT to the A/V receiver and select AV Receiver from the New Device Found screen. |

| NetCommand IR Control (NetCommand-equipped models only) | | |
|---|--|---|
| | Symptom | Remarks |
| 1. | Cannot see the menu from the A/V Receiver. | <ul style="list-style-type: none"> A/V Receiver Set Up for Audio-Only Switching The A/V Receiver is not connected to any video input of the TV. To check the A/V Receiver menu, temporarily plug into an unused input of the TV, such as Input 3. Exit the New Device Found screen and select Input 3 from the Activity menu. Press MENU on the A/V receiver's remote control. A/V Receiver Set Up for Audio and Video Switching over HDMI Use the MENU key on the A/V receiver's remote control. A/V Receiver with HDMI Control Switch the remote control to AUDIO mode. Press the MORE key and then 1 (Menu). |
| 2. | NetCommand unable to learn specific device keys. | <ul style="list-style-type: none"> A/V Device does not use IR format for remote control signal. ITT and RF formats cannot be learned. Room lighting may affect the signal. Have the remotes very close (6 inches or less) to the TV during Learning. If learning a Mitsubishi remote control, make sure mode is not set to TV. Some, but not all, device key functions can be learned by NetCommand. For example, POWER and PLAY may be learned, but other functions may not. The signal from the remote control may not be strong enough. Insert fresh batteries and try Learning again. |

Appendix E: Troubleshooting, continued

| NetCommand IR Control (NetCommand-equipped models only) | |
|---|--|
| Symptom | Remarks |
| 3. The A/V receiver is the selected audio source but there is no sound. | <ul style="list-style-type: none"> • A/V Receiver Set Up for Audio-Only Switching <ul style="list-style-type: none"> - Check to see if the A/V Receiver power is turned on. - With A/V receiver power turned on, redisplay the Activity menu and press ENTER to allow NetCommand to correctly select the A/V Receiver input. - Incorrect setup in the Inputs > AVR menu. Check the device connection assigned in the AVR menu. • A/V Receiver Set Up for Audio and Video Switching over HDMI <ul style="list-style-type: none"> - Check to see if the A/V Receiver power is turned on. - If the device is connected only to the TV (e.g., on ANT or a front panel input), verify that the TV's AUDIO OUTPUT is connected to the A/V receiver. - The A/V receiver is not switching properly because you have not learned the IR codes for the A/V receiver inputs to which your devices are connected. |
| 4. There is no sound from the A/V receiver for my DVD player or other surround sound device even though I learned the IR code for the A/V receiver's DVD input or other input. (A/V Receiver Set Up for Audio-Only Switching) | NetCommand A/V receiver setup for the DVD player or digital surround sound device or other device is not switching properly. See "Automatic Switching (Audio or Audio/Video)," page 60, and perform A/V receiver setup for a digital surround sound device. |
| 5. There is no sound or picture from the A/V receiver for my DVD player or other device connected to the A/V receiver; the A/V receiver should be sending video to the TV over an HDMI cable. (A/V Receiver Set Up for Audio and Video Switching over HDMI) | The NetCommand A/V receiver setup is not switching audio and video inputs properly because you did not "learn" the A/V receiver's IR codes for the device inputs. See "Case 3: Automatic Audio and Video Switching via HDMI," page 62. |
| 6. I've selected my DVD player or other surround sound device in combination with the TV speakers but hear no sound from the TV speakers. | <ul style="list-style-type: none"> • A/V Receiver Set Up for Audio-Only Switching <p>If you have only an audio connection from the device to the A/V receiver, a physical audio connection from the device to the TV is also required.</p> <ul style="list-style-type: none"> - Connect the left and right audio output from the device to the appropriate TV audio input. Now you can hear audio from the device through either the TV speakers or the A/V receiver. - To switch audio sources, press MORE 9 (Audio), press ▲ ▼ to show the Speakers option, then press ► to select AV Receiver or TV. • A/V Receiver Set Up for Audio and Video Switching over HDMI <p>With your DVD player connected to the A/V receiver, only video is passed from the A/V receiver to the TV because of copy-protection restrictions on the HDMI signal</p> |
| 7. I "learned" the RECORD key for my VCR/DVR but when I pressed the RECORD key, the VCR/DVR did not record anything. | Check that the VCR or DVR is receiving a signal directly from your cable box or satellite receiver. |

Trademark and License Information

LICENSOR'S SUPPLIERS DO NOT MAKE OR PASS ON TO END USER OR ANY OTHER THIRD PARTY, ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY OR REPRESENTATION ON BEHALF OF SUCH SUPPLIERS, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



Manufactured under license from Cambridge Mechatronics Ltd.

Rapidfire and the 1... logo are trademarks of Cambridge Mechatronics Ltd

Manufactured under license from Dolby Laboratories. Dolby is a trademark of Dolby Laboratories.

HDMI™ the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

The software in this TV is based in part on the work of the Independent JPEG Group, copyright © 1991-1998, Thomas G. Lane, all rights reserved.

x.v.Color and the **x.v.Color** logo are trademarks of Sony Corporation.

ChannelView™, DeepField™ Imager, Easy Connect™, NetCommand®, PerfectColor™, PerfectTint™, Plush 1080p@5G, SharpEdge™, Smooth120Hz™ Film Motion, Unisen™ are trademarks of Mitsubishi Digital Electronics America, Inc.

Mitsubishi TV Software

END-USER LICENSE AGREEMENT FOR EMBEDDED SOFTWARE

IMPORTANT – READ CAREFULLY: This License Agreement is a legal agreement between you (either an individual or an entity) and Mitsubishi Digital Electronics America, Inc. (MDEA) for all software pre installed and/or provided along with this television (“Software”). By utilizing this television and Software, you agree to be bound by the terms of this License Agreement.

The Software is protected by United States copyright laws and international treaty provisions, as well as other intellectual property laws and treaties. The Software is licensed, not sold.

1. **LICENSE GRANT.** MDEA grants you a non-exclusive, non-transferable, limited right and license to use one copy of the Software only with the Mitsubishi television model that included this owner’s guide and owned by you.

2. **RIGHTS AND LIMITATIONS.**

Software Not for Resale. You may not resell or otherwise transfer for value the Software, except in conjunction with a sale of the TV that Software has been pre installed.

Prohibition on Reverse Engineering, Decompilation and Disassembly. The Software contains trade secrets or other proprietary material in its human perceivable form and to protect them, you may not reverse engineer, decompile, or disassemble, or otherwise reduce the Software to any human perceivable form, except to the extent that the foregoing restriction is expressly prohibited by applicable law.

Separation of Components. The Software is licensed as a single product. Its component parts may not be separated for use on more than one TV.

No Rental. You may not rent, lease, lend, or sublicense the Software.

Trademarks. This License Agreement does not grant you any rights to any trademarks of MDEA.

3. **VIOLATIONS.** You understand that any use, copying or transfer of the Software, except as permitted pursuant to this License, may subject you to serious criminal and civil penalties including damages and an award to MDEA of attorneys’ fees in connection with any violation of this License. You further understand that you may be held legally responsible for any copyright infringement or other violation of intellectual property rights that is caused, encouraged, or induced by your failure to abide by the terms of the License. This license is effective until terminated, and will terminate immediately without notice from MDEA or judicial resolution if you fail to comply with any provision of this License.

4. **COPYRIGHT.** All title and intellectual property rights in and to the Software (including but not limited to any images, photographs, animations, video, audio, music, text, and “applets” incorporated into the Software), and any accompanying printed materials are owned by or licensed to MDEA. All title and intellectual property rights in and to the content which may be accessed through use of the Software is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This License Agreement grants you no rights to use such content, except that you own the media on which the Software is recorded, but MDEA and its licensors retain ownership of the Software itself. All rights not expressly granted are reserved by MDEA.

5. **EXPORT RESTRICTIONS.** MDEA is licensing the Software for use within the United States. You agree that you will not export or re-export the Software. You specifically agree not to export or re-export the Software: (i) to any country to which the U.S. has embargoed or restricted the export of goods or services, which currently include, but are not necessarily limited to Cuba, Iran, Iraq, Libya, North Korea, Sudan, and Syria, or to any national of any such country, wherever located, who intends to transmit or transport the Software back to such country; (ii) to any person or entity who you know or have reason to know will utilize the Software in the design, development, or production of nuclear, chemical, or biological weapons; or (iii) to any person or entity who has been prohibited from participating in U.S. export transactions by any federal agency of the U.S. government. You warrant and represent that neither the BXA nor any other U.S. federal agency has suspended, revoked, or denied your export privileges.

6. **DISCLAIMER OF WARRANTY. EXCEPT AS OTHERWISE PROVIDED IN THIS LICENSE OR IN THE LIMITED WARRANTY APPLICABLE TO THE TV, MDEA MAKES NO OTHER WARRANTIES OF ANY KIND WHATSOEVER REGARDING THE SOFTWARE AND HEREBY EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE. ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXPRESSLY DISCLAIMED BY MDEA. IN NO EVENT SHALL MDEA BE LIABLE TO YOU OR ANY THIRD PARTIES, IN CONTRACT, IN TORT OR OTHERWISE, FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.**

7. **LIMITATION OF LIABILITY. MDEA SHALL NOT, UNDER ANY CIRCUMSTANCES BE LIABLE TO YOU OR ANY THIRD PARTIES FOR ANY DAMAGES OF ANY NATURE, WHETHER INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, ANY CLAIMS FOR LOST PROFITS, LOSS OF GOOD WILL OR EXPENDITURES MADE OR COMMITTED FOR IN RELIANCE ON THE CONTINUATION OF THIS LICENSE. YOU AGREE THAT NEITHER MDEA’S BREACH OF THIS LICENSE NOR ITS FAILURE TO REPAIR A DEFECT, ERROR OR BUG SHALL CONSTITUTE A FAILURE OF THE ESSENTIAL PURPOSE OF THIS LICENSE. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. MDEA’S liability to you for direct damages for any cause whatsoever and regardless of the form of the action, will be limited to the money paid by you for the TV (based on fair market value of the TV) that caused the damages.**

8. **GENERAL.** This License Agreement will be governed by the laws of the State of California.

WARNING: This product contains chemicals known to the State of California to cause cancer and/or birth defects or other reproductive harm.

GNU General Public License

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
675 Mass Ave, Cambridge, MA 02139, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

GNU General Public License, continued

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Mitsubishi LCD Flat Panel HDTV Limited Warranty

MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC. ("MDEA") warrants to the original purchaser of this LCD Flat Panel HDTV that if purchased from an authorized MITSUBISHI Audio/Video Dealer, should it prove defective by reason of improper workmanship and/or material:

a. Parts. All parts (except any software incorporated into this HDTV) are warranted for a period of one year from the date of the original purchase at retail. We will repair or replace, at our option, any defective part without charge for the part. Parts used for replacement may be replaced with those of like kind and quality and may be new or remanufactured. Parts used for replacement are warranted for the remainder of the original warranty period.

b. Embedded Software. MDEA warrants that all software incorporated into this HDTV (the "Embedded Software") will perform in accordance with the functional description of Embedded Software in all material respects, but MDEA does not warrant that the Embedded Software is error-free. The warranty contained in this section shall continue for a period of one year, from the date of the original purchase from the authorized dealer. If, after prompt notice within the warranty period, MDEA determines that the Embedded Software has failed to perform in accordance with such functional description in all material respects and if such failure is not due to accident, misuse, modification or misapplication of the Embedded Software, then MDEA shall modify or replace the nonconforming Embedded Software at no charge to you, which at MDEA's sole discretion may be fulfilled by means of modification or replacement software contained on a replacement memory card for Consumer installation. The foregoing shall be MDEA's sole obligation to you under this limited warranty. All rights under this limited warranty on the Embedded Software also subject to your compliance with the terms of the Software License Agreement applicable to this HDTV, and this limited warranty on the Embedded Software shall be null and void if the Embedded Software is modified or changed in any manner except as specifically authorized by MDEA.

c. Labor. For certain items that are designed to be replaced by the consumer, including (but not limited to) some Embedded Software, the consumer is solely responsible for any replacement labor. For all other parts, we will provide the labor for a warranty repair by an authorized MITSUBISHI service center without charge for one year from the original date of purchase at retail.

d. Notice. To obtain warranty service, you must notify an authorized MITSUBISHI service center of any defect within the applicable warranty time period.

BEFORE REQUESTING SERVICE, please review the TV owner's guide to insure proper installation and correct customer control adjustment. If the problem persists, please arrange for warranty service.

1. TO OBTAIN WARRANTY SERVICE:

a. Contact your nearest authorized MITSUBISHI service center whose name and address can be obtained from your MITSUBISHI dealer, by writing to the address provided below, calling MDEA at 800-332-2119, or using the support feature of our website at www.Mitsubishi-tv.com.

b. Warranty service will be provided in your home or, if required, at an authorized service shop, provided that your television is located within the geographic territory customarily covered by an authorized MITSUBISHI service center. If not, you must either deliver your television to an authorized service location at your own expense, or pay for any travel and/or transportation costs the service center may charge to and from you home. Actual service labor will be provided without charge.

c. Proof of purchase from an authorized MITSUBISHI dealer is required when requesting warranty service. Present your sales receipt or other document which establishes proof and date of purchase. **THE RETURN OF THE OWNER REGISTRATION CARD IS NOT A CONDITION OF WARRANTY COVERAGE.** However, please return the Owner Registration Card so that we can contact you should a question of safety arise which could affect you.

2. THIS LIMITED WARRANTY DOES NOT COVER:

a. Up to .01% pixel outages (small dot picture elements that are dark or incorrectly illuminated).

b. Cosmetic damage or any other damage where such damage is caused by unauthorized modification, alteration, repairs to or service of the product by anyone other than an authorized MITSUBISHI service center; physical abuse to or misuse of the product (or any product damaged by excessive physical or electrical stress); any products that have had a serial number or any part thereof altered, defaced or removed; product use in any manner contrary to the Owner's Guide; freight damage; or any damage caused by acts of God or other factors beyond the reasonable control of MDEA, such as power surge damage caused by electrical system or damages caused by use of third party mounting brackets or stands. This limited warranty also excludes service calls where no defect in the product covered under this warranty is found, service calls related to unsatisfactory audio or visual reception or signal unless caused by a defect in the product that is covered under this limited warranty, all costs, expenses or any other damages arising from product installation, removal from or re-installation into custom installations or on

wall mountings, or set-ups, any adjustments of user controls (including contrast, brightness, color, tint, fine tuning, sharpness), other adjustment necessary to prepare the unit for display or use, connection with any external audio receiver, antenna, cable or satellite systems, or service of products purchased or serviced outside the U.S.A. Please consult the operating instructions contained in the Owner's Guide furnished with the product for information regarding user controls.

3. ANY EXPRESS WARRANTY NOT PROVIDED HEREIN, AND ANY REMEDY WHICH, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF ONE YEAR.

4. UNDER NO CIRCUMSTANCES SHALL MDEA BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE.

5. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental, special, or consequential damages, so the above limitations or exclusions may not apply to you.

6. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

7. In the event of any dispute under this limited warranty, jurisdiction and venue for resolving that dispute will be in the state where the television was purchased and the laws of such state will govern. In no event shall Mitsubishi have any liability, including with out limitation, for general, consequential, incidental, or special damages for loss, destruction, damage or corruption of recorded data, media or software resulting from use of this television, or cost of recovery of lost data, media or software therefore.



MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC.
9351 Jeronimo Road
Irvine, CA 92618-1904

Index

- A**
- Activity Menu 24
 - Automatic Generation 48
 - Change Input Name 47
 - Customizing 47
 - NetCommand-Controlled Switching of A/V Receiver Inputs 55
 - Removing a Disconnected HDMI Device 47
 - Anamorphic Picture Format 27
 - Antenna Input (ANT) 17, 18
 - Signal Strength for Digital Channels 26
 - Audio Lock (A/V receiver control) 68
 - Audio Output Jacks 17, 18
 - Auto Input Sensing 13
 - Auto-Off (Sleep Timer) 24
 - Auto-On (Timer) 44
 - A/V Receiver
 - and Speakers Option 39
 - and TV's Remote Control 67
 - Audio Lock 68
 - Connecting 18, 22, 62, 75
 - Controlling Sound Volume 25
 - Disconnecting Analog 25
 - NetCommand IR Control 58, 59
 - Controlling a Device Connected to the A/V Receiver 36, 63
 - Video and Audio Switching via HDMI 63
- B**
- Backlight 9, 38
 - Batteries 7
 - Brightness (picture adjustment) 38
- C**
- Cable Box
 - and TV's Remote Control 67
 - Connecting 19, 20, 21
 - Camera Files 30
 - Captions Menu 43
 - CEC (Consumer Electronics Control) 6, 36, 74
 - A/V Receiver 25, 75, 83
 - Troubleshooting 80
 - Channels
 - antennaweb.org 45
 - Physical/Virtual Channel Numbers 45
 - Scan (memorize) 12, 45
 - Troubleshooting 81
 - ChannelView™ Channel Listings 25
 - Cleaning 77
 - Clock, Set Date and Time 44
 - Closed Captions 43
 - Color Adjustments 42
 - Reset Color 42, 78
 - Computer
 - and Display Formats 29
 - Connecting 28
 - Contrast 38
 - Control Panel 11
 - Control Panel Lock 11, 51
- D**
- Date. *See* Clock
 - Default Settings, Returning to 78
 - DIGITAL AUDIO INPUT 18
 - DIGITAL AUDIO OUTPUT 18
 - Digital Camera Video Output 32
 - DVD Player
 - and TV's Remote Control 67
 - Connecting 19, 20
 - DVI Device, Connecting 20
- E**
- Energy Usage 6, 45
- F**
- Fast Power On 45
 - Film Mode 41
 - Font (digital closed captions) 43
 - FORMAT (aspect ratio, MORE menu) 27
 - Freeze Picture (PAUSE key) 10
 - Front Panel 11
- G**
- Game
 - HDMI Cables for Games 18
 - Picture Mode Game 38
 - GUIDE Key
 - ChannelView 25
 - HDMI Control 76
 - NetCommand Control 55, 57
- H**
- HD (High-Definition) Signal) 27
 - HDMI
 - Changing Out an HDMI Device and Auto Input Sensing 13
 - Connecting an HDMI Device 19
 - A/V Receiver with HDMI 22
 - HDMI Cable Categories 18
 - HDMI Control of CEC Devices 74
 - HDMI Jack 18
 - Removing an HDMI Device from the Activity Menu 47
 - Headphones
 - Jack 18
 - Speakers Option 39
- I**
- INFO Key
 - ChannelView 25
 - Status Display 26
 - USB Menu 30
 - IR Emitter Placement 53
 - IR NetCommand Output (jack) 18
- L**
- Language
 - Changing the Menu Language 44
 - in Digital Programs 40
 - SAP (Second Audio Program) 40
 - Learn 47. *See also* NetCommand IR Control
 - Letter Box Image Display 27
 - Level Sound 40
 - Listen To 40
 - Listings (ChannelView) 25
 - Lock TV
 - Bypassing the Lock 65
 - Lock by Ratings 50
 - Lock by Time 51
 - Lock Control Panel 51
 - Preset V-Chip Blocking 49
- M**
- Memorizing Channels 12, 45
 - Add Single Channel to Memory 45
 - MP3 Player (audio-only connection) 23
 - Music Files 30
 - Mute
 - Closed Captions 43
 - MUTE Key 10
 - Video Mute 41
- N**
- Name (Inputs > Name menu) 47
 - NetCommand IR Control
 - About 52
 - A/V Receiver Control 59
 - Initial Setup for Most Devices 54
 - Operating 55
 - Troubleshooting 83
- P**
- Parental Menu (TV locks) 50
 - Pass Code
 - Resetting 65
 - Setting 49
 - PAUSE Key 10
 - PerfectColor 42
 - PerfectTint 42
 - Photo Viewing 31

- Picture
 - Global Picture Adjustments 41
 - Picture+ Adjustments 42
 - Picture Menu Adjustments 38
 - Picture Quality and Film Mode 41
 - Troubleshooting 82
- R**
- Ratings (TV and Movie) 50
- Remote Control
 - Batteries 7
 - Keys and Functions 10
 - Programming Codes (reference chart) 69
 - Programming Instructions 68
 - Reset 77
- Reset
 - A/V Memory Reset (for the current input) 78
 - A/V Reset (for all inputs) 79
 - HDMI Auto Input Sensing 13
 - Pass Code 65
 - PerfectColor/PerfectTint 78
 - Remote Control 77
 - Remote Control Audio Lock 68
 - System Reset 11
 - TV Reset Comparison Guide 78
- S**
- Safety Instructions 4, 5
- SAP (second audio program) 40
- Satellite Receiver
 - and the Remote Control 67
 - Connecting 19, 20
- Scan (memorize channels) 45
- ScreenSaver 41
- SD (Standard-Definition Signal) 27
- Service and Support 78
- Signal Definitions 27
- Signal Strength Indicator 26
- Sleep Timer 24
- Sound
 - Controlling A/V Receiver Volume (NetCommand) 59
 - Audio Lock 68
 - Level Sound 40
- Sound Mode (audio effects) 39
- Sound Projector
 - Connecting Source Devices 19
 - Sound Projector Setup 33
- Speakers Option 39
- Standard-Definition Signal 27
- Stand Installation 8
- Status Display 26
- Stereo System. *See* A/V Receiver
- Subwoofer 25, 39
- SUBWOOFER Jack 13
- Surround Sound
 - External Sound System 22
 - Simulated Surround Sound 39
 - Sound Projector 33
 - TV Audio Outputs 18
- System Reset 11, 79
- T**
- Test Picture 41
- Time. *See* Clock
- Timer (auto-on) 44
- Time Zone. *See* Clock
- Troubleshooting 78
- U**
- USB Menu 30, 31
- V**
- V-Chip Ratings
 - Definitions 50
 - In Status Display 26
- VCR
 - Connecting 21
 - Troubleshooting 82
- Video Game. *See* Game
- Video Mute 41
- Viewing Device. *See* Activity Menu
- W**
- Wall-Mounting 8
- X**
- x.v.Color 18, 19, 38



Website:

www.mitsubishi-tv.com

E-mail:

MDEAservice@mdea.com

For questions, call Consumer Relations at

800-332-2119

**To order replacement or additional
remote controls or IR emitter cables,**

Visit our website www.mitsuparts.com

or call

800-553-7278

SYSTEM RESET

If the TV does not respond to the remote control, control-panel buttons, or will not power on/off, press and hold the **POWER** button on the control panel for ten seconds.

The TV will turn off. Power on the TV and the green LED will flash quickly for about one minute. The changes you made most recently, before using **SYSTEM RESET**, may be lost.