



MAINTENANCE CHART

APPLICABLE MODELS

- DASH
- DUET

MAINTENANCE SCHEDULE

ITEMS	SERVICE	1 st	2 nd	3 rd	4 th	5 th	6 th	7 th	8 th	9 th	10 th	11 th	
	DAYS	1 st 60	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	
	KM Note-1	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	18000-18500	21000-21500	24000-24500	27000-27500	30000-30500	
Fuel Lines		I	I	I	I	I	I	I	I	I	I	I	
** Throttle/By Starter Operation		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	
Air Cleaner Element	Note-2	Do not open air cleaner element unless there is a drivability problem						R	Do not open air cleaner element unless there is a drivability problem				R
Drain/Crankcase Breather Tube	Note-3	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	
@ Spark Plug		I, C, A	I, C, A	I, C, A	I, C, A	R	I, C, A	I, C, A	I, C, A	I, C, A	I, C, A	R	
** Valve Clearance		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	
**** Engine Oil		R	T	R	T	R	T	T	R	T	R	T	
** Engine Oil Strainer Screen		C		C		C		C		C		C	
** Final Drive Oil	Note-4				R				Replace once in every 10000 km				
* Engine Idle Speed/Carburetor		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	
Brake System		C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	
Pivot Arm	Note-5	L	L	L	L	L	L	L	L	L	L	L	
Front/Integrated Brake Lever Free Play		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	
Brake Shoes Wear/Parking Lock Operation		I	I	I	I	I	I	I	I	I	I	I	
☛ Battery Voltage		I	I	I	I	I	I	I	I	I	I	I	
☛ Battery Electrolyte		I, T	I, T	I, T	I, T	I, T	I, T	I, T	I, T	I, T	I, T	I, T	
Stop Lamp Switch/Headlamp Focus		I	I	I	I	I	I	I	I	I	I	I	
Belt Case/Kick Starter Driven Gear		C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	
**# Drive Belt				I		I		I		I		I	
*** Clutch Shoe Wear				I		I		I		I		I	
** Nuts, Bolts & Fasteners		I	I	I	I	I	I	I	I	I	I	I	
Front Suspension/Oil	Note-6	I	I	I	I	I	I	I	I	I	I	I	
Rear Suspension	Note-7	I	I	I	I	I	I	I	I	I	I	I	
*** Wheels/Tyres		I	I	I	I	I	I	I	I	I	I	I	
Wheel Bearings	Note-8	I	I	I	I	I	I	I	I	I	I	I	
*** Steering Head Bearings		I, A	I, A	I, A	I, A	I, L, A	I, A	I, A	I, A	I, L, A	I, A	I, A	
Main Stand		L	L	L	L	L	L	L	L	L	L	L	
● Muffler (Catalytic Converter)				I, E		I, E		I, E		I, E		I, E	

* Clean carburetor if required after inspection during service.

** Should be serviced by a "Skilled Technician" of your Authorised Distributor/Dealer.

*** In the interest of safety, we recommend these items to be serviced only by your Authorised Distributor/Dealer.

**** Replace engine oil once in every 6000 km. Top up if the oil level is at or near the lower level mark. # Replace drive belt once in every 24000 km. • Check idle CO emission along with idle rpm/idle CO adjustment (if required).

@ Replace once in every 12000 km. ☛ Check battery voltage (for VX model). ☛ Check battery electrolyte level (for LX model). Note-1: At higher odometer readings, repeat the frequency interval established here. Note-2: Replace once in every 15000 km or early replacement may be required when riding in dusty areas. Note-3: Service more frequently when riding in rain or at full throttle. Note-4: Replace once in every 10000 km or once in a year, whichever is earlier. Replacement requires mechanical skill. Note-5: Applicable for LX model only. Note-6: Replace the front fork oil once in a every 2 years or 20000 km, whichever is earlier. Note-7: Inspect for any play in the mounting bushes, replace if necessary. Note-8: Inspect the bearings free play, replace if necessary.

Ensure that each paid service is availed with in 90 days or 3000 km from the date of previous service, whichever is earlier.

NOTE: Always wipe the water from the scooter after washing. Use clean soft cloth or pressurized air for completely drying the water.

I: INSPECT C: CLEAN R: REPLACE A: ADJUST L: LUBRICATE T: TOP UP