# SHARPER IMAGE®

## THE HIP THERAPY PAIN RELIEVER

Item No. 206604

User Guide




Thank you for purchasing the Sharper Image The Hip Therapy Pain Reliever. Please take a moment to read this guide and store it for future reference.

## **FEATURES**


- · Powerful built-in infrared lights (700-50000nm) penetrate deep into the muscle to potentially help alleviate muscle pain or relieve symptoms
- · High-concentration silver plates with high thermal conductivity can rapidly pass thermal energy into the hip, thigh, waist and bottom
- The temperature can be adjusted between 104°F (40°C) to 149°F (65°C)
- · Ergonomic design for comfortable use
- · Strong vibration massage treatment

## **IDENTIFICATION OF PARTS**

#### Controller

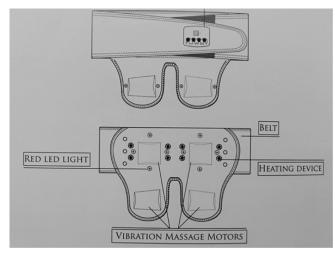




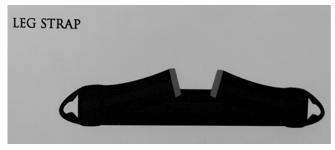

### **HOW TO USE**

- 1. Please ensure that all red lights and metal parts are covered by clothes before turning it on.

  Note: Do not use on bare skin. Make sure the red lights don't come in direct contact with the skin.
- 2. Instructions for how to wear the device are below. Adjust the tightness to your waist.

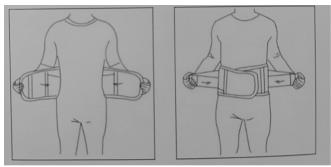

1. STANDING USE

2. LYING DOWN USE



- 3. Connect the power plug to the power port on the controller (device's body).
- 4. Press the [HEATING] button on the control pad to start the heat radiation and infrared lighting.
  - -Each press of the button will switch between ON/OFF.
- 5. Adjust to a comfortable temperature by pressing the Up and Down buttons.
  - -The device will start at the lowest temperature. You can increase the temperature to your comfort level.
  - -Increase temperature between 104°F (40°C) 131°F (55°C). It will increase by 41°F (5°C).
  - -Increase temperature between 132.8°F (56°C) 149°F (65°C). It will increase by 33.8°F (1°C).
- 6. When you're ready to stop the device, press the [HEATING] button to automatically stop the heating function.
- 7. There is a built-in auto timer in the control, which will automatically turn power off after 30 minutes.
  - -The auto shut off timer will reset itself after an adjustment is made to the temperature or messaging mode.
- 8. Press the [VIBRATION] button to turn the vibration massage ON/OFF.
  - -Press one time, to start the vibration massage. All the motors will vibrate at the same time.
  - -Press a second time to stop the lower vibration massage and keep the upper vibration massage.
  - -Press a third time to stop the upper vibration massage and keep the lower vibration massage.
  - -Press a fourth time to stop the vibration massage.

#### PLEASE READ CAREFULLY BEFORE USING



A Danger: Ignoring this sign may result in serious bodily injury or death.

Restricted

No decomposition

No touch

For strict compliance

#### WARNINGS

Please ensure proper power supply (Both 110V and 220V compatible. Can be conveniently used anywhere, anytime.)

• Unplug from the socket when not in use.

Never touch the power plug with wet hands.

• Never sleep while using the product as a burning injury could occur.

• Consult a doctor before use if you have acute swelling or bleeding on the hip thigh or waist.

🕟 Consult a doctor before use if you have rheumatoid arthritis.

• Consult a doctor before use if you have swelling, bacterial infection or inflammation.

• Upon more severe pain, immediately stop use and contact the customer service.

Temperature get above 140°F and may result in burn injury if used directly on skin. Use only over clothes.

The metal part may result in a burn if touched by an electric wire, cotton fabric, plastic or other flammable materials.

# THE FOLLOWING ITEMS ARE RESTRICTED:

ODon't expose to sharp items.

ODon't throw or strike, otherwise the unit may not operate properly.

ODon't use within sauna room or bathhouse.

On't get wet. A dry cloth may be used to wipe off debris if in need of cleaning.

On't self-decompose the product or change its shape (no post-sale service will be provided in case of self-renovation).

igtimes Don't bend the power plug or put heavy items on top of the unit.

# WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

# SHARPER IMAGE

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.