

PRUVEEO



USER MANUAL

If you have any questions, please contact us with no hesitation at support@pruveeo.us for quick solutions.

Safety information

To prevent injury to yourself or others, or damage to your device, read all safety information before using.



Warning

Failure to comply with safety warnings and regulations can result in serious injury or death.

PRUVEEO Dash Cam is not intended to be touched, modified, or calibrated while operating a vehicle. PRUVEEO is not responsible for any damages resulting from the user's misuse of the camera.

Do not use damaged power cords or plugs, or loose electrical sockets. Faulty connections can cause electric shock or fire.

Do not touch the car charger with wet hands or disconnect the charger by pulling the cord. Doing so may result in electrocution.

Do not use a bent or damaged car charger. Doing so may cause electric shock or fire.

Do not use your device while it is charging or touch your device with wet hands. Doing so may cause electric shock.

Use only manufacturer-approved chargers, accessories, and supplies.

- Use only the manufacturer-approved charger specifically designed for your device. Using an incompatible charger can cause serious personal injury or damage to your device.

- PRUVEEO cannot be responsible for the user's safety when using accessories or supplies that are not approved by PRUVEEO.

Do not drop the charger or device, or subject them to impact. Handle and dispose of the charger and device with care.

- Never crush or puncture the device.
- Never dispose of the device in a fire.
- Never place the device in or on heating devices, such as microwave ovens, stoves, or radiators. The device may explode if overheated. Follow all local regulations when disposing of a used device.
- Avoid exposing the device to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device and charger from damage.

- Avoid exposing your device to excessive cold or heat. Extreme temperatures can damage the device and reduce the charging capacity and life of your device.
- Do not allow children or animals to bite or chew the device. Doing so can result in fire or explosion, and small parts can be a choking hazard. If children use the device, make sure they use the device properly.
- Never use a damaged charger.



Caution

Failure to comply with safety precautions and regulations can result in property damage, serious injury or death.

Do not use your device near other electronic devices. Most electronic devices use radio frequency signals. Your device may interfere with other nearby electronic devices.

Do not use your device near other devices that emit radio signals, such as sound systems or radio towers. Radio signals from these may cause your device to malfunction.

Do not expose the device to heavy smoke or fumes. Doing so may damage the outside of the device or cause it to malfunction.

If you notice strange smells or sounds coming from your device, or if you see smoke or liquid leaking from the device, stop using the device immediately and take it to a PRUVEEO Service Center. Failure to do so may result in fire or explosion.

For your own safety, do not operate the controls of this product while driving. The window mount is needed when using the dash cam in a car. Make sure that you place the dash cam in a location where it will not obstruct the driver's view.

Always keep the camera lens clean, and ensure that the lens is not blocked by any object or placed near any reflective material. If the car's windshield is tinted with a dark coating, recording quality may be affected.

Your device is recommended for use and store within a temperature range of 15 degrees Fahrenheit to 150 degrees Fahrenheit, and a humidity range of 10% to 80%.

If your device becomes overheated, allow it to cool down before use. Prolonged exposure of skin to an overheated device may cause low-temperature burn symptoms, such as red spots or areas of darker pigmentation.

Install mobile devices and equipment with caution.

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories in or near an airbag deployment area. Improperly installed wired equipment can cause serious injury in a situation where airbags inflate rapidly.

Do not drop your device or subject your device to impact. If the device is bent, deformed or damaged, malfunction may occur.

Do not attempt to disassemble, repair, or modify your device.

- Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take it to an authorized PRUVEEO Service Center.

Clean your device and charger by wiping with a towel or eraser. Do not use chemicals or detergents. Doing so can discolor or corrode the outside of the device, and may result in electric shock or fire.

Do not distribute copyright-protected material. Doing so without the permission of the content owners may violate copyright laws. The manufacturer is not responsible or liable for any legal issues that result from the user's illegal use of copyrighted material.

Correct disposal of this product

(applicable in countries with separate waste collection systems)



Waste Electrical & Electronic Equipment

This symbol, found on the device, accessories or accompanying literature, indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for information on where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal non-commercial use.

You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." PRUVEEO DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. PRUVEEO EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. PRUVEEO DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL PRUVEEO BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and PRUVEEO makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which PRUVEEO has no control. Without limiting the generality of this disclaimer, PRUVEEO expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

PRUVEEO is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Warm Prompt

We recommend that you carefully read this manual before using the dash cam, then read it again with the dash cam in your hands as this will help you to familiarize yourself with its many features. The dash cam is constantly improved over time, so the specification of the dash cam may change.


Please note that each button has multiple functions so please be careful which Buttons you press in relation to each Mode / Function. There is no need to get frustrated because you should only do this once in order to set it up in the way that you require.







1. Please ensure that the dash cam is SWITCHED OFF when you either insert or remove a Micro SD Card, in order to avoid damage.
2. Please ensure that the Micro SD Card is inserted in the right way. If it is inserted backwards, it might damage the dash cam and Card.

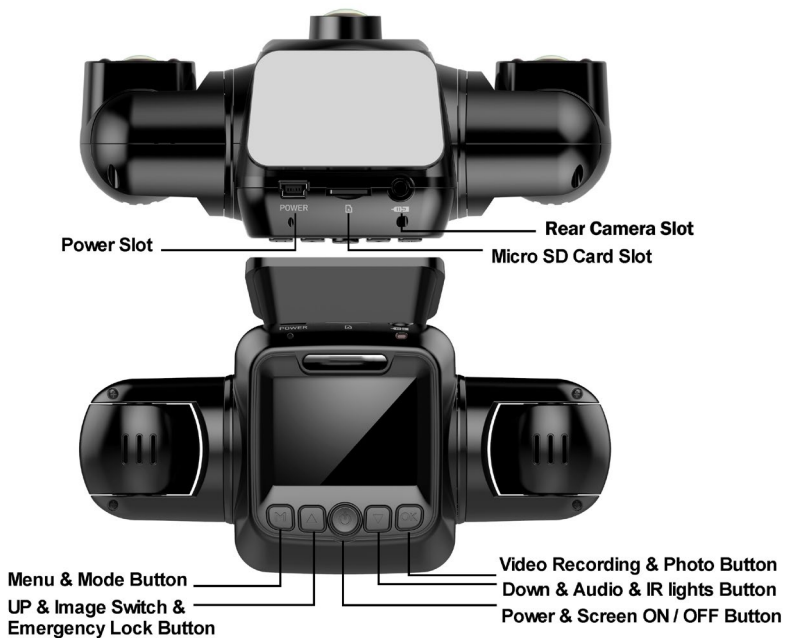3. If the Micro SD Card is not compatible with the dash cam, please DO NOT insert it again, as you will damage the Card and the dash cam. Please buy the correct card and then try again.
4. The dash cam supports the Micro SD card from 32GB to the highest 256GB.
5. Adjust the position of the lens to ensure that you correctly record what you want.
6. We recommend SAMSUNG PRO Endurance 128GB or 256G MicroSDXC Memory Card for this dash cam (www.amazon.com/dp/B09WB1857W). Please DON'T USE any "Generic Class 10" Cards from third-party sellers. They are NOT made for 4 channel recording dash cam.
7. In video recording mode, if you want to press Menu / Mode button, please stop recording videos first by pressing the Video Recording button.
8. We recommend using default factory settings, once the MENU has been set, then connect the car charger to the unit and put into the card. Once the car is started, the unit will automatically start recording. Once the car turns off, the unit will automatically stop recording. Please note that your vehicle's Cigarette Lighter Sockets do not have any power when the ignition is switched OFF.
9. This dash cam must be continuously connected to a power supply via a 5V Charger because there is no built-in battery.
10. If you turn the option of SCREEN SAVER ON, in video recording mode, when the screen is switched Off, the dash cam is still recording. You can turn the screen on by pressing the power button.

11. If you want to playback the videos, we recommend unplugging your micro SD card and plugging into your PC with card reader. We recommend using VLC Video player on Windows OS, and Movist + VLC on MAC OS.
12. After several weeks of daily recording it may be necessary for you to format your Micro SD Card - if that is the case, please note that you will lose all of your files, so please back up a copy on your computer first in a unique dash cam Folder that you have created.
13. When your dash cam crashes / screen goes black, the phenomenon may be caused by improper operation, crash, please press the R = Reset button, hole by the top corner, gently with a cocktail stick. Just like you would do for a computer, printer, phone, etc.
14. Dash cam only supports the micro SD card with the FAT32 file format. If you use the 64GB, 128GB, or 256GB card, you must format your micro SD card on the dash cam before you can use it.
15. At present, GPS technology struggles to obtain signals and accuracy in indoor environments. There are two main reasons why GPS can't be used indoors: low signal strength and low accuracy.

Device Layout



| Button | Functions |
|--|--|
|  | <ul style="list-style-type: none"> • Press to turn on or off the screen • Press and hold for 3 seconds to turn the device on or off |
|  | <ul style="list-style-type: none"> • Press to confirm a selection while in setting mode • Recording Mode Hot Key: Emergency Lock (Press to manually lock/unlock the video file during recording) Press and hold for 3 seconds to turn/off Wi-Fi function |
|  | <p>Please stop recording first</p> <ul style="list-style-type: none"> • Press Once / Twice to switch between settings, press and hold for 3 seconds to exit the menu • Press and hold for 3 seconds to switch between video recording/playback modes • In Playback mode, press to switch between the four cameras |
|  | <ul style="list-style-type: none"> • Press to navigate UP through options in settings mode • Press to start/stop video recording • Press and hold for about 3 seconds to take a photo |
|  | <ul style="list-style-type: none"> • Press to navigate DOWN through options in settings mode • Press to switch the image between the four cameras • Press and hold for 3 seconds to turn Audio recording on / off |
|  | <p>Press and hold for 5 seconds to reset the device in the event that it operates erratically, hangs up, or freezes</p> |


Installation

1. Attaching the camera to the window mount

Before the device can be used in a car, it is essential to first install a properly attached window mount. Make sure that you place the recorder in a safe, appropriate location where it will not obstruct the driver's view.

2. Mounting the rear camera (WATERPROOF)

The rear camera is waterproof and can be installed outside the car. Mount the rear camera as shown below, and connect the rear camera to the main unit.

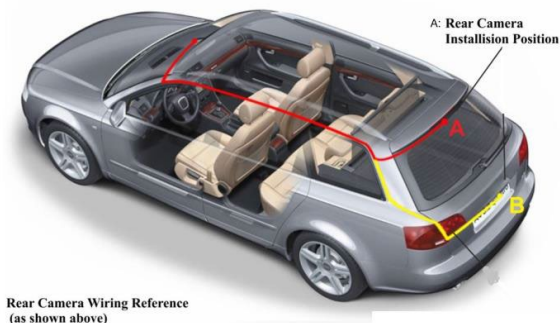

Rear Camera Wiring Reference
(as shown above)

3. The device is automatically powered on when plugged into a 12V accessory socket or cigarette lighter and received a charge (i.e.: the vehicle is started). To turn the device on manually, press and hold the Power button until the welcome screen appears. The dash cam will automatically start recording when the power is on.



4. The red wire of the rear camera provides 12 Volt power to the rear camera. It is not necessary to connect the red wire to the power supply. But if you want to use the parking assist function, you need to connect the red wire to the power source of your reverse lights, so the screen will display the image of the rear camera automatically when the vehicle is in reverse. If you need more installation information, please search for a "backup camera install" on YouTube.com.

5. Connect the charger to the vehicle's 12V DC outlet. Be sure to connect only the Pruveeo-approved at least a 2.5A charger designed and supplied specifically for use with your device. Using an incompatible charger can cause serious personal injury or damage to your device.

6. Insert a memory card. You will need to insert a memory card before you can begin recording. The dash cam supports Micro SD cards with a capacity of up to 128GB. For reliable operation, use a Class 10 memory card with a capacity of at least 64GB.

Inserting the memory card

Your device accepts memory cards with a maximum capacity of 128GB. Depending on the memory card manufacturer and type, some cards may not be compatible with your device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored on it.

Please let the screen of the D90 dash cam face you.

- Insert a memory card with the gold-colored contacts facing you.
- Push the memory card into the slot until it locks in place.

It is recommended that you reformat a memory card after every time that videos are transferred from it to a computer, or at least once a month.

Reformatting a memory card keeps important elements of data and file structure clean, helping to prevent error messages and missing images. Reformatting also restores the memory card, which can help prevent it from becoming corrupted.



Removing the memory card

Before removing a memory card from your dash cam, you must first unmount it for safe removal.

Before removing a memory card from your device:

1. Press the video recording button to stop the device from recording
2. Press and hold the ON/OFF button to switch off the device
3. Gently push the memory card in and let go until it unlocks

PLEASE DO NOT remove the memory card while the device is transferring or accessing information. Doing so can result in data loss or corruption, or damage to the memory card or device. PRUVEEO is not responsible for losses that result from the use of damaged memory cards, including the loss of data.

Formatting the memory card

1. Press the video recording button to stop the device from recording
2. Press the MENU button twice to enter General Settings
3. Press the DOWN button to navigate to the "Format" options
4. Press OK to format your SD card

Please do format the card on the dash cam before using it. Before formatting a memory card, always remember to make backup copies of all important data stored on the device. The manufacturer's warranty does not cover the loss of data resulting from user actions.

Resolution

All four cameras have a resolution of FHD 1080P (1920 x 1080P).

Loop Recording

With loop recording mode enabled, the device will continuously erase older videos as it records new videos, keeping only the videos captured over a user-selected time range. All videos older than this range will be replaced with a new video. (Note: any locked video files on the memory card will remain protected, and will not be automatically deleted during loop recording.)

It is recommended that you reformat a memory card after every time that videos are transferred from it to a computer, or at least once a month. This keeps important elements of data and file structure clean, helping to prevent error messages and missing videos.

Remember to always make backup copies of all important data stored on the device. The manufacturer's warranty does not cover the loss of data resulting from user actions.

1. Press MENU once to enter Video Settings
2. Press the UP or DOWN button to navigate to the "Loop Recording" option
3. Press OK to view the current selection: 1 minute
4. Press the UP or DOWN button to make your selection
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit
7. It's recommended to use the 1-minute option

Gravity Sensing

If a change in gravitational forces is detected, such as in the event of a vehicular accident, the g-sensor will signal to the camera, and an automatic file lock will be placed on the current video, preserving your most crucial footage.

Note: Locked video files won't be erased by Loop Recording, they will remain on the memory card until they are manually deleted, or when the card is formatted.

1. Press MENU once to enter Video Settings
2. Press the UP or DOWN button to navigate to the "Gravity Sensing" option
3. Press OK to view the current selection High/Middle/Low/Close status
4. Press the UP or DOWN button to enable or disable this feature
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Date Stamp

You have the option to display the date and time in your videos. Note that the date and time stamp cannot be removed from videos if this feature was enabled at the time of recording.

1. Press MENU once to enter Video Settings
2. Press the UP or DOWN button to navigate to the "Date Stamp" option
3. Press OK to view the current selection ON/OFF status
4. Press the UP or DOWN button to enable or disable this feature
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Recording Audio

You may choose to record audio with video or turn off the microphone so that all recorded videos will be muted.

1. Press MENU once to enter Video Settings
2. Press the UP or DOWN button to navigate to the "Recording Audio" option
3. Press OK to view the current selection On/Off
4. Press the UP or DOWN button to enable or disable this feature
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Alternatively, you can use a hotkey shortcut for this feature. Press and hold the DOWN button for about 3 seconds to mute/unmute the microphone for video recording.

Exposure

Adjust the camera exposure value for brighter or darker recorded video, according to your preference.

1. Press MENU once to enter Video Settings
2. Press the UP or DOWN button to navigate to the "Exposure" option
3. Press OK to view the current selection: +0.0, +1/3, -1/3, etc
4. Press the UP or DOWN button to make your selection
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Light Frequency

This option should be set according to the power supply specification used in your country or geographical region (U.S. users should select the "60Hz" option).

1. Press MENU once to enter Video Settings
2. Press the UP or DOWN button to navigate to the "Light Frequency" option
3. Press OK to view the current selection: 50Hz / 60Hz
4. Press the UP or DOWN button to change your selection
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Format

Performing this operation will format the memory card, clearing it of all files.

Note: Locked videos will also be cleared, so ensure you have backed up your important footage before formatting the card.

If you use the 64GB or 128GB card, you must format your micro SD card on the dash cam before you can use it.

1. Press the video recording button to stop the device from recording first
2. Press the MENU button twice to enter General Settings
3. Press the DOWN button to navigate to the "Format" option
4. Press OK to format your SD card
5. Press and hold the Menu button for 3 seconds to exit

Screen Saver

Select a time duration for the screen to stay lit after the recording starts.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Screen Saver" option
3. Press OK to view the current selection: 1min / 3min / OFF
4. Press the UP or DOWN button to make your selection
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Alternatively, you can use a hotkey shortcut for this feature. During Recording Mode, press the Power button to turn the LCD screen on/off.

Language


Use the following procedure to change the device's Language.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Language" option
3. Press OK to view the current language selection
4. Press the UP or DOWN button to change the selection
5. Press OK again to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Parking Monitor (Parking Mode)

Parking mode provides surveillance on your parked vehicle. When the engine is off, Hardwire Kit is used to provide continuous power and protect your car battery from discharge.

To use the Parking Mode feature, you need to use the ACC hardwire kit at the same time. Please search for and purchase the "ACC Hardwire Kit" on Amazon.com.

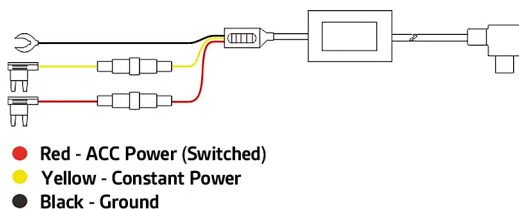

Warm Tips:

When installing the ACC hardwire kit, please refer to the actual product.

Automatic Parking Mode. The ACC (ignition-switched) detection feature will allow the dash cam to switch to parking mode automatically if the vehicle's engine turns off and switch back to normal recording after the vehicle's engine turns on.

Regarding the installation of the ACC hardwire kit, if you need more information, please search for "acc hardwire kit parking mode" on YouTube.com.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Parking Monitor" option
3. Press OK to view the current selection: Off / Gravity Sensing/ Time Lapse
4. Press OK to confirm
5. Press the UP or DOWN button to change your selection
6. Press OK to confirm your entry
7. Press and hold the Menu button for 3 seconds to exit

There are 2 options under parking mode:

※ We recommend using the Time Lapse option.

• **Time Lapse Record:**

Record video in one frame per second to conserve memory and reduce the time it takes to review video.

• **Gravity Sensing Record:**

The Gravity Sensing detects significant or sudden movement (such as an impact or collision), and it will trigger an event recording. We suggest setting the "Gravity Sensing" to High sensitivity for parking mode Recording.

※ If you do not use the parking mode function, please change "Gravity Sensing" to LOW sensitivity. Otherwise, the dash cam will easily lock the video and cannot be deleted by the loop recording function. This will cause the memory card to be full of locked videos and cause the recorder to fail normal work.

Timelapse record

Time-lapse is creative filming and video editing technique that manipulates how the frame rate is captured. ... In most videos, the frame rate and playback speed are the same. In a time-lapse video, the frame rate is stretched out far more: when played back at average speed, time appears to be sped up.

Record video in one frame per second to conserve memory and reduce the time it takes to review video.



Caution

When you DO NOT use the parking monitoring function, please turn off this option, otherwise, the recorded video will be in fast-forward mode.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Parking Monitor" option
3. Press OK to view the current selection: Off / Gravity Sensing/ Time Lapse
4. Press OK to confirm
5. Press the UP or DOWN button to change your selection
6. Press OK to confirm your entry
7. Press and hold the Menu button for 3 seconds to exit

IR LED

Use the following procedure to turn on or off the Infrared Lights.

1. Press MENU twice to enter General Settings

2. Press the UP or DOWN button to navigate to the "IR LED" option
3. Press OK to confirm your entry
4. We recommend using the Auto option
5. Press and hold the Menu button for 3 seconds to exit

System Volume

Increase or decrease the volume of your dash cam.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "System Volume" option
3. Press OK to view the current selection High/Middle/Low/Close
4. Press OK to confirm your entry
5. Press and hold the Menu button for 3 seconds to exit

Key Sound

Allows you to turn the device's button sound effect on or off.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Key Sound" option
3. Press OK to view the current selection On/Off
4. Press the UP or DOWN button to enable or disable this feature
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Date and Time

Use the following procedure to change the device's time and date.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Date and Time" option
3. Press OK to view date/time in the format: YYYY/MM/DD HH:MM:SS
4. Press the UP or DOWN button to change the highlighted number
5. Press OK to move to the next date/time segment and repeat step 4
6. Press OK again to confirm your entry
7. Press the Menu button to exit the Date and Time setting
8. Press and hold the Menu button for 3 seconds to exit

Set Time Zone

Updates the time automatically with your time zone.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Set Time Zone" option
3. Press OK to view the current selection
4. Press the UP or DOWN button to make your selection
5. Press OK to confirm your entry
6. Press MENU to exit settings

Daylight Saving

Enable / Disable Daylight Saving Time

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Daylight Saving"

option

3. Press OK to view the current ON/OFF status for this feature
4. Press the UP or DOWN button to enable or disable this feature
5. Press OK to confirm your entry
6. Press MENU to exit settings

GPS Speed Unit

Select GPS speed unit (built-in GPS logger)

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "GPS Speed Unit" option
3. Press OK to view the current selection: KM/H / MPH / OFF
4. Press the UP or DOWN button to make your selection
5. Press OK to confirm your entry
6. Press MENU to exit settings

GPS Information

View the current GPS signal status.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "GPS Information" option
3. Press OK to view the current GPS signal status
4. Press MENU to exit

Wi-Fi

With the dash cam built-in Wi-Fi, you can set up and playback videos on

your smartphone/tablet. Please disconnect the WiFi connection first if you want to operate the dash cam.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "WiFi" option
3. Press OK to view the current ON/OFF status for this feature
4. Press the UP or DOWN button to change your selection
5. Press OK to confirm your entry
6. Press MENU to exit settings

Alternatively, you can use a hotkey shortcut for this feature. Press and hold the OK button for about 3 seconds to turn on/off the WiFi feature.

Wi-Fi Connecting Instruction

With the dash cam built-in Wi-Fi, you can use your smart device as a remote camera, viewfinder, and download files to your phone.

Downloading the Wi-Fi App

- The Wi-Fi app is available to download for free at the Apple App Store™ and Google Play Store™.
- Android users: Enter the Google Play Store™, search for GFGCAM, download and install, following this user manual to connect the Wi-Fi and operate.
- iPhone users: Enter the Apple App Store™, search for GFGCAM, download and install, following this user manual to connect the Wi-Fi and operate.

Pairing the camera to your device

1. Turn on the camera, please stop recording first by pressing the Video Recording button, then you can operate other buttons, please press and hold the OK button for about 3 seconds to start the Wi-Fi function, you can also start the Wi-Fi function in the menu.
2. The LCD will show the Wi-Fi SSID and password.
3. Search for a Wi-Fi hotspot on your smartphone/tablet, select the network and you will be prompted for a password; enter '12345678' to proceed, once connected, only the Wi-Fi function key can be used, press and hold the Wi-Fi key to quit Wi-Fi function.
4. Open the GFGCAM application on your smartphone/tablet.



You can also scan the QR code to download the GFGCAM APP

Restore Factory Settings

Performing this operation will reset all of your device's settings to their original values. Note: any user-customized settings will be lost.

1. Press MENU twice to enter General Settings
2. Press the UP or DOWN button to navigate to the "Restore Factory Settings" option
3. Press OK to view YES / NO confirmation for this operation
4. Press the UP or DOWN button to make your selection
5. Press OK to confirm your entry
6. Press and hold the Menu button for 3 seconds to exit

Video Playback

Playback of videos can be done on a device or a computer.

To play a video on the computer either use an SD card adapter. To play a video using an SD card adapter, remove the memory card and insert it into an SD card adapter. Place the adapter in the computer.

To play a video on the device, stop recording first, press and hold the M button to toggle to the Playback mode. Use the UP and DOWN buttons to toggle to the desired video. Press the OK button to play. During playback use the OK (pause), UP (press and hold to rewind), and DOWN (press and hold to forward) buttons to control the video playback.

GPS Video Playback

You can play back your recordings in a specialized application that allows you to view speed and location information alongside your footage.

Windows:

Please download the software via our official website below.

<https://pruveeo.us/pages/download>

Mac OS:

Enter the Apple App Store™, search for GXPlayer, download, and install.

Accessing Video Files:

Insert the micro SD card into your computer to access the video files.

Opening a GPS video file:

1. Once you've opened the application, navigate to the top menu bar and click File > Open to browse through your files.
2. Navigate to the video file you want to add to the playback queue, select it and click "Open" to load it into the application. You may also select multiple videos at once.
3. After a brief loading period, the (first) video should begin playing back automatically, displaying speed and location information in real-time along the right-side panels.



FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator&your body.

Warm Tips:

After many analyses, we found that most of the problems of the dash cam are caused by the card because the speed and the number of erasing and writing of the memory card cannot meet the requirements.

Therefore, we recommend SAMSUNG PRO Endurance 128GB or 256G MicroSDXC Memory Card for this dash cam which can make the D90-4CH dash cam more stable, reliable, and work continuously for a long time.

128G Link: www.amazon.com/dp/B09WB1857W

256G Link: www.amazon.com/dp/B09WB3D5GQ

*Please DON'T USE any "Generic Class 10" Cards from third-party sellers. They are NOT made for 4 channel recording dash cam.

*With capacities up to 256GB, the SAMSUNG PRO Endurance records and rewrites up to 140K hours (over 16 years); Plus, with a warranty up to 5 years, you can rest assured that your data endures.

Contact us here, we have professional customer service!

Official Site: <http://pruveeo.us>

Email: support@pruveeo.us

If you have any questions, please contact us with no hesitation at support@pruveeo.us for quick solutions.

Every customer contact will be issued within 12 hours.



Email



Official Site