


Installation(Continued)

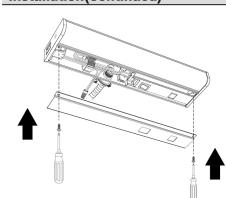


6 To link more lights

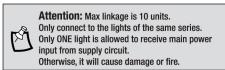

6.1 Turn off the power of the light and remove the front cover.

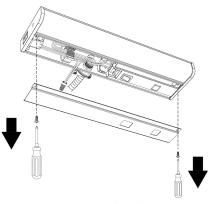


6.2 Remove the side cover and release the linking cord from the

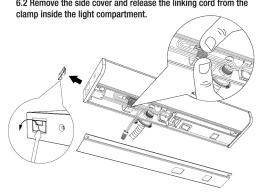


6.3 Extend the cord to a desired length and insert the cord into the



6.4 Place the extra cord back into the clamp and re-attach the

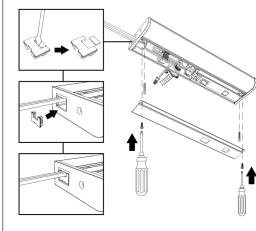

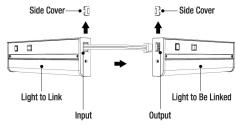

NOTE: These fixtures are dimmable and compatible with these dimmers sold at The Home Depot. • Make sure the lights are in a single loop and a single pole with the dimmers, and that the total wattage of the lights does not exceed the dimmer wattage capacity. Please refer to wattage capacity on the dimmer packaging. · Please contact customer service if you have any further questions on the lights or dimmers. (Mode#/SKU#): Lutron brand: DVCL-153PR-WH/396508; CTCL-153PDH-WH/267858; TGCL-153PH-WH/527401; P-PKG1W-WH-R/1000027680: Leviton brand: R62-06674-P0W/125569

R60-IPL06-10M/976708

Commercial Electric™

Questions, problems, missing parts? Before returning to the store, call Commercial Electric Customer Service 8a.m.-7p.m., EST, Monday - Friday, 9a.m.-6p.m.Saturday.

1-877-527-0313

HOMEDEPOT.COM

Commercial Electric™

USE AND CARE GUIDE

LED DIRECT WIRE LINKABLE UNDER-CABINET LIGHT




Questions, problems, missing parts? Before returning to the store, call Commercial Electric Customer Service 8a.m.-7p.m., EST, Monday - Friday, 9a.m.-6p.m.Saturday.

> 1-877-527-0313 HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Commercial Electric through the purchase of this under cabinet light We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Commercial Electric!

Product Description

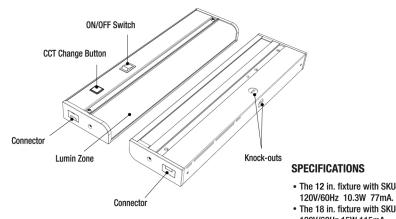

Beam Angle




SPECIFICATIONS

- The 18 in. fixture with SKU#1005837629(18 in.) is rated at 120V/60Hz 15W 115mA.
- The 24 in. fixture with SKU#1005837732(24 in.) is rated at 120V/60Hz 19.6W 152mA.

Safety Information

Carefully read and understand the information in this manual before you begin installation. Failure to do so could lead to electric shock or

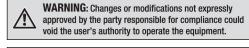



WARNING: This equipment has been tested and found to comply with the limits for a class B digital device pursuant to Part 15 of the FCC Rules and ICES-005 of the IC Rules. These limits are designed to provide reasonable installation protection. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving area. Increase the separation between the equipment and the receiver.
- Connect the equipment into a different outlet and circuit from the receiver outlet and circuit. • Consult the dealer or an experienced radio/TV technician for help.

CAUTION: This is a non-replaceable LED light source. Do not dismantle this fixture. There are no user serviceable

CAUTION: For indoor and dry location use only.

 $\begin{tabular}{ll} \begin{tabular}{ll} \beg$

CAUTION: Ensure the electricity is shut off before you install or work on this light. Either remove the fuse or turn off the circuit breaker.

CAUTION: Deviation from the assembly instruction many result in a risk of fire and electric shock.

CAUTION: Do not operate damaged cover or housing. CAUTION: Do not operate this fixture with a missing or

CAUTION: Do not mount this fixture near a heat source as it may damage this fixture.

CAUTION: Do not stare directly into the LED light.

Limited Warranty

The manufacturer warrants this product to be free from defects in materials and workmanship for a period of five(5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material workmanship. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Installation

PLANNING INSTALLATION

Compare all parts with the parts listed in the Hardware Included and Package Contents sections. If any part appears missing or damaged, do not install and use this light. Contact customer service.

TOOLS REQUIRED



Package Contents

Part Description

Connector

Wire connector

Tapping screw

Light fixture

Α

C

D

NOTE: Hardware not shown to actual size .







2 Preparing the light for installation

(continued)

Installation

Preparing the light for installation

additional screws in the package.

access to the wiring compartment.

Remove two screws on the front of the fixture for

IMPORTANT: Keep the screws. You need them to

install the front cover to the fixture. There are no

2.1 Determine the electrical feed location. 2.2 Remove a knockout from either the back or side of the fixture housing. The fixture has two to four knockouts depending on the length of your fixture.

3 Connecting the wires


3.1 Connect the ground wire from the fixture to the ground wire from the supply circuit, using the wire connector (B). 3.2 Connect the white wire (Neutral wire) from the supply circuit to the blue input (N) of the connector (A) inside the 3.3 Connect the black wire (Live wire) from the supply


circuit to the green input (L) of the connector (A) inside the light.

CAUTION: Make sure the white wire and the black




wire are copper wires among 14~20AWG. Make sure all the threads of the wires are properly connected. NOTE: Before you connect the wires, make sure the

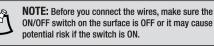


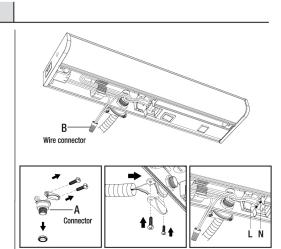

4 Mounting the light fixture

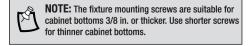


Attach the light to the desired surface using the fixture mounting screws (C). Tighten the screws securely.

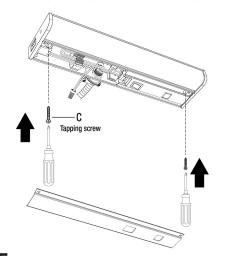

5 Re-attach the front cover

Re-attach the front cover back to the light fixture with the two previously-removed screws. Restore the power to the electrical circuit at the service panel. Turn on the switch to light the fixture.

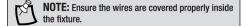

1

1

2

1