

TEEN TECH

SMART WATCH

Operation Manual
HYTTCM

Thank you for purchasing the Hype Smart Watch. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Smart Watch with Built-in Camera
- USB Charging Cable
- Operation Manual

KEY FEATURES

- 3.5" TFT Built-in Camera
- Play music wirelessly
- Media playback controls
- Rechargeable lithium-ion battery
- Built-in microphone and speaker

SAFETY INSTRUCTIONS

Do not operate this unit if it has been exposed to water, moisture or any other liquids to prevent electrical shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repeat to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at risk of serious injury.

Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, etc.

Do not use the unit for anything other than its intended use or purpose. Doing so may damage the device.

The product and its key keep out of reach of children.

Do not expose batteries, battery pack, or batteries to be installed to excessive heat, such as direct sunlight or open flame.

SMART WATCH FEATURES

PRODUCT FEATURES

- Touch Screen
- 3.5" TFT Built-in Camera
- 3.5" TFT Built-in Camera
- Adjustable Straps (Black, Blue, Red)
- Micro 7.3mm

HOME SCREEN

Once your smart watch is on, it will show you the below home screen.

STANDBY MODE

Press the Power button once to put your smart watch in standby mode. The screen will go dark.

Press the Power button a second time to display the watch face and the time.

Touch to wake up all of your watch when the standby clock is showing to unlock your smart watch and return to your home screen.

COMPATIBILITY

Please note, some features of your smart watch are only available to specific devices.

At the top of each section of the manual, compatibility is shown using the icons below.

Only available for Android devices.

Available for Android and Apple devices.

Only available for Apple devices.

BLUETOOTH PAIRING

Make sure your smart watch is turned on and fully charged. Make sure Bluetooth is enabled on your smart phone or tablet and your device is discoverable.

NOTE: Android users should download and run the "BT Notice" App and to pairing with Bluetooth. See "Settings" / "BT Notice" for installation details before pairing.

Press the Bluetooth icon on the menu to enter Bluetooth settings screen.

Press the word "Power" on your touch screen and ensure the icon on the right reads "On".

The light on your watch's Bluetooth.

Press the word "Search new devices" and select your device on the next screen.

Press the word "Pair" on your touch screen and ensure the icon on the right reads "On".

Press the word "My Name" on your touch screen to see the list of nearby devices and find your watch.

Press "Yes" from your smart phone or tablet.

Press "Yes" on your screen on the lower left to complete pairing.

NOTE: For Android users, pairing with Bluetooth, your smart watch will ask you to sync date and time.

Press "Yes" on your screen on the lower left to complete pairing.

Your watch should confirm with "Success".

CALENDAR

Press the Calendar icon on your home screen to access your calendar.

The calendar will immediately bring you to today's date, highlighted in light blue.

Use the left and right arrows on the top of the calendar to scroll to the previous or the following months.

DIALER

Press the Dialer icon on your home screen to dial numbers from your phone keypad.

A numeric keypad will appear. Enter the number you wish to dial including 1+area code.

Press "Call" on your screen to dial the number.

Please refer to the "Phonebook" section for details about making calls from your smart watch.

Press the "Dialer" icon on the screen to delete any reserved numbers.

When you are done using the Dialer, press the "Home" button to return to your main menu.

CALLS

Your smart watch will sync with your mobile device to show you a list of missed calls, dialed calls, received calls, or a list of all calls.

Select the call you wish to access. Touch and hold to view details of corresponding calls. Select on or off to see call details and contact information for the call.

Scroll down to read all calls. Press the "Back" icon on the screen to return to your call log menu.

When you are finished using your call log, press the "Home" button to return to your main menu.

PHONE BOOK

Press the Phonebook icon on your home screen to access your contact list.

Please note, you will need to disconnect from "BT music" before your smart watch can access your contact list. If your smart watch asks you to disconnect, press the "OK" icon on the screen before proceeding.

Your Phonebook will connect to your phone and show you your contact list.

Press the "View" icon to check the contact details.

Press the "Back" icon to go back to your contact list.

PHONEBOOK

Contacts will be listed in alphabetical order based on last name.

Select any name on the list whose contact you want to view, or who you want to call.

You can scroll through your contacts by scrolling directly on the touch screen of your watch to find a specific contact.

In the example, Down is selected.

An example of a contact is shown to the left.

To call your selected contact, select the mode number.

A pop-up window will appear. Select "Call".

To cancel, press the "Back" icon on your screen to go back to the contact page.

RECORDING

Press the Recording icon on your home screen to access the recording menu.

Press the "Record" button to start recording. Press the "Stop" button to stop recording.

Press the "Play" button to play back the recording.

Press the "Delete" button to delete the recording.

BT MUSIC

Press the BT Music icon on your home screen to access the BT Music menu.

Your smart watch will connect to your smart phone or tablet that is playing music. Once it is connected, you can control music from the screen below.

1. Track Name
2. Repeat Time
3. Previous Track
4. Play/Pause
5. Next Track

When you are finished using your BT music, press the "Home" button to return to your main menu.

CALCULATOR

Press the Calculator icon on your home screen to access your calculator.

A numeric keypad will appear. Enter in your desired calculation and press the "=" button to calculate the result.

Press "Clear" to clear your entry.

You can press "Back" to return to your App menu screen.

CAMERA

Press the camera icon on your menu to access the camera of your watch.

Press the shutter button to take a picture. Press the "Back" icon to return to your main menu.

After you press the shutter button, you will see a preview of the picture you took. You are able to select "redo" or "delete" of the picture. Press "Back" on your screen to return to take another picture.

PHOTO

Press the photo icon on your menu to access the photo gallery.

You are able to view the picture you took from your watch.

Press "Back" on your screen to return to your main menu.

SETTINGS

Press the Settings icon on your home screen to access the settings menu.

Press "Profile", then you are able to select a sound mode of how your watch should behave when using your notifications. Press "Clock" icon to activate or deactivate your notifications. After you set your "clock" to confirm, you can press "Back" to return to the previous page.

Press "General", then you are able to select a sound mode of how your watch should behave when using your notifications. Press "Clock" icon to activate or deactivate your notifications. After you set your "clock" to confirm, you can press "Back" to return to the previous page.

Phone SETTINGS

Press the "Phone" icon on your home screen to access the phone settings menu.

Press "Time/Date", then you are able to select a time zone. Press "Back" to return to the previous page.

Press "Set home city" to view the list of cities.

Scroll through the list by tapping your finger across the watch touch screen. Press the "Back" icon to return to your main menu.

In the example below, "New York" is chosen.

Language

Press the "Language" icon on your home screen to access the language settings menu.

Select "Language" to choose the language shown on your smart watch. The default setting is "English".

Scroll through the list by tapping your finger across the watch touch screen. Press the "Back" icon to return to your main menu.

In the example below, "English" is chosen.

Press "Back" to return to your main menu.

Input method

Press the "Input method" icon on your home screen to access the input method settings menu.

Select "Input method" to adjust your preferences for input method.

In the example, the capital key has been selected.

Press "Change Password" to change your watch password.

Press "Change Password" to change your watch password.

Restore Settings

Press the "Restore Settings" icon on your home screen to access the restore settings menu.

Press "Restore Settings" to restore your watch settings to the default settings.

Press "Back" to return to your main menu.

Remote Shutter

Press the Remote Shutter icon on your home screen to access the remote shutter menu.

Press the "Remote Shutter" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

The BT camera will connect to your Android device's built-in camera and work as a remote shutter in the function.

You can use a resolution preview of your phone's camera. When switching from portrait to landscape, give your smart watch a couple seconds to sync the image preview before taking pictures.

File

Press the File icon on your home screen to access the file menu.

Press the "File" icon on your menu to check the file of your memory card. Please refer to the manual for details before using this function.

You are able to view the file of your memory card.

ANTI-LOST

Press the Anti-Lost icon on your home screen to access the anti-lost menu.

Some features of the App can only be used on smart watches paired with Android devices. Please refer to the manual for details before using this function.

Press "BT notice" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

ANTI-LOST Looking Phone

Press the "Looking Phone" icon on your home screen to access the looking phone menu.

Press "Looking Phone" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

BT NOTICE

Press the BT Notice icon on your home screen to access the BT Notice menu.

Press the "BT Notice" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "BT Notice" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

SEDENTARY REMINDER

Press the Sedentary Reminder icon on your home screen to access the sedentary reminder menu.

Press the "Sedentary Reminder" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "Sedentary Reminder" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

QR CODE

Press the QR Code icon on your home screen to access the QR Code menu.

Press the "QR Code" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "QR Code" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

SLEEP MONITOR

Press the Sleep Monitor icon on your home screen to access the sleep monitor menu.

Press the "Sleep Monitor" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "Sleep Monitor" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

MESSAGES

Press the Messages icon on your home screen to access the messages menu.

Press the "Messages" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "Messages" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

ALARM

Press the Alarm icon on your home screen to access the alarm menu.

Press the "Alarm" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "Alarm" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

PEDOMETER

Press the Pedometer icon on your home screen to access the pedometer menu.

Press the "Pedometer" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "Pedometer" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

BATTERY CARE

Press the Battery Care icon on your home screen to access the battery care menu.

Press the "Battery Care" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "Battery Care" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.

FCC STATEMENT

Press the FCC Statement icon on your home screen to access the FCC statement menu.

Press the "FCC Statement" icon on your menu to set and customize your notifications.

Before using, please download the "BT Notice" App. See "BT Notice" on page 3 of the manual for installation details.

Press "FCC Statement" to activate the watch lock. You are able to lock your watch by pressing the "Watch lock" button.

Press "Change Password" to change your watch password.