


# SYLVANIA

## CUTE WIRELESS SPEAKER WITH FABRIC GRILL

Model: SP434

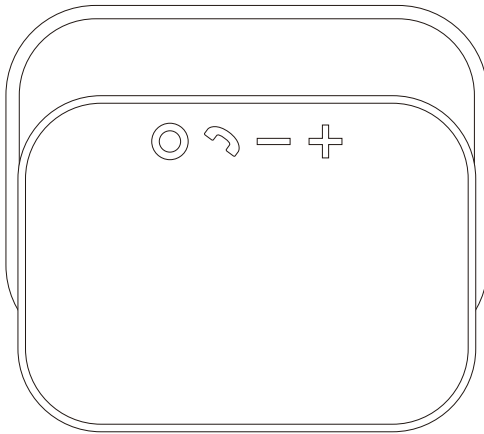

### INSTRUCTION MANUAL

#### PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under licease.

### Getting started

Remove the speaker from the box.  
Remove any packaging from the product.  
Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

### Package Contents

Bluetooth Speaker  
USB rechargeable cable  
Instruction Manual  
AUX in cable


### Key Features

CUTE – Fashionable Wireless Speaker with high quality fabric speaker grill  
Desktop model and comes with handle for portability  
Connect & stream wireless music anytime, anywhere  
Built-in high-end speaker that delivers crisp and clear sound  
Built-in rechargeable battery  
Built-in AUX Jack, Micro SD & USB slot  
Allows hands-free convenience with wireless streaming  
Built-in FM Radio

### SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### Description of Parts

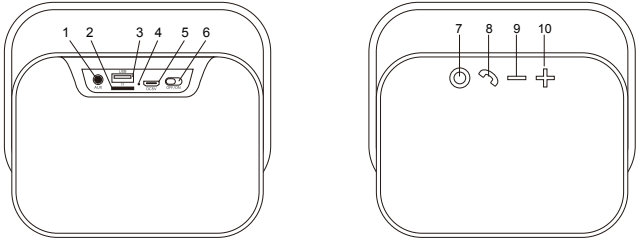

1	Auxiliary Port
2	Micro SD (TF) Card Slot
3	USB Slot
4	LED Indicator
5	Charging Port
6	ON/OFF Switch
7	Mode Button
8	Play/Pause/Phone Button
9	Skip Backward/Volume Decrease - Button
10	Skip Forward/Volume Increase + Button

### INSTRUCTIONS FOR USE

#### Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes approximately 2 hours to fully charge the speaker. Once the speaker is fully charged, LED Light would turn OFF.

**It is recommended to fully charge the speaker before its first use.**

### Turning ON/OFF the Speaker –

Before Turning ON the speaker, please ensure that it is fully charged.  
Slide the ON/OFF switch to ON/OFF position to turn on/off the unit.

### Connect using Bluetooth Technology

- Slide the ON/OFF switch to ON position to turn on. You would hear an indication tone and Blue LED would flash rapidly, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "Sylvania SP434" Pair it with this device.
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, you will hear another indication tone, and Blue LED stays on.
- You can now stream wireless music on your speaker through your source device.

### Talking using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.
Reject incoming call	Incoming Call	Press and hold the Phone button for 2 seconds.
End Call	Incoming Call	After your phone conversation, short press the Phone button.
Increase Volume	During a call	Press and hold the + button to increase the volume.
Decrease Volume	During a call	Press and hold the - button to decrease the volume.
Redial last number	Connected to a device	Short press the Phone button twice.

### Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press and hold the + button to increase the volume.
Decrease Volume	Playing music	Press and hold the - button to decrease the volume.
Pause	Playing music	Short press the Play/Pause button will pause the music.
Play	Pausing	Short press the Play/Pause button will resume the music
Previous track	Playing music	Short press the – button, it will go to previous track.
Next track	Playing music	Short press the + button, it will go to the next track.

(Note: The above functions only can be used in Bluetooth mode only. An indication tone will alert you when the volume is adjusted to the maximum level. In Aux mode, besides the volume increase/decrease, you will need to control through your source device.)

### Stream music from Micro SD (TF) Card or USB Flash Drive –

- Turn ON the speaker.
- Insert the Micro SD (TF) Card or USB Flash Drive preloaded with songs, insert the Micro SD (TF) Card Slot or USB Slot of the speaker respectively. Speaker would automatically start playing songs from the Micro SD (TF) Card or USB Drive.  
*Note: Micro SD Card & USB Flash Drive not included.*
- To Skip Track Forward – Short press the +button to Skip Forward button.
- To Skip Track Backwards – Short press the –button to Skip Backward button.
- To Pause the Track – Short press the Play/Pause button.
- To Play the Track – Short press the Play/Pause button.
- Long press + to increase the volume or - to decrease the volume.

### Play music through “Auxiliary” mode

- Turn ON the speaker.
  - Insert one end of the Auxiliary cable into the Auxiliary port, and the other end to the audio device (such as phone / MP3 Player / computer / tablet / .... etc.).
  - Select your favourite song at the source device to play.
  - Long press + to increase the volume or - to decrease the volume.
- Note: Media can be controlled only through the source devices, while playing music in Auxiliary mode.

### Tips!!

1. Press the “Mode button” to switch different functions of the speaker between – Bluetooth / AUX-In / Micro SD (TF)-USB.
2. When the speaker is not in use, turn it OFF in order to save the battery power.

### FM MODE

1. Turn ON the speaker.
2. Press the “Mode button” to switch FM mode, when switch to FM mode, there will have a tone coming up “FM MODE”, then press the play/pause button, it will go to auto search mode and auto store stations. After searching all FM stations, that will stop and playing the 1st station.

### Specifications –

Bluetooth® Version: 4.2  
Wireless Streaming Range Distance: 26-33 Feet  
Speaker output: 3W  
FM frequency range: 87.5-108MHz  
Size: L6-3/8" x H6" x D1-7/8"  
Weight: 10.5 oz approx.  
Power Input: DC 5V  
Charging Time: about 2 hours  
Play time: 2 hours  
Built-In Rechargeable Battery: 3.7V / 400mAh  
Micro SD (TF) Card/USB Drive: Support up to 32GB  
(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)


### Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off.	Turn the source on.
	Speaker turned off. Volume turned down source. Media paused on source.	Turn the speaker on. Adjust volume source. Play media from source.

### Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

 **Bluetooth** is a trademark on a registered trademark of Bluetooth SIG Inc.

#### Guidelines for protection of the environment



This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic domestic appliances. This symbol on appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Made in China