

## Troubleshooting

Problem	Possible Cause	Solution
The light(s) will not turn on.	The power is off.	<input type="checkbox"/> Ensure the wall switches are electrically supplied.
	The switch is not in the correct position.	<input type="checkbox"/> Ensure the power supply is turned on.
	The connection cord is improperly inserted or connected.	<input type="checkbox"/> Check the connection cord is properly installed.
	The light has malfunctioned.	<input type="checkbox"/> Replace the light.
The fuse blows or the circuit breaker trips when the light is turned on.	Check whether the connection cord is correct.	<input type="checkbox"/> Check the connection cord.
		<input type="checkbox"/> Contact a qualified electrician or call the Customer Service Team at 1-877-527-0313.