



Maintenance and Service Guide

SUMMARY

This guide provides information about spare parts, removal and replacement of parts, security, backing up, and more.

Legal information

© Copyright 2022 HP Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel, Core, Iris, and vPro are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. NVIDIA and GeForce are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. SDHC, SDXC, and microSD are trademarks or registered trademarks of SD-3C LLC. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries. Miracast and Wi-Fi are registered trademarks of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2022

Document Part Number: N17104-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.windows.com>. **If your product ships with Windows in S Mode:** Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.


 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.

Table of contents

1 Product description.....	1
2 Getting to know your computer.....	5
Right side	5
Left side	5
Rear	6
Display	8
Low blue light mode (select products only)	8
Keyboard area.....	9
Touchpad settings and components	9
Touchpad settings	9
Adjusting touchpad settings	9
Turning on the touchpad	9
Touchpad components	10
Lights	10
Special keys	11
HP OMEN Gaming Hub	13
Bottom	14
Labels.....	14
3 Illustrated parts catalog	17
Computer major components.....	17
Display assembly subcomponents.....	20
Miscellaneous parts.....	21
4 Removal and replacement procedures preliminary requirements.....	23
Tools required	23
Service considerations.....	23
Plastic parts	23
Cables and connectors.....	23
Drive handling.....	23
Electrostatic discharge information.....	24
Generating static electricity	24
Preventing electrostatic damage to equipment	25
Personal grounding methods and equipment	25
Grounding the work area	26
Recommended materials and equipment.....	26
Cleaning your computer	27
Enabling HP Easy Clean (select products only)	27
Removing dirt and debris from your computer.....	27

Cleaning your computer with a disinfectant	28
Caring for wood veneer (select products only)	29
Packaging and transporting guidelines	29
Accessing support information	29
5 Removal and replacement procedures for Customer Self-Repair parts.....	32
Component replacement procedures.....	32
Preparation for disassembly	32
Solid-state drive	32
Memory modules.....	33
6 Removal and replacement procedures for authorized service provider parts	36
Component replacement procedures.....	36
Preparation for disassembly	36
Bottom cover	36
Battery	37
WLAN module	39
Speakers	40
Card reader	41
Per key lighting board.....	42
Display subcomponents (without removing the display)	43
Heat sink assembly.....	46
Fans.....	47
System board, heat sink, fan combination	48
RJ-45 (network) board	50
USB board	52
IR sensor board.....	53
Touchpad	54
Display assembly	56
System board.....	63
Top cover with keyboard.....	65
7 Using Setup Utility (BIOS)	67
Starting Setup Utility (BIOS)	67
Updating Setup Utility (BIOS)	67
Determining the BIOS version	67
Preparing for a BIOS update	68
Downloading a BIOS update	68
Installing a BIOS update	68
8 Backing up, restoring, and recovering	70
Backing up information and creating recovery media.....	70
Using Windows tools for backing up	70
Using the HP Cloud Recovery Download Tool to create recovery media (select products only).....	70
Restoring and recovering your system	70
Creating a system restore	71
Restoring and recovery methods	71
Recovering using HP Recovery media	71

Changing the computer boot order	72
Using HP Sure Recover (select products only)	72
9 Using HP PC Hardware Diagnostics	73
Using HP PC Hardware Diagnostics Windows (select products only)	73
Using an HP PC Hardware Diagnostics Windows hardware failure ID code	73
Accessing HP PC Hardware Diagnostics Windows.....	73
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant	73
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)	74
Downloading HP PC Hardware Diagnostics Windows	74
Downloading the latest HP PC Hardware Diagnostics Windows version from HP	74
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store.....	74
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	74
Installing HP PC Hardware Diagnostics Windows	75
Using HP PC Hardware Diagnostics UEFI	75
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code	75
Starting HP PC Hardware Diagnostics UEFI	75
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	76
Downloading the latest HP PC Hardware Diagnostics UEFI version	76
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only).....	76
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)	77
Downloading Remote HP PC Hardware Diagnostics UEFI	77
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	77
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	77
Customizing Remote HP PC Hardware Diagnostics UEFI settings	77
10 Specifications.....	79
Computer specifications	79
Display specifications	79
Solid-state drive specifications	80
11 Power cord set requirements	81
Requirements for all countries.....	81
Requirements for specific countries and regions	81
12 Recycling.....	83
Index	84

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	OMEN by HP 16.1 inch Gaming Laptop PC
	Model numbers: 16-k0xxx
Processor	12th generation Intel® processors
	Intel Core™ i9-12900H (2.50 GHz base frequency, up to 5.0 GHz, 24 MB cache, 14 cores)
	Intel Core i7-12700H (2.30 GHz base frequency, up to 4.70 GHz, 24 MB cache, 14 cores)
	Intel Core i5-12500H (2.50 GHz base frequency, up to 4.50 GHz, 18 MB cache, 12 cores)
Graphics controller	Internal graphics
	Intel Iris® Xe graphics
	Discrete/hybrid graphics
	• NVIDIA® GeForce® RTX 3050
	• NVIDIA GeForce RTX 3050Ti
	• NVIDIA GeForce RTX 3060
	• NVIDIA GeForce RTX 3070 Ti Max-Q
	Supports HD Decode, DX12, and HDMI
	Supports Graphics Switcher
	Supports Advanced Optimus (select products only)
	Supports G-Sync (select products only)
	Supports MR compatible (60 Hz frame rate)
	Supports GPU Performance Scaling (GPS)
	Supports VR
Display	40.9 cm (16.1 in), liquid crystal display (LCD) flat panel, white light-emitting diode (WLED), ultrawide viewing angle (UWVA), flicker free
	Quad High Definition (QHD) (2560 × 1440), 100% sRGB, embedded DisplayPort (eDP) 1.4 + panel self-refresh (PSR), low blue light, 300 nits, 165 Hz
	Full High Definition (FHD) (1920 × 1080), 100% sRGB, eDP 1.2 without PSR, 300 nits
	FHD , 100% sRGB, eDP 1.3 + PSR, low blue light, 300 nits, 144 Hz
	FHD, 45% NTSC, eDP 1.3, 250 nits, 144 Hz

Table 1-1 Product components and their descriptions (continued)

Category	Description
Memory	Two SODIMM slots, customer accessible and upgradeable, supporting up to 32 GB of RAM
	DDR5-4800, 1.1 V, dual-channel support
	Supports the following configurations:
	<ul style="list-style-type: none"> • 32 GB (16 GB × 2) • 16 GB (8 GB × 2)
Primary storage	M.2 solid-state drive (PCIe-4 × 4, 2280, non-volatile memory express (NVMe), three-layer cell (TLC))
	2 TB
	1 TB
	512 GB
	Support for M.2 PCIe Gen4 solid-state drives
Audio	Audio brand: Bang & Olufsen
	Audio control panel: myHP audio control
	Dual speakers
	Supports Far Field Cortana
	Supports HP Audio Boost 2.0 with discrete amplifier
	Supports DTS X: Ultra
Video	HP Wide Vision HD Camera - indicator LED, USB 2.0, HD BSI sensor, f2.0, 88° wide field-of-view (WFOV)
	720p by 30 frames per second (fps)
	Dual-array, digital microphone with appropriate software - beam forming, echo cancellation, noise suppression
Wireless	Wireless Local Area Network (WLAN) with dual antennas (M.2 module/PCIe)
	<ul style="list-style-type: none"> • Intel® AX211 Wi-Fi® 6e Bluetooth® 5.2 WLAN • Intel AX411 Wi-Fi® 6e Bluetooth 5.2 WLAN
	Support for Miracast®
	Support for Modern Standby (connected)
	Intel Bluetooth audio offload
	Dynamic antenna gain (select products only)
RJ-45 (network)	Integrated 10/100/1000 GbE LAN

Table 1-1 Product components and their descriptions (continued)

Category	Description
Ports	Hot plug/unplug and auto detect for correct output to wide-aspect vs standard aspect video
	Audio-out (headphone)/audio-in (microphone) combo jack
	RJ-45 (network) jack
	AC smart adapter plug
	HDMI 2.1 supporting up to 8 K @ 60 Hz with HDCP 2.2
	(1) USB 3.2 Gen 1 Type-A port; supports HP Sleep & Charge
	(2) USB 3.2 Gen 1 Type-A port
	(2) USB 3.2 Type-C® Gen2 port or Thunderbolt™, supports:
	- Display Port 1.4 out up to 8 K @ 60 Hz and HDMI 1.4 out via adapter
	- Power delivery (65 W to 100 W output)
	- Data transfer
	- HDMI 2.1 output up to 8 K @ 60 Hz with HDCP 2.2 via adapter capable of HDMI 2.1
	- HP Sleep & Charge
Media card reader	HP Multi-Format Digital Media Card Reader
	Supports MicroSD™/SDHC™/SDXC™
	Push insertion and push removal
Sensors	Ambient light sensor
	IR thermal sensor
Keyboard/pointing devices	Keyboard
	Standard, backlit, notebook keyboard, 1-zone white lighting
	Standard, backlit, notebook keyboard, 4-zone RGB lighting
	Standard, backlit, notebook keyboard, per key RGB lighting
	Clickpad with image sensor
	Supports Microsoft® precision gestures
	Supports modern trackpad gestures
	Multitouch gestures enabled
	Taps enabled as default

Table 1-1 Product components and their descriptions (continued)

Category	Description
Power requirements	Battery
	6 cell, 83 Whr
	4 cell, 70 Whr
	Long life
	Fast charge
	AC adapter (with power cord)
	280 W, 4.5 mm, standard, right angle, 3 pin
	200 W, 4.5 mm, power correction factor (PFC), slim, right angle
	Power cord
	C13, premium, 1.0 m (3.3 ft)
Security	Trusted Platform Module (TPM) 2.0
Operating system	Windows® 11 Home 64 Advanced
	Windows 11 Home 64 Advanced Single Language
	Windows 11 Home 64 High-End Chinese Market CPPP
	Windows 11 Home 64 Plus
	Windows 11 Home 64 Plus Single Language
	Windows 11 Home 64 Plus Single Language Africa Market PPP
	Windows 11 Home 64 Plus Single Language APAC EM PPP
	Windows 11 Home 64 Plus Single Language India Market PPP
	Windows 11 Home 64 Plus Single Language Indonesia Market PPP
	Windows 11 Pro 64
Serviceability	AC adapter
	Solid-state drive
	Memory modules

2 Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right side

Identify the components on the right side of the computer.

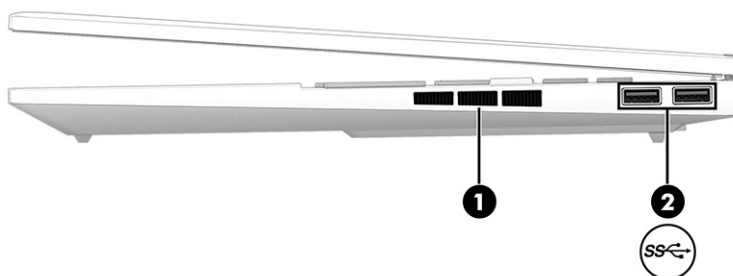



Table 2-1 Right-side components and their descriptions

Component		Description
(1)	Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	 USB SuperSpeed 5 Gbps ports (2)	Connect USB devices, provide high-speed data transfer, and (for select products) charge small devices (such as a smartphone) when the computer is on or in Sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.

Left side

Identify the components on the left side of the computer.

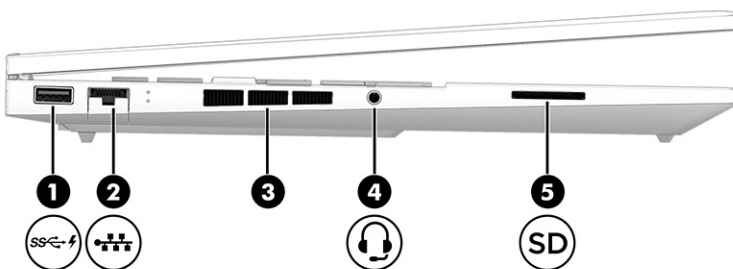






Table 2-2 Left-side components and their descriptions

Component	Description
(1)  USB SuperSpeed 5 Gbps port with HP Sleep and Charge	Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(2)  RJ-45 (network) jack/status lights	Connects a network cable. <ul style="list-style-type: none"> • White: The network is connected. • Amber: Activity is occurring on the network.
(3) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4)  Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: <ul style="list-style-type: none"> ■ Select the Search icon in the taskbar, type <code>HP Documentation</code> in the search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
(5)  Memory card reader	Reads optional memory cards that enable you to store, manage, share, or access information. To insert a card: <ol style="list-style-type: none"> 1. Hold the card label-side up, with connectors facing the computer. 2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. To remove a card: <ul style="list-style-type: none"> ■ Press in on the card, and then remove it from the memory card reader.

Rear

Identify the rear components.

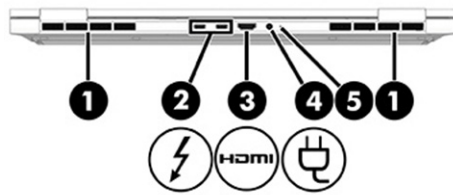


Table 2-3 Rear components and their descriptions




Component		Description
(1)	Vents	<p>Enable airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(2)	 	<p>USB Type-C power connector or Thunderbolt™ ports with HP Sleep and Charge and DisplayPort output (2)</p> <p>Connect an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery.</p> <p>– and –</p> <p>Connect a USB device, provide high-speed data transfer, and charge small devices (such as a smartphone), even when the computer is off.</p> <p>NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device.</p> <p>– and –</p> <p>Connect a display device that has a USB Type-C connector, providing DisplayPort output.</p> <p>NOTE: Your computer might also support a Thunderbolt docking station.</p> <p>NOTE: To ensure that your computer operates at full performance and can charge the battery when using resource-intensive applications, use the AC adapter that ships with your computer. You can use an optional 100 W/20 V Type-C adapter or power bank when running light-load tasks. System-off charging is supported only when you use a 20 V Type-C adapter or power bank.</p>
(3)	HDMI	<p>HDMI port</p> <p>Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.</p>
(4)		<p>Power connector</p> <p>Connects an AC adapter.</p> <p>NOTE: To ensure that your computer operates at full performance and can charge the battery when using resource-intensive applications, use the AC adapter that ships with your computer. You can use an optional 100 W/20 V Type-C adapter or power bank when running light-load tasks. System-off charging is supported only when you use a 20 V Type-C adapter or power bank.</p>

Table 2-3 Rear components and their descriptions (continued)

Component		Description
(5)	AC adapter and battery light	<ul style="list-style-type: none">• White: The AC adapter is connected and the battery is fully charged.• Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level.• Amber: The AC adapter is connected and the battery is charging.• Off: The battery is not charging.

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

📝 NOTE: Your computer might look slightly different than the following illustration.

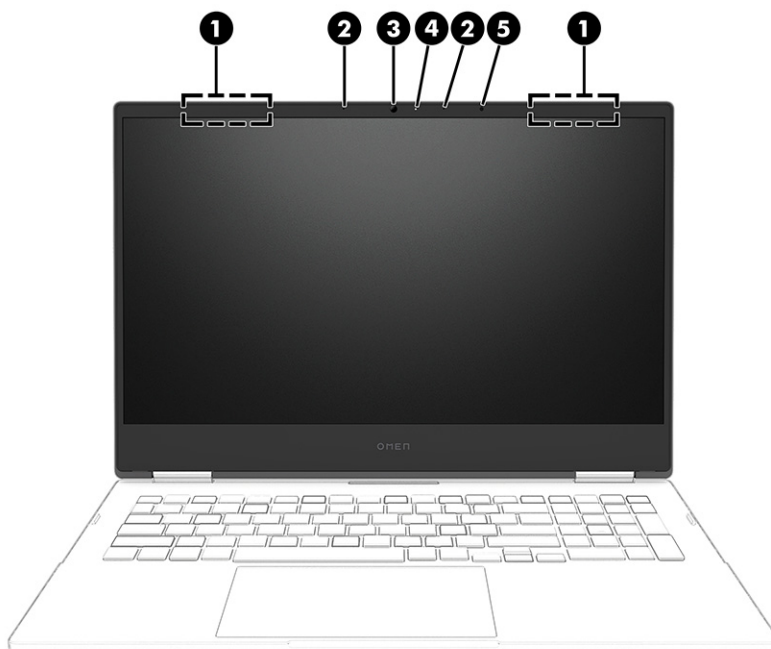


Table 2-4 Display components and their descriptions

Component		Description
(1)	WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2)	Internal microphones	Record sound.
(3)	Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4)	Camera light	On: The camera is in use.
(5)	Ambient light sensor	Adjusts the brightness of the display, depending on the ambient light.

*You cannot see the antennas from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.



NOTE: The keyboard area, including the function keys and (select products only) power button, is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power button, change to the clamshell mode.

Touchpad settings and components

Learn the touchpad settings and components.

Touchpad settings

Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press **enter**.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Using an external mouse, click the **touchpad** button.

If you are not using an external mouse, press the **Tab** key repeatedly until the pointer rests on the **touchpad** button. Then press the **spacebar** to select the button.

Touchpad components

Identify the touchpad components.

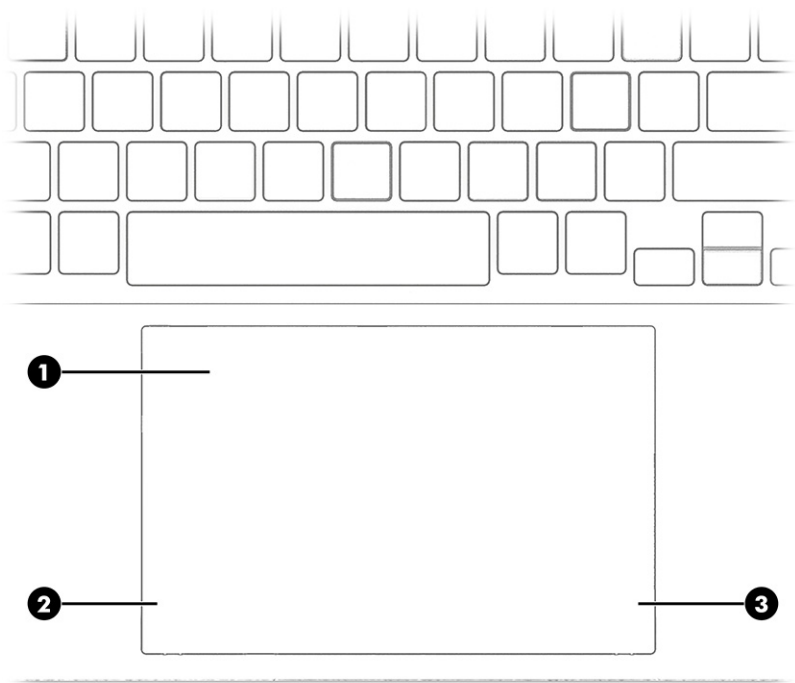


Table 2-5 Touchpad components and their descriptions

Component		Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

Identify the lights on the computer.



NOTE: Your computer might look slightly different from the following illustration.

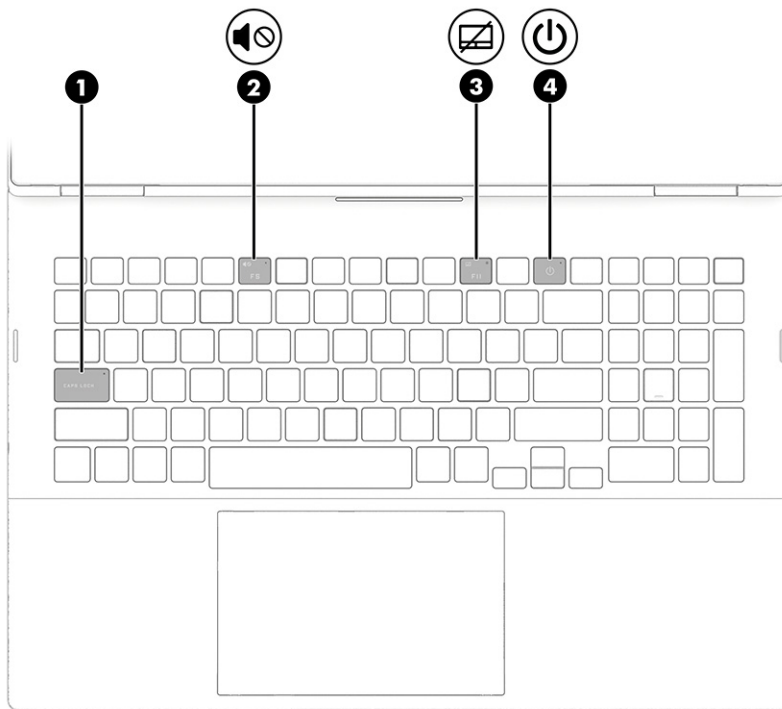





Table 2-6 Lights and their descriptions

Component		Description
(1)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	 Mute light	<ul style="list-style-type: none"> On: Computer sound is off. Off: Computer sound is on.
(3)	 Touchpad light	<ul style="list-style-type: none"> On: The touchpad is off. Off: The touchpad is on.
(4)	 Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.

Special keys

Identify the special keys.



NOTE: Refer to the illustration that most closely matches your computer.

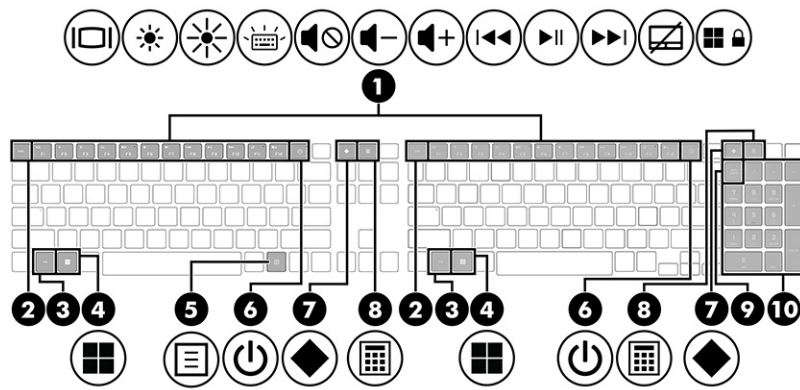


Table 2-7 Special keys and their descriptions






Component		Description
(1)	Action keys	Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys.
(2)	esc key	Displays system information when pressed in combination with the fn key.
(3)	fn key	Executes specific functions when pressed in combination with another key.
(4)	Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(5)	 Windows application key	Displays options for a selected object.
(6)	 Power button	<ul style="list-style-type: none"> When the computer is off, press the button briefly to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer.</p> <p>To learn more about your power and sleep settings:</p> <ul style="list-style-type: none"> Right-click the Power icon , and then select Power and sleep settings.
(7)	 OMEN key	Opens the OMEN Gaming Hub software.

Table 2-7 Special keys and their descriptions (continued)


Component		Description
(8)	 Calculator key	Opens the calculator.
(9)	num lock key	Alternates between the navigational and numeric functions on the integrated numeric keypad.
(10)	Integrated numeric keypad	A separate keypad to the right of the alphabet keyboard. When num lock is pressed, the keypad can be used like an external numeric keypad. NOTE: If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.

HP OMEN Gaming Hub

HP OMEN Gaming Hub allows you to customize your computer for your specific gaming needs.

- To open HP OMEN Gaming Hub, select the **Start** button, select **All apps**, select **OMEN Gaming Hub**, and then follow the on-screen instructions.

– or –

Press the **OMEN** key  at the top right side of the keyboard.

The HP OMEN Gaming Hub dashboard provides a central location to access and configure the following features:



NOTE: Some features are available on select products only.

- **System Vitals:** Monitor the computer status and performance.
- **Undervolting:** Adjust the voltage of the computer to use less power and decrease the amount of heat generated.
- **Light Studio:** Coordinate your color scheme and easily sync your lighting effects across your OMEN devices.
- **Lighting:** Customize the keyboard lighting.
- **Network Booster:** View and adjust network priorities and settings.
- **Performance Control:** Adjust the thermal temperature and power levels of your computer to improve performance.
- **Gaming Device Lighting and Macros:** Configure the lighting and macro keys when an external supported gaming device is connected (select products only).
- **My Games:** Locate and launch games from your library.
- **Graphics Switcher:** Use Graphics Mode to switch between Hybrid or Discrete graphics.
- **Oasis Live:** A virtual room for you and your friends to game together.

- **Gallery:** View and change your OMEN wallpaper backgrounds.
- **Optimizer:** Boost your game and clean up the clutter on your computer to optimize performance.
- **Help:** Access “How to” information and frequently asked questions.



NOTE: To minimize the dashboard, select the arrow button < at the top of the dashboard.

Bottom

Identify the bottom components.

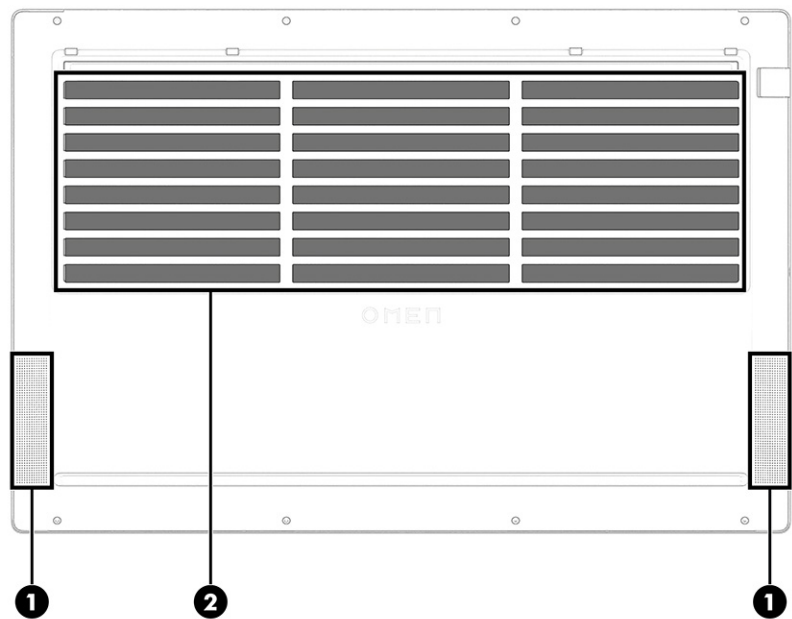


Table 2-8 Bottom components and their descriptions

Component		Description
(1)	Speakers	Produce sound.
(2)	Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.



IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the following examples. Refer to the illustration that most closely matches the service label on your computer.



Table 2-9 Service label components

Component
(1) Serial number
(2) Product ID
(3) HP product name and model number

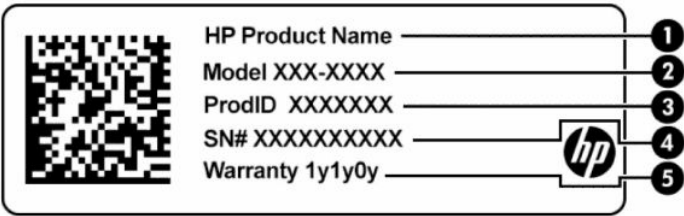


Table 2-10 Service label components

Component
(1) HP product name
(2) Model number
(3) Product ID
(4) Serial number
(5) Warranty period

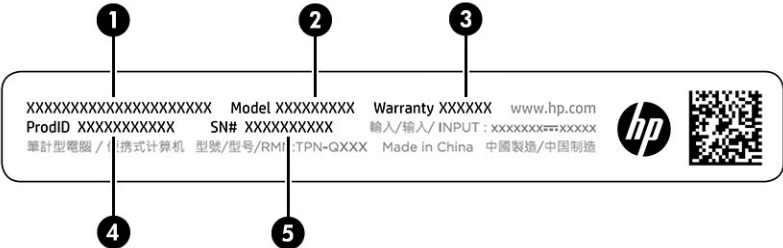


Table 2-11 Service label components

Component	
(1)	HP product name
(2)	Model number
(3)	Warranty period
(4)	Product ID
(5)	Serial number


- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.


3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

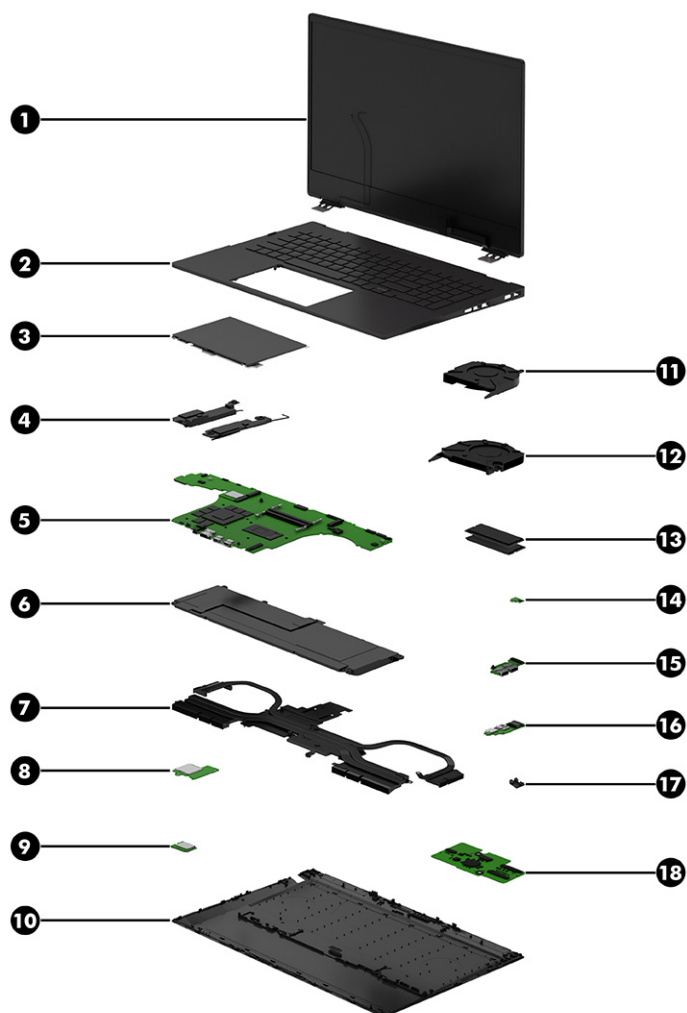


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly NOTE: Display spare parts are available only as subcomponents. For spare part information, see Display assembly subcomponents on page 20 .	
(2)	Top cover with keyboard (backlit) NOTE: For a detailed list of country codes, see Top cover with keyboard on page 65 . For use in ceramic white models:	
	<ul style="list-style-type: none"> Per key keyboard, models with Thunderbolt 	N14415-xx1
	<ul style="list-style-type: none"> 4-zone keyboard 	N19327-xx1
	<ul style="list-style-type: none"> 4-zone keyboard, models with Thunderbolt 	N19328-xx1
	For use in shadow black models:	
	<ul style="list-style-type: none"> 1-zone keyboard 	N14406-xx1
	<ul style="list-style-type: none"> 4-zone keyboard 	N14407-xx1
	<ul style="list-style-type: none"> 1-zone keyboard with numeric keypad 	N14408-xx1
	<ul style="list-style-type: none"> 4-zone keyboard with numeric keypad 	N14409-xx1
	<ul style="list-style-type: none"> 1-zone keyboard with numeric keypad, models with Thunderbolt 	N14410-xx1
	<ul style="list-style-type: none"> 4-zone keyboard with numeric keypad, models with Thunderbolt 	N14411-xx1
	<ul style="list-style-type: none"> 1-zone keyboard, models with Thunderbolt 	N14412-xx1
	<ul style="list-style-type: none"> 4-zone keyboard, models with Thunderbolt 	N14413-xx1
	<ul style="list-style-type: none"> Per key keyboard, models with Thunderbolt 	N14414-xx1
(3)	Touchpad NOTE: The touchpad cable is available as spare part number N14078-001.	
	Ceramic white	N14076-001
	Shadow black	N14077-001
(4)	Speakers	N14088-001
(5)	System board NOTE: The system board repair kit is available as spare part number N19354-888.	
	Intel Core i9-12900H processor and RTX 3070 Ti graphics, G-Sync	N13797-601
	Intel Core i9-12900H processor and RTX 3060 graphics	N13800-601
	Intel Core i7-12700H processor and RTX 3070 Ti graphics	N13795-601
	Intel Core i7-12700H processor and RTX 3070 Ti graphics, G-Sync	N13796-601
	Intel Core i7-12700H processor and RTX 3060 graphics	N13799-601
	Intel Core i7-12700H processor and RTX 3050 graphics	N13802-601
	Intel Core i7-12700H processor and RTX 3050 Ti graphics	N13804-601
	Intel Core i5-12500H processor and RTX 3060 graphics	N13798-601

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Intel Core i5-12500H processor and RTX 3050 graphics	N13801-601
	Intel Core i5-12500H processor and RTX 3050 Ti graphics	N13803-601
(6)	Battery	
	6 cell, 83 Whr	M41711-005
	4 cell, 70 Whr	M39179-005
(7)	Heat sink	
	For use in models with 3050 or 3050 Ti graphics	N14084-001
	For use in models with 3060 or 3070 Ti graphics	N14085-001
(8)	Card reader	N14067-001
	NOTE: The card reader cable is available as spare part number N14068-001.	
(9)	WLAN module	
	NOTE: WLAN module protective tape is available as spare part number M14330-001.	
	Intel AX211 Wi-Fi 6e Bluetooth® 5.2 WLAN	M53366-005
	Intel AX411 Wi-Fi 6e Bluetooth 5.2 WLAN	M53374-005
(10)	Bottom cover	
	Ceramic white, for use in models with 3050 or 3050 Ti graphics	N19343-001
	Ceramic white, for use in models with 3060 or 3070 Ti graphics	N14092-001
	Shadow black, for use in models with 3050 or 3050 Ti graphics	N14093-001
	Shadow black, for use in models with 3060 or 3070 Ti graphics	N14094-001
	Fan kit (models with 3050, 3050 Ti graphics) (includes both fans)	N14086-001
	Fan kit (models with 6650M, 3060, 3070 graphics) (includes both fans)	N14087-001
(11)	Processor fan	
(12)	Graphics fan	
(13)	Memory modules (DDR5-4800)	
	16 GB	M97596-001
	8 GB	M97595-001
(14)	IR sensor board	N14065-001
	NOTE: The IR sensor board cable is available as spare part number N14066-001.	
(15)	USB board	N14063-001
	NOTE: The USB board cable is available as spare part number N14064-001.	
(16)	RJ-45 (network) board	N14069-001
	NOTE: The RJ-45 (network) board cable is available as spare part number N14070-001.	
(17)	RJ-45 (network) jack door	N14072-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(18)	Lighting board	
	NOTE: The lighting board keyboard cable is available as spare part number N14073-001. The lighting board LED cable is available as spare part number N14074-001.	
*	Solid-state drive (not illustrated)	
	2 TB	M52027-001
	1 TB	M16560-001
	512 GB	M17436-001

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

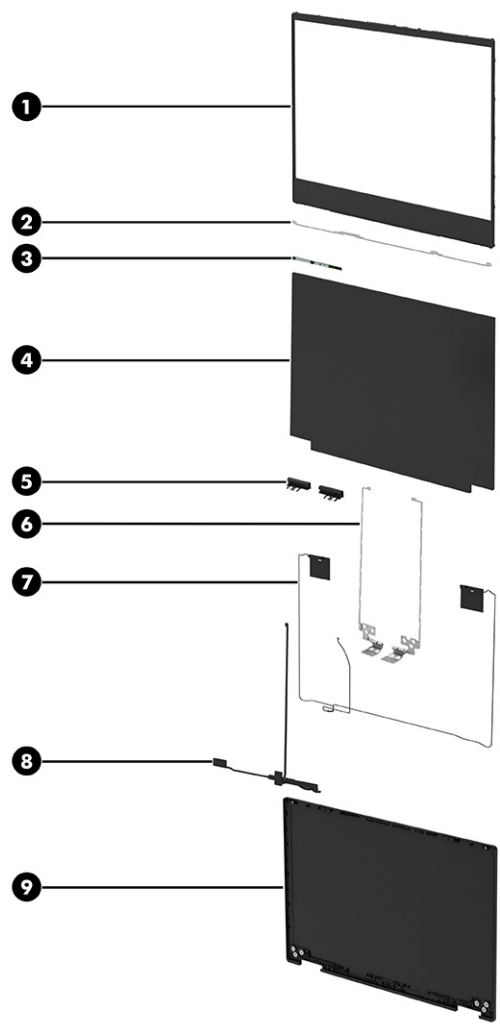


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Bezel	N14102-001
(2)	Display top bracket	N14108-001
(3)	Camera module	N14112-001
(4)	Display panel	
	FHD, 250 nits, 144 Hz	N13805-001
	FHD, 300 nits	N13806-001
	FHD, 300 nits, 144 Hz	N13807-001
	QHD, 300 nits, 165 Hz	N13808-001
(5)	Display hinge covers (left and right hinge covers and rubber inserts)	
	Ceramic white	N14105-001
	Shadow black	N14106-001
	Display hinge cover rubber inserts (not illustrated)	N14107-001
(6)	Display hinges (includes left and right hinges and rubber inserts)	N14103-001
(7)	WLAN antenna kit (includes antenna cables and transceivers)	
	Models with an FHD display	N14101-001
	Models with a QHD display	N14091-001
(8)	Display cable	
	144 Hz/165 Hz displays	N14109-001
	Standard displays	N14110-001
(9)	Display back cover (includes antennas)	
	Ceramic white models with an FHD display	N14097-001
	Shadow black models with a FHD display	N14099-001
	Ceramic white models with an QHD display	N14098-001
	Shadow black models with a QHD display	N14100-001
*	Ambient light sensor	N14111-001
*	Display adhesive (includes display adhesive and bezel adhesive)	N14114-001
*not illustrated		

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-3 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapter (PFC)	

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
280 W	M95376-001
200 W	L00818-850
USB External DVD+RW drive	747080-001
HDMI-to-VGA adapter	701943-001
USB-C-to-USB-A adapter	833960-001
USB-C-to-HDMI 2.0 adapter	935325-001
USB-C-to-USB-A hub	916838-001
HP Elite USB-C Multi Port Hub	L39572-001
System board repair kit (include misc protective tapes)	N19354-888
Adhesive kit (includes display rear cover adhesive and bezel adhesive)	N14114-001
WLAN protective tape	M14330-001
Screw Kit	N14113-001
Power cord (C13, 1.0 m (3.3 ft), premium, straight)	
For use in Australia	L22339-001
For use in Denmark	L22334-001
For use in Europe	L22333-001
For use in India	L22343-001
For use in Israel	L22335-001
For use in Japan	L22344-001
For use in North America	L22331-001
For use in the People's Republic of China	L22341-001
For use in South Africa	L22337-001
For use in South Korea	L22340-001
For use in Switzerland	L22336-001
For use in Taiwan	L22342-001
For use in Thailand	L22338-001
For use in Thailand (bundle)	M85413-001
For use in the United Kingdom	L22332-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.


Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.


 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors


Handle cables with extreme care to avoid damage.

 **IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.

 **IMPORTANT:** Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
 - Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package “FRAGILE.”
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 25](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing DIPs (dual in-line packages) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V
Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.			



NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions:

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages

- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.


1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - or –
 - Select the **HP Easy Clean** icon in the taskbar.
 - or –
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 27](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 28](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 29](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.



IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 28](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 27](#), [Caring for wood veneer \(select products only\) on page 29](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.



CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.



CAUTION: Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.



IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly

on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 27](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 28](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

To find the HP support that you need, use this information.

Table 4-3 Support information locations


Service consideration	Path to access information
Records of reported failure incidents stored on the computer	<p>Windows:</p> <p>Pre-operating system failures are logged in the BIOS Event Log. To view the BIOS Event Log:</p> <ol style="list-style-type: none"> 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. <p>NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility.</p> <ol style="list-style-type: none"> 3. Press f10 to enter the BIOS setup. 4. (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. <p>- or -</p> <p>(On consumer products) Under the Main tab, select System Log.</p> <p>Post-operating system failures are logged in the Event Viewer.</p> <ol style="list-style-type: none"> 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. <p>Chrome:</p> <ol style="list-style-type: none"> 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
Technical bulletins	<p>To locate technical bulletins:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com. 2. Place the cursor over Problem solving to display more options. 3. Select Support & Troubleshooting. 4. Type the serial number, product number, or product name to go to the product support page. 5. Select Advisories to view technical bulletins.
Repair professionals	<p>To locate repair professionals:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com. 2. Place the cursor over Support resources to display more options. 3. Select Authorized service providers.

Table 4-3 Support information locations (continued)

Service consideration	Path to access information
Component and diagnosis information, failure detection, and required action	<p>To locate diagnosis information and actions:</p> <ol style="list-style-type: none">1. Go to http://www.hp.com/go/techcenter/pcdiags.2. Select Get Support.3. Near the bottom of the window, select Notebook PCs, and then select your location.

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.



NOTE: The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.

Component replacement procedures

To remove and replace computer components, use these procedures.



NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.



NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To prepare to disassemble the computer, use these steps.

See [Removal and replacement procedures preliminary requirements on page 23](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Solid-state drive

To remove the M.2 solid-state drive, use this procedure and illustration.

Table 5-1 Solid-state drive descriptions and part numbers


Description	Spare part number
2 TB	M52027-001
1 TB	M16560-001
512 GB	M17436-001

Before removing the solid-state drive, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).

Remove the solid-state drive:

1. Remove the Phillips M2.0 × 2.0 screw (1), and then pull the drive out of the slot (2).

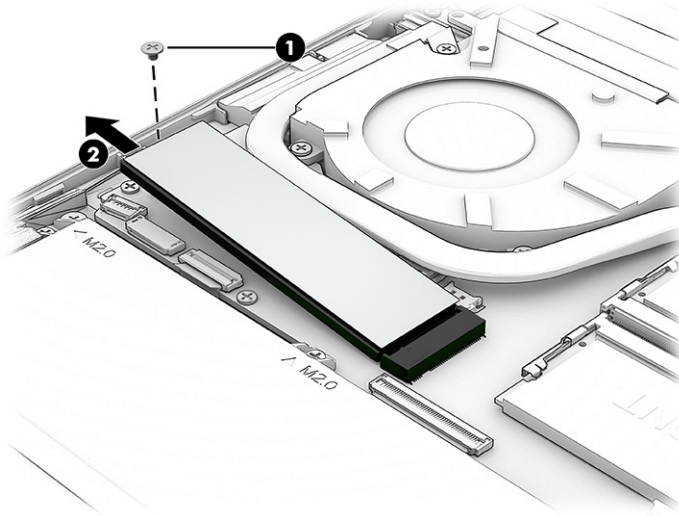

2. When installing a drive, be sure to remove the cover from the old drive (1) and install the cover onto the new drive (2).

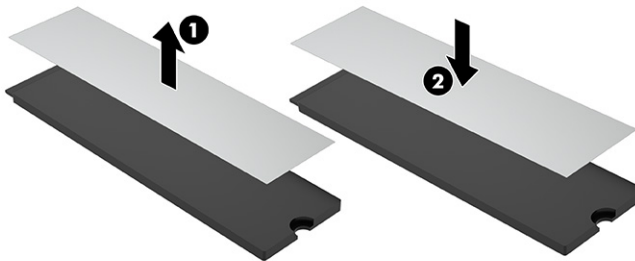

To install the solid-state drive, reverse the removal procedures.



NOTE: Solid-state drives are designed with a notch to prevent incorrect insertion.

Memory modules

To remove the memory modules, use this procedure and illustration.

Table 5-2 Memory module descriptions and part numbers


Description	Spare part number
16 GB, DDR5-4800	M97596-001
8 GB, DDR5-4800	M97595-001


Before removing the memory, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).

If you are replacing a memory module, remove the existing memory module:

1. Pull the protective shielding up from the top and toward you to access the memory modules.
2. Spread the two retention clips outward (1) until the memory module tilts up at a 45° angle, and then remove the module (2). Use the same procedure to remove all memory modules.

 **IMPORTANT:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

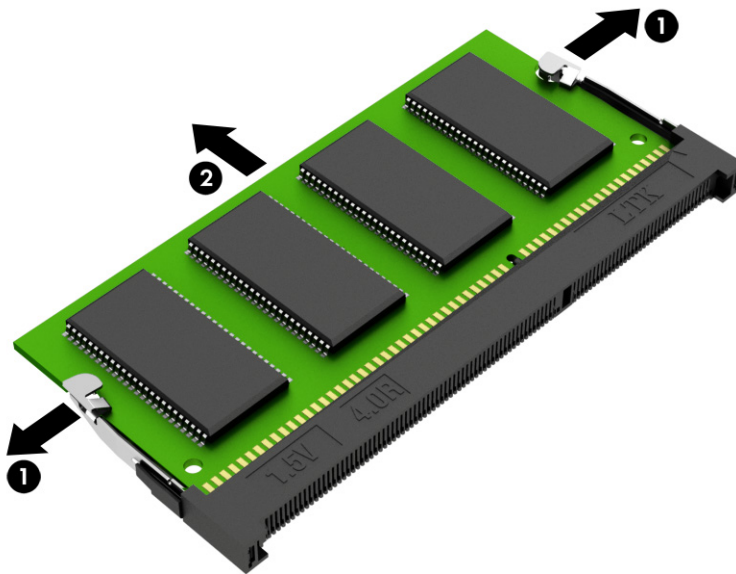


To protect a memory module after removal, place it in an electrostatic-safe container.

To install a memory module:


1. Align the notched edge of the module with the tab in the slot (1), and then press the module into the slot at an angle until it is seated (2).


2. Press down on the module until the side retention clips snap into place (3).

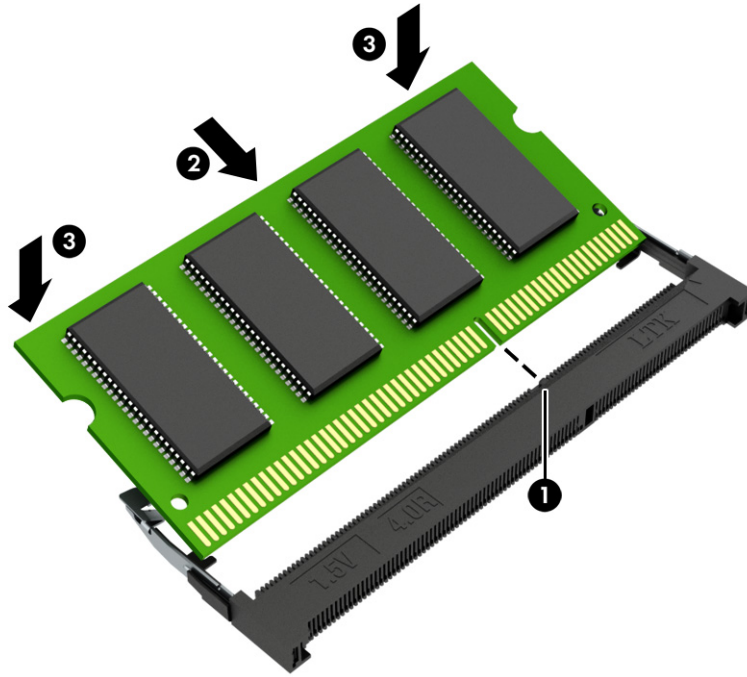

6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

Component replacement procedures

To remove and replace computer components, use the procedures described in this section.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures:

See [Removal and replacement procedures preliminary requirements on page 23](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover, use this procedure and illustration.


Table 6-1 Bottom cover description and part number

Description	Spare part number
Bottom cover, ceramic white, for use in models with 3050 or 3050 Ti graphics	N19343-001
Bottom cover, ceramic white, for use in models with 3060 or 3070 Ti graphics	N14092-001
Bottom cover, shadow black, for use in models with 3050 or 3050 Ti graphics	N14093-001
Bottom cover, shadow black, for use in models with 3060 or 3070 Ti graphics	N14094-001


Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).

Remove the bottom cover:

1. Close the computer and rest it upside down on a flat work surface.
2. Remove the eight Phillips M2.0 × 4.0 screws (1) that secure the bottom cover to the computer.

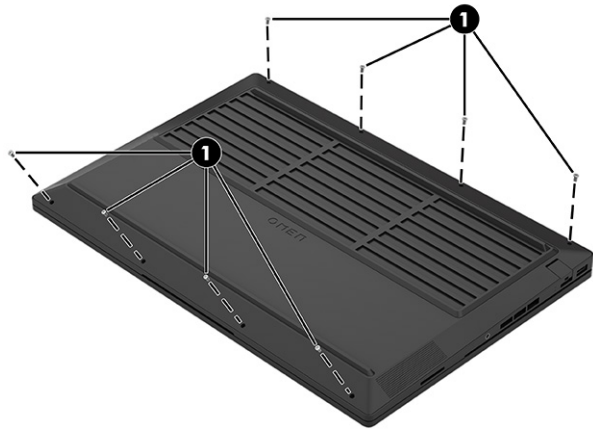

3. Insert a thin, plastic tool in the seam along the bottom between the bottom cover and computer (1), and then pull the tool along the edges of the bottom cover to release it.
4. Remove the bottom cover (2).

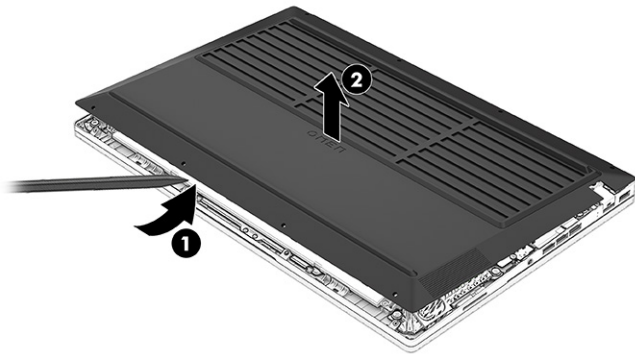

To replace the bottom cover, reverse the removal procedures.

Battery


To remove the battery, use this procedure and illustration.

Table 6-2 Battery description and part number

Description	Spare part number
Battery, 6 cell, 83 Whr	M41711-005

Table 6-2 Battery description and part number (continued)


Description	Spare part number
Battery, 4 cell, 70 Whr	M39179-005


 **WARNING!** To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery, which can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).


 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable **(1)** from the system board.
2. Remove the six Phillips M2.0 × 4.0 screws **(2)** that secure the battery to the computer.

3. Remove the battery (3).

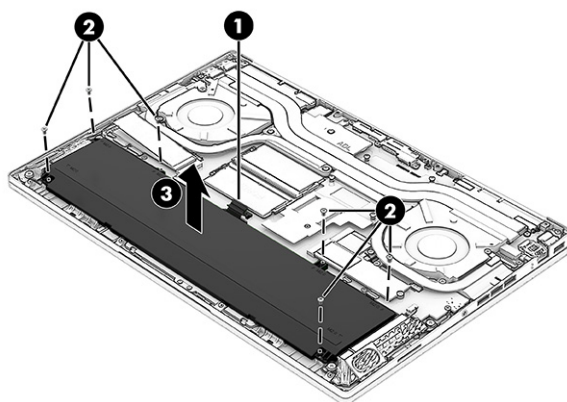


To insert the battery, reverse the removal procedures.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 6-3 WLAN module descriptions and part numbers

Description	Spare part number
Intel AX211 Wi-Fi 6e Bluetooth® 5.2 WLAN	M53366-005
Intel AX411 Wi-Fi 6e Bluetooth 5.2 WLAN	M53374-005
WLAN module protective tape	M14330-001

 **IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WLAN module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).


Remove the WLAN module:

1. Remove the plastic protector that covers the antennas (1).
2. Carefully disconnect the two antenna cables from the module (2).
3. Remove the Phillips M2.0 × 2.5 screw (3).

- Slide the module horizontally out of the socket and slightly under the heat sink (4), and then slide the module over the socket and out from under the heat sink (5).

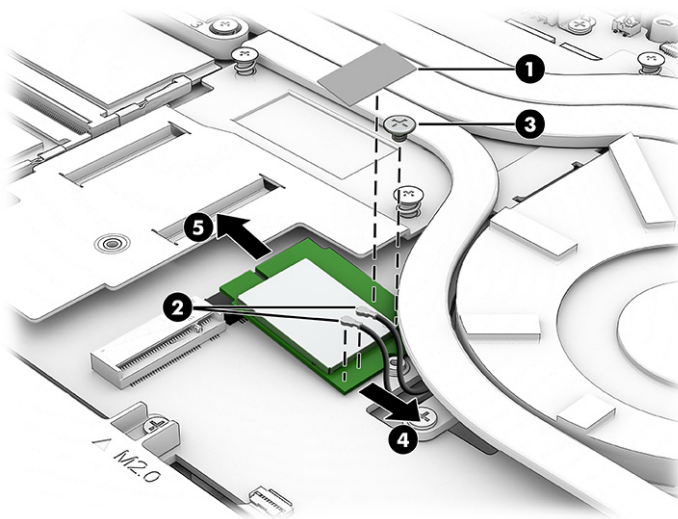

- If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

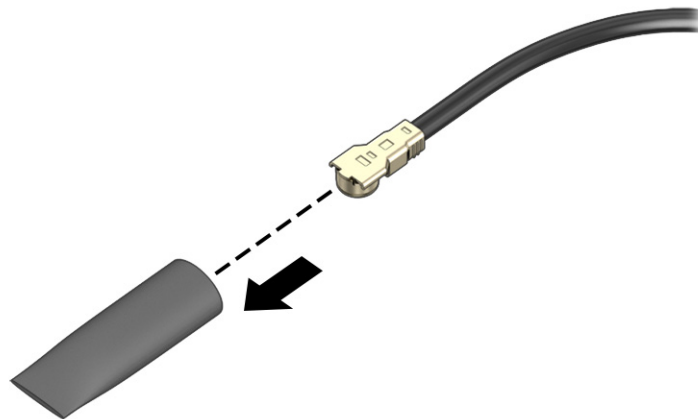

To install the WLAN module, reverse this procedure.

Speakers

To remove the speakers, use this procedure and illustration.

Table 6-4 Speaker description and part number

Description	Spare part number
Speaker Kit	N14088-001

Before removing the speakers, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).

Remove the speakers:

1. Remove the two broadhead Phillips M1.5 × 2.5 screws (1) that secure each speaker to the computer.
2. Disconnect the speaker cables from the system board (2).
3. Remove the speakers from the computer (3).



NOTE: When removing the speakers, make note of the location of the rubber isolators (4). The absence of or damage to these isolators can result in degraded speaker performance.

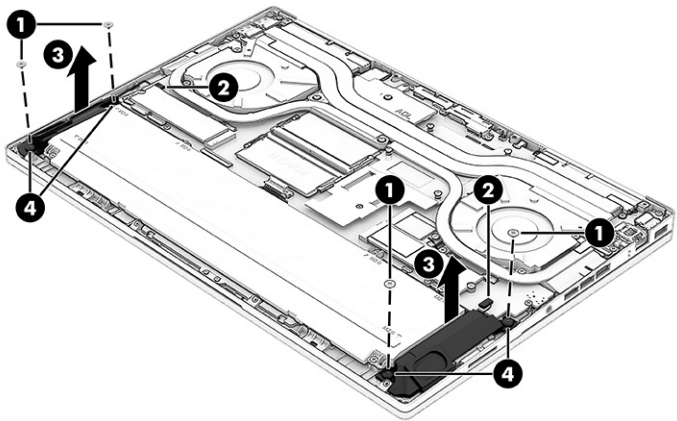

To install the speakers, reverse this procedure.

Card reader

To remove the card reader, use this procedure and illustration.

Table 6-5 Card reader description and part number


Description	Spare part number
Card reader	N14068-001
Card reader cable	N14067-001

Before removing the card reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Remove the battery (see [Battery on page 37](#)).
4. Remove the left speaker (see [Speakers on page 40](#)).

Remove the card reader:

1. Disconnect the cable from the ZIF connector on the system board (1).
2. Remove the two Phillips M2.0 × 2.5 screws (2) that secure the card reader to the computer.
3. Remove the card reader from the computer (3).

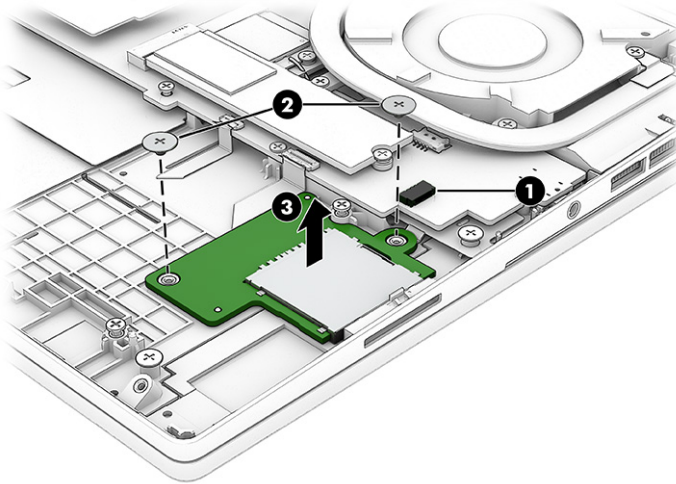

To install the card reader, reverse this procedure.

Per key lighting board

To remove the lighting board, use this procedure and illustration.

Table 6-6 Lighting board description and part number

Description	Spare part number
Lighting board	available with the top cover with keyboard spare part
Lighting board LED cable	N14074-001
Lighting board keyboard cable	N14073-001


Before removing the lighting board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Remove the battery (see [Battery on page 37](#)).

Remove the lighting board:

1. Remove the two Phillips M2.0 × 2.5 screws (1) that secure the board to the computer.

2. Remove the board (2).

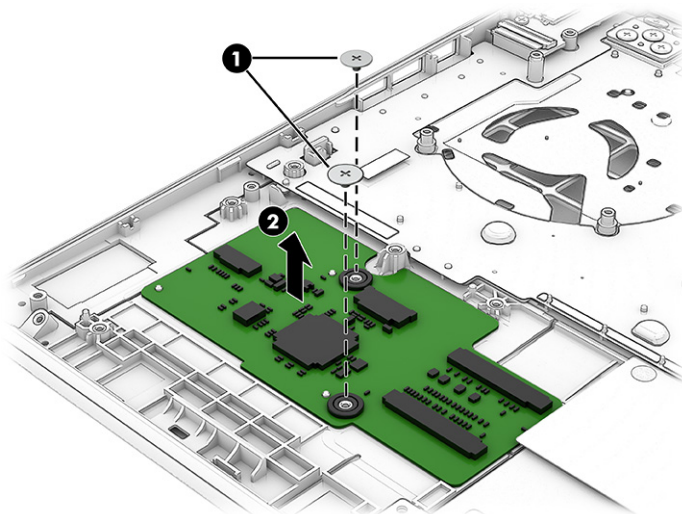

To install the lighting board, reverse this procedure.

Display subcomponents (without removing the display)

You can remove some display subcomponents without removing the entire display assembly from the computer. To remove the bezel, display panel, and camera module, use these procedures and illustrations.

Table 6-7 Display subcomponent descriptions and part numbers

Description	Spare part number
Bezel	N14102-001
Display panel, FHD, 250 nits, 144 Hz	N13805-001
Display panel, FHD, 300 nits	N13806-001
Display panel, FHD, 300 nits, 144 Hz	N13807-001
Display panel, QHD, 300 nits, 165 Hz	N13808-001
Top bracket	N14108-001
Camera module	N14112-001

Before removing the display subcomponents, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).


Remove the display subcomponents:

1. Open the computer and place it with the display sitting on the table and the keyboard positioned vertically.


2. To remove the bezel, release it from the top, left, and right sides of the display (1), insert and slide a flat tool along the bottom seam between the bezel and the panel (2), and then remove the bezel (3).



NOTE: The bezel is secured with adhesive. When replacing the bezel, be sure to replace the adhesive, which is available in the display adhesive kit as spare part number N14114-001.

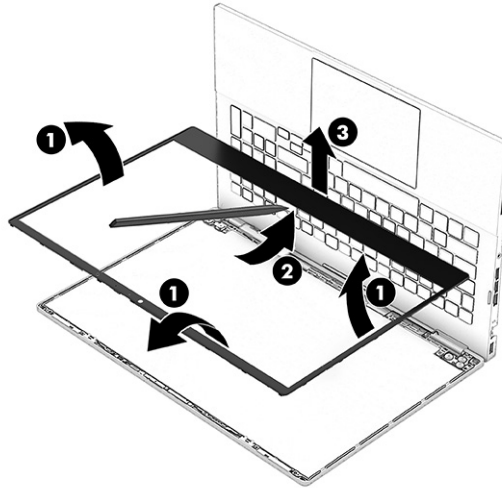


3. To remove the display panel:
 - a. At the top left and right corners of the display panel, use tweezers to grasp the end of the retention tape (1) that is installed under the left and right sides of the display panel.
 - b. While turning the tweezers (2), wrap the tape around the tweezers as you continue to pull the tape (3) out from behind the display panel.
 - c. Lift the panel off the display enclosure (4).

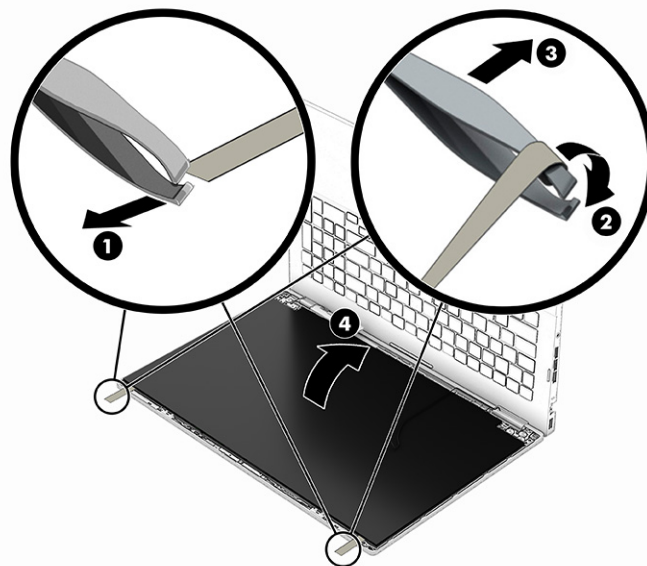


- d. Peel the tape off the connector on the back of the display panel (1).
 - e. Lift the wire retention latch from the connector (2).

- f. Pull the cable out of the connector (3).

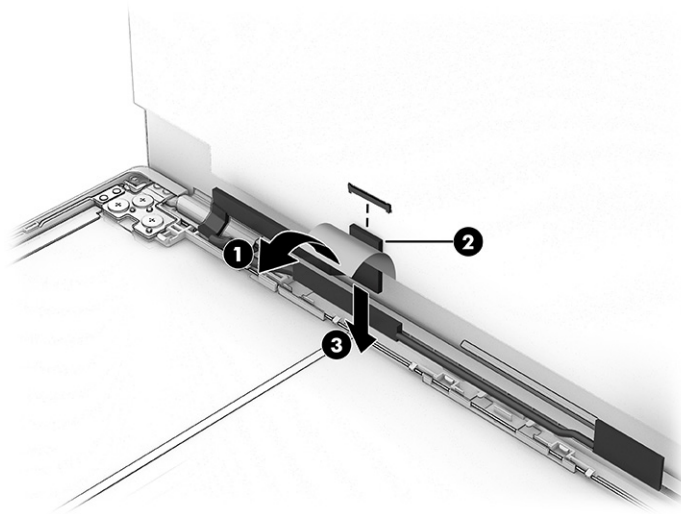


4. To replace the camera module:

- a. Remove the two Phillips M2.0 × 3.0 screws (1) from top bracket, and then remove the bracket from the display rear cover (2).

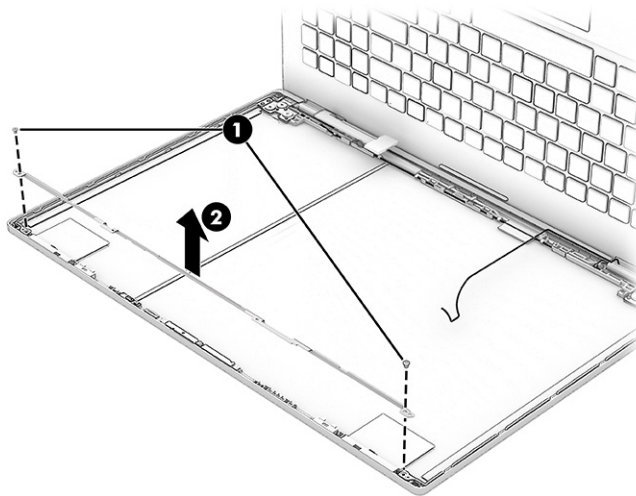

- b. Use to tool to detach the module (1) from the display back cover. (The module is attached to the display back cover with double-sided adhesive.)

- c. Disconnect the cables from the reverse ZIF connector on the camera module **(2)**.

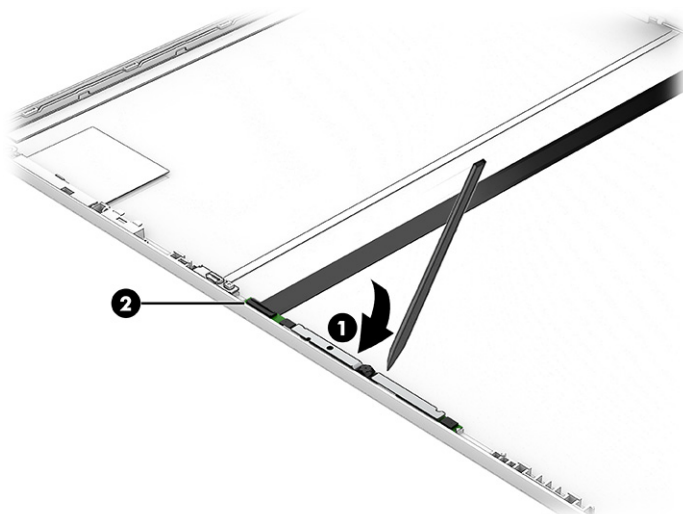

To install display subcomponents, reverse the removal procedures.

Heat sink assembly

To remove the heat sink assembly, use this procedure and illustration.

Table 6-8 Heat sink description and part number

Description	Spare part number
Heat sink assembly for use in models with 3050 or 3050Ti graphics	N14084-001
Heat sink assembly for use in models with 3060 or 3070 Ti graphics	N14085-001


Before removing the heat sink assembly, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Remove the battery (see [Battery on page 37](#)).

Remove the heat sink assembly:


1. Loosen the seven captive Phillips screws **(1)**.
2. Remove the three Phillips M2.0 × 5.0 screws **(2)**.
3. Remove the Phillips M2.0 × 3.5 screw **(3)**.

4. Remove the heat sink (4).

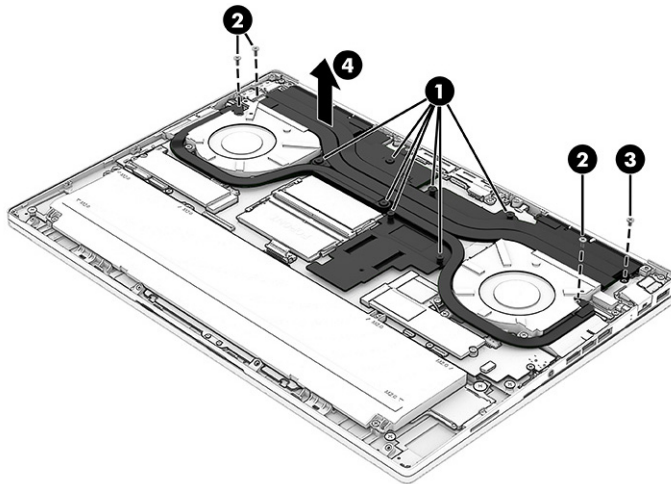

5. Thoroughly clean the thermal paste from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

Be sure that thermal paste (1) and thermal pads (2) are installed on the heat sink on shown in the following illustration.

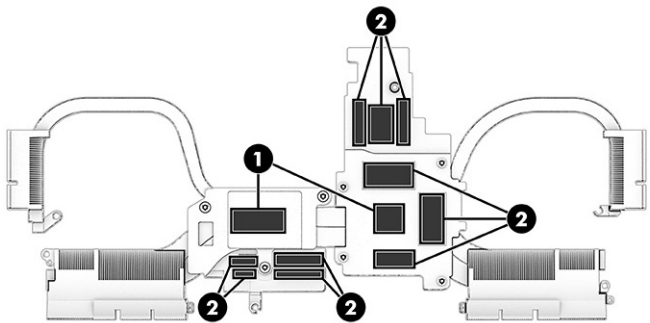

To install the heat sink, reverse this procedure.

Fans

To remove the fans, use this procedure and illustration.

Table 6-9 Fan descriptions and part numbers

Description	Spare part number
Fan kit for use in models with 3050, 3050Ti graphics (includes both fans)	N14086-001
Fan kit for use in models with 6650M, 3060, 3070 graphics (includes both fans)	N14087-001


Before removing the fans, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).

2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).
4. Remove the heat sink (see [Heat sink assembly on page 46](#)).

Remove the fans:

1. Remove the two Phillips M2.0 × 5.0 screws (1) that secure each fan to the computer.
2. Remove the protective Mylar, and then disconnect the fan cables from the system board (2).
3. Remove the fans (3).

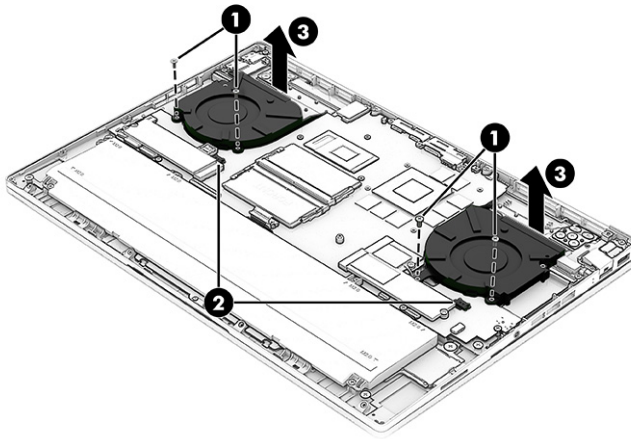

To install the fans, reverse this procedure.

System board, heat sink, fan combination

If you remove the RJ-45 board, USB board, touchpad, IR sensor board, and display assembly, you can remove the system board, heat sink, and fans together to avoid removing the heat sink and disturbing the thermal material.


Before removing the system board, heat sink, and fan assembly, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Remove the battery (see [Battery on page 37](#)).


Remove the system board, heat sink, and fan assembly:

1. Disconnect the following cables from the system board:
 - Display cable (1)
 - Sensor board cable (ZIF) (2)
 - RJ-45 (network) board cable (ZIF) from the RJ-45 board (3)
 - Wireless antenna cables from the WLAN module (4)


- Left speaker cable (5)
- Card reader cable (ZIF) (6)
- Touchpad cable (ZIF) (7)
- Keyboard cable (ZIF) (8)
- Keyboard RGB (ZIF) (9) (select products only)
- Backlight cable (ZIF) (10)
- Right speaker cable (11)
- USB board cable from the USB board (12)

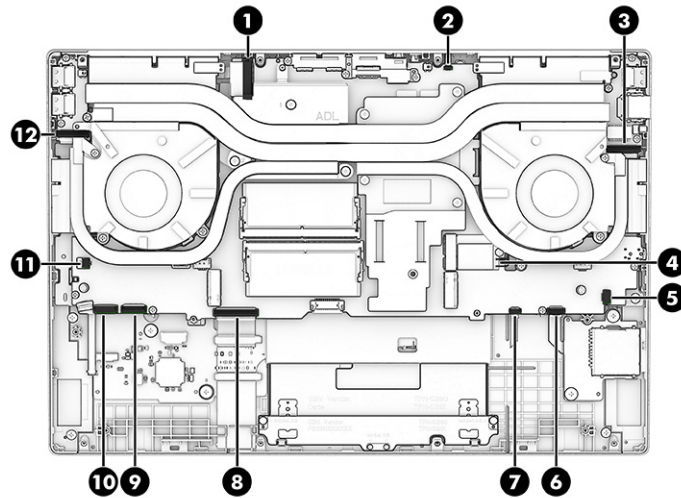


2. Remove the Phillips M2.0 × 5.0 screw (1) from the left side of the heat sink.
3. Remove the Phillips M2.0 × 3.5 screw (2) from the right side of the heat sink.
4. Remove the three Phillips M2.0 × 5.0 screws (3) from each fan.

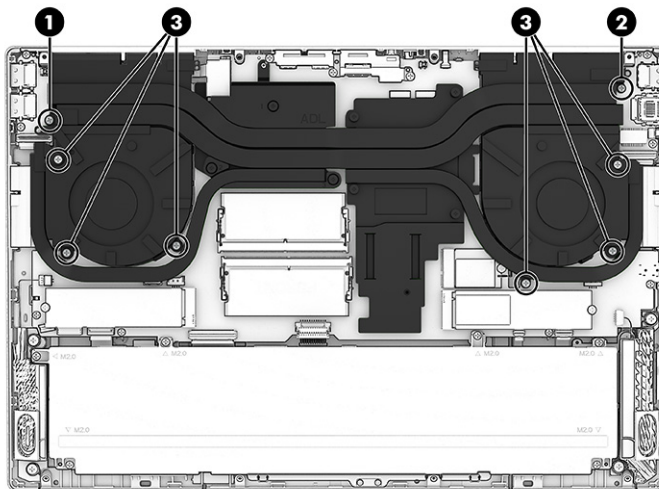

5. Remove the rear ports bracket by removing the three Phillips M2.0 × 5.0 screws (1), and then removing the bracket (2).
6. Remove the four Phillips M2.0 × 3.5 screws (3) that secure the system board to the computer.

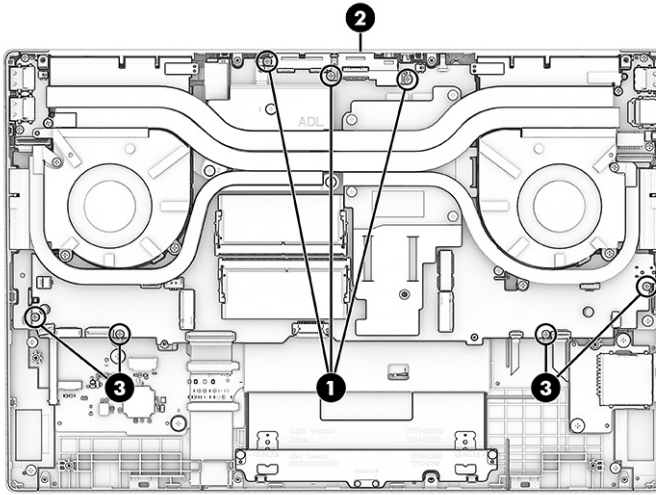

7. Release the USB board cable and the RJ-45 board cable from the computer (1). The cables are secured with double-sided tape.
8. Lift the left edge of the system board (2), and then pull the board with heat sink and fans up and to the left to remove the assembly from the computer (3).

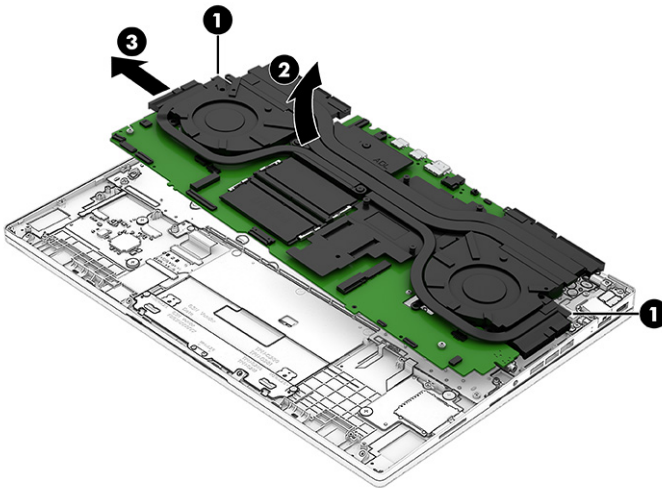

To install the system board, reverse this procedure.

RJ-45 (network) board

To remove the RJ-45 (network) board, use this procedure and illustration. Before removing the board, you can remove the system board, heat sink, and fans as an assembly so you do not have to disturb the thermal material.

Table 6-10 RJ-45 (network) board description and part number


Description	Spare part number
RJ-45 (network) board	N14069-001
RJ-45 (network) board cable	N14070-001
RJ-45 (network) jack door	N14072-001

Before removing the RJ-45 (network) board, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).
4. Remove the system board, heat sink, and fan assembly (see [System board, heat sink, fan combination on page 48](#)).

Remove the RJ-45 (network) board:

1. Disconnect the cable from the ZIF connector on the RJ-45 (network) board (1).
2. Remove the two Phillips M2.0 × 3.5 screws (2) that secure the board to the computer.
3. Remove the board (3).

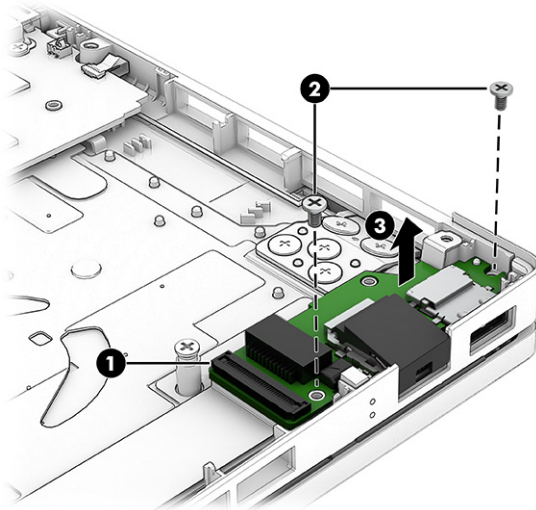

4. If you need to remove the RJ-45 (network) door, insert a tool into the outside of the door **(1)** and push the door upward to release it **(2)**.

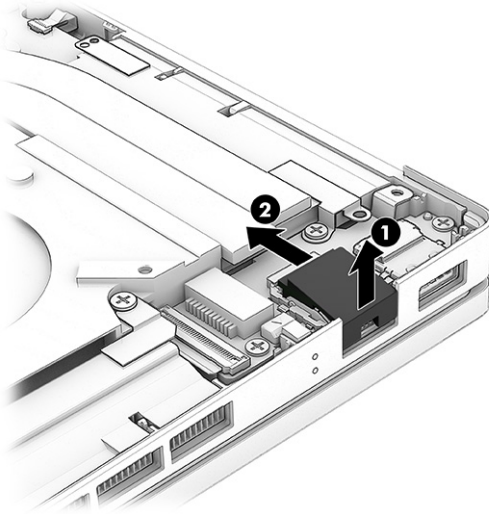

To install the RJ-45 (network) board, reverse this procedure.

USB board

To remove the USB board, use this procedure and illustration. Before removing the board, you can remove the system board, heat sink, and fans as an assembly so you do not have to disturb the thermal material.

Table 6-11 USB board description and part number

Description	Spare part number
USB board	N14063-001
USB board cable	N14064-001


Before removing the USB board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).
4. Remove the system board, heat sink, and fan assembly (see [System board, heat sink, fan combination on page 48](#)).

Remove the USB board:

1. Disconnect the cable from the ZIF connector on the USB board **(1)**.
2. Remove the two Phillips M2.0 × 3.5 screws **(2)** that secure the board to the computer.

3. Remove the board (3).

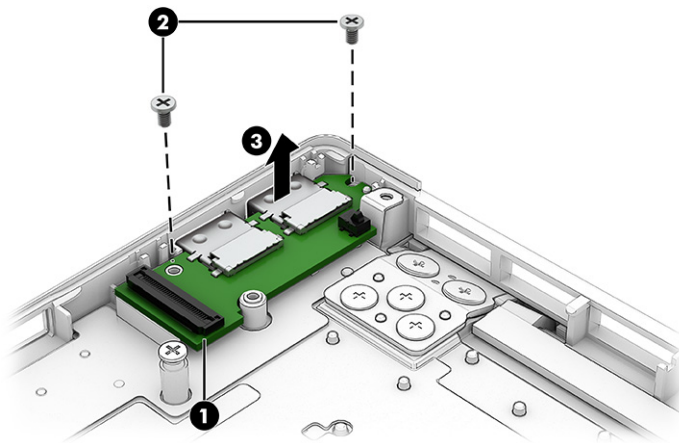

To install the USB board, reverse this procedure.

IR sensor board

To remove the IR sensor board, use this procedure and illustration. Before removing the board, you can remove the system board, heat sink, and fans as an assembly so you do not have to disturb the thermal material.

Table 6-12 IR sensor board description and part number

Description	Spare part number
IR sensor board	N14065-001
IR sensor board cable	N14066-001


Before removing the IR sensor board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Remove the battery (see [Battery on page 37](#)).
4. Remove the system board, heat sink, and fan assembly (see [System board, heat sink, fan combination on page 48](#)).

Remove the IR sensor board:

1. Remove the Phillips M2.0 × 2.5 screw (1) that secures the board to the top of the computer.

2. Remove the IR sensor board (2).

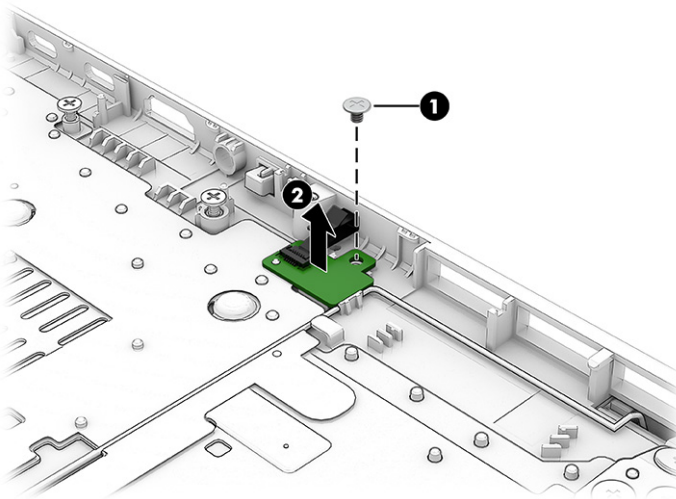

To install the IR sensor board, reverse this procedure.

Touchpad

To remove the touchpad, use this procedure and illustration. Before removing the touchpad, you can remove the system board, heat sink, and fans as an assembly so you do not have to disturb the thermal material.

Table 6-13 Touchpad description and part number


Description	Spare part number
Touchpad for use in ceramic white models	N14076-001
Touchpad for use in shadow black models	N14077-001
Touchpad cable	N14078-001

Before removing the touchpad, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Remove the battery (see [Battery on page 37](#)).
4. Remove the system board, heat sink, and fan assembly (see [System board, heat sink, fan combination on page 48](#)).

Remove the touchpad:

1. Remove the four Phillips M1.6 × 2.5 screws (1) that secure the touchpad bracket to the computer, and then remove the bracket (2).

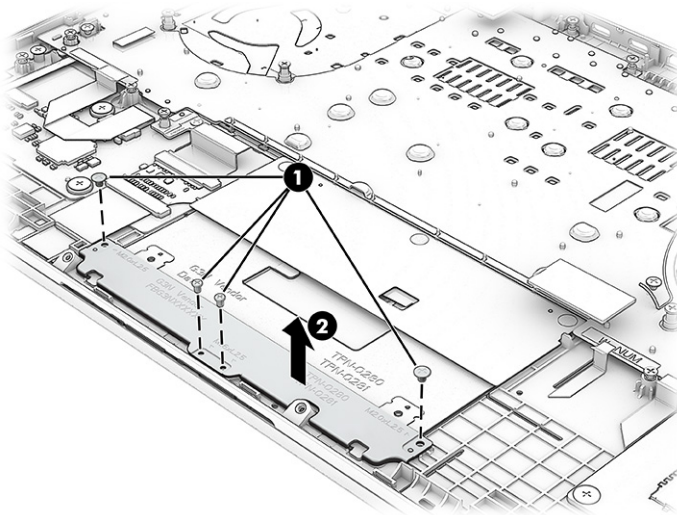

2. Lift the keyboard cable off the top of the touchpad (1).
3. Remove the protective tape from the touchpad (2).
4. Lift the conductive tape from the top right screw (3).
5. Remove the three broadhead Phillips M2.0 × 2.0 screws (4) that secure the touchpad to the computer.
6. Disconnect the touchpad cable (5) from the touchpad ZIF connector. The cable is secured with double-sided tape.
7. Remove the touchpad from the computer (6).

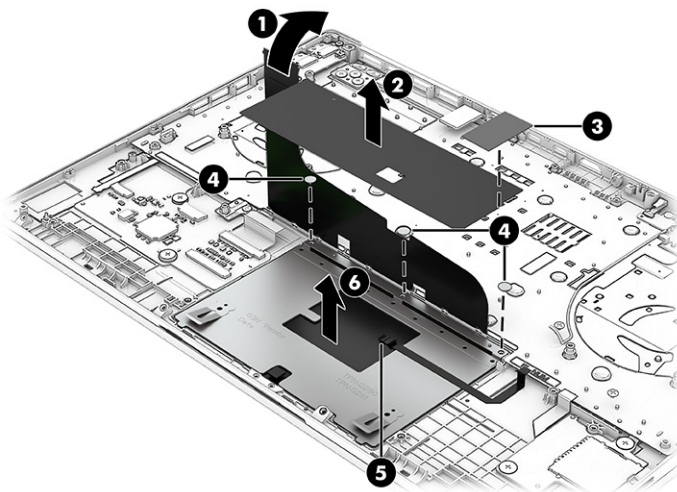

To install the touchpad, reverse this procedure.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations. Before removing the display assembly, you can remove the system board, heat sink, and fans as an assembly so you do not have to disturb the thermal material.

Full hinge-up displays are not available as spare parts. Spare parts for displays are available only at the subcomponent level.




NOTE: You can remove the bezel, display panel, and camera module without removing the display assembly from the computer. For more information, see [Display subcomponents \(without removing the display\) on page 43](#).

Before removing the display panel, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 37](#)).
4. Remove the system board, heat sink, and fan assembly (see [System board, heat sink, fan combination on page 48](#)).


Remove the display assembly:

1. Disconnect the wireless antenna cables from the WLAN module and remove the cables from the tabs, clips, and guides on the computer (1).
2. Disconnect the display cable from the system board ZIF connector and remove the tape that secures the cable to the computer (2).

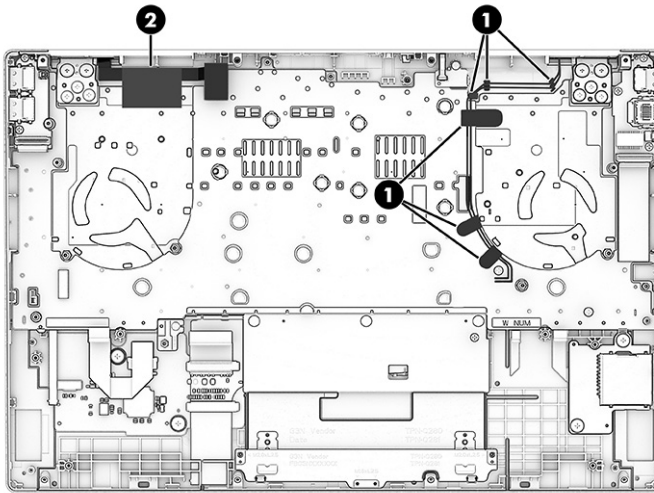


3. Remove the four Phillips M2.0 × 3.0 screws (1) and the six Phillips M2.5 × 3.5 screws (2) that secure the display assembly to the computer.
4. Open the display to an approximate 45° angle (3).

5. Separate the display from the computer (4).

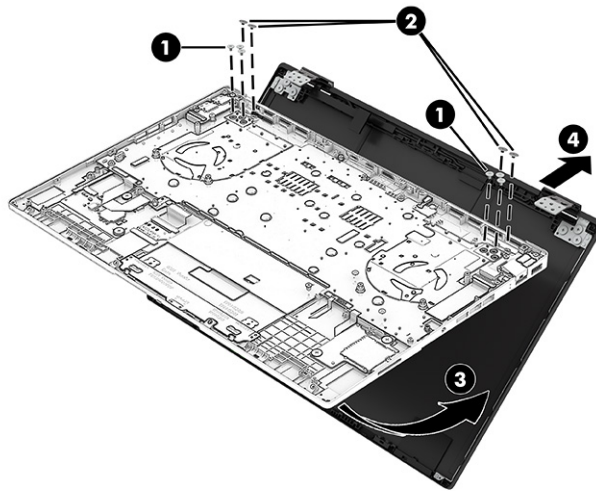


6. To remove the bezel, release it from the top, left, and right sides of the display (1), insert and slide a flat tool along the bottom edge of the bezel (2), and then remove the bezel (3). The bezel is available as spare part number N14102-001.

 **NOTE:** In this procedure, the display assembly will not be connected to the computer.

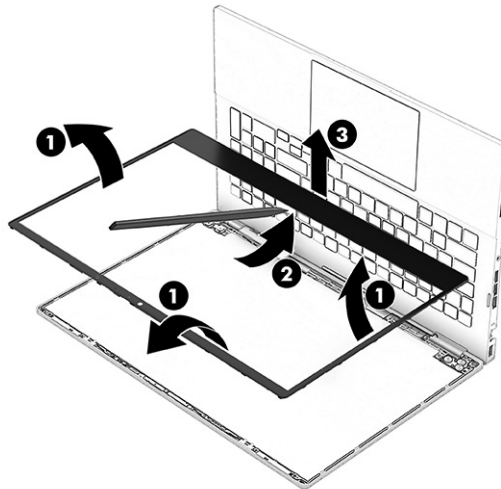


7. When installing a bezel, be sure the tape is installed on the inside of the bezel as shown in the following illustration.

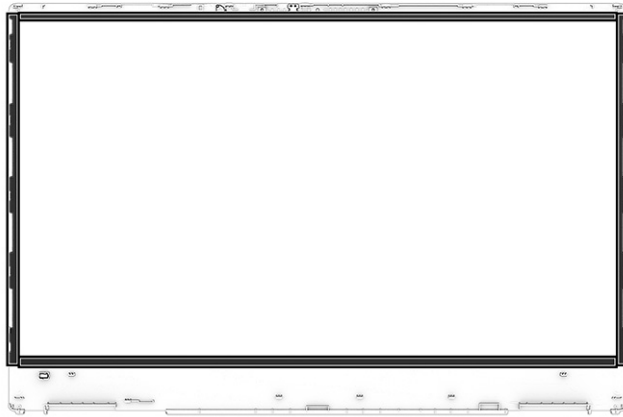

8. If you need to remove the display panel:
- At the top left and right corners of the display panel, use tweezers to grasp the end of the retention tape (1) that is installed under the left and right sides of the display panel.
 - While turning the tweezers (2), wrap the tape around the tweezers as you continue to pull the tape (3) out from behind the display panel.
 - Lift the panel off the display enclosure (4).




NOTE: In this procedure, the display assembly will not be connected to the computer.

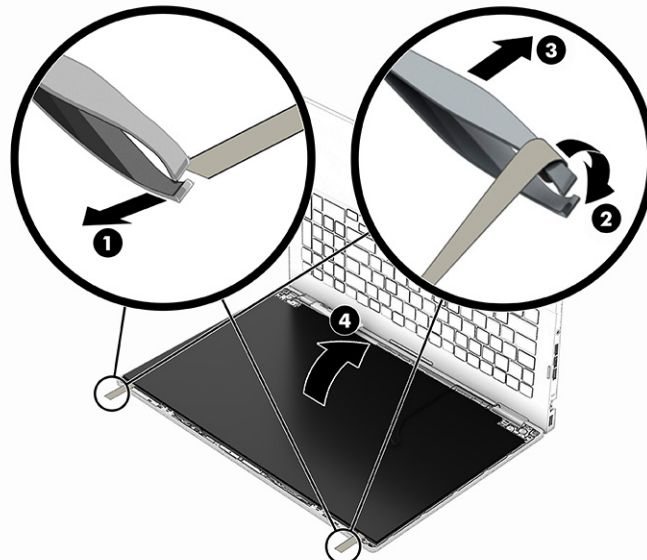


- Peel the tape off the connector on the back of the display panel (1).
- Lift the wire latch from the connector (2).

- f. Pull the cable out of the connector **(3)**.

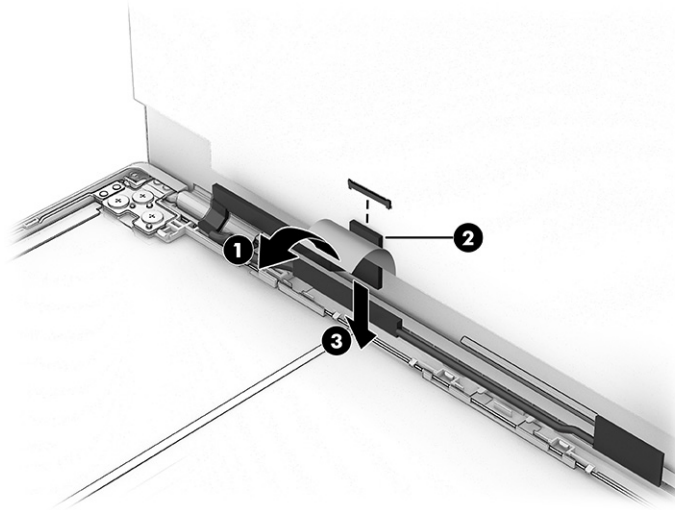

- g. When installing a display panel, be sure to install the tape on the left and right sides of the display back cover as shown in the following illustration.

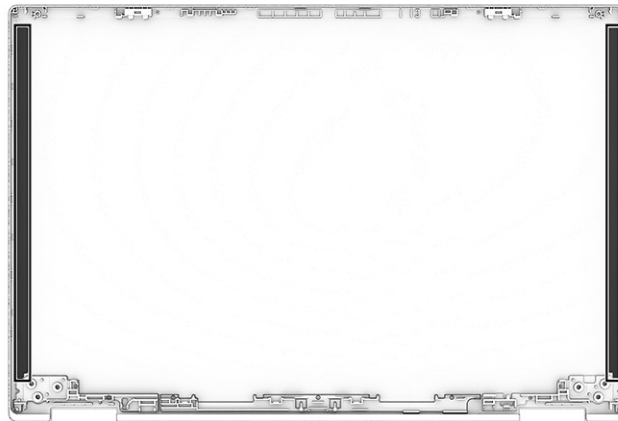

Display panels are available as the following spare part numbers:

N13805-001—FHD, 250 nits, 144 Hz

N13805-001—FHD, 300 nits

N13805-001—FHD, 300 nits, 144 Hz


N13805-001—QHD, 300 nits, 165 Hz

Display panel adhesive is available as spare part number N12238-001.

9. If you need to replace the camera module:
- a. Remove the two Phillips M2.0 × 3.0 screws **(1)** from top bracket, and then remove the bracket from the display rear cover **(2)**. The bracket is available as spare part number N14108-001.




NOTE: In this procedure, the display assembly will not be connected to the computer.

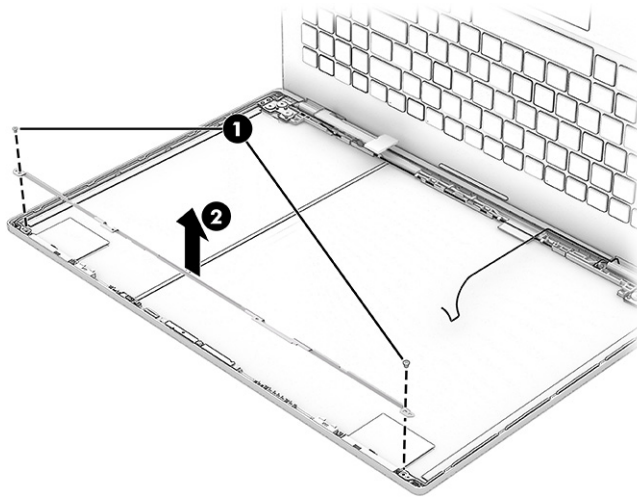

- b. Use a tool to detach the module **(1)** from the display back cover. (The module is attached to the display back cover with double-sided adhesive.)
- c. Disconnect the cables from the reverse ZIF connector on the camera module **(2)**, and then remove the module.


The camera module is available as spare part number N14112-001.

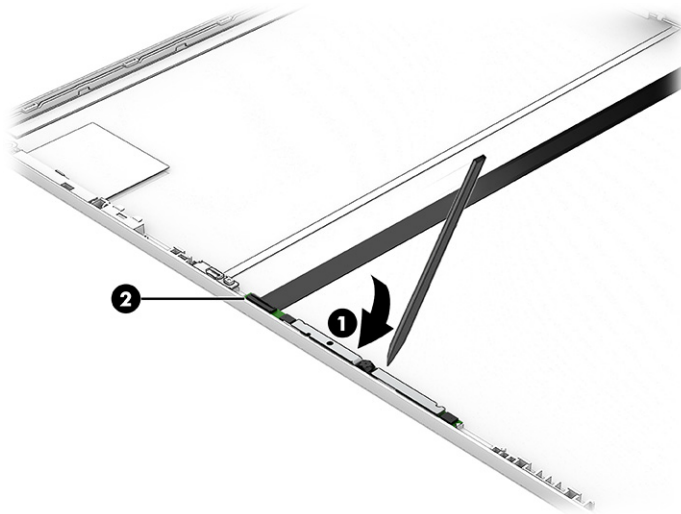

10. If you need to remove the hinges from the display enclosure:


- a. Remove the three broadhead Phillips M2.0 × 3.0 screws **(1)** that secure each hinge to the display back cover.
- b. Remove the two rubber pieces from inside each hinge cover **(2)**.
- c. Remove the WLAN antenna cables from the left hinge **(3)**.
- d. Remove the display cable from the right hinge **(4)**.
- e. Remove the hinges **(5)**.

The display hinges are available using spare part number N14103-001.

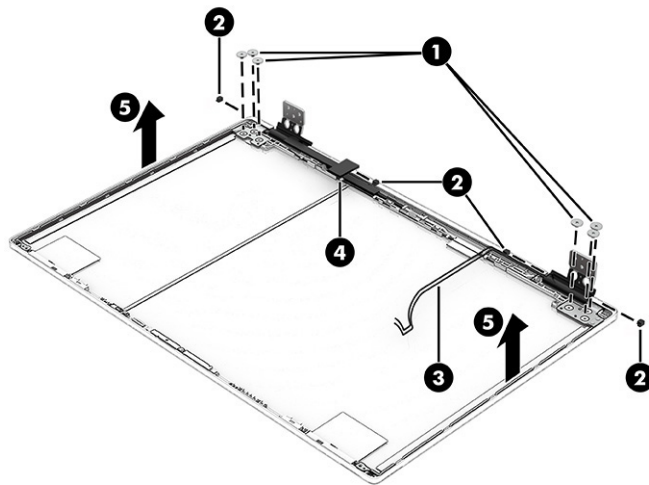

- 11.** If you need to remove the hinge covers from the hinges, slide the covers off the hinges.


The display hinge covers are available as spare part number N14105-001 for ceramic white models and N14106-001 for shadow black models. Rubber inserts are available as spare part number N14107-001.

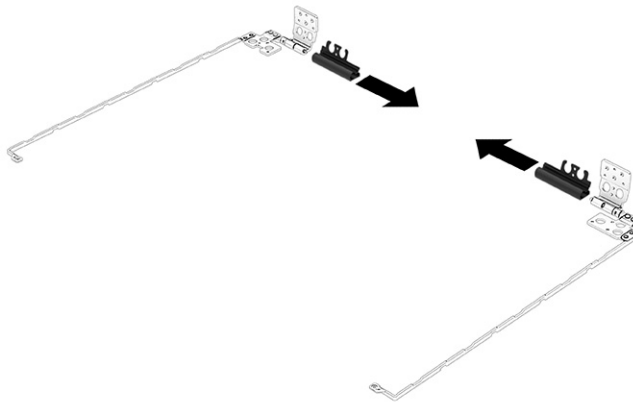

- 12.** If you need to remove the ambient light sensor and cable from the display:

- a. Peel the cable off the inside of the display rear cover (1).
- b. Release the sensor board from the top of the cover (2). (The board is attached with double-sided adhesive.)

The ambient light sensor is available as spare part number N14111-001.

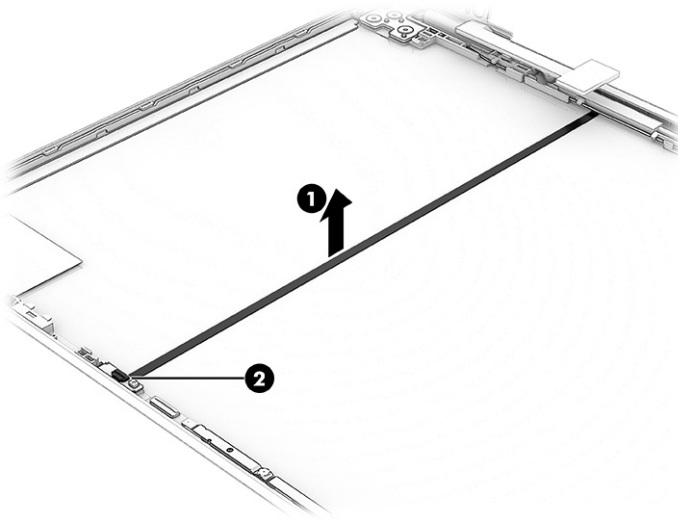


13. If you need to remove the display panel cable:

- a. Remove the cable from the routing along the bottom of the display rear cover **(1)**.
- b. Peel the cable off the inside of the display rear cover **(2)**.

The display cable is available as the following spare part numbers:


N14109-001: 144 Hz/165 Hz displays

N14110-001: Standard displays

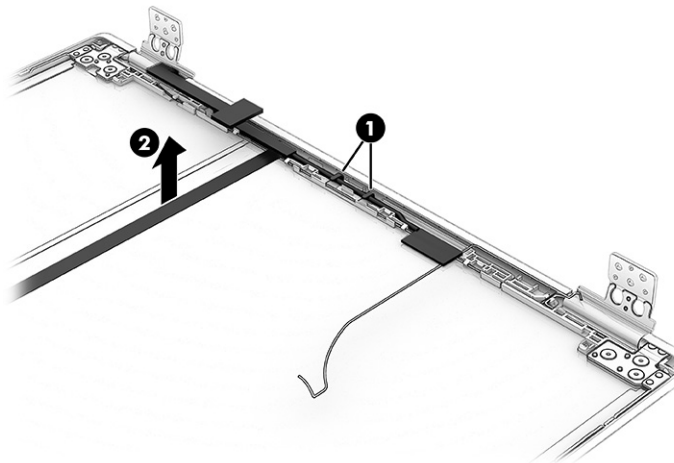

14. If you need to remove the WLAN antennas:

- a. Peel the wireless antennas off the display rear cover **(1)**. (The antennas are attached with double-sided adhesive.)
- b. Release the wireless antenna cables from the retention clips **(2)** along the sides and bottom of the display back cover. The wireless antennas are available using spare part number N14101-001 for models with an FHD display and N14091-001 in models with a QHD display.

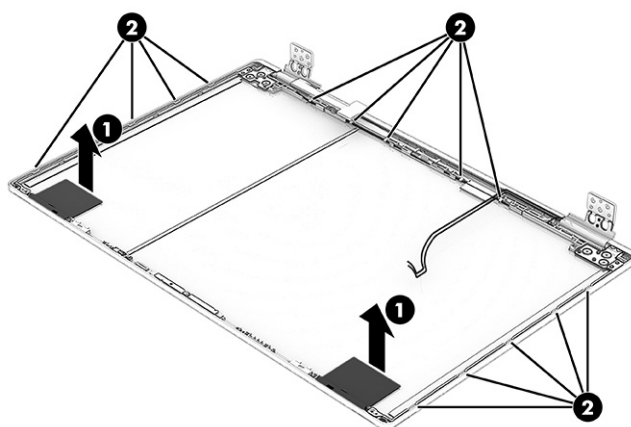

Display rear covers are available as the following spare part numbers:

N14097-001: Ceramic white models with an FHD display

N14098-001: Ceramic white models with a QHD display

N14099-001: Shadow black models with an FHD display

N14100-001: Shadow black models with a QHD display

To reassemble and replace the display assembly, reverse this procedure.

System board

To remove the system board, use these procedures and illustrations.

Table 6-14 System board descriptions and part numbers

Description	Spare part number
Intel Core i9-12900H processor and RTX 3070 Ti graphics, G-Sync	N13797-601
Intel Core i9-12900H processor and RTX 3060 graphics	N13800-601
Intel Core i7-12700H processor and RTX 3070 Ti graphics	N13795-601
Intel Core i7-12700H processor and RTX 3070 Ti graphics, G-Sync	N13796-601
Intel Core i7-12700H processor and RTX 3060 graphics	N13799-601
Intel Core i7-12700H processor and RTX 3050 graphics	N13802-601
Intel Core i7-12700H processor and RTX 3050 Ti graphics	N13804-601
Intel Core i5-12500H processor and RTX 3060 graphics	N13798-601
Intel Core i5-12500H processor and RTX 3050 graphics	N13801-601
Intel Core i5-12500H processor and RTX 3050 Ti graphics	N13803-601


Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 36](#)).
2. Remove the bottom cover (see [Bottom cover on page 36](#)).

3. Remove the battery (see [Battery on page 37](#)).
4. Remove the solid-state drive (see [Solid-state drive on page 32](#)).
5. Remove the memory modules (see [Memory modules on page 33](#)).
6. Remove the WLAN module (see [WLAN module on page 39](#)).
7. Remove the heat sink (see [Heat sink assembly on page 46](#)).
8. Remove the fans (see [Fans on page 47](#)).


Remove the system board:

1. Disconnect the following cables from the system board:
 - Display cable (1)
 - Sensor board cable (ZIF) (2)
 - RJ-45 (network) board cable from the RJ-45 board (ZIF) (3)
 - Wireless antenna cables from the WLAN module (4)
 - Left speaker cable (5)
 - Card reader cable (ZIF) (6)
 - Touchpad cable (ZIF) (7)
 - Keyboard cable (ZIF) (8)
 - Keyboard RGB (ZIF) (9) (select products only)
 - Backlight cable (ZIF) (10)
 - Right speaker cable (11)
 - USB board cable from the USB board (12)

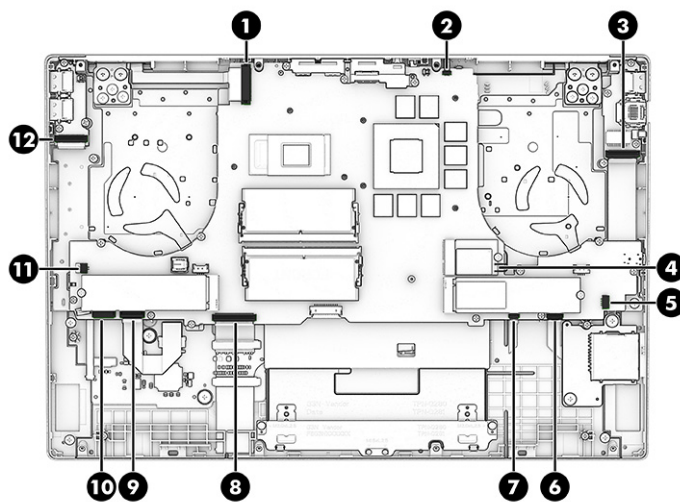


2. Remove the rear ports bracket by removing the three Phillips M2.0 × 5.0 screws (1), and then removing the bracket (2).

- Remove the four Phillips M2.0 × 3.5 screws (3) that secure the system board to the computer.

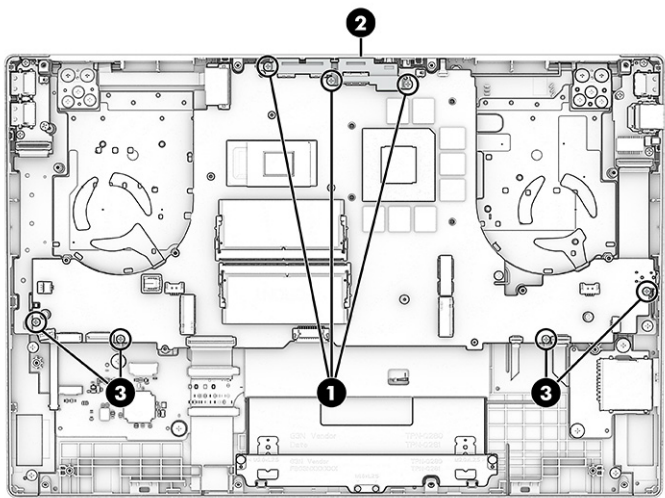

- Release the USB board cable and the RJ-45 board cable from the computer (1). The cables are secured with double-sided tape.
- Lift the left edge of the system board (2), and then pull the board up and to the left to remove it from the computer (3).

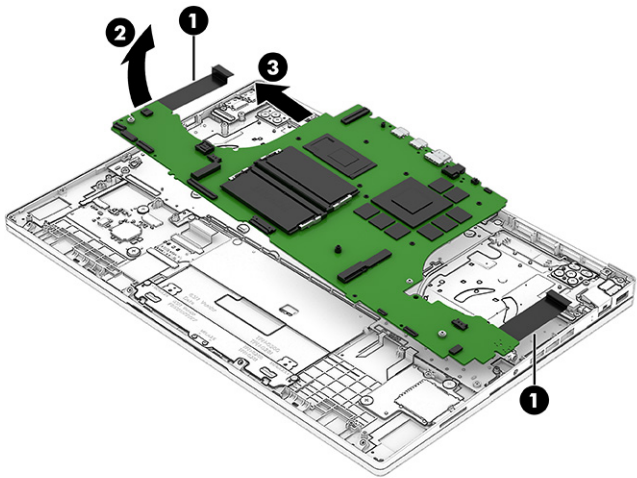

Reverse this procedure to install the system board and USB door.

Top cover with keyboard

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top cover/keyboards. The second table provides the country codes.

Table 6-15 Top cover with keyboard descriptions and part numbers

Description	Spare part number
Top cover with keyboard for use in ceramic white models:	

Table 6-15 Top cover with keyboard descriptions and part numbers (continued)

Description	Spare part number
• Per key keyboard, models with Thunderbolt	N14415-xx1
• 4-zone keyboard	N19327-xx1
• 4-zone keyboard, models with Thunderbolt	N19328-xx1
Top cover with keyboard for use in shadow black models:	
• 1-zone keyboard	N14406-xx1
• 4-zone keyboard	N14407-xx1
• 1-zone keyboard with numeric keypad	N14408-xx1
• 4-zone keyboard with numeric keypad	N14409-xx1
• 1-zone keyboard with numeric keypad, models with Thunderbolt	N14410-xx1
• 4-zone keyboard with numeric keypad, models with Thunderbolt	N14411-xx1
• 1-zone keyboard, models with Thunderbolt	N14412-xx1
• 4-zone keyboard, models with Thunderbolt	N14413-xx1
• Per key keyboard, models with Thunderbolt	N14414-xx1

Table 6-16 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Hungary	-211	Saudi Arabia	-171
Brazil	-201	Iceland	-DD1	Slovenia	-BA1
Bulgaria	-261	India	-D61	South Korea	-AD1
Chile	-161	Israel	-BB1	Spain	-071
Czech Republic/Slovakia	-FL1	Italy	-061	Switzerland	-BG1
Denmark	-081	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
Finland/Sweden	-B71	Norway	-091	Turkey-F	-541
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Romania	-271	United Kingdom	-031
Greece	-151	Russia	-251	United States	-001

7 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.



NOTE: To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).



IMPORTANT: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- Turn on or restart the computer and quickly press **F10**.

– or –

Turn on or restart the computer, quickly press **Esc**, and then press **F10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*. Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant

1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.

2. Under **My notebook**, select **Specifications**.

- Setup Utility (BIOS)

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 67](#)).
2. Select **Main**, and then make note of the BIOS version.

3. Select **Exit**, select one of the options, and then follow the on-screen instructions.

- In Windows, press **ctrl+alt+s**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 68](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.



IMPORTANT: To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.



NOTE: If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

– or –
Select the question mark icon in the taskbar.
2. Select **Updates**. The **Checking for Updates** window opens, and Windows checks for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).


3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.




NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

8 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.


Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.

 **IMPORTANT:** Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.


 **NOTE:** If computer storage is 32 GB or less, Microsoft® System Restore is disabled by default.


Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 71](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 71](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.



NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using HP Recovery media. For more information, see [Recovering using HP Recovery media on page 71](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.



NOTE: You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media

You can use HP Recovery media to recover the operating system and drivers that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 70](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery media, and then restart the computer.



NOTE: HP recommends that you follow the [Restoring and recovery methods on page 71](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly press and hold the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly press and hold the volume down button, and then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 74](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

- You have several options after you receive a failure ID:
 - Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
– or –
 - Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
– or –
 - Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
– or –
Select the question mark icon in the taskbar.

2. Select **Fixes & Diagnostics**.
3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 76](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.

– or –

Contact support, and provide the failure ID code.



NOTE: To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.



NOTE: If you need to stop a diagnostic test, press **esc**.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.

2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 76](#).

- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

HP Remote PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download HP Remote PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.

2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Exit**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, input power ratings, and operating specifications provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	369 mm	14.5 in
Depth	248 mm	9.8 in
Height	23 mm	0.91 in
Weight (one SSD)	2416.3 g	5.33 lb
Weight (two SSDs)	2422.8 g	5.34 lb
Input power		
Operating voltage and current	19.5 V dc @ 10.3 A – 200 W 20 V dc @ 14 A – 280 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	–20°C to 60°C	–4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	–15 m to 3,048 m	–50 ft to 10,000 ft
Nonoperating	–15 m to 12,192 m	–50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	40.9 cm	16.1 in
Resolution	1920 × 1080 (FHD) 2560 × 1440 (QHD)	
Surface treatment	Antiglare	
Brightness	300 nits (100% sRGB) 250 nits (45% NTSC)	
Viewing angle	UWVA	
Backlight	WLED	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 10-3 Solid-state drive specifications

	256 GB*	512 GB*	1 TB*
Dimensions			
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
Ready time, maximum (to not busy)	1.0 ms	< 1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Transfer rate			
Sequential read	up to 2150 MBps	up to 2150 MBps	up to 2150 MBps
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MBps	up to 1550 MBps	up to 1550 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	468,883,296	1,000,215,216	1,500,336,388
Operating temperature	0°C to 70°C (32°F to 158°F)		
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.			
NOTE: Certain restrictions and exclusions apply. Contact support for details.			

11 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V ac to 120 V ac, or from 220 V ac to 240 V ac.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V ac or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 11-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1

Table 11-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type H05VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

12 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

- A**
- AC adapter and battery light, identifying 8
 - AC adapter, spare part number 21
 - action key, identifying 12
 - ambient light sensor, identifying 9
 - antenna
 - illustrated 21
 - spare part number 21
 - audio-out (headphone)/audio-in (microphone) combo jack, identifying 6
 - audio, product description 2
- B**
- backup, creating 70
 - backups 70
 - battery
 - illustrated 19
 - spare part number 19
 - bezel
 - illustrated 21
 - spare part numbers 21
 - BIOS
 - determining version 67
 - downloading an update 68
 - starting the Setup Utility 67
 - updating 67
 - Bluetooth label 14
 - boot order, changing 72
 - bottom components 14
 - bottom cover
 - illustrated 19
 - removal 36
 - spare part number 36
 - spare part numbers 19
 - buttons
 - left touchpad 9, 10
 - power 12
 - right touchpad 9, 10
- C**
- calculator key, identifying 13
 - camera
 - identifying 9
 - camera light, identifying 9
 - camera module
 - illustrated 21
 - spare part number 21
 - caps lock light 11
 - card reader
 - removal 41
 - spare part number 41
 - caring for your computer 27
 - cautions
 - electrostatic discharge 23, 24
 - cleaning your computer 27
 - caring for wood veneer 29
 - disinfecting 28
 - HP Easy Clean 27
 - removing dirt and debris 27
 - components
 - bottom 14
 - display 8
 - keyboard area 9
 - left side 5
 - lights 10
 - rear 6
 - right side 5
 - touchpad 9, 10
 - computer major components 17
 - computer specifications 79
 - connectors
 - power 7
 - control zone 9
- D**
- display
 - specifications 79
 - display assembly
 - subcomponents 20
 - display back cover
 - illustrated 21
 - spare part numbers 21
 - display components 8
 - display panel
 - illustrated 21
 - product description 1
 - spare part numbers 21
 - display panel cable
 - illustrated 21
 - spare part number 21
- E**
- electrostatic discharge (ESD) 23, 24
 - preventing damage 23-25
 - esc key, identifying 12
- F**
- fan kit
 - illustrated 19
 - removal 47
 - spare part number 47
 - spare part numbers 19
 - fn key, identifying 12
- G**
- graphics controller, product description 1
 - grounding methods 23-25
 - guidelines
 - packaging 23, 29
 - transporting 23, 29
 - workstation 23
- H**
- hard drive
 - product description 2
 - specifications 79
 - HDMI port
 - identifying 7
 - heat sink
 - illustrated 19
 - spare part numbers 19
 - heat sink assembly
 - removal 46
 - spare part number 46
 - hinge
 - illustrated 21
 - spare part numbers 21
 - hinge cover
 - illustrated 21
 - spare part number 21
 - HP OMEN Gaming Hub, using 13
 - HP PC Hardware Diagnostics UEFI
 - downloading 76
 - failure ID code 75
 - starting 75
 - using 75

HP PC Hardware Diagnostics

Windows

- accessing 73, 74
- downloading 74
- failure ID code 73
- installing 75
- using 73

HP Recovery media

- recovery 71

HP Sure Recover 72

I

illustrated parts catalog 17

integrated numeric keypad, identifying 13

internal microphones, identifying 9

IR sensor board

- illustrated 19
- removal 53
- spare part number 19, 53

J

jacks

- audio-out (headphone)/audio-in
(microphone) 6
- network 6
- RJ-45 (network) 6

K

keyboard

- product description 3

keypad, integrated numeric 13

keys

- action 12
- calculator 13
- esc 12
- fn 12
- num lock 13
- OMEN 12
- Windows 12
- Windows application 12

L

labels

- Bluetooth 14
- regulatory 14
- serial number 14
- service 14
- wireless certification 14
- WLAN 14

left control zone, identifying 9

left side components 5

lighting board

- illustrated 20
- removal 42
- spare part number 20, 42

lights

- AC adapter and battery 8
- camera 9
- caps lock 11
- mute 11
- power 11
- RJ-45 (network) status 6
- touchpad 9, 11

low blue light mode 8

M

memory module

- product description 2

memory modules

- removal 33
- spare part numbers 33

microphone

- product description 2

model name 1

mute light, identifying 11

N

network jack, identifying 6

num lock key, identifying 13

O

OMEN key, identifying 12

operating system, product description 4

P

packaging guidelines 23, 29

pointing device, product description 3

ports

- HDMI 7
- product description 3
- USB SuperSpeed 5
- USB SuperSpeed port with HP
Sleep and Charge 6
- USB Type-C power connector and
Thunderbolt port with HP
Sleep and Charge and
DisplayPort output 7

power button, identifying 12

power connector identifying 7

power cord

- requirements for all
countries 81
- requirements for specific
countries and regions 81
- set requirements 81

power light, identifying 11

power requirements, product description 4

primary storage

- product description 2

processor

- product description 1

processor, product description 1

product description

- audio 2
- display panel 1
- graphics controller 1
- hard drive 2
- keyboard 3
- memory module 2
- microphone 2
- operating system 4
- pointing device 3
- ports 3
- power requirements 4
- primary storage 2
- product name 1
- security 4
- sensors 3
- serviceability 4
- solid-state drive 2
- video 2
- wireless 2

product name 1

product name and number, computer 14

R

rear components 6

recovery 70

- discs 71

- media 71

- USB flash drive 71

recovery media 70

- creating using HP Cloud Recovery
Download Tool 70
- creating using Windows
tools 70

regulatory information

- regulatory label 14
- wireless certification labels 14

- Remote HP PC Hardware Diagnostics
 - UEFI settings
 - customizing 77
 - using 77
- removal and replacement
 - procedures 32, 36
 - solid-state drive 32
- restoring 70
- restoring and recovery methods 71
- right control zone, identifying 9
- right side components 5
- RJ-45 (network) board
 - illustrated 19
 - spare part number 19
- RJ-45 (network) jack door
 - illustrated 19
 - spare part number 19
- RJ-45 (network) jack, identifying 6
- RJ-45 (network) status lights, identifying 6
- RJ-45 network) board
 - removal 50
- RJ-45(network) board
 - spare part number 50

S

- security, product description 4
- sensors
 - product description 3
- serial number, computer 14
- service labels, locating 14
- serviceability, product description 4
- slots
 - memory card reader 6
 - microSD memory card reader 6
- solid-state drive
 - illustrated 20
 - product description 2
 - removal and replacement 32
 - spare part numbers 20
 - specifications 80
- spare part country codes 65
- speaker
 - illustrated 18
 - removal 40
 - spare part number 18, 40
- speakers 14
- special keys
 - identifying 11
 - using 11
- specifications
 - computer 79
 - display 79

- hard drive 79
 - solid-state drive 80
- static electricity 23, 24
- support information 29
- system board
 - illustrated 18
 - removal 48, 63
 - spare part numbers 18, 48, 63
- system restore 71
- system restore point, creating 70

T

- top cover with keyboard
 - spare part numbers 65
- touchpad
 - illustrated 18
 - removal 54
 - settings 9
 - spare part numbers 18, 54
- touchpad buttons
 - identifying 9, 10
- touchpad components 9
- touchpad light, identifying 9, 11
- touchpad settings, adjusting 9
- touchpad zone, identifying 9, 10
- transporting guidelines 23, 29
- traveling with the computer 14

U

- USB board
 - illustrated 19
 - removal 52
 - spare part number 19
 - spare part numbers 52
- USB SuperSpeed port with HP Sleep and Charge, identifying 6
- USB SuperSpeed port, identifying 5
- USB Type-C power connector and Thunderbolt port with HP Sleep and Charge and DisplayPort output, identifying 7

V

- vents, identifying 5-7, 14
- video, product description 2

W

- Windows
 - backup 70
 - recovery media 70
 - system restore point 70
- Windows application key, identifying 12

- Windows key, identifying 12
- Windows tools, using 70
- wireless antennas, identifying 9
- wireless certification label 14
- wireless, product description 2
- WLAN antenna kit
 - illustrated 21
 - spare part number 21
- WLAN antennas, identifying 9
- WLAN device 14
- WLAN label 14
- WLAN module
 - removal 39
 - spare part numbers 39
- workstation guidelines 23