

Smart Hockey - Shooting Targets

- quick start guide

1. Shooting Target overview

1.1 Getting started

Step 1: Download the Smart Hockey app to your smart phone from the App Store or Google Play Store and create an account by following the instructions.



Step 2: Mount the targets pair in the goal as illustrated

Step 3: Power on all the Targets by pressing the power button once on each. Now the targets will be powered on for 10 minutes waiting for an app to connect to them.

Step 4: Connect to the products in the app

- a) Open the app and go to Configure Products and click the '+' to add devices. The powered on devices should appear in the list.
<Image of app>
- b) Select all devices to pair and click next
<Image of app>
- c) When the pairing is done (should take no more than 30 seconds) you need to tell the app where each of the targets are located. For the target that is currently blinking, place it out in the correct place in the app. Attach the included sticker on the EBox to remember it's position

Step 5: All set! After all products are mounted and paired with the app, it's time to start training!

2 Smart Hockey – Hardware

2.1 LED Indicator

The LED indicator on the back of the product will help communicate the status of the product to you.

- a) Blinking blue means product is awake and ready for Bluetooth connection
- b) Blinking red means product is running low on battery
- c) Blinking white means product is charging
- d) Blinking green means product is fully charged

2.2 Battery charging

To charge the products, simply plug the included USB Type C cable into the charging hole on the back of the product and connect it to a wall plug or USB outlet. The battery is fully charged after 2-3 hours depending on the charging current

3 Smart Hockey app

4 Warnings

- The device is not recommended for use by children under 3 years of age.
- Read instructions thoroughly and keep for future reference.
- This device contains electrical equipment that could cause injury if not handled properly.
- This toy contains a battery that is non-replaceable. Do not attempt to replace the battery or open the enclosure or disassemble the device. Doing so can result in a safety hazard and will void the warranty.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Do not use the device if it is damaged. Substances in the device and its battery may harm the environment or cause injury if handled or disposed improperly.
- Do not dispose the device in a fire. The battery could explode.
- Do not expose the device to extremely high or low temperatures or heavy rain.
- The device is water splash-proof only (IPX4). Do not immerse in water.
- Store the product in a dry and moisture free environment.
- Keep a safe distance to other people and objects. Collision hazard. Use of 1 or more devices by several people within the same playing area can cause serious injuries.
- Usage of the device while under the influence of alcohol or drugs is prohibited.
- Do not charge the device while it is wet.
- Do not use the device while charging it.
- Limit the time of continuous usage (make regular stops).

5 Caution

- Disposal of a battery into fire or a hot oven, mechanically crushing or cutting, can result in an explosion.
- Leaving a battery in an extremely high temperature environment can result in explosion, leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in explosion, leakage of flammable liquid or gas.
- Regularly check for damage to the power cable, charging port, device sealing condition, and in the event of damage, it shall not be used until the damage is repaired.
- The transformer is not a toy.

6 Maintenance

Clean the product with a soft, moist cloth after each use, and regularly check for visible damage or changes. Do not use solvents, detergent, soap powder or hot water under any circumstances.

7 Disposal and recycling information

The symbol on the device and its packaging signifies that this device must be disposed separately from the ordinary household wastes at its end of life because it contains a battery and is electronic equipment. For information about where to recycle contact your local waste disposal authority or the retailer where you bought the device.

8 Regulatory Information

8.1 Federal Communications Commission (FCC) Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body

FCC ID: 2A7PG0032589814

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

8.2 EU declaration of conformity

Hereby, Better Hockey Sweden AB declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.betterhockey.com/declaration-of-conformity/>

8.3 CE Statement

Better Hockey Sweden AB is authorized to apply the CE mark on its product, thereby declaring conformity to the essential requirements and other relevant provisions of Directive 2014/53/EU and other applicable Directives.

Frequency bands : 2402-2480MHZ

Maximum output power: -2dBm (for EU compliance)

Manufacturer:

Better Hockey Sweden AB
Kemistvägen 2A, 183 79 Täby
Sweden

8.4 Warranty

8.4.1 Warranty Conditions

Smart Hockey Shooting Target is subject to a warranty period of 2 years.

To make a warranty claim, please contact our customer service by e-mail:
info@betterhockey.com

The warranty does not include damage caused by:

- Accidents or unforeseeable events (e.g. lightning, flooding, fire, etc.)
- Improper use, transport or storage
- Ignoring safety and maintenance rules
- Any other improper handling or alterations
- Normal wear and tear