

## MUDIX 1080P Video Projector

Model: MX-1

Shenzhen Hifun Technology Co.,Ltd

Address: No.12, Longshan Road, Luotian Community, Yanluo Street, Baoan District,  
Shenzhen China

# CONTENTS

<b>IMPORTANT SAFETY INSTRUCTIONS .....</b>	<b>02</b>
<b>SAFETY NOTICE .....</b>	<b>04</b>
<b>PACKAGE CONTENTS .....</b>	<b>04</b>
<b>PROJECTOR COMPONENTS &amp; FUNCTIONS .....</b>	<b>05</b>
<b>REMOTE CONTROL BUTTONS .....</b>	<b>06</b>
<b>EQUIPMENT CONNECTION .....</b>	<b>07</b>
<b>INSTALLATION &amp; ADJUSTING .....</b>	<b>08</b>
1. Placement. ....	08
2. Adjust The Focus. ....	08
3. Projection Distance Reference .....	09
4. Power On/Off.....	10
<b>HOME PAGE.....</b>	<b>11</b>
<b>Wi-Fi CONNECTION.....</b>	<b>15</b>
<b>WIRELESS MIRRORING.....</b>	<b>16</b>
1. For IOS device --- mobile phone .....	16
2. For IOS device ---MacBook or ipad .....	16
3. For Android device--- Mobil phone .....	18
4. For computer device mirror cast.....	19
<b>PROJECTION SETTINGS .....</b>	<b>20</b>
<b>TO PLAY FROM EXTERNAL DEVICES.....</b>	<b>22</b>
<b>CLEANING .....</b>	<b>23</b>
<b>REPAIR .....</b>	<b>23</b>
<b>SPECIFICATIONS.....</b>	<b>23</b>
<b>FAQ .....</b>	<b>24</b>



**Before using this product, please read the user manual carefully and keep it for future reference. Scan the QR code for more details.**

- Please scan the QR code via phone or visit <https://mudix afterservice.vip> to REGISTER and EXTEND warranty.
- Defective item received or issues with product, please scan the QR code via phone or visit <https://mudix afterservice.vip> to contact our 7/24 after service team.
- Any questions, advice or product issues, please send e-mail to [mudix-@afterservice.vip](mailto:mudix-@afterservice.vip).

**Get 24/7 Assistance at**



Or visit: <https://mudix afterservice.vip>

---

## IMPORTANT SAFETY INSTRUCTIONS

- Please read and understand all instructions before using this device.
- Don't change any settings that are not described in this manual.
- Warranty does not apply if personal injury, data loss, or damage occurs as a result of failure to follow instructions.

### **Warnings**

 
- To reduce the risk of fire or electric shock, do not expose the device to rain or moisture. Objects filled with liquids, such as vases, should not be placed on the device.
- To prevent overheating, do not block or clog the ventilation openings.
- To avoid device damage or fire explosions, the air inlet/outlet/lens should be well ventilated when the projector is working.
- Never place the device in a confined space. Always leave enough space around the device for ventilation.
- Keep minimum (19.68 inch) space around the appliance for optimal ventilation.
- Do not place the device in areas susceptible to excessive dust and dirt or near any appliance generating a strong magnetic field.
- Protect the device against direct sunlight heat, large temperature fluctuations, and moisture.
- When the device runs for a long time and the surface becomes hot, shut it down and unplug the power cord. Resume operation only after the device has cooled.
- Always handle the device with care. Avoid touching the lens.
- Never place heavy or sharp objects on the device or the power cord.
- To avoid electric shock, do not disassemble the projector by yourself.
- Only use attachments or accessories specified by the manufacturer.
- Avoid extreme vibration. It may damage the internal components.

- 
- Do not put any hazards into the accessories.
  - Do not use the projector in the following cases or it may pollute optical elements, reduce product life, and the projection image will be dark:
    - Wet, dusty, smoky places.
    - Places where the temperature is above 104°F.
  - A layer of moisture will form inside the device to cause a malfunction in the following cases:
    - If the device is moved from a cold place to a warm place.
    - After a cold room is heated.
    - When the device is placed in a damp room, please seal the device in a plastic bag to avoid moisture.
  - To avoid hearing damage, do not listen for extended periods at high volume. Set the volume at a safe level.
  - Do not allow children to handle the device without supervision.


## **Power Supply**

- Power off the device before removing the power supply from the socket.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from this device.
- Unplug this device if there are lightning storms or when unused for a long time.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. Before you make or change any connections, ensure that all devices are disconnected from the power outlet.
- Never touch the power cable or the power connection with wet hands.


## SAFETY NOTICE

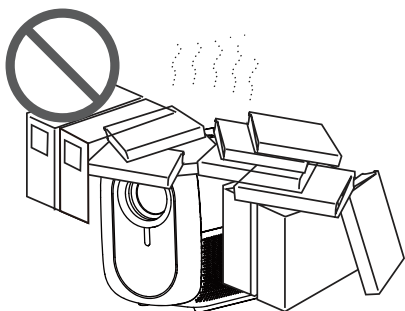


Do not install in unventilated places.

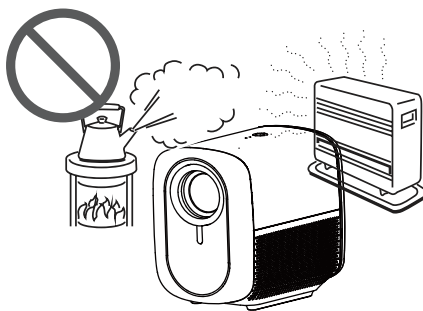 

 Do not install in high temperature or humid places.

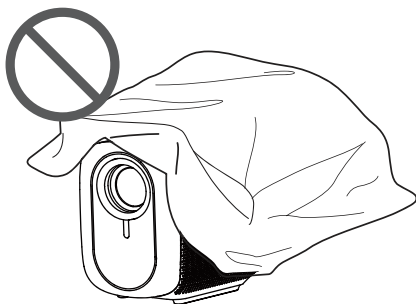

 Do not block the ventilation holes (intake or exhaust)

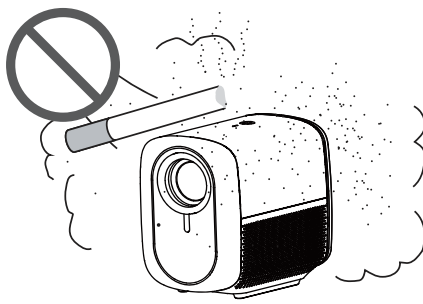


Do not install in dusty or smoky places.


## PACKAGE CONTENTS

 - Projector
- User Manual
- Remote Control
- Power Adapter
- Power Cord
- HD Cable
- Tripod Stand

# PROJECTOR COMPONENTS & FUNCTIONS

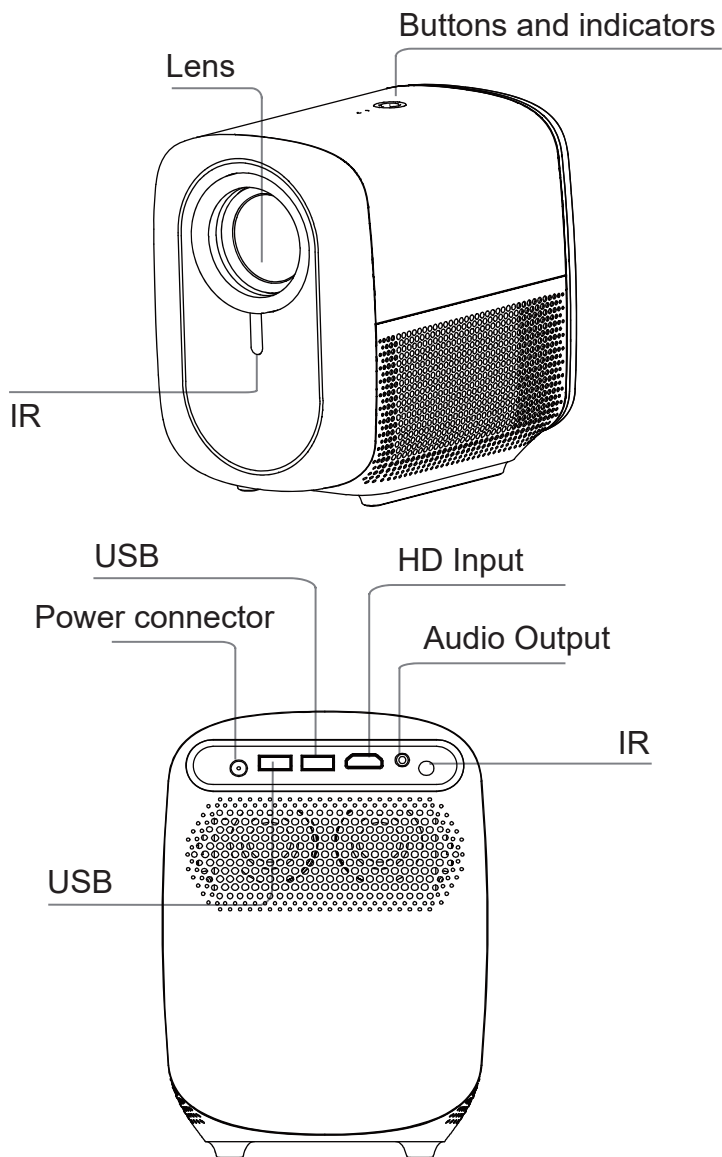

## PROJECTOR COMPONENTS & FUNCTIONS

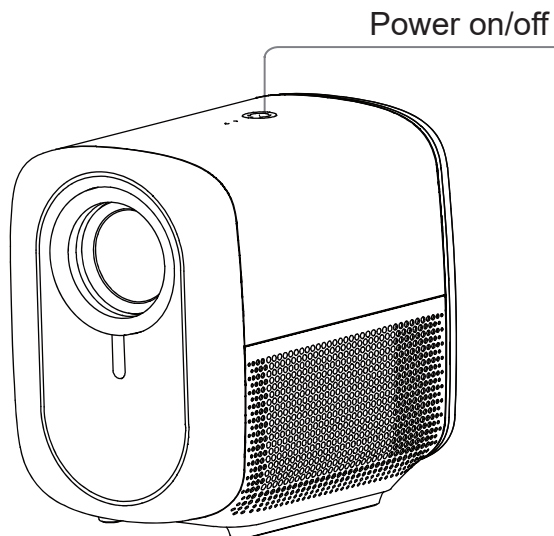 

## REMOTE CONTROL BUTTONS



Power



HD



Mute



Up



Down



Left



Right



Menu



OK



Volume -



Volume +



Home



Return



 
Focus-



Focus+




## EQUIPMENT CONNECTION

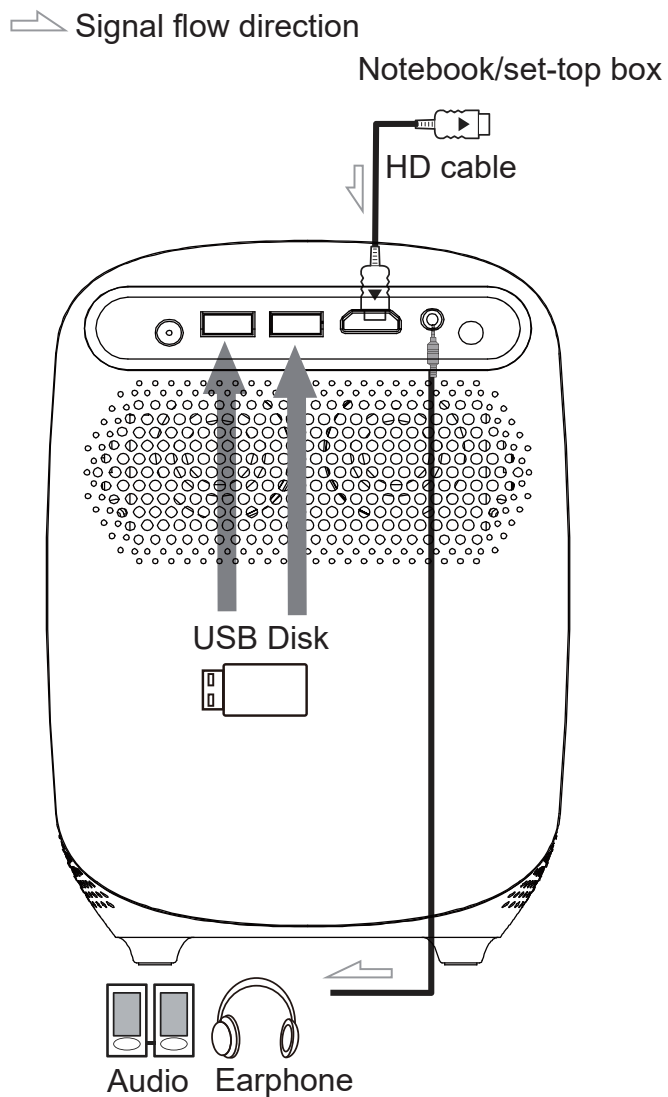

# INSTALLATION & ADJUSTING


## 1 Placement

 Place projector on a flat, stable foundation squarely in front of the projection surface. For best results, the projection surface shall be white and flat. The distance between this projector and the projection surface must be a minimum of 1.2 meters (47 inches).

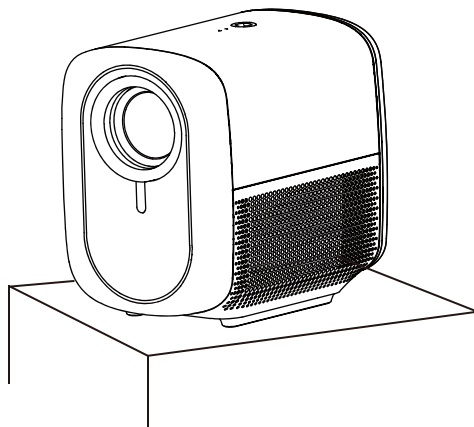

## 2 Adjust The Focus

 
Using remote control to adjust the focus of image.

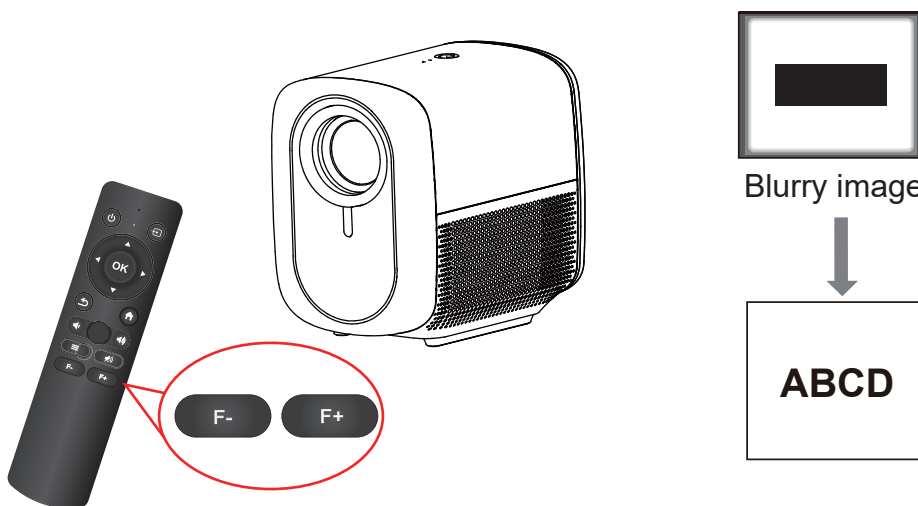

# INSTALLATION & ADJUSTING

## 3 Projection Distance Reference

 The distance between this projector and the projection surface determines the approximate size of the image.

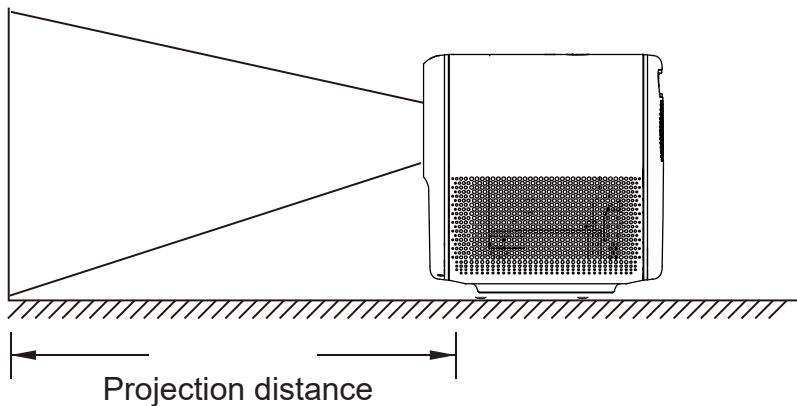

Projection size (inch)	Projection size (H*W) (inch)		Projection distance (inch)
36	(H)18.5	(W)31.49	43.4
56	(H)29.5	(W)52.36	66.9
66	(H)34.25	(W)61.02	78.74
86	(H)41.33	(W)73.22	98.4
96	(H)47.24	(W)83.8	110.2
116	(H)58.66	(W)104.72	133.8
136	(H)68.16	(W)122.04	203.8
156	(H)77.66	(W)139.36	227.4
176	(H)86.16	(W)156.68	301

## INSTALLATION & ADJUSTING

### 4 Power On/Off

 
#### Power on

1. Connect this projector to an electrical outlet by using the provided power cord and adapter.
2. Remove the lens sticker.
3. Press the **Power** button on the projector to power on. Then turn this projector towards a flat, white projection surface.


#### Power off

Power off the device before removing the power supply from the socket.

Store the projector in a cool dry place.

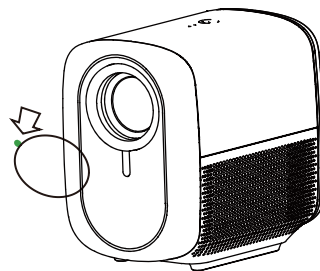


## HOME PAGE

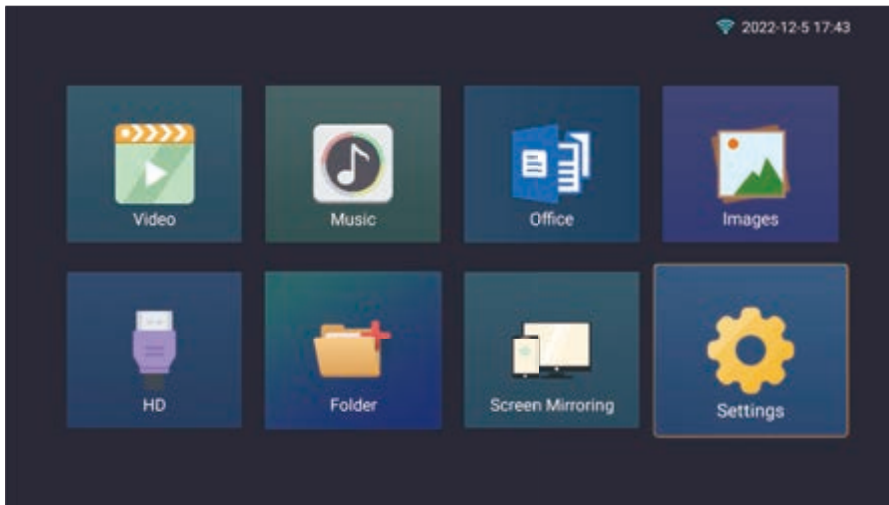 

**To play from HD playback devices, select "HD" and press "Enter".**

This projector can be connected to various HD playback devices such as a TV box, TV stick, DVD player, set-top box (STB), gaming console, or other devices. To play from HD playback devices, connect this projector to an HD playback device with an HD cable.

 **To play from a USB drive, select "Movie" , "Music" , "Photo" , "Office" and press "Enter".**

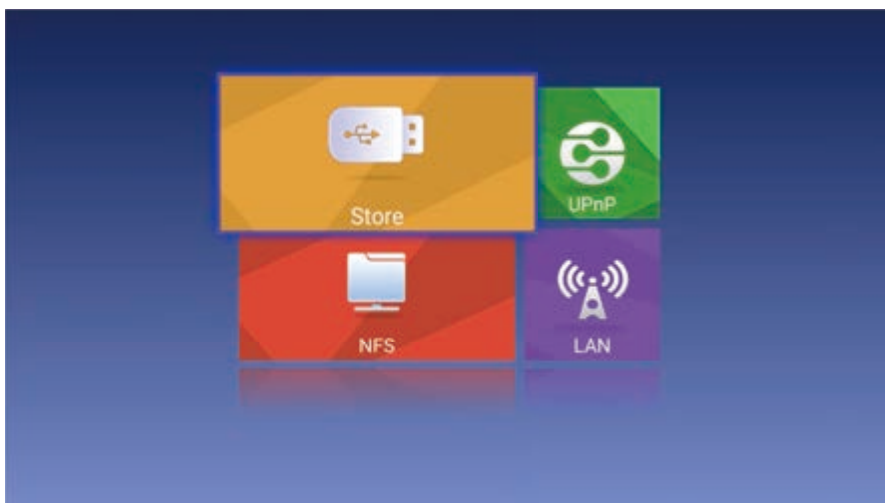


---

To play from a USB drive:

1. Insert a USB drive into the USB socket;
2. Select "Video" ,"Music" ,"Photo" ,"Office"and press "Enter"on the Homepage .
3. Select a file, then press **"Enter"**, this projector will play the video or music, or display the photo you selected.

**After entering "Video", only videos are supported .**

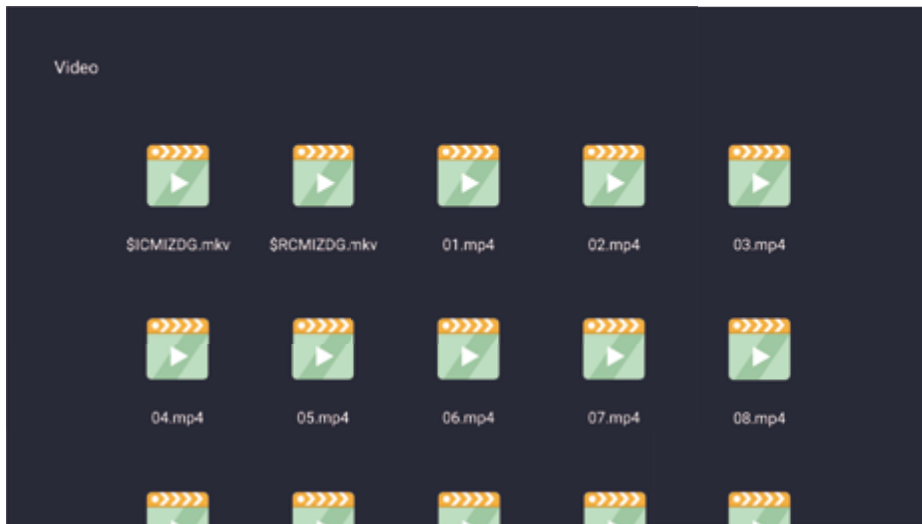 

**After entering "Photo", only pictures are supported.**

