

# Welcome Guide

## SoundSync Drive


Bedienungsanleitung | 取扱説明書  
Guide d'Utilisation | Manuale dell'Utente  
Manual de Instrucciones | 使用说明书

### Using Your SoundSync

Ihren SoundSync verwenden | SoundSyncの使用方法  
Utilisation de Votre SoundSync | Utilizzare il tuo SoundSync  
Usar Tu SoundSync | 使用你的SoundSync

### 1. Plug it in

Einstecken | 差し込みます | Branchez-le  
Collegalo all'alimentazione | Enchufar a la corriente  
连接SoundSync

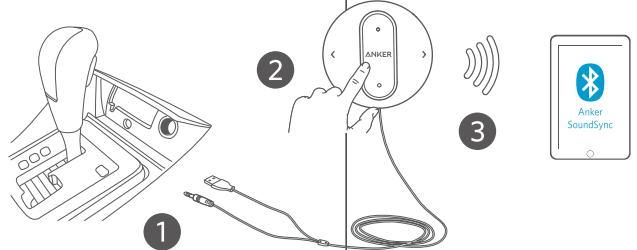

▶ 1

### 2. Turn it on

Schalten Sie ihn ein | 電源を入れる | Allumez-le  
Accendilo | Encender | 打开蓝牙接收器

### 3. Pair it with your device

Pairen Sie ihn mit Ihrem Gerät | お使いの機器とペアリング  
Connectez-le à votre appareil | Connettilo con il tuo dispositivo  
Emparejar con tu dispositivo | 和你的设备配对

▶ 2

**If no device is connected for 10 minutes, SoundSync will automatically turn off.**

Der SoundSync wird sich automatisch abschalten, wenn kein Gerät für 10min verbunden wurde.

10分間どの機器とも接続がされなかった場合、SoundSyncの電源は自動的にオフになります。

Si aucun appareil n'est connecté pendant 10 minutes, le récepteur SoundSync s'éteindra automatiquement.

Se nessun dispositivo sarà connesso per 10 minuti, SoundSync si spegnerà automaticamente.

Si no se conecta ningún dispositivo luego de 10 minutos, SoundSync se apagará automáticamente.

如果10分钟内没有设备接入, SoundSync将会自动关闭。

▶ 3

### Controls

Steuerung | 操作方法 | Commandes | Comandi  
Controles | 操作方法

#### Play / Pause

Play / Pause | 再生 / 一時停止 | Lecture / Pause  
Play / Pausa | Reproducir / Pausa | 播放/暂停

#### Answer / end call

Anruf annehmen / beenden | 電話に出る / 終了  
Décrocher / Raccrocher | Rispondi / chiudi la chiamata  
Responder / terminar llamada | 接听 / 挂断

#### Hold

Gedrückt halten  
長押し  
Maintenez appuyé  
Tieni premuto  
Mantener presionado  
按住

#### Wake up Siri / other voice control software

Siri / andere Sprachkontrolle aktivieren  
Siriや音声認識ソフトの起動  
Activer Siri / autres commandes vocales  
Attiva Siri / altri controlli vocali  
Activar Siri / otros mandos de voz  
打开Siri或其他声控软件

▶ 4

### Skip forward

Nächster Titel | 次の曲 | Saut Avant  
Branco successivo | Próxima pista | 下一曲

### Skip back

Vorheriger Titel | 前の曲 | Saut Arrière  
Branco precedente | Pista anterior | 上一曲

### Re-enter pairing mode

Erneut in den Pairing Modus eintreten  
ペアリングを再実施  
Entrer à nouveau en mode jumelage  
Entra di nuovo in modalità ricerca  
Volver a modo emparejamiento  
重新进入配对模式

### Hold simultaneously

Gleichzeitig gedrückt halten | 同時押し  
Appuyez simultanément  
Tenere premuto contemporaneamente  
Presionar al mismo tiempo | 同时按住

▶ 5

### LED Indicator Guide

LED-Indikator Erklärung | LED表示の説明  
Guide de l'indicateur LED | Guida segnali dell'indicatore LED  
Guía de Indicador LED | LED指示灯说明


#### Steady blue

Durchgehend blau | 青の点灯  
Voyant bleu fixe | Blu fisso  
Azul fijo | 蓝色LED常亮

### Powered on / Connected to a device

Eingeschaltet / Mit Gerät verbunden  
電源オン / 機器と接続  
Allumé / Connecté à un appareil  
Acceso / Connesso ad un dispositivo  
Encendido / Conectado a un dispositivo  
开机 / 设备配对成功

▶ 6



**ANKER™**  
POWER YOUR MOBILE LIFE

### Rapidly flashing blue

Schnell blau blinkend | 青の早い点滅  
Voyant bleu clignotant rapidement  
Blu lampeggiante (rapido)  
Azul intermitente rápido | 蓝色LED快速闪烁

### Pairing mode

Pairing Modus | ペアリングモード  
Mode jumelage | Modalità sincronizzazione  
Modo emparejamiento | 配对模式

### Flashing blue

Blau blinkend | 青の点滅  
Voyant bleu clignotant | Blu lampeggiante  
Azul intermitente | 蓝色LED闪烁

### Incoming call

Eingehender Anruf | 着信 | Appel entrant  
Chiamata in arrivo | Llamada entrante | 来电

▶ 7

**Having connection problems? Remove SoundSync from your device's Bluetooth history, ensure it is less than 3 feet away then try pairing again.**

Bitte löschen Sie bei Verbindungsproblemen SoundSync aus den Pairinginträgen auf Ihrem Gerät. Stellen Sie sicher, dass es weniger als 90 cm von Ihrem Gerät entfernt ist und wiederholen Sie den Pairingvorgang.

ペアリングが出来ない場合、ペアリングの履歴を一度削除し、お使いの機器とSoundSyncの距離が90cm以内であることを確認した上で、再度ペアリングを行ってください。

Problemi di connessione? Rimuovi SoundSync dalla cronologia bluetooth del dispositivo. Assicurati che esso sia a meno di un metro di distanza dal dispositivo e riprova.

▶ 8

¿Problemas de conexión? Elimina tu SoundSync del registro de conexión Bluetooth de tu dispositivo, acerca el dispositivo a menos de 90 cm y empareja de nuevo.

连接不上?删除SoundSync的配对记录,确保蓝牙接收器和设备距离不超过1米再尝试配对。

### Specifications

Spezifikationen | 製品の仕様 | Spécifications | Specifiche  
Especificaciones | 产品参数

Input	5 V / 0.3 A
Range	10 m / 33 ft
Weight	26 g / 0.9 oz
Size	45 × 45 × 10 mm 1.8 × 1.8 × 0.4 in

▶ 9

### Attention

Achtung | 注意 | Attention | Attenzione  
Atención | 注意

**Don't expose to liquids**

Setzen Sie das Gerät keinen Flüssigkeiten aus  
水分に触れないようにして下さい  
Ne pas exposer à des liquides  
Evitare il contatto con liquidi  
Evitar el contacto con líquidos  
请勿接触液体

**Don't disassemble**

Nehmen Sie das Gerät nicht auseinander  
危険ですので分解しないで下さい  
Ne pas désassembler  
Non smontare  
No desarmar  
请勿拆卸

▶ 10

**Avoid dropping**

Lassen Sie das Gerät nicht fallen  
過度な衝撃を与えないで下さい  
Eviter de le faire tomber  
Non farlo cadere  
Evitar caídas  
避免跌落产品

**Avoid extreme temperatures**

Vermeiden Sie extreme Temperaturen  
極端な温度下では使用しないで下さい  
Eviter les températures extrêmes  
Tenere lontano da temperature estreme  
Mantener alejado de temperaturas extremas  
避免在过高或过低温环境使用

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by

▶ 11

the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna, (2) Increase the separation between the equipment and receiver, (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected, (4) Consult the dealer or an experienced radio / TV technician for help.

### RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

▶ 12

### Customer Service

Kundenservice | カスタマーサポート | Service Client  
Servizio ai Clienti | Atención al Cliente | 客服支持

**18-month limited warranty**

18 Monate beschränkte Herstellergarantie  
18ヶ月保証 | Garantie de 18 mois  
Garanzia limitata 18 mesi  
Garantía limitada de 18 meses  
18个月质保期

**Lifetime technical support**


Lebenslanger technischer Support  
テクニカルサポート | Support technique à vie  
Supporto tecnico a vita  
Asistencia técnica de por vida  
终身客服支持

support@anker.com

1-800-988-7973 | Mon-Fri 9:00-5:00 PST (US)  
03-4455-7823 | Mon-Fri 9:00-17:00 (日本)  
069-9579-7960 | Mon-Fri 6:00-11:00 (DE)  
400-0550-036 | Mon-Fri 9:00-17:30 (中国)


▶ 13


For FAQs and more information, please visit:




[anker.com/support](https://anker.com/support)

-----

 @Anker Official  
@Anker Japan  
@Anker Deutschland

 @AnkerOfficial  
@Anker\_JP

 @Anker

▶ 14

尺寸: 52×74mm