### 封底 封面

Enter your Wi-Fi password to "CONTINUE". Tips: Wait until your speaker has been powered-on for 30 seconds before continuing to the next step.

Step 6:

Press and hold the Wi-Fi button to connect the speaker to the Wi-Fi network, click on the "CONTINUE" button when you hear the Prompt

Tips: Prompt Tone goes like - Connecting to your network, this may take 1~3 minutes.

Step 7:

Be patience, we are on the way...

Tips: Make sure your Wi-Fi network in normal operation.

Great, now you could name for your speaker or choose one from the list.

Finish Setup by clicking on the "CONTINUE"

Tips: Feel free to personalize your speaker at your convenience.
Watch four pictures of speaker

-5-

introduction, then sign in your Amazon account, you could ask for more from Alexa with Omars dogo

To commute between the WiFi and Bluetooth connection, simply click the WiFi button (the 5th button on the scheme from page 2);If you wish to connect via Bluetooth, long press the WiFi button located at the bottom of the speaker The LED will flash blue while establishing the connection, and when it's successful, it will constant light blue.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

-6-

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected. Consult the dealer or an experienced radio/TV technician for help.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

# WWW.OMARS.COM



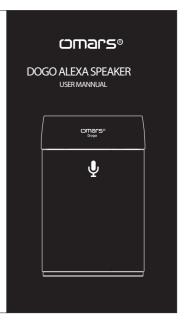

1) Microphone button: Short press the microphone button to switch languages, currently support language is English and German.

- 2 Status indicator
- 3 ALIX 4 Micro-USB

⑤ Power button: Long press the Power button to turn it on/off

- Wi-Fi button: Short press the Wi-Fi button to switch between Wi-Fi Mode and Bluetooth Mode. Blue Signal indicates for Bluetooth Mode, while Green Signal for Wi-Fi Mode. Long press the Wi-Fi button under Wi-Fi Mode to connect the network Round Button: Adjust the volume by rotating
- the round button, clockwise rotating for volume up, the opposite site for volume

OVFRVIEW:

Thank you for purchasing this product! Omars dogo is a smart speaker. Through the application of up-to-date technologies, it creates an experience of brand new music

# IMPORTANT:

Before using this product, please carefully read this manual:

Check the speaker's power. A full charging is recommended before use (Until the charging indicator goes green).

Search for "Omars dogo" on App Store or Google Play from your smartphone, download and install it

The product is equipped with a built-in battery. Do not put it directly into fire, or it may cause explosion or other dangers.

The product may radiate heat due to long-time use or exposure to direct sunlight. This is

Do not use the device under any environment with temperature lower than  $0^{\circ}$ C (32°F) or higher than  $40^{\circ}$ C (104°F).

Do not use the speaker in humid place, for the humidity may damage important parts of the

Do not put the speaker directly into water.

## QUICK START GUIDE:

(1) Power-on/off

Press and hold the Power button for about 3 seconds and release. The speaker will notify you with a sound when it's ready.

If power-on fails, charge the device first and then try again.

Use data cable included in the product pack for charging the device. During charging, the indicator displays in constant red light; when it is fully charged, the indicator will turn green. Important:

During the usage, if the level of the battery drops and needs to be connected to a charger, the red light above the micro-USB plug will start flashing to notify you.

(3). Connecting to the app

Get ready with Omars dogo and your Smart Devices (phone/tablet) in hand.

Download app; Search for "Omars dogo" on App Store or Google Play to download and

Click on the "GET STARTED" button to move on. Tips: Make sure your smart device (phone/tablet) has been connected to a Wi-Fi network before using our app "Omars dogo".

## Sten 3:

Press and hold the power button for 3 seconds until you see the green light begins to flash. Click on the "CONTINUE" button to next step. Tips: Upside down Omars dogo and you'll find the Power button on the bottom

Connect your smart device to 2 4GHz Wi-Fi Click on the "CONTINUE" button to go to next

Tips: Only applicable with 2.4GHz Wi-Fi network.

-1-

-2-

-3-

-4-