

ProLED Select Retrofit Downlight 6" Installation Instructions



IMPORTANT


READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNINGS:

- Risk of electrical shock. Disconnect power at fuse or circuit breaker before installing or servicing.
- To prevent early lamp failure, lamp should only be installed in operating environments ranging between -20°C and $+40^{\circ}\text{C}$ (-4°F and $+104^{\circ}\text{F}$).
- No user serviceable parts inside. To avoid electrical shock do not disassemble product.
- Risk of fire or electric shock, LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.
- Risk of fire or electric shock, Install this kit only in luminaires that have the construction features and min dimensions shown in the Figure 1 and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Installers should not disconnect existing wires from lampholder terminals to make new connections at lampholder terminals, Instead installers should cut existing lampholder leads away from the lampholder and make new electrical connections to lampholder lead wires by employing applicable connectors.
- This retrofit kit is accepted as a component of a luminaire where the suitability of the combination shall be determined by authorities having jurisdiction.
- This device is not intended for use with emergency exits.
- This retrofit kits suitable for wet locations luminaires specified as below: Type Non IC; Type IC; Covered ceiling; Uncovered ceiling.

MIN.LUMINAIRE DIMENSION

Fig: 1

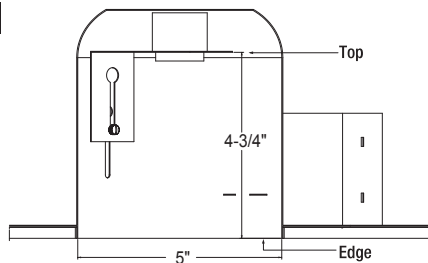


ProLED Select Retrofit Downlight 6" Installation Instructions



INSTALLATION INSTRUCTIONS


1. Make sure the power is turned off at the source to the recessed housing(s) that you are installing the fixture(s) in. Remove existing trim and CFL, or Incandescent bulbs.
2. Unscrew the screws on socket bracket, push bracket upward to the top location. (Fig. 2)

Fig: 2

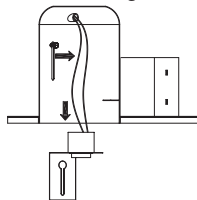


3. Remove existing socket mounting plate from the recessed housing and then remove lamp socket from the plate. (Fig. 3)

Fig: 3

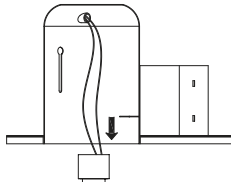


4. Screw the E26 adapter into the socket inside the housing. (Fig. 4)

Fig: 4

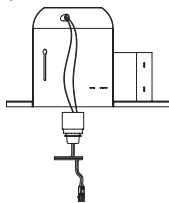


5. Select desired CCT level using switch on driver box. (Fig. 5)

Fig: 5

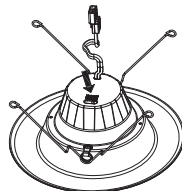

6. Plug E26 base cable connection into the recessed housing. (Fig. 6)


Fig: 6

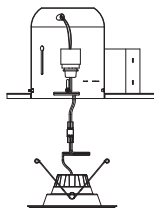

INSTALLATION INSTRUCTIONS (cont'd)


7. Squeeze torsion springs as shown and install into the metal brackets inside the recessed housing. For proper installation, the torsion springs should be seated within the brackets and on both sides of the housing. (Fig. 7)

Fig: 7

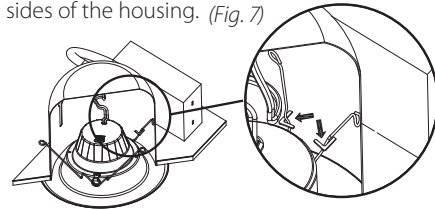


8. Carefully place wires into fixture and push the LED trim into the housing until flush with ceiling. (Fig. 8)

Fig: 8

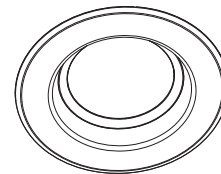


DIMENSIONAL DRAWINGS

87987 RDL6-10.5-CS-ST
87988 RDL6-14-CS-ST

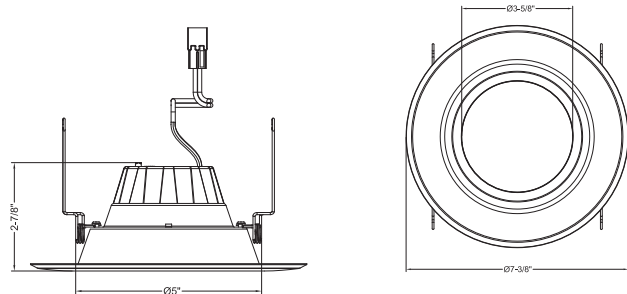

87984 RDL6-10.5-CS-BT
87985 RDL6-14-CS-BT

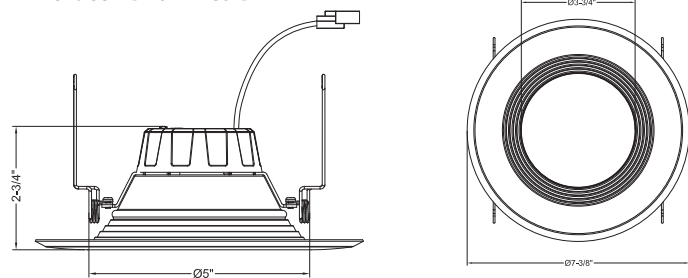

Important:

This product is warranted for 5 years from the date of purchase, based on 10 hours of use per day. If this product does not perform to the specifications supplied on this package, send an email or write to the address below for product return and replacement. This replacement is the sole remedy available. Liability for incidental or consequential damage is expressly excluded. Visit www.halcolighting.com for full warranty details and compatibility information.

Warranty Information:

This product is warranted for 5 years from the date of purchase, based on 10 hours of use per day. If this product does not perform to the specifications supplied on this package, send an email or write to the address below for product return and replacement. This replacement is the sole remedy available. Liability for incidental or consequential damage is expressly excluded. Visit www.halcolighting.com for full warranty details and compatibility information.