



# Hi-Capacity<sup>TM</sup> 75-Watt Universal Laptop Adapters

**Manufacturer/Model Compatibility Guide**

## Choosing and connecting adapter tips:

1. Locate the specified tip from the tip bundle provided. Each tip is clearly numbered (*Fig. 1*).
2. Connect the selected tip to the end of the output cable, making sure that the pins on the tip are aligned with the holes in the cable (*Fig. 2*). The ridge on the inside of the tip should align with the groove in the output cable connector. Also make sure that the tip is pushed all the way into the cable's connector.
3. Plug the power tip into your notebook computer.
4. Connect the adapter's input cord to the AC or DC power outlet. (*Note: Depending on your adapter model, DC connectivity may not be available.*)

*Fig. 1:*



*Fig. 2:*



**CAUTION:** The use of an incorrect tip may damage your laptop. Do not use this product if you cannot locate your laptop model in the Tip Compatibility Guide included with this adapter. If you still have questions, contact our toll-free help line for assistance at (800) 437-7777. This power adapter is not compatible with Mac computers.

**IMPORTANT:** If the adapter's LED does not turn on, or if it blinks, discontinue use and contact our toll free Customer Support line at (800) 437-7777.

## TO DETERMINE THE CORRECT CONNECTOR TIP TO USE FOR YOUR LAPTOP:

1. Find the brand of laptop in the alphabetized list. Larger manufacturer model families are listed in a separate column for easier location.
2. Find the model name and/or number of your laptop in the manufacturer section. Be sure to check all tip listings for an exact match for your laptop's model.
3. Match the connector tip number you find in the column next to your model number with the number molded into the connector tip.
4. If your model number is not listed please contact customer service at (800) 437-7777 for additional assistance in locating the correct tip for your laptop.

## MANUFACTURER INDEX

Acer .....	1
Acer Aspire.....	1
Acer Travelmate.....	1
Asus.....	2
Averatec .....	2
Compaq .....	2
Compaq Presario .....	3
Dell .....	3
E-Machines.....	3
Fujitsu .....	3
Gateway .....	4
Hewlett Packard .....	4
HP Pavilion .....	4
HP/ Compaq .....	5
HP/ Compaq Business Notebook .....	5
Lenovo/IBM .....	5
Lenovo/IBM Thinkpad .....	5
Panasonic.....	5
Sony VAIO .....	6
Toshiba .....	7
Toshiba Satellite.....	7
Toshiba Tecra.....	7

# ACER

Tip	Model Name / Number
9	<ul style="list-style-type: none"> <li>• <b>Extensa 515</b></li> </ul>
32	<ul style="list-style-type: none"> <li>• <b>EX5620-6830</b></li> <li>• <b>Extensa:</b> 4220, 5230, 5600 series</li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>Extensa:</b> 300 series, 900 series, ESS3-391T</li> </ul>
<b>ACER ASPIRE</b>	
Tip	Model Name / Number
5	<ul style="list-style-type: none"> <li>• <b>3000 series</b></li> <li>• <b>5002</b>, 5002WLMi, 5003, 5050, 5050-3785, 5050-5278, 5672</li> </ul>
32	<ul style="list-style-type: none"> <li>• <b>1200</b>, 1300</li> <li>• <b>2000</b>, 2010, 2012WLCi, 2012WLMi, 2020</li> <li>• <b>5315</b>, 5335, 5510, 5516, 5517, 5742</li> <li>• <b>7104</b></li> <li>• <b>9500 series</b></li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>1300</b></li> </ul>
<b>ACER TRAVELMATE</b>	
Tip	Model Name / Number
9	<ul style="list-style-type: none"> <li>• <b>512DX</b>, 512T</li> </ul>
32	<ul style="list-style-type: none"> <li>• <b>210 series</b>, 220 series, 230, 240 series, 260 series, 270 series, 280</li> <li>• <b>300 series</b></li> <li>• <b>500</b>, 506, 506DX, 520 series, 530</li> <li>• <b>600 series</b></li> <li>• <b>730 series</b>, 740</li> <li>• <b>1362LCi</b>, 1362WLMi, 1363WLCi</li> <li>• <b>2423</b>, 2424</li> <li>• <b>3000LMi</b>, 3400LMi</li> <li>• <b>4000 series</b></li> <li>• <b>5630</b>, 5670</li> <li>• <b>6592-8204</b></li> <li>• <b>9411AWSMi</b></li> <li>• <b>8000 series</b></li> <li>• <b>9411AWSMi</b></li> <li>• <b>a550</b>, a551</li> <li>• <b>Alpha 550</b>, Alpha 551</li> <li>• <b>C100 series</b></li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>240 series</b>, 250 series</li> </ul>

## ASUS

Tip	Model Name / Number
5	<ul style="list-style-type: none"> <li>• <b>A3 series</b>, A3000 series</li> <li>• <b>F7000</b></li> <li>• <b>Grandio F7400</b></li> <li>• <b>K40IJ</b></li> <li>• <b>L5 series</b>, L5000 series, L7000 series, L8400C-800C, L8400C-800D, L8400K</li> <li>• <b>Z83V</b>, Z91 series, Z9100 series</li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>A9 series</b></li> <li>• <b>A3000N</b></li> <li>• <b>F3Q</b>, F50GX, F50S, F50SV, F83T</li> <li>• <b>G60</b>, G60JX</li> <li>• <b>K40C</b>, K40IN, K40IP, K42F, K50I, K60i, K60IJ, K70, K70IJ, K72F</li> <li>• <b>M51A</b></li> <li>• <b>N10E</b>, N10J, N10JB, N10JH, N61, N80Vc, N80Vn</li> <li>• <b>P30A</b></li> <li>• <b>R1E</b></li> <li>• <b>U50</b>, UL30, UL30A-X5, UL50, UL80, UL80VT-A1, UX50, UX50V</li> <li>• <b>X83Vb</b>, X83VB-X2, X83Vm</li> </ul>

## AVERATEC

Tip	Model Name / Number
41	<ul style="list-style-type: none"> <li>• <b>1000 series</b></li> <li>• <b>2260</b></li> <li>• <b>3150HW</b>, 3260 series, 3270 series, 3280 series, 3700 series, 3715EDI, 3800 series</li> <li>• <b>4100 series</b>, 4200 series</li> <li>• <b>5110 series</b></li> <li>• <b>6100A series</b>, 6200 series</li> <li>• <b>AV1020-ED1</b>, AV1050-EB1, AV3100 series, AV3200 series, AV3300 series, AV3500T60, AV4155-EH1, AV5500, AV6110, AV6200H60, AV6210X60, AV6235, AV6240</li> <li>• <b>C3500</b></li> <li>• <b>SL3150HD-01</b></li> </ul>

## COMPAQ

Tip	Model Name / Number
5/28	<ul style="list-style-type: none"> <li>• <b>Mini 311c-1000 series</b></li> </ul>

## COMPAQ PRESARIO

Tip	Model Name / Number
5/28	<ul style="list-style-type: none"> <li>• <b>2200 series</b>, 2800 series</li> <li>• <b>A900 series</b></li> <li>• <b>B1800 series</b>, B2800 series</li> <li>• <b>C300 series</b>, C500 series, C700 series</li> <li>• <b>F500 series</b>, F700 series</li> <li>• <b>M2000 series</b></li> <li>• <b>V2000 series</b>, V3000 series, V3500 series, V4000 series, V5000 series, V6000 series, V6500 series</li> <li>• <b>X1000 series</b></li> </ul>
32	<ul style="list-style-type: none"> <li>• <b>300 series</b></li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>700 series</b>, 800 series</li> <li>• <b>12XL series</b>, 14XL series, 17XL series, 18XL series</li> <li>• <b>800XL</b></li> <li>• <b>1200XL series</b>, 1800XL series</li> <li>• <b>1000 series</b>, 1200 series, 1400 series, 1600 series, 1700 series, 1800 series, 2700 series</li> </ul>

## DELL

Tip	Model Name / Number
3	<ul style="list-style-type: none"> <li>• <b>Latitude:</b> LX450, XP, XP 450C, 475C, XP 475D, XP 4100, XP 4100C, XP 4100CX, XP 4100T</li> </ul>
9	<ul style="list-style-type: none"> <li>• <b>Adamo:</b> XPS Adamo 13</li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>Inspiron:</b> 1000, 1200, 1300, 2200, 3000, 3200, 3500 series, 3500 D233XT, 3500 D300GT, 7000 series</li> <li>• <b>B120</b>, B130</li> <li>• <b>Latitude:</b> 110L, 120L</li> </ul>

## E-MACHINES

Tip	Model Name / Number
32	<ul style="list-style-type: none"> <li>• <b>D525</b>, D620, D725, E620, E627</li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>eSlate:</b> 400K, 450K</li> <li>• <b>M5405</b>, M622-UK8X</li> </ul>

## FUJITSU

Tip	Model Name / Number
8	<ul style="list-style-type: none"> <li>• <b>LifeBook:</b> 270DX, 280DX, 3700X, 400, 420D, 435DX</li> <li>• <b>500 series</b></li> <li>• <b>600 series</b></li> <li>• <b>735DX</b>, 755TX, 765DX, 765TX, 770TX, 780TX, 790TX</li> <li>• <b>B2000 series</b>, C25, C1010, C2010, C300 series, C4023, C4100 series, C4235, C5110, C5130, C6135, C6140, C6170, C6177, C6310, C6320, C6325, C6525, C6535, C6545, C6547, C6556, C6557, C6577, C6581, C7651, E series, i4000 series, P10000 series, P2000 series, S2000, S4510, S4542, S5582, S6000 series, U810</li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>LifeBook:</b> A series, C1010, C6175, C6185, C6597</li> </ul>

## GATEWAY

Tip	Model Name / Number
32	<ul style="list-style-type: none"> <li>• <b>MD7334U</b></li> <li>• <b>MS2273</b></li> <li>• <b>NV53A</b>, NV53A52U</li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>3018GZ</b>, 3040GZ, 3500 series, 3610GZ</li> <li>• <b>4000 series</b>, 4500 series</li> <li>• <b>6000 series</b>, 6500 series, 6834MX</li> <li>• <b>7110GX</b>, 7415GX</li> <li>• <b>8510GH</b>, 8510GZ</li> <li>• <b>C120X</b>, CX200 series, CX2600 series, CX2700 series</li> <li>• <b>E-100M</b>, E-155C, E-155C G, E-265M, E-265M G, E-475M, E-475M G, E525-2200</li> <li>• <b>ID49C</b>, ID49C07U</li> <li>• <b>M210</b>, M-24, M-73, M-78, M250 series, M280, M300 series, M460B, M460QS, M-1400 series, M-150 series, M-1600 series, M-2000, M-2400 series, M-2600 series, M-6000 series, M-7000 series, ML3109, ML3706, ML6000 series, MP8708, MP8709, MS2273, MS2285, MT3000 series, MT6000 series, MX1000 series, MX3000 series, MX6000 series, MX7337, MX7337h, MX7520h, MX8000 series</li> <li>• <b>NV7316U</b>, NV78, NV7802U, NX100X, NX200 series, NX500 series, NX800 series</li> <li>• <b>P-170 series</b>, P6825</li> <li>• <b>S-7000 series</b></li> <li>• <b>Solo</b>: 1100, 1150, 1200, 1400, 1450</li> <li>• <b>T-140X</b>, T-1600 series, T-6000 series</li> <li>• <b>W322 series</b>, W340UI, W350A, W350i, W6501, W650i</li> </ul>

## HEWLETT PACKARD

Tip	Model Name / Number
5/28	<ul style="list-style-type: none"> <li>• <b>Mini 311-1000 series</b></li> <li>• <b>TouchSmart TX2-1025DX</b></li> </ul>
<b>HP PAVILION</b>	
Tip	Model Name / Number
5/28	<ul style="list-style-type: none"> <li>• <b>DM1-1000 series</b>, DM3-1035DX, DM3-1039WM, DM3-1130US, DM3-1140US</li> <li>• <b>DV1000 series</b>, DV2000 series, DV2-1000 series, DV2200 series, DV2300 series, DV2415, DV2550SE, DV2600 series, DV2700 series, DV2800 series, DV2900 series, DV4000 series, DV5000 series, DV6000 series, DV6100 series, DV6200 series, DV6300 series, DV6400 series, DV6600 series, DV6700 series, DV6800 series, DV6900 series, DV6T, DV8000 series, DV9700 series, DV9800 series, DV9900 series</li> <li>• <b>tx1000 series</b>, tx1100 series, tx1200 series, tx1300 series, tx1400 series, tx2000 series, TX2-1025DX</li> <li>• <b>ZE2000 series</b>, ZE4900 series, ZT3000 series, ZT4000 series</li> </ul>
41	<ul style="list-style-type: none"> <li>• <b>N3000 series</b>, N3400 series, N5100 series, N5200 series, N5300 series, N5400 series, N5500 series, N6000 series</li> <li>• <b>XF series</b>, XH series, XZ series</li> <li>• <b>ZE4210</b>, ZE4240, ZT1000 series, ZT1200 series</li> </ul>

## HP/COMPAQ

Tip	Model Name / Number
5/28	<ul style="list-style-type: none"> <li>• <b>Special Edition L2000 series</b></li> <li>• <b>Tablet PC:</b> TC1000, TC1100, TC4200</li> </ul>

## HP/COMPAQ BUSINESS NOTEBOOK

Tip	Model Name / Number
5/28	<ul style="list-style-type: none"> <li>• <b>NC4000 series</b>, NC6000 series, NC8000 series</li> <li>• <b>NW8000</b></li> <li>• <b>NX4800 series</b>, NX5000, NX6000 series, NX7000 series, NX8200, NX8220, NX9020, NX9030, NX9040</li> </ul>

## LENOVO/IBM

Tip	Model Name / Number
49	<ul style="list-style-type: none"> <li>• <b>PS/Note 425</b></li> </ul>

## LENOVO/IBM THINKPAD

Tip	Model Name / Number
9	<ul style="list-style-type: none"> <li>• <b>240 series</b>, 360 series, 380 series, 390, 390E, 390X, 500 series, 600, 700 series</li> <li>• <b>A20 series</b>, A30 series</li> <li>• <b>E530</b></li> <li>• <b>i 1200 series</b>, i 1300 series, i 1400, i 1500, i 1700, i 1720, i 1721</li> <li>• <b>R30</b>, R31, R32, R40 series, R50 series</li> <li>• <b>S</b></li> <li>• <b>T20 series</b>, T30 series, T40 series, T51</li> <li>• <b>X20 series</b>, X30 series, X40</li> </ul>
49	<ul style="list-style-type: none"> <li>• <b>350</b>, 350C</li> </ul>

## PANASONIC

Tip	Model Name / Number
3	<ul style="list-style-type: none"> <li>• <b>ToughBook:</b> 21, V21, V21P</li> </ul>
8	<ul style="list-style-type: none"> <li>• <b>ToughBook:</b> 01, 07, 17, 25, 27, 28, 34, 35, 37, 41, 45, 47, 48, 50, 61, 62, 71, 72, 170, 270, 370, 380, M31, M34, MDWD, S51, V25, V41</li> </ul>
9	<ul style="list-style-type: none"> <li>• <b>ToughBook:</b> 18, 19, 21, 51, 73, H1, P1, R5, T2, T5, W2, W4, W5, W5LWSQZBM-EC, Y2, Y4, Y5, Y5LWVQZBM-EC</li> </ul>



## SONY VAIO

Tip	Model Name / Number
3	<ul style="list-style-type: none"> <li>• <b>All-in-One FX Series</b></li> <li>• <b>PCG-700 series</b></li> <li>• <b>PCG-800 series</b></li> <li>• <b>PCG-900 series</b></li> <li>• <b>PCG-F series</b>, PCG-FR series, PCG-FX series, PCG-FXA series</li> <li>• <b>PCG-R505 series</b></li> <li>• <b>PCG-XG series</b></li> <li>• <b>PCG-Z505 series</b></li> <li>• <b>VGN-TZ series</b></li> <li>• <b>VGN-Z70B</b>, VGN-Z90 series, VGN-Z500 series, VGN-Z880G/B</li> <li>• <b>VPC-CW series</b>, VPC-EB23FM/BI, VPC-F series, VPC-S series</li> </ul>
8	<ul style="list-style-type: none"> <li>• <b>C1 PictureBook</b></li> <li>• <b>PCG-505 series</b></li> <li>• <b>PCG-C1 series</b></li> <li>• <b>PCG-GR series</b></li> <li>• <b>PCG-SR series</b>, PCG-SRX series</li> <li>• <b>PCG-TR series</b></li> <li>• <b>PCG-U1</b></li> <li>• <b>PCG-V505 series</b></li> <li>• <b>PCG-Z1 series</b></li> <li>• <b>VGN-B90 series</b>, VGN-B100 series</li> <li>• <b>VGN-G1</b>, VGN-G11VN/TC, VGN-G11XN/B</li> <li>• <b>VGN-S series</b></li> <li>• <b>VGN-T series</b>, VGN-TX series</li> <li>• <b>VGN-U series</b></li> <li>• <b>VGN-X505/ZP</b></li> <li>• <b>VGN-Z1XMP</b></li> </ul>

# TOSHIBA

Tip	Model Name / Number
41	<ul style="list-style-type: none"> <li>• <b>Portege:</b> R700 series</li> </ul>
49	<ul style="list-style-type: none"> <li>• <b>Portege:</b> 300 series, 600 series, 2000, 3500, 3505, 7000 series, A600 series, M300, R100, R400 series, R500 series, R600, T3400 series</li> <li>• <b>Small Business 3500</b></li> <li>• <b>T4500</b>, T4500C, T4600, T4600C, T6000</li> </ul>

## TOSHIBA SATELLITE

Tip	Model Name / Number
41	<ul style="list-style-type: none"> <li>• <b>1000 series</b>, 1200 series, 1600 series, 1700 series, 3000 series</li> <li>• <b>A80</b>, A80-S178TD, A85 series, A100 series, A105 series, A110-S1111</li> <li>• <b>C655D-S5043</b>, C655-S5049, C655-S5132</li> <li>• <b>E200</b>, E205</li> <li>• <b>L10</b>, L15-S104, L15-S1041, L20, L20-S310TD, L25 series, L35 series, L45 series</li> <li>• <b>M105 series</b>, M115 series, M30X series, M35X series, M40-S312TD, M45-S165, M45-S169, M45-S1691, M55-S1001, M55-S139, M55-S1391, M60 series, M65 series, T135D-S1324, T135-S1307, T135-S1309, T235D-S1360, T235D-S1360RD, U300 series</li> <li>• <b>Pro:</b> P300</li> </ul>
49	<ul style="list-style-type: none"> <li>• <b>200 series</b>, 300 series, 1410 series, 1500 series, 1800 series, 1805 series, 2000 series, 2500 series, 2600 series, 2700 series, 2800 series, 2900 series, 4000 series, 5000 series, T1800, T1850, T1850C, T2100CDX</li> <li>• <b>Pro:</b> 400 series, 4000 series, 6000 series, S500 series</li> </ul>

## TOSHIBA TECRA

Tip	Model Name / Number
41	<ul style="list-style-type: none"> <li>• <b>L2-S011</b></li> <li>• <b>M8-8011X</b>, M8-S8011, M8-ST3093, M8-ST3094</li> </ul>
49	<ul style="list-style-type: none"> <li>• <b>520CDT</b>, 530CDT, 550CDT, 700 series, 8000 series</li> <li>• <b>A10</b>, A11 series, A3X</li> <li>• <b>M11 series</b></li> <li>• <b>S11 series</b></li> </ul>



© 2011 Hi-Capacity. All rights reserved.

All logos and trademarks are used for identification purposes only and may be trademarks or registered trademarks of their respective holders.

I-5100MT  
20110407