


USE AND CARE GUIDE

PAR TWIN HEAD FLOOD LIGHT

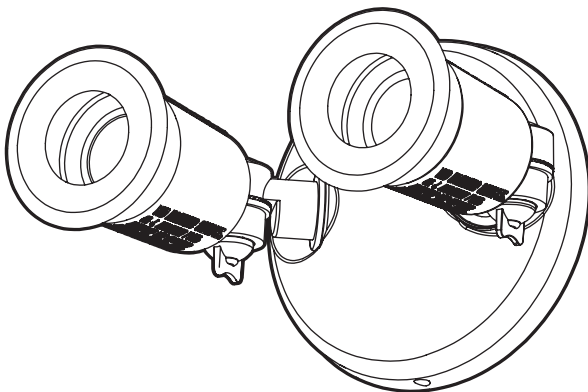

Questions, problems, missing parts? Before returning to the store,
call Commercial Electric Customer Service
9 a.m. - 5 p.m., EST, Monday - Friday

1-844-548-3776

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Commercial Electric through the purchase of this PAR38 flood light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Commercial Electric!

Table of Contents

Safety Information	2
Warranty.....	2
Pre-Installation.....	3
Preparing for Installation	5

Installation.....	5
Operation.....	9
Care and Cleaning	10
Troubleshooting	10

Safety Information

IMPORTANT

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

PRECAUTIONS

- Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- This light fixture requires a 120-Volt AC power source.
- Some codes require installation by a qualified electrician.
- This light fixture must be properly grounded.
- Make sure connections are secure using wire nuts, crimp-on lugs or other UL approved connecting devices.
- This light fixture should be installed outdoors to a wall or eave.
- This product may contain chemicals known to be hazardous. Thoroughly wash hands after installing, handling, cleaning or otherwise touching the product.



WARNING: Risk of fire. Keep the light fixture at least 3 in. (76 mm) from combustible materials.



CAUTION: Burn hazard. Allow the light fixture to cool before touching.

NOTICE: Do not connect this fixture to a dimmer switch.

NOTICE: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authorization to operate this equipment.



IMPORTANT: This equipment has been tested and found to comply with Part 18 of the FCC rules. This product may cause interference to radio equipment and should not be installed near maritime safety equipment operating between 0.45-30 MHz. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING: Before installation or servicing, turn the power OFF at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is OFF at the light fixture.

Warranty

This is a limited warranty offered by the manufacturer for a period of three years from the date of purchase to its customers. The manufacturer warrants to customers that the products will be free from defects in material and workmanship. The obligation of the manufacturer under this warranty is limited to the provision of replacement of products and is extended to the original purchaser of the product on presenting valid purchase receipt or other proof of date of original purchase acceptable to the manufacturer. The receipt is required for rendering the warranty performance. Any warranty claims without original proof of purchase would not be accepted.

It should be noted that the warranty does not apply to the manufacturer products that have been altered or repaired by unauthorized personnel, have been subjected to neglect, abuse, misuse or accident or damages caused during shipping. Any other products not manufactured by the manufacturer which have been supplied, installed and/or used in conjunction with the manufacturer products are not covered under this warranty. Any damages caused by replacements bulbs or corrosion or discoloration of brass components are also not covered by this warranty.

Warranty (continued)

LIMITATION OF LIABILITY

In no event shall the manufacturer be liable for indirect, consequential, incidental or special damages, or lost profits. The manufacturer is not liable for any claims or damage arising out of or connected with the manufacture, sale, delivery, use, maintenance and repair or modification of the manufacturer products, or supply of any replacement parts that exceed the purchase price of the manufacturer products giving rise to a claim. Labor charges to remove or install the fixtures will not be accepted.

TO CLAIM

Please contact The Home Depot customer service at 1-844-548-3776 or email support@homedepot.com and include your name, address and contact number, along with a copy of the purchase receipt and a brief description of the problem.

Pre-Installation

PLANNING INSTALLATION



Before installing the light fixture, ensure that all parts are present. Compare parts with the Hardware Included and Package Contents sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this light fixture.

Estimated installation time: 15 minutes


SPECIFICATIONS

Power Requirements (Input Voltage)	120V
Dimmable	Non-Dimming (Do not wire to dimming switch)
Operating Modes	Switch-Controlled: Flip switch to turn light fixture ON and OFF.


TOOLS REQUIRED




Phillips
screwdriver




Wire
strippers/
cutters




Circuit tester




Silicone
sealant



Work gloves



Ladder



Safety
goggles

Pre-Installation (continued)

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



AA




BB



CC

Part	Description	Quantity
AA	#8-32x3/4 in. Phillips mounting bracket screw	4
BB	Wire nut	2
CC	Allen key	1

PACKAGE CONTENTS

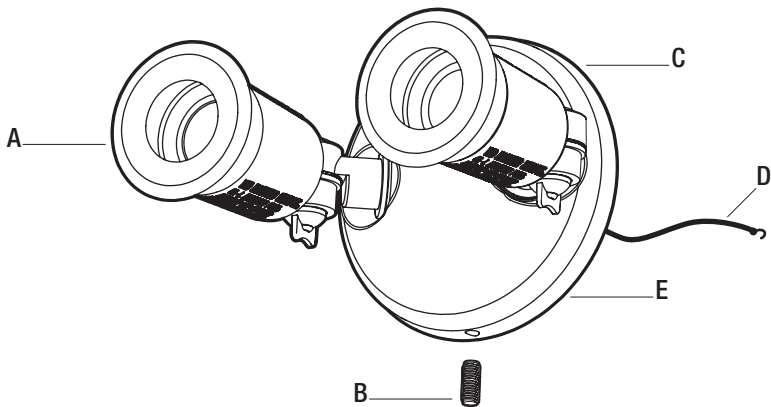



Part	Description	Quantity
A	Light fixture	1
B	Mounting plate bolt (pre-installed)	1
C	Mounting plate with gasket (pre-installed)	1
D	Hanger wire for hands-free installation (pre-installed)	1
E	Leveling bubble	1

Preparing for Installation

- Install the light 8–15 ft. above the ground.
- When installing two fixtures on one switch, make sure the switch is rated for at least a 1A inductive load.
- When mounting to a wall, make sure the fixture is 7 in. on center away from eave and 13 in. on center away from the inside corner of the exterior wall.



  
NOTE: The mounting plate (C) mounts to recessed mounted standard junction boxes. Junction box must be at least 1-1/2 in. in depth for proper installation for a recessed mount application.




Wall Mount



 
Eave Mount



13 in. 7 in. 13 in.

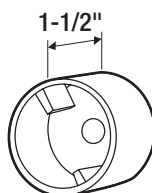

Round

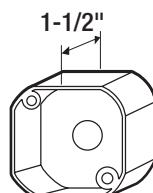


Octagonal/Square

Installation

1 Turning off the electricity

- Verify the wall switch is in the OFF position.
- Turn off power at the circuit breaker that supplies power to the outlet box you are working on.
- For screw-in type fuses unscrew the fuse that supplies power to the outlet box you are working on.

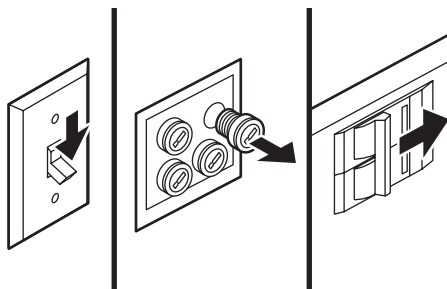

Installation (continued)

2 Removing the mounting plate




NOTE: The mounting plate (C) and mounting plate bolt (B) come pre-assembled on the light fixture (A) for shipping.

- Remove the mounting plate (C) from the back of the fixture by loosening the mounting plate bolt (B) using the allen key (CC).




NOTE: Only unscrew the bolt (B) far enough to remove the mounting plate (C). Do not fully remove the bolt (B).

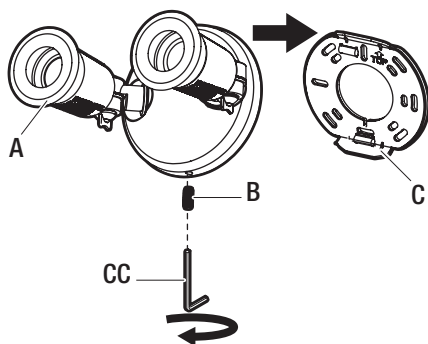

3 Installing the mounting plate

- Route the junction box wires through the large center hole in the mounting plate (C).
- Align the holes on the mounting plate (C) with the holes on your junction box. Use two (2) or four (4) screws (AA) depending on the number of screw holes available on the junction box to attach mounting bracket.
- For wall mount, the "TOP" must point upward.
- For eave mount, the "TOP" must point toward the building.
- Use the leveling bubble (E) on the mounting plate (C) to ensure a level install.


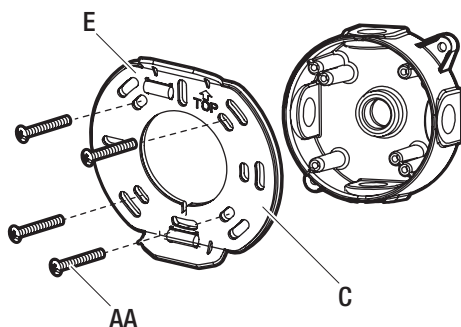


4 Hanging the fixture to the mounting plate

- For hands free mounting, place the hanger wire (D) into the slot of the junction box plate (C) to support the fixture while connecting the wires.



NOTE: Ensure the light fixture (A) can safely hang onto the mounting plate (C) to allow for use of two hands to make the wiring connections.

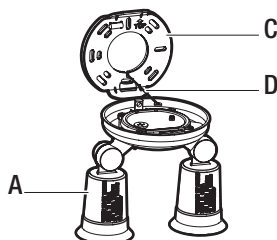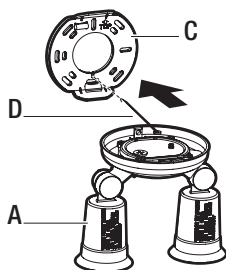



Installation (continued)

5 Making the electrical connections

- If necessary, strip 3/8 in. of insulation from the junction box or fixture (A) wires.
- Connect the fixture black wire to the supply black wire ((+) line), and fixture white wire to the supply white wire (-) common) by twisting the exposed wires together and using the wire nuts (BB). Ensure there are no loose wires.


NOTE: Hold stripped ends near each other and align any frayed strands (do not twist wires).

Push the wires into the wire nuts (BB) and use your fingers to twist the wire nut clockwise until tight. Check for tightness by pulling wires.

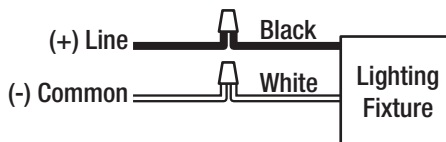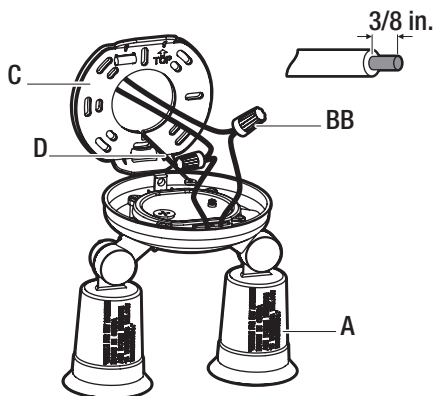

6 Mounting the light fixture

- Place the light fixture (A) onto the mounting plate (C) so the top-sloped groove on the plate rests on the top-sloped groove on the back of the fixture.
- Verify the fixture is flush with the wall.
- Tighten the mounting plate bolt (B) on the bottom of the fixture (A) until the bolt firmly pushes against the mounting plate (C).

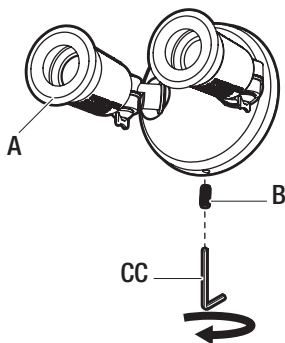


7 Caulking around the light fixture

- Caulk around the mounting plate (C) and surface with silicone sealant (not included).

NOTICE: Failure to properly caulk around the surface and mounting plate (C) could lead to water damage and is not covered under warranty.

NOTE: When attaching this fixture (A) to an external, surface mount junction box, caulk the inside of the light fixture before attaching to the mounting plate (C).

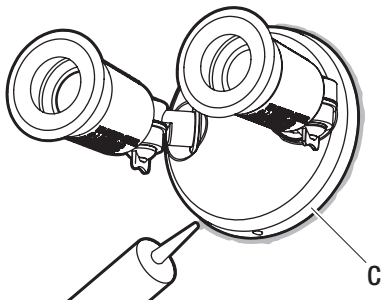

Installation (continued)

8 Installing bulbs and adjusting the light heads

- After the fixture is securely mounted, install two PAR38 bulbs (sold separately) into the lamp heads.
- Loosen the thumb screw (1), then use your hand to pan and tilt each individual light head on the fixture (A) to point towards the direction desired. Tighten the screws under each lamp head to fix the desired angle.
- From the breaker and switch, turn power back ON to the light fixture to check if the lights work.



IMPORTANT: PAR38 bulbs are sold separately. If you need to purchase please contact your retail store.




WARNING: Do not use higher wattage than 150W halogen bulbs (or comparable lumen output LED bulbs) per head.



WARNING: Risk of fire. Keep the lamp heads at least 12 in. from combustible materials.




CAUTION: Keep lamp heads 15° below horizontal to prevent water damage and electrical shock.

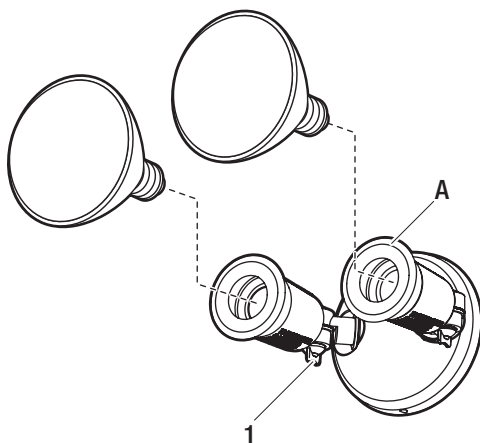

Operation

SWITCH CONTROLLED

This light fixture is controlled manually by the ON/OFF switch.

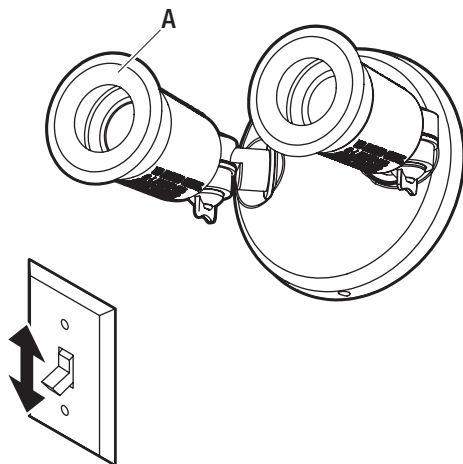

Care and Cleaning

- ❑ Shut off the main power supply before cleaning the product. To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
- ❑ Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty.
- ❑ Do not spray the light fixture with a hose or power washer.

Troubleshooting

If the light does not come on:

- ❑ Verify that the power is turned ON from the circuit breaker and wall switch.
- ❑ Verify the wiring for the fixture is done properly.
- ❑ Verify the line voltage is correct.



Questions, problems, missing parts? Before returning to the store,
call Commercial Electric Customer Service
9 a.m. - 5 p.m., EST, Monday-Friday

1-844-548-3776

HOMEDEPOT.COM

Retain this manual for future use.