

LENOXX®

Cosmetics & Skincare Fridge

How to set up your fridge

- Connect the power cable to your Cosmetics & Skincare Fridge power socket and the other end of the power cable to the appropriate power source.
- Select either the Cold or Hot switch when setting up the fridge.
- A red LED light will illuminate to indicate the fridge is warming the contents.
- A green LED light will illuminate to indicate the fridge is cooling the contents.
- Allow approximately 5 hours for your fridge to either cool or heat to its full potential.
- When switching your fridge between settings, please allow adequate time in between to allow the fridge to return to room temperature before changing the temperature switch.
- To turn your fridge off, move the switch to the OFF position or disconnect from the power source.

Please Note: Use care when connecting and disconnecting your fridge. To avoid risk of electric shock, do not insert any metal or foreign objects or parts of your body into the power socket. When not in use, remember to turn off your fridge and empty contents.

Keeping your fridge clean.

Use a soft, damp cloth to clean the entire fridge – both inside and out. To remove any stains, use only a mild domestic soap together with a damp cloth. We do not recommend the use of industrial-grade chemical solvents as this can cause damage to your fridge.

Why use a cosmetics and skincare fridge?

Keeps your cosmetics and skincare at the correct temperature and can extend the products shelf life. It can also help reduce harmful bacteria growth.

What products can go into the Cosmetics & Skincare Fridge?

- Skincare – such as face mask, mists, serums and moisturisers
- Facial tools, such as Rose Quartz Facial Rollers.
- You can even store nail polish and perfumes in your fridge!

Temperature

Cooling: 5°C

Heating: 55-65°C

Power 40W

What's in the box?

1x 4L Cosmetics & Skincare Fridge

1x Removable internal shelf

1x Removable door shelf

1x Power adapter

Warning

- Ensure the fridge is adequately ventilated by allowing a minimum of 10cm (4 inches) of free space around the unit.
- Do not operate in direct sunlight or overload with products.
- If transporting your fridge, take care when opening as the contents may have shifted during transit.
- Ensure the power cable is plugged in and connected properly and securely.



lenoxx.com.au

6 Oban Court, Laverton North, VIC 3026

For Customer Service (Australia): 1300 666 848

We warrant this product to be free from defects in material and workmanship under normal use for a period of 12 months after delivery to the ultimate user and we will repair at no charge or replace it at our option should it become defective under this warranty providing you submit proof of purchase (original sales receipt) when making a request under this warranty. This warranty does not apply to any product, which has been subject to misuse neglect or accident. The warranty does not cover: handles, batteries, electrical cords, antennas, microphones, broken cabinets or any other accessories used in connection with the product. Under no circumstances will Lenoxx Electronics (Australia) Pty Ltd be liable for any incidental or consequential damage.

Caution:

Choking hazard - unit may contain small parts not suitable for children under the age of 3.

Important message:

Before sending your unit to Lenoxx for repair, you must supply proof of purchase (original receipt) to validate your warranty.

This warranty is in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

“Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or refund for major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure”.