

Acer Serviceable Keyboard*

Chromebook Keyboard Replacement Made Easy

Replace the Chromebook keyboard by removing two screws without taking off the bottom cover and battery module.

* Available on Acer Chromebook C736, C736T, R756T, R756TN, R856TN and TravelMate TMB311-33, TMB311R-33, TMB311RN-33, TMB514-31

Seven steps to replace the Chromebook keyboard easily!

- 1** Remove two screws from the bottom cover.



- 2** Release the latches under the keyboard by lifting the bottom of the keyboard using a thin plastic tool.

- 3** Disconnect the keyboard cable from its connector.



- 4** Insert the new keyboard cable into its connector.



- 5** Install the new keyboard by gently pressing the bottom of the keyboard to lock the latches.



- 6** Flip the Chromebook upside down



- 7** Fasten the two screws

