

Breville

www.breville.com.au

Breville is a registered trademark of Breville Pty. Ltd.
ABN 98 000 092 928

Breville Customer Service Centre Australian Customers

✉ Breville Customer Service Centre
Locked Bag 2000
Botany NSW 2019
AUSTRALIA

☎ Customer Service: 1300 139 798
Fax (02) 9384 9601
Email Customer Service: askus@breville.com.au

New Zealand Customers

✉ Breville Customer Service Centre
Private Bag 94411
Greenmount
Auckland, New Zealand

☎ Customer Service: 09 271 3980
Fax 0800 288 513
Email Customer Service: askus@breville.com.au



PRINTED ON
RECYCLED PAPER



© Copyright. Breville Pty. Ltd. 2004

Lumina is a trademark of Breville Pty. Ltd.

Due to continual improvements in design or otherwise,
the product you purchase may differ slightly from the
one illustrated in this booklet.

Model BT0350 Issue A/10

Breville

Lumina Toaster

4 Slice Electronic Toaster

Instructions for use



Model BT0350

Contents

	Page
Introduction	3
Breville recommends safety first	4
Know your Breville Lumina Toaster	6
Operating your Breville Lumina Toaster	7
Care, cleaning and storage	9



Congratulations

on the purchase of your new Breville Lumina Toaster

Breville recommends safety first

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

Important safeguards for your Breville Lumina Toaster

- Carefully read all instructions before operating the Breville Lumina Toaster for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not operate the toaster on a sink drain board.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the toaster clear of walls and other heat sensitive materials such as cloths and curtains. Minimum 20cm distance.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- The toaster is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Never cover the toaster when it is plugged into the power outlet or while hot.
- Do not place cold toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not move the toaster whilst in operation or when hot.
- Do not touch hot surfaces. Use side areas for lifting and carrying the toaster.
- Do not leave the toaster unattended when toasting.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Do not allow breadcrumbs to accumulate in the bottom of the toaster.
- Keep the toaster clean. Follow the cleaning instructions provided in this book.

Important safeguards for all electrical appliances

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or toaster in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

This Breville Toaster is electronically controlled and will not lock down into the toast position until the toaster is plugged into a 230/240 volt power point and switched on.

Note



NEVER OPERATE TOASTER ON ITS SIDE.

NEVER ADD ANY FOOD SUBSTANCE TO THE BREAD, MUFFINS OR BAGELS AS THIS CAN LEAD TO ELECTROCUTION OR FIRE.

THIS TOASTER IS FOR TOASTING BREAD, BAGELS AND MUFFINS ONLY. PLACING OTHER ITEMS IN THE TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.

Know your Breville Lumina Toaster

4 slice electronic toaster

Integrated bun warming rack

Cool touch exterior

Self centering extra wide and deep toasting slots

Illuminated control panel

High lift lever



Stainless steel design

Removable crumb tray

Tidy cord storage

Electronic browning control dial

Defrost setting

Reheat setting

Cancel button

Operating your Breville Lumina Toaster

Before first use, remove any promotional stickers or packaging material attached to your toaster.

1. Insert the power plug into a 230/240 volt power outlet and then turn the power on.
2. Place only 2 slices of bread or 2 halves an English muffin or bagel into each of the bread slots. Ensure the bread slices or muffin/bagel halves are not too large or thick to fit in the slots.
3. Select the desired browning setting using the browning control dial. Colour settings range from '1' lightest to '7' darkest.

When using the toaster for the first time, we suggest to toast the bread on setting No. 4. Varying types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

That's the idea™

4. Press the high lift lever down until it clicks into place. The toasting cycle will automatically commence.

If the toaster is not plugged in and switched on at the power outlet, the high lift lever will not click into place.

Note

5. The toaster turns off when the desired toast colour is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the CANCEL button located on the front of the toaster.



DO NOT LEAVE UNATTENDED WHEN IN USE AS TOAST MAY JAM OR WEDGE IN THE BREAD CARRIAGE.

Operating your Breville Lumina Toaster

High lift lever

To remove smaller items, such as muffins, lift the high lift lever approximately 20mm above the starting position.

In the unlikely event that the bread or muffins become jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then use the high lift lever to carefully ease the bread out of the toaster, ensuring that you do not damage the self centring slots or the elements.

Defrost button (toasting frozen bread)

To toast frozen bread, place the bread into the toasting slots, select the desired browning setting, lower the high lift lever until it clicks into place then press the defrost button, this will extend cooking time.

Reheat button (reheating toast)

This function allows you to reheat toast without additional toasting. To reheat, place toast into toasting slots, lower the high lift lever until it clicks into place and press the reheat button.

Cancel button (to stop toasting)

The toasting, defrosting and reheat cycles can be cancelled at any time by pressing the cancel button. The toaster will turn off and automatically raise the toast.

Bun/roll warmer

The Lumina Toaster has a built in roll warming rack that allows you to heat rolls, buns, croissants or bagels. To raise the rack, simply press down the roll warming rack lever until it locks into position and place the bun/rolls on the rack.

To start warming, press down the high lift lever and choose your browning setting so that the radiant heat produced will warm the buns/rolls. When finished, pull the roll warming rack lever up to stow away the rack.

This feature can be used with or without bread in the toasting slots. The toasting/warming cycle can be stopped at any time by pressing the cancel button.

That's the idea™



NEVER ATTEMPT TO EXTRACT JAMMED TOAST, BAGELS OR MUFFINS OR ANY OTHER ITEM THAT HAS JAMMED OR WEDGED IN THE TOASTER WITH A KNIFE OR ANY OTHER OBJECT, AS CONTACT WITH LIVE ELEMENTS MAY NOT ONLY DAMAGE THE ELEMENTS, BUT CAUSE ELECTROCUTION.

Care, cleaning and storage

Care and cleaning

The crumb tray should be cleaned out regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

1. Always switch the power off at the power outlet and then remove the plug from the outlet before cleaning the toaster.
2. To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace it before using the toaster again.
3. To clean the interior, turn the toaster upside down over a bin and shake crumbs free.
4. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft, dry cloth.

Storage

Always switch the power 'off' at the power outlet, then remove the plug from the power outlet and allow toaster to cool completely before storing.

Follow the directions for cleaning and store in an upright position on a flat surface on your bench top or in an accessible cupboard. Do not store anything on top of the toaster.



DO NOT USE THE TOASTER WITHOUT THE SLIDE OUT CRUMB TRAY IN PLACE.

DO NOT ALLOW CRUMBS TO BUILD UP IN CRUMB TRAY. CRUMB TRAY SHOULD BE CLEANED OUT REGULARLY.



Handwriting practice area with 20 horizontal blue lines.

