



# HEAVY DUTY JHD1635BT

*AM/FM/RBDS/WB/USB/AUX-IN/BT/Sirius XM Ready Heavy Duty Radio*

## Installation and Operation Manual



## CONTENTS

Introduction.....	1
Safety Information .....	2
Installation .....	3
Wiring .....	4
Basic Operation .....	5
Tuner Operation.....	8
USB Operation .....	10
SiriusXM Radio Operation .....	11
iPod® Operation.....	15
Bluetooth Operation.....	16
Care and Maintenance .....	18
Troubleshooting.....	18
Specifications .....	19

# INTRODUCTION

## System Features

Features of Jensen JHD1635BTmobile audio system include:


- Full Dot Matrix LCD
- AM/FM US/EURO Tuner with 30 Presets (12AM, 18FM)
- RBDS (Radio Broadcast Data Service) with PTY Search
- Sirius XM Radio Ready
- USB Playback of MP3 and WMA files (Front USB or Rear USB)
- Weatherband Tuner with SAME Technology
- Mute
- Bluetooth (Supports A2DP, AVRCP and HFP)
- Pre-set Equalizer – 5 settings (User, Flat, Pop, Classical, Rock)
- Electronic Bass, Treble, Balance and Fader Controls
- Output Power 45W x 4
- Clock 12/24 Hour Selectable
- Public Announcement (PA) Feature with Optional Microphone
- IR Wireless Remote Control Ready (sold separately)
- 2-Channel Pre-amp Line Level Outputs
- 2- Wire Power with Non-Volatile Memory and Clock/Time support
- Auxiliary Audio Input (Front 3.5mm Stereo Jack, Rear RCA)
- Wired Remote Control Ready(JHDHBC Sold Separately)

## Content List

- Jensen Heavy Duty Radio
- Hardware Kit
- Installation Manual
- Quick Reference Guide

### HARDWARE KIT CONTENTS

FLANGE NUTS

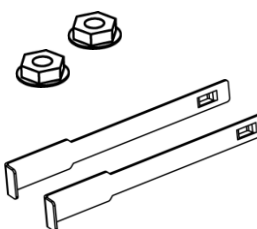

DIN SLEEVE  
REMOVAL TOOL

MOUNTING STRAP



MOUNTING BUSHING



MOUNTING SCREW



## **SAFETY INFORMATION**

### ***When Driving***

Keep the volume level low enough to be aware of the road and traffic conditions.

### ***When Washing Your Vehicle***

Do not expose the product to water of excessive moisture. Moisture can cause electrical shorts, fire or other damage.

### ***When Parked***

Parking in direct sunlight can produce very high temperatures inside your vehicle. Give the interior a chance to cool down before starting playback.

### ***Use the Proper Power Supply***

This product is designed to operate with a 12 volt DC negative ground battery system.

### **WARNING:**

- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES.

## INSTALLATION

This unit is designed for installation in vehicle cabs with an existing 1-DIN radio opening. In many cases, a special installation kit will be required to mount the radio to the dashboard. See the dealer where the radio was purchased for kit availability. Always check the kit application before purchasing to make sure the kit works with your vehicle.

### Before you Begin


1. Disconnect Battery  
Before you begin, always disconnect the battery negative terminal.
2. Remove Transport Screws

### Important Notes


- Before final installation, test the wiring connections to make sure the unit is connected properly and the system works.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications to your vehicle.
- Install the unit where it does not interfere with driving and cannot injure passengers during a sudden or emergency stop.
- If the installation angle exceeds 30° from horizontal, the unit might not give optimum performance.
- Avoid installing the unit where it will be subjected to high temperatures from direct sunlight, hot air, or from a heater, or subject to excessive dust, dirt or vibration.

### DIN Front Mount

1. Slide the mounting sleeve off of the chassis if it has not already been removed. If it is locked into position, use the removal keys (supplied) to disengage it. The removal keys are depicted in "Removing the Unit" on page 3.
2. Check the dashboard opening size by sliding the mounting sleeve into it. If the opening is not large enough, carefully cut or files as necessary until the sleeve easily slides into the opening. Do not force the sleeve into the opening or cause it to bend or bow. Check that there will be sufficient space behind the dashboard for the radio chassis.
3. Locate the series of bend tabs along the top, bottom and sides of the mounting sleeve. With the sleeve fully inserted into the dashboard opening, bend as many of the tabs outward as necessary to firmly secure the sleeve to the dashboard.

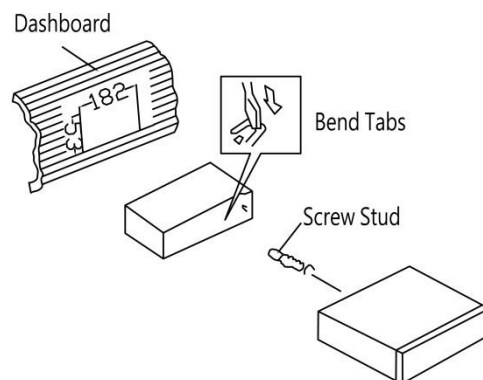

4. Place the radio in front of the dashboard opening so the wiring can be brought through the mounting sleeve.
5. Follow the wiring diagram carefully and make certain all connections are secure and insulated with crimp connectors or electrical tape to ensure proper operation.
6. After completing the wiring connections, turn the unit on to confirm operation (vehicle accessory switch must be on). If the unit does not operate, recheck all wiring until the problem is corrected. Once proper operation is achieved, turn the accessory switch off and proceed with final mounting of the chassis.
7. Carefully slide the radio into the mounting sleeve making sure it is right-side-up until it is fully seated and the spring clips lock it into place.
8. Attach one end of the perforated support strap (supplied) to the screw stud on the rear of the chassis using the hex nut provided. Fasten the other end of the dashboard either above or below the radio using the screw and plain washer provided. Bend the strap, as necessary, to position it. Some vehicle installations provide cavity for rear support. In these applications, place the rubber bushing over the screw stud and insert.

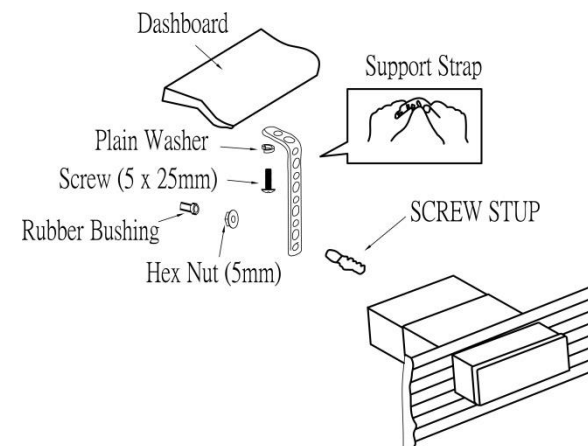


**CAUTION: The perforated rear support strap or rear rubber mounting bushing must be used in the installation of the radio. Installation without either may result in damage to the radio or the mounting surface and void the manufacturer's warranty.**

9. Test radio operation by referring to the operating instructions for the unit.

### Removing the Unit


To remove the radio after installation, remove the plastic end caps, insert the removal keys straight back until they click, and then pull the radio out. If removal keys are inserted at an angle, they will not lock properly to release the unit.

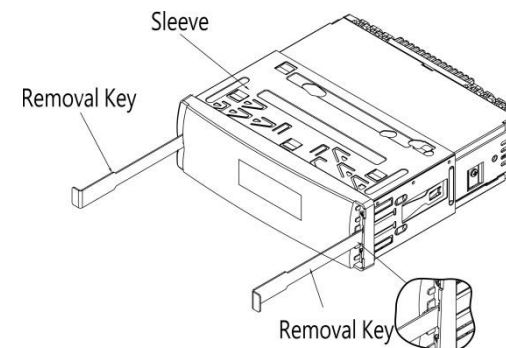

### Reconnect Battery

When wiring is complete, reconnect the battery negative terminal.

# WIRING

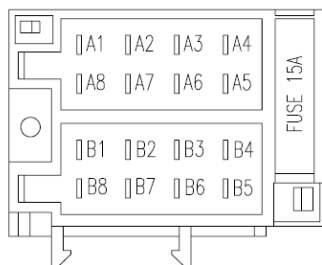


DETAIL A  
SHOWN FROM PIN VIEW


PIN NO.	DESCRIPTION
A1	RIGHT REAR SPEAKER (+)
A2	RIGHT FRONT SPEAKER (+)
A3	LEFT FRONT SPEAKER (+)
A4	LEFT REAR SPEAKER (+)
A5	LEFT REAR SPEAKER (-)
A6	LEFT FRONT SPEAKER (-)
A7	RIGHT FRONT SPEAKER (-)
A8	RIGHT REAR SPEAKER (-)
B1	NO CONNECTION
B2	NO CONNECTION
B3	NO CONNECTION
B4	NO CONNECTION
B5	GROUND
B6	NO CONNECTION
B7	+12V ACC SWITCHED
B8	NO CONNECTION

## WARNING!

Do not connect the +12VDC ACC switched wire to the battery. This wire MUST be connected to the Accessory/Ignition wire or a +12 volts switched power source.

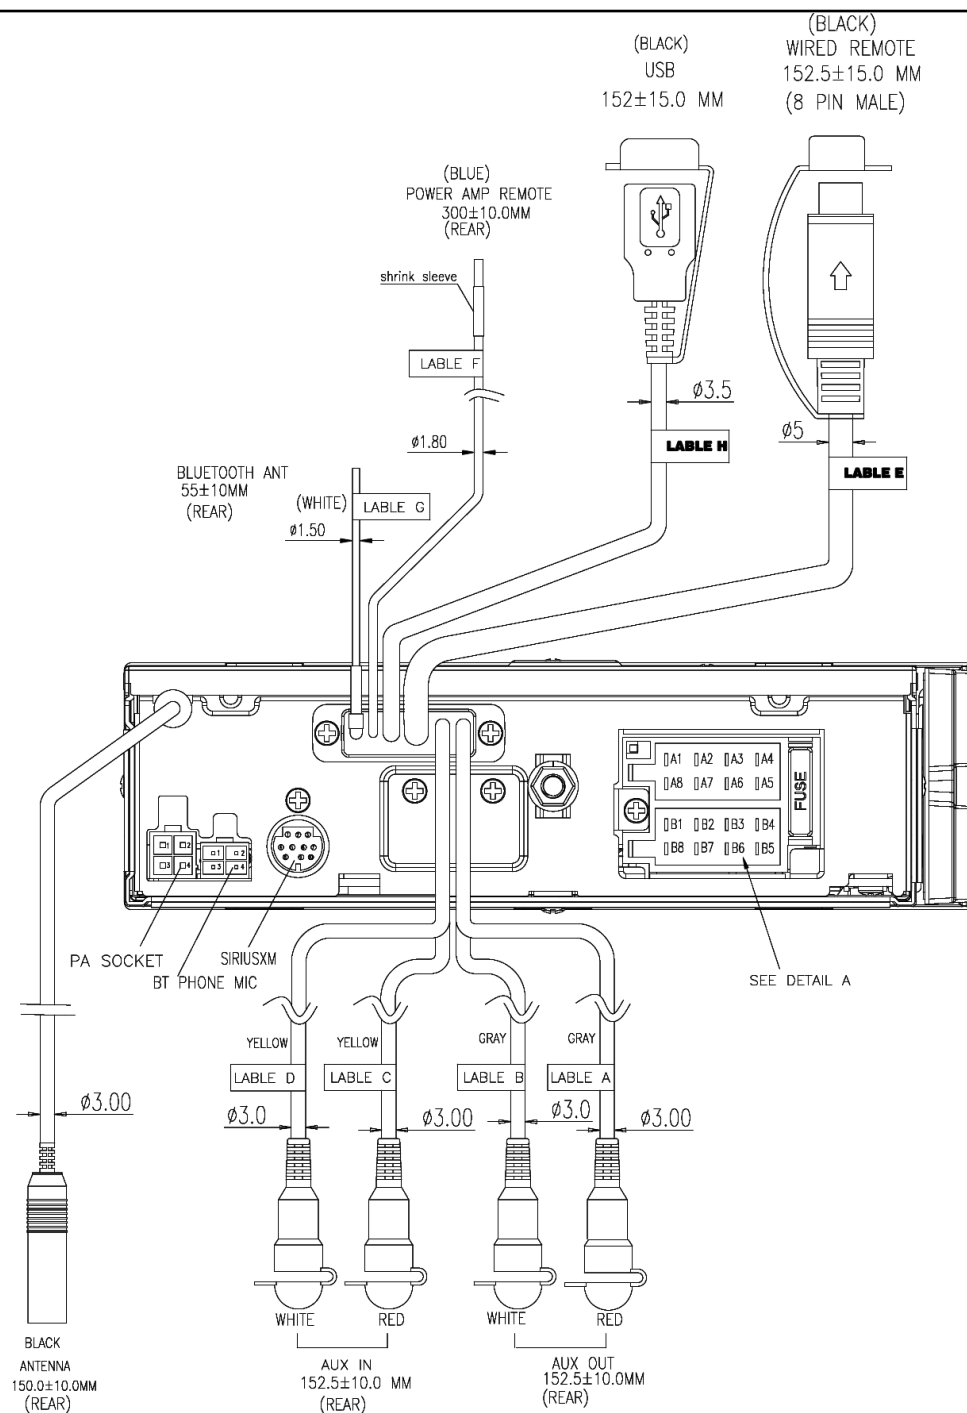


## BASIC OPERATION

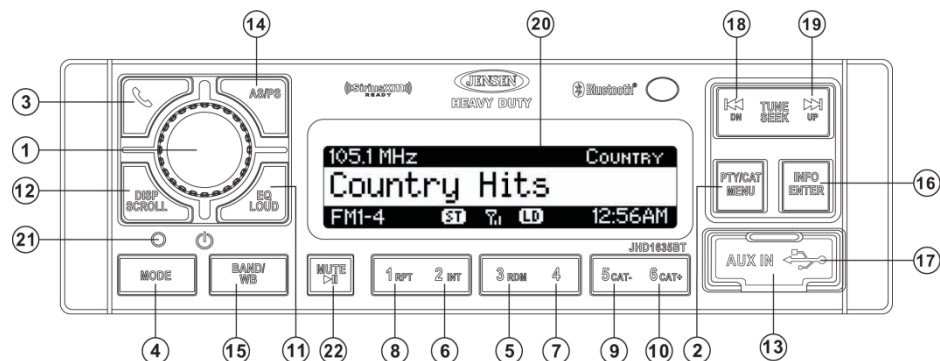

### Power On/Off/Radio

Press the rotary encoder **POWER** button (1) to turn the unit on or *press and hold* to turn off. The unit will resume at the last mode selected (Tuner, Auxiliary, etc.).

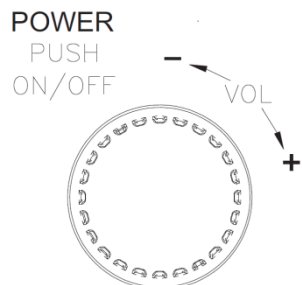

### Volume Control

To increase the volume, turn the rotary encoder (1) to the right. To decrease the volume, turn the rotary encoder to the left. While adjusting the volume, the LCD displays a bar graph and numerical representation of the level.



The maximum volume setting is 40.

### Mute

Press the **MUTE** button (22) to mute the audio output. Press **MUTE** again to restore the audio output to the previous level.

### Mode

Press the **MODE** button (4) to select a different mode of operation, as indicated on the display panel. Available modes include the following: Tuner (AM/FM) > SXM (SiriusXM) > iPod/USB > Auxiliary > BT Audio. Tuner is the default source when a prior source is no longer available.

**NOTE: iPod, USB or SiriusXM (SXM) mode will be skipped if the device is not installed.**

**NOTE: SiriusXM (SXM) mode will be skipped when the Region menu option is set to "EURO".**

### Reset

The reset button should be activated for the following reasons:

- Initial installation of the unit when all wiring is completed
- Function buttons do not operate
- Error symbol on the display

Use a ball point pen or thin metal object to press the **RESET** button (21). This may be necessary should the unit display an error code.

### Audio Menu

Press the **POWER/AUDIO** button (1) to access the audio menu. You can navigate through the audio menu items by pressing the **POWER/AUDIO** button repeatedly. Once the desired menu item appears on the display, adjust that option by turning the rotary encoder (1) within 5 seconds. The unit will automatically exit the audio menu after five seconds of inactivity. The following menu items can be adjusted.

#### Bass Level

Use the rotary encoder (1) to adjust the Bass level range from "-6" to "+6".

#### Treble Level

Use the rotary encoder (1) to adjust the Treble level range from "-6" to "+6".

#### Balance

Adjusting Balance controls the relative level between the left and right speakers in each pair.

Use the rotary encoder (1) to adjust the Balance between the left and right speakers from "Left 12" to "Right 12".

#### Fader

Adjusting Fade controls the relative level between the front and rear speaker pairs. Use the rotary encoder (1) to adjust the Fader between the rear and front speakers from "Rear 12" to "Front 12".

## System Menu

1. Press and hold the **PTY/CAT/MENU** button (2) for more than 2 seconds to enter the system menu. The first menu item, "Key Beep", will appear on the display.
2. Press the **TUNE/SEEK** [**<<** / **>>**] (18, 19) button repeatedly to navigate the system menu.
3. Press the **INFO/ENTER** button (16) to select the desired item.
4. Press the **INFO/ENTER** button again to adjust the selected menu item.

 
The following items can be adjusted:

- Key Beep (On / Off): Turn the audible beep On/Off (heard when functions/buttons are selected).
- LCD Backlight (1-10): Adjust LCD brightness.
- LCD Contrast (1-10): Adjust LCD contrast.
- Button Backlight (1-10): Adjust Button brightness.
- Tuning Region (USA / EURO): Set frequency spacing for various regions.
- Power-Off Clock (Off, 1-10): Brightness setting of clock when powered off
- Clock Format (12Hour / 24Hour): Select 12 or 24 hour display mode.
- Set Clock (HH : MM):
  - Press the **INFO/ENTER** button (16) to view the clock set screen.
  - Press the **INFO/ENTER** button to move to the next digit.
  - Press the **TUNE/SEEK** [**<<** / **>>**] (18, 19) buttons to adjust the selected digit.
- Alarm Time
  - Alarm (On/Off)
  - Alarm Set Time (HH:MM)
- Preset-Only Tuning (On / Off)
- Sirius XM Settings Menu (only appears when Sirius XM tuner is connected and in Sirius XM mode)
  - Clock Autoset (On/Off): Sets clock based on SXM data
  - Time Zone1 (Atlantic / Eastern / Central / Mountain / Pacific / Alaska)
  - Daylight Saving Time (Yes/No)
  - Set Lock Code: \_ \_ \_ \_
  - Locked Channels: List of Channels (Locked / Unlocked)
  - SXi Firmware Version
- Weather Alert Configuration
  - Min Alert Level (All / None / Warnings / Watches)
  - Auto-On Enable (Yes/No): Select "Enabled" to turn on the radio when NOAA alerts are issued. This function only works when the +12V switched is on.
  - Alert Volume (Select Volume Level 0-40)
  - Clear SAME Codes <ENTER>
  - SAME Code 1: \_ \_ \_ \_ \_
  - SAME Code 2: \_ \_ \_ \_ \_
  - SAME Code 3: \_ \_ \_ \_ \_
  - SAME Code 4: \_ \_ \_ \_ \_
  - SAME Code 5: \_ \_ \_ \_ \_
  - SAME Code 6: \_ \_ \_ \_ \_

- SAME Code 7: \_ \_ \_ \_ \_
- Battery Alarm (On/Off)
- Battery Auto-Off (On/Off)
- Bluetooth Setup
  - BT: (On/Off)
  - BT HFP Volume: (Select Volume Level 0-40) Hands-free call volume
  - BT Device List <Enter>: View a list of devices paired with the unit
    - Lock
    - Connect / Disconnect
    - Delete
  - BT Pair <Enter to enable>
  - BT Auto Answer: (On/Off)
- Reset System Defaults <ENTER>: Press the **INFO/ENTER** button (16) to return the unit to factory default set up values.

## Equalizer

Press the EQ/LOUD button (11) to choose one of the following pre-defined bass and treble curves: USER > FLAT > POP > CLASSICAL > ROCK .



## Loudness

Press and hold the EQ/LOUD button (11) to toggle loudness on/off. When listening to music at low volumes, this feature will boost the bass and treble ranges to compensate for the characteristics of human hearing.

## Auxiliary Input

To access an auxiliary device:

1. Connect the portable audio player to the 1/8" AUX IN on the front panel (13)
2. Press the **MODE** button (4) to select "Auxiliary" mode.
3. Press **MODE** again to cancel "Auxiliary" mode and go to the next mode.

## PA Operation

- Connect PA Microphone (JMICHFP) with a 4-PIN connector to the 4-PIN socket on the rear of the unit.
- The unit will automatically switch to PA mode when the mic switch is pushed "ON".
- The PA output level can be adjusted using the rotary volume encoder (1).
- With radio power off, the radio will wake up when PA mic button is pressed to make an announcement. Please note that it will take a few seconds before the radio "wakes up" and PA is active. Radio will return to the off state when the PA mic is released.



## Liquid Crystal Display (LCD)

The current frequency and activated functions are shown on the LCD panel (20).

---

**NOTE:** LCD panels may take longer to respond when subjected to cold temperatures for an extended period of time. In addition, the visibility of the characters on the LCD may decrease slightly. The LCD display will return to normal when the temperature increases to a normal range.

---

## Setting the Clock

To set the clock to display the current time, turn the vehicle ignition on and turn the radio on.

Enter the system menu and adjust the clock by selecting the "Set Clock" menu item.


- Press the **INFO/ENTER** button (16) to view the clock set screen.
- Press the **TUNE/SEEK** |<< / >>| (18, 19) buttons to adjust the selected digit.

Press the **INFO/ENTER** button to move to the next digit. When no adjustment is made for five seconds, the time will become set and normal operation will resume.

## Scroll

When the information is too long to be displayed on the LCD, press the **DISP/SCROLL** button (12) to view the entire title. The information will scroll twice and then return to abbreviated text.

## TUNER OPERATION

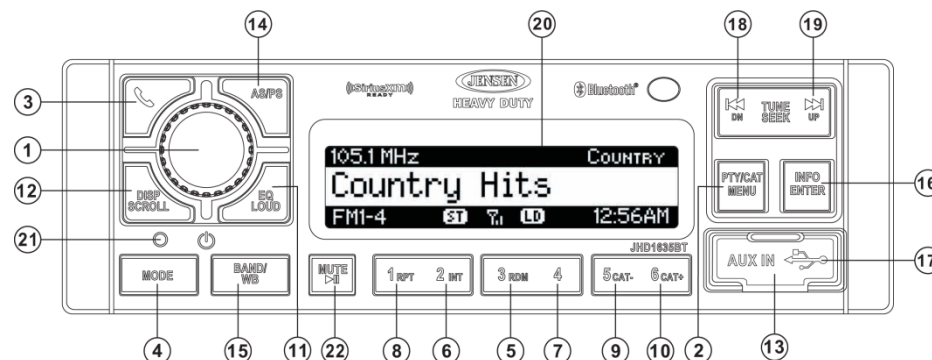

### Select a Band

Press the **BAND/WB** button (15) to change between three FM bands and two AM bands.  
Press and hold the **BAND/WB** button to access the Weather band (WB).

### Manual Tuning

Press the **TUNE/SEEK** << or >>| buttons (18, 19) to seek stations up/down step by step.

### Auto Seek Tuning

Press and hold the **TUNE/SEEK** << or >>| buttons (18, 19) to automatically seek the next or previous strong station.

---

**NOTE:** Seek tuning is not available for weather band channels. Use the up or down tuning buttons to manually select any of the seven available weather band channels.

---

### Preset Stations

Six numbered preset buttons store and recall stations for each band.

#### Store a Station

Select a band (if needed), then select a station. Press and hold a preset button (5-10) for two seconds. The preset number will appear on the LCD.

#### Recall a Station

Select a band (if needed). Press a preset button (5-10) to select the corresponding stored station.

---

**NOTE:** Preset buttons are pre-assigned frequencies in weather band mode.

---

## Automatically Store / Preset Scan (AS/PS)

### Automatically Store

Select an AM or FM band. Press and hold the **AS/PS** button (14) for more than 2 seconds to automatically select 18 strong stations (12 for AM). "Storing Presets" appears on the screen and the new stations replace any stations already stored.

### Preset Scan

Select a band. Press **AS/PS** (14) to scan stations stored in the current band. The unit will pause for 5 seconds at each preset station. Press **AS/PS** again to stop scanning when the desired station is reached.

## RBDS Operation

This unit is equipped to display RBDS (Radio Broadcast Data Service) information when broadcast by the radio station.

---

**NOTE:** Radio stations broadcasting RBDS may not be available in your listening area.

---

In FM radio mode, press the **PTY/CAT/MENU** button (2) to list the following Program Type (PTY) options: ANY / News / Information / Sports / Talk / Rock / Classic Rock / Adult Hits / Soft Rock / Top 40 / Country / Oldies / Soft / Nostalgia / Jazz / Classical / Rhythm and Blues / Soft Rhythm & Blues / Foreign Language / Religious Music / Religious Talk / Personality / Public / College / Weather / Emergency Test / EMERGENCY!

To search for stations in a PTY category:

1. Press the **PTY/CAT/MENU** button (2) to view the current PTY category.
2. Press the **TUNE/SEEK** << or >>| buttons to move through the list of available categories and select the program type you wish to search.
3. After selecting the desired PTY, press the **INFO/ENTER** button (16) to search the band for broadcasts of this type. "PTY Search" is displayed while the tuner is searching.

---

**NOTE:** Performing a PTY search on "ANY" will Seek Tune and stop on any station broadcasting RBDS, regardless of the program type.

---

## Weather Band Operation

### *What is the NOAA Weather Radio/Weatheradio Canada?*

NOAA (National Oceanic and Atmospheric Administration) is a nationwide system that broadcasts local weather emergency information 24 hours a day via the National Weather Service (NWS) network. The U.S. network has more than 530 stations covering the 50 states as well as the adjacent coastal waters, Puerto Rico, the U.S. Virgin Islands and the U.S. Pacific Territories. Each local area has its own transmitting station and there are a total of seven broadcasting frequencies used. A similar system is available in Canada under the Weatheradio Canada service administered by Environment Canada.

### *Tuning to Weatherband*

Press and hold the **BAND/WB** button (15) to access the Weatherband. The indication "WB" will appear on the display panel, along with the current number and channel indication: "WB-1", "WB-2", "WB-3", "WB-4", "WB-5", "WB-6" or "WB-7". The seven frequencies are shown in the following table:

**WB Frequencies**

Frequency (MHz)	Preset
162.400	2
162.425	4
162.450	5
162.475	3
162.500	6
162.525	-
162.550	1

The above table also shows which preset button will access the frequency. Note that one frequency cannot be accessed using a preset button. The frequency can only be reached using the tuning controls.

Use the **TUNE/SEEK** [**<<** or **>>**] buttons (18, 19) or the preset buttons to tune to each of the seven channels until you find the weatherband station broadcasting in your area.

### *How many stations can I expect to receive?*

Since the broadcasts are local weather and information, the transmission power is usually very low (much less than standard AM or FM stations) so you will usually receive only one station unless you are on the edge of two or more broadcast signals. The most you will receive will be two or three, and that is rare.

### *Is it possible I won't receive any stations?*

Depending on where you are located, there is a possibility you will receive only a very weak signal or none at all. Also, similar to AM and FM signals, weatherband signals are subject to

surrounding conditions, weather, obstructions of the signal by hills or mountains, etc.

### *NOAA Weather Alert*

The Weather Alert function adds an additional level of user safety by automatically switching from any of the available function modes to weather band for a minimum of 60 seconds if a NOAA warning tone (1050 Hz) is received/detected. If no additional warning tone is received for 60 seconds, the unit will switch back to the last known function mode. See "System Menu" on page 6 to learn how to turn the WB Alert feature on.

### *SAME Decoding and Filtering*

Specific Area Message Encoding (SAME) data is also broadcast prior to alert broadcasts. SAME data contains information about the geographic region affected by the alert, the type of alert, and its effective time. The geographic region included in the SAME data is called the Geographical Area code and has the form PSSCCC where "P" represents a portion of the county, "SS" is a two-digit state, territory, or offshore marine area identifier and "CCC" identifies the county, province, or major metropolitan area within the state. This unit can be configured through the system setting menu with up to seven Geographical Area codes to limit the automatic tuning or power on functions described above.

SAME data also includes the type of alert being broadcast. This unit can be configured through the System Setting Menu to limit the automatic tuning or power on functions based on the type of alert.

SAME is activated by programming a 6 digit code - called a FIPS code - into your radio. The FIPS code or Federal Information Processing System code is a six digit code that identifies the states and counties (or parishes) in the United States. The first digit identifies the county subdivision. The next two digits identify the state or territory, and the last three identify the county. The FIPS code for your area can be found by calling the NWS toll free number or visiting the web site.

The phone number is 1-888-NWS-SAME (1-888-697-7263). Upon calling, an automated system will prompt you to enter your state and county. When you confirm the information, the system will provide your six digit FIPS code.

The web site is: [www.nws.noaa.gov/nwr/indexnw.htm](http://www.nws.noaa.gov/nwr/indexnw.htm). Upon selecting your state from the chart, you will see a listing of all the counties in that state. For each county there is a listing of the SAME# (FIPS code), the location of the transmitter, the WB frequency, the call sign, the transmitter power and miscellaneous remarks.


---

**NOTE: Because broadcast areas overlap you may want to set more than one S.A.M.E. location. If you live near the border between counties, you may want to receive alerts from more than one tower.**

---

Your radio is capable of being programmed with up to 7 different FIPS location codes. The default code has been programmed at the factory - 000000 - to respond to all messages within your area.

## USB OPERATION

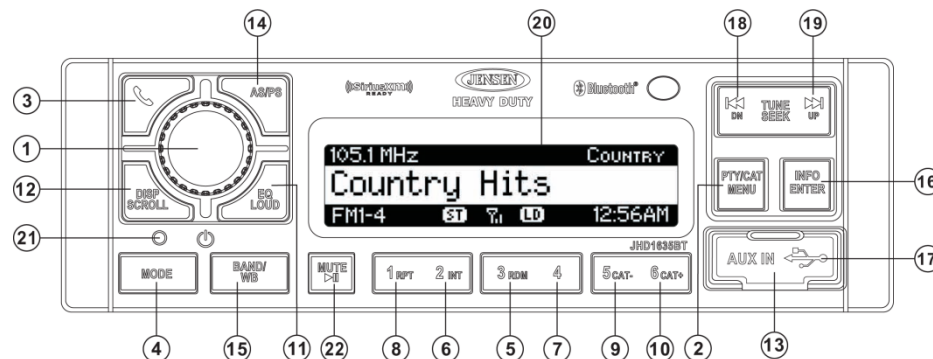

### Digital File Playback

If the user connects a USB mass storage device, the radio automatically powers on, if necessary, and switches to digital file playback mode. Changing modes or turning off the radio pauses playback. Playback shall resume exactly where paused when returning to digital file playback mode.

### Inserting a USB Device

The front USB connector (17) and the rear USB connector work separately. The front USB connector is located at the bottom right of the front panel, behind a protective rubber cover. Pull gently to lower the rubber cover and reveal the USB slot. The rear USB connector is located at the back of the module. Insert a USB device at the front or rear USB connector to switch to USB mode and begin playback automatically. Only the current device can be charged.

When both front and rear USB connectors are connected to USB devices, press **MODE** (4) to select either front USB or rear USB to playback. If the non-playing device is pulled off, the playing device will continue the playback without any impact.

If the USB device is playing music with front USB connector, and then insert another device into the rear USB connector, the device connected via rear USB will begin music playback and the device connected via front USB will stop. Vice versa.

### Controlling File Playback

#### Selecting Tracks

Press the **TUNE/SEEK >>|** (19) or **TUNE/SEEK <<|** button (18) to advance to the next track/ file.

The selected track number will appear on the display. Press and hold the **TUNE/SEEK >>|** or **<<|** button to fast forward or fast reverse. Playback begins when the button is released.

#### Play/Pause Playback

Press the **MUTE/>||** button (22) to suspend playback. "Pause" is displayed on the screen.

Press the **MUTE/>||** button again to resume play.

#### Previewing Tracks

Press the **2/INT** button (6) to play the first 10 seconds of each track in the current folder sequentially. Press **2/INT** again to stop Intro Scan and resume normal play at the current track.

#### Repeat Play

- Press the **1/RPT** button (8) during disc play to repeat the current track.
- Press **1/RPT** again to stop repeat play.

#### Random Play

- Press the **3/RDM** button (5) during playback to play all tracks in the current folder in random, shuffled order.
- Press **3/RDM** again to stop random play.

#### Folder Navigation (MP3 Only)

- Press the **PTY/CAT/MENU** button (2) to view a list of all songs in the current folder.
- Press the **>>| / UP** (19) and **<<| / DN** (18) buttons to navigate the list.
- Press the **INFO/ENTER** button (16) to play the highlighted song or view files in the selected folder. Continue pressing INFO/ENTER until the desired file is selected.
- Press the **PTY/CAT/MENU** button again to navigate up through the file structure.
- The unit will automatically exit the folder navigation menu after 5 seconds of inactivity.

## MP3 Specifications


#### Notes on MP3 Playback

- Any directory that does not include an MP3 file is skipped
- Maximum number of folders: 512 (including skipped directories)
- Maximum number of folder levels: 12
- Maximum number of MP3 files: 999
- Maximum number of characters for MP3 file name and folder name: 32
- Maximum number of Characters of ID3 Tag:
  - ID3 Tag version 1.0: 32
  - ID3 Tag version 2.x: 32

#### File Playing Order

Files will be continually played sequentially within the current folder. To play songs in another folder, press the **PTY/CAT/MENU** button (2) twice to move up a folder level. Press the **>>| / UP** and **<<| / DN** buttons to navigate the list and then press the **INFO/ENTER** button (16) to access the selected song or folder.

## SIRIUSXM™ RADIO OPERATION

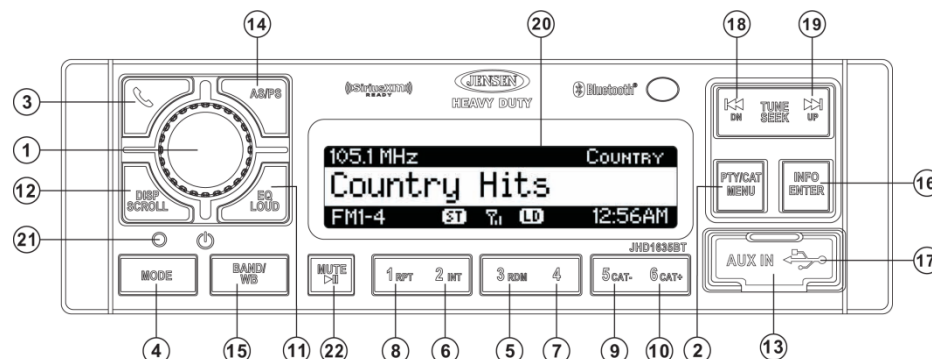

**NOTE:** Only SiriusXM™ brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and Subscription are required. For more information, visit [www.siriusxm.com](http://www.siriusxm.com).

### Accessing SIRIUSXM Mode (Requires optional SIRIUSXM tuner)

Press the **MODE** button (4) to change the mode to SiriusXM mode.

### Accessing your SiriusXM ID

The SiriusXM ID is required for activation. To display your SiriusXM radio ID, use the **TUNE/SEEK** |<< / >>| button (18) to tune to channel "000". The screen will display "Radio ID" with the ID displayed in the middle of the LCD screen. The SiriusXM radio ID is 8 characters long and does not include the letters I, O, S, or F.

### Selecting a Band

In SiriusXM mode, press the **BAND/WB** button (15) to access the SiriusXM user-preset channel groups in the following order: SXM1, SXM2, SXM3.

### Category Tuning

1. Press the **PTY/CAT/MENU** button (2) to access Category mode.
2. While in category mode, press **5/CAT-** OR **6/CAT+** buttons (9, 10) to choose a category.
3. Press the **TUNE/SEEK** |<< / >>| buttons (18, 19) to navigate channels in that category. (The current channel number within the chosen category will always be the default first channel tuned.)
4. Press the **INFO/ENTER** button (16) to select the desired channel.

### Channel Up/Down Tuning

Press the **TUNE/SEEK** |<< / >>| buttons to search for a channel. *Press and hold* the **TUNE/SEEK** buttons to fast search.

### Direct Tuning Mode

1. *Press and hold* the **INFO/ENTER** button to enter direct tuning mode.
2. Press **TUNE/SEEK** |<< / >>| buttons to change the first of three digits for the desired channel in the direct entry screen.
3. Press the **INFO/ENTER** button to confirm the entered digit and move to the second digit field.
4. Press **TUNE/SEEK** |<< / >>| buttons to select the second digit.
5. Press the **INFO/ENTER** button to confirm the entered digit and move to the third digit field.
6. Press **TUNE/SEEK** |<< / >>| buttons to select the third digit.
7. Press the **INFO/ENTER** button to confirm the three digit channel and tune to the selected channel.

### Storing Preset Channels

The preset buttons (5-10) can be used to store 6 channels, allowing convenient access to your favorite channels.

#### Programming Channels

1. Select the channel you want to store in memory.
2. *Press and hold* a preset button (5-10) until the corresponding preset button number appears.
3. Repeat steps 1 and 2 to program additional channels.

#### Preset Recall

Press one of the six preset buttons (5-10) to directly select a preset channel stored in the current band.

#### Preset Scan

Press **AS/PS** button (14) to scan stations stored in all three user-preset channel groups (SXM1, SXM2 and SXM3). The unit will pause for 10 seconds at each preset station.

#### Preset Tuning

In Preset Tuning Mode, you can use the **TUNE/SEEK** |<< / >>| buttons to access all 18 preset stations in sequential order. Access preset tuning mode through the system menu. Set Preset-Only Tuning to "ON."

### Alternate Display Mode





Press the **DISP/SCROLL** button (12) to change the display information between single and dual line text display. In dual line mode, both artist and title are available for viewing.

*Press and hold* the **DISP/SCROLL** button to scroll the Artist/Song Title information.

While in category tuning list mode, press the **DISP/SCROLL** button in sequence to change the display information from Channel Name, Artist, and Song Title.



## Satellite Signal Strength

The display will indicate satellite reception strength as shown below.

Signal Strength	Strength Display
No Signal	
Weak	
Good	
Excellent	

## Channel Lock

Access Channel Lock through the System Menu under the "SiriusXM Satellite Radio" menu. See "System Menu" on page 6.

- Select "Set Lock Code" and press the **INFO/ENTER** button (16).
- Enter the default lock code of "0000". To set the lock code:
  - Press the **TUNE/SEEK** [**<<** / **>>**] (18, 19) buttons to enter the first digit of the default code.
  - Press the **INFO/ENTER** button to move to the next digit.
  - Repeat above steps to enter all 4 digits of the default code.
  - Press the **TUNE/SEEK** [**<<** / **>>**] buttons to enter the first digit of the new code.
  - Press the **INFO/ENTER** button to move to the next digit.
  - Repeat above steps to enter all 4 digits.
  - Repeat above steps to confirm the new code.
- After setting a new four digit code, you can lock channels by entering the "Locked Channels" menu.
- Upon entering the Locked Channels list, you will be prompted to enter your four digit code.
  - Press the **TUNE/SEEK** [**<<** / **>>**] buttons to enter the first digit.
  - Press the **INFO/ENTER** button to move to the next digit.
  - Repeat above steps to enter all 4 digits.
- After entering the code, you can navigate the list using the **TUNE/SEEK** [**<<** / **>>**] buttons to highlight the channels.
- Press the **INFO/ENTER** button to Lock (indicated by a ) or Unlock  the selected channel.

## Reset SiriusXM Channel Lock Code

If you forget your Parental Control lock code, use the following directions to reset the code to the default "0000". Resetting the lock code will not affect the locked channels list.

- In SiriusXM mode, tune to Channel 0
- Set volume to 0.
- Press and hold* the rotary encoder (1) to power off the unit.
- With power off, *press and hold* the volume knob until the system version info is displayed on the screen
- Press the **Preset 3** (5) button, screen will return to the clock.
- Press the rotary encoder to power on the unit.
- The lock code has now been reset to "0000"

## Advisory Messages Reported by the SiriusXM Vehicle Tuner


On-Screen Display	Advisory Message	Cause	Explanation/Solution
Check Antenna	Check Antenna	The radio has detected a fault with the SiriusXM antenna. The antenna cable is either disconnected or damaged.	<ul style="list-style-type: none"> <li>Verify that the antenna cable is connected to the SiriusXM Connect Vehicle Tuner.</li> <li>Inspect the antenna cable for damage and kinks. Replace the antenna if the cable is damaged.</li> </ul>
Check Tuner	Check Tuner	<ul style="list-style-type: none"> <li>The radio is having difficulty communicating with the SiriusXM Connect Vehicle Tuner.</li> <li>The tuner may be disconnected or damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Verify that the SiriusXM Connect Vehicle Tuner cable is securely connected to the radio SiriusXM mating connector/ cable.</li> <li>If the problem persists, disconnect and reconnect the tuner and then contact your dealer.</li> </ul>
No signal	No signal	The SiriusXM Connect Vehicle Tuner is having difficulty receiving the SiriusXM satellite signal.	<ul style="list-style-type: none"> <li>Verify that your vehicle is outdoors with a clear view of the southern sky.</li> <li>Verify that the SiriusXM magnetic mount antenna is mounted on a metal surface on the outside the vehicle.</li> <li>Move the SiriusXM antenna away from any obstructions.</li> <li>Inspect the antenna cable for damage and kinks. Replace the antenna if the cable is damaged.</li> <li>If the problem persists, disconnect and reconnect the tuner and then contact your dealer.</li> </ul>
Scrolling "Subscription Updated" – press any key to continue"	Subscription Updated	The radio has detected a change in your SiriusXM subscription status.	<ul style="list-style-type: none"> <li>Press any key to clear the message.</li> <li>No further action is required.</li> <li>Questions about your subscription in the United States please visit <a href="http://www.siriusxm.com/activatenow">www.siriusxm.com/activatenow</a> or call SiriusXM Listener Care at 1-866-635-2349</li> <li>Questions about your subscription in Canada, please visit <a href="http://www.siriusxm.ca/activatexm">www.siriusxm.ca/activatexm</a> or call XM Listener Care at 1-877-438-9677</li> </ul>
Chan Unavailable	Channel Not Available	The channel that you have requested is not a valid SiriusXM channel or the channel that you were listening to is no longer available. You may also see this message briefly when first connecting a new SiriusXM Connect Vehicle tuner. Visit <a href="http://www.siriusxm.com">www.siriusxm.com</a> for more information about the SiriusXM channel lineup.	Visit <a href="http://www.siriusxm.com/channellineup">www.siriusxm.com/channellineup</a> for more information about the SiriusXM channel lineup.
Ch Unsubscribed	Channel Not Subscribed	The channel that you have requested is not included in your SiriusXM subscription package or the channel that you were listening to is no longer included in your SiriusXM subscription package.	<ul style="list-style-type: none"> <li>Questions about your subscription in the United States please visit <a href="http://www.siriusxm.com/activatenow">www.siriusxm.com/activatenow</a> or call SiriusXM Listener Care at 1-866-635-2349.</li> <li>Questions about your subscription in Canada please visit <a href="http://www.siriusxm.ca/activatexm">www.siriusxm.ca/activatexm</a> or call XM Listener Care at 1-877-438-9677.</li> </ul>



On-Screen Display	Advisory Message	Cause	Explanation/Solution
Chan Locked	Channel Locked	The channel that you have requested is Locked by the radio Parental Control feature.	See the section on Parental Control, page 12 for more information on the Parental Control feature and how to access locked channels.
Enter Code: _ _ _ _	Enter Lock Code	User prompted to enter the lock/unlock code.	Enter the four digit code to unlock the channel
Wrong Code	Invalid Lock Code	The unlock code entered by the user is incorrect	<ul style="list-style-type: none"> <li>• Input the correct four digit code to unlock the channel.</li> <li>• Reset lock code to default following instructions on page 12</li> </ul>



## iPod® OPERATION

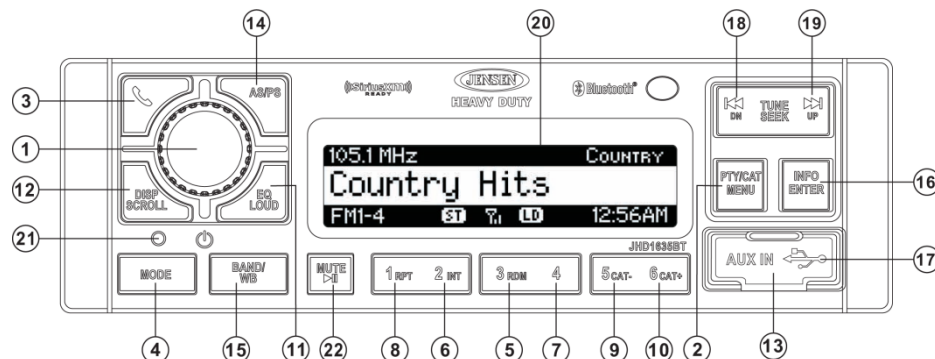


This unit is equipped with an iPod ready function that will allow you to control your iPod (if compatible) using the control panel buttons. The following iPod versions are supported:

- iPod Nano 5G, 6G, 7G
- iPod Classic
- iPhone 4, 4S, 5
- iPod Touch 3G, 4G, 5G

**NOTE: Earlier model iPod's are not supported because they do not implement the required control protocol. Also, the iPod shuffle is not supported because it does not utilize the 30-pin Apple iPod Connector. These unsupported iPod models may be connected to the radio using one of the Auxiliary Inputs.**

## Accessing iPod Mode

Connect a supported iPod or iPhone to the front panel USB (or Rear USB) connector. The iPod icon illuminates in the bottom left corner of the LCD whenever an iPod or iPhone is attached to the USB connector. Music playback begins automatically. To enter iPod mode from any other source, press the **MODE** button (4) until "iPod" appears on the display. If the user connects an iPod containing no songs, the radio will display a message stating "No Songs" in iPod mode.

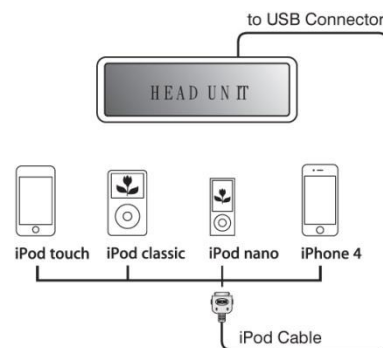

## Turning the iPod On/Off

The iPod power turns on automatically when it is connected to the front panel USB port, as long as the vehicle ignition is turned on. You can turn the iPod off by disconnecting it or by turning the ignition off. When the ignition is off, the iPod will pause and then enter sleep mode after 2 minutes. While the iPod is connected, the power cannot be turned on or off from the iPod itself.

## Controlling Playback

### Pausing Playback

During playback, press the **MUTE/>>||** button (22) to pause the iPod player. "Pause" will appear on the LCD. Press **MUTE/>>||** again to resume playback.

### Repeat Play

During playback, press the **1/RPT** button (8) to repeat the current song. "RPT" will appear on the LCD. Press **1/RPT** again to stop repeat playback.

### Random Play

During playback, press the **3/RDM** button (5) to play all songs in the current category in random order. Random play will begin once the current song has finished playing. "RDM" will appear on the LCD. Press **3/RDM** again to stop random playback.

### Selecting Tracks

During playback, press the **TUNE/SEEK <</>>** buttons (18, 19) to play the previous or next track in the current category. Press the **TUNE/SEEK <<** button once to play the song from the start position or press **TUNE/SEEK <<** twice to play the previous track. Pressing the **TUNE/SEEK <<** button during the first 2 seconds of a track will play the previous track. After 2 seconds, this action returns to the beginning of the current track.

Press and hold the **TUNE/SEEK <</>>** button to fast reverse/forward the song.

**NOTE: If you press and hold the TUNE/SEEK <</>> button to change the current song to the previous/next song, you will exit fast reverse/forward mode.**

## Alternate Display Mode

Press the **DISP/SCROLL** button (12) to change the display information between single and double line text display.

## Playlist Search

Press the **PTY/CAT/MENU** button (2) to access Playlist selection mode. While in Category mode, press the **TUNE/SEEK <</>>** buttons to choose file search by Playlist, Artist, Album, Genre, Song, Audiobook or Podcast. Press the **INFO/ENTER** button (16) to select the search mode. Use the **TUNE/SEEK <</>>** buttons to search the available files on the iPod. Press the **INFO/ENTER** button to play the selected song or file.

## BLUETOOTH OPERATION

The JHD1635BT includes built-in Bluetooth technology that allows you to connect this head unit to Bluetooth devices for streaming audio playback.


### About Bluetooth Technology


Bluetooth is a short-range wireless radio connectivity technology developed as a cable replacement for various electronic devices. Bluetooth operates in 2.4 GHz frequency range and transmits voice and data at speeds up to 2.1 Mbit/s over a range of up to 10 meters.

### Bluetooth Menu Options

**NOTE:** Please note that some BT menu options are only available while the unit is in Bluetooth Audio mode.


Press and hold the **PTY/CAT/MENU** button (2) to enter menu adjustment mode. Press the **SEEK/TUNE** buttons (18, 19) repeatedly to view the Bluetooth Setup Menu options. Press **ENTER** to choose the highlighted option.

- **BT ON/OFF:** Press the **ENTER** button (16) to select "BT ON" or "BT OFF". When "On", the LCD will display the Bluetooth icon  (default "BT ON").
- **BT HFP Volume:** Press the **ENTER** button repeatedly to adjust the ring volume from 0-40 (default 35/previous setting).
- **BT Device List:** Press the **ENTER** button to view a list of previously paired mobile phone device models. Press the **SEEK/TUNE** buttons (18, 19) to view devices from the list. You cannot delete a device that is actively connected. Press the **ENTER** button to select the device. Press the **SEEK+** or **SEEK-** button to choose Lock/Unlock, Disconnect or Delete for this device.
  - **LOCK/UNLOCK:** The JHD1635BT can store up to 5 devices for Bluetooth connection. The devices are stored in FIFO (First in First Out) order. To prevent a device from being bumped from the list when more than 5 devices are used, you must lock the device. To lock/Unlock a device, press the **ENTER** button to display/change the Locked or Unlocked icon.
  - **DISCONNECT:** To disconnect a paired device, press the **ENTER** button to temporarily remove the Bluetooth link. The link can be re-established through your phone menu by selecting the JHD1635BT for connection.
  - **DELETE:** To delete a device from the list, press the **ENTER** button. NOTE: Device must be disconnected to be deleted.
- **BT Pair:** Press the **ENTER** button to turn BT Pair "On" to put the unit pairing mode to search for and be discovered by Bluetooth devices.
- **BT Auto Answer:** Press the **ENTER** button to turn the Auto Answer function "On" or "Off".

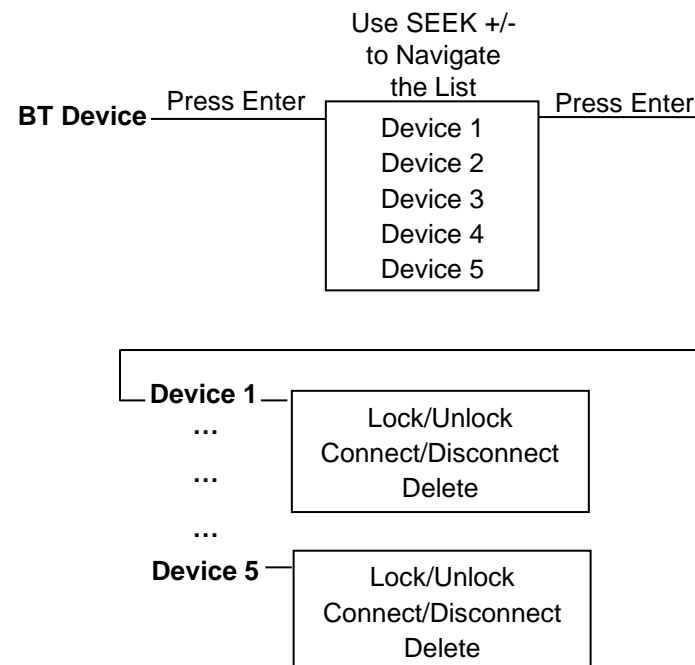


### Pairing a Bluetooth Device

 Before you begin, consult the owner's manual for the Bluetooth device you want to pair with the JHD1635BT.

1. Make sure the device is on and ready to receive a signal from the JHD1635BT. With the JHD1635BT in Bluetooth Audio mode, choose "BT Pair" from the JHD1635BT menu and press the **ENTER** button (16) to begin pairing. The unit is now waiting to connect to a mobile phone device. With the Bluetooth function of the mobile phone device turned on, search for a Bluetooth device.
2. When the Bluetooth device has completed its search, the mobile phone will display the Bluetooth device name (JHD1635BT).
3. Select JHD1635BT. The Bluetooth icon  will appear on the radio LCD.
4. Enter the pairing password (0000), if requested.

After connecting successfully, you will be able to listen to music stored on your Bluetooth enabled device through the radio.

### BT Audio (A2DP)

The A2DP music is available for Bluetooth enabled phones when the phone is connected. To access Bluetooth mode and play songs stored on your phone, press the **MODE** button (4). While in Bluetooth mode, the Bluetooth Audio icon  will appear on the LCD.

**Selecting Tracks**

During playback, press the **SEEK/TUNE** (18, 19) buttons to play the previous or next track.

**Pausing Playback**

During playback, press the **MUTE/>>||** button (22) to pause the Bluetooth AUDIO player. "BT AUDIO PAUSE" will appear on the LCD. Press **MUTE/>>||** again to resume playback. If you change to another mode, the mobile phone audio will pause. Press the **MODE** (4) button to return to Bluetooth mode and resume mobile phone audio playback.

---

**NOTE: If a Bluetooth device is disconnected due to the power being turned off or if the device is disconnected inadvertently, the unit will automatically search for the matching Bluetooth device when the power is restored.**

---

## Incoming/Outgoing calls

While the mobile device is connected through Bluetooth, the phone number for incoming calls will appear on the LCD. The incoming ring will be output through the unit unless the unit is broadcasting a Weather Band Alert or the PA system is in use.

**Answer Call**

If the Bluetooth Auto Answer function is turned "Off", the user must press the "**CALL**" button (3) to receive and incoming call.

If the BT Auto Answer function is turned "On", the unit will automatically receive the incoming call after 5 seconds of ringing.

While the microphone (JMICHFP) is connected to the unit, the user can answer incoming calls through the Microphone.

**Transfer Call**

During the call, *press and hold* the "**CALL**" button transfer the call between the unit and the mobile device.

**End Call**

Press the "**CALL**" button to end a call. The unit will return to the previous mode.

**Reject Incoming Call**

To reject an incoming call, *press and hold* the "**CALL**" button.

## CARE AND MAINTENANCE

- Keep the product dry. If it does get wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.
- Keep the product away from dust and dirt, which can cause premature wear of parts.
- Handle the product gently and carefully. Dropping it can damage circuit boards and cases, and can cause the product to work improperly.
- Wipe the product with a dampened cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the product.
- Use and store the product only in normal temperature environments. High temperature can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.

### Ignition

The most common source of noise in reception is the ignition system. This is a result of the radio being placed close to the ignition system (engine). This type of noise can be easily detected because it will vary in intensity of pitch with the speed of the engine.

Usually, the ignition noise can be suppressed considerably by using a radio suppression type high voltage ignition wire and suppressor resistor in the ignition system. (Most vehicles employ this wire and resistor but it may be necessary to check them for correct operation.) Another method of suppression is the use of additional noise suppressors. These can be obtained from most CB radio or electronic supply shops.

### Interference

Radio reception in a moving environment is very different from reception in a stationary environment (home). It is very important to understand the difference.

AM reception will deteriorate when passing under a bridge or when passing under high voltage lines. Although AM is subject to environmental noise, it has the ability to be received at great distance. This is because broadcasting signals follow the curvature of the earth and are reflected back by the upper atmosphere.

## TROUBLESHOOTING

Symptom	Cause	Solution
No power	The vehicle's accessory switch is not on	If the power supply is properly connected to the vehicle's accessory terminal, switch the ignition key to "ACC".
	Fuse is blown	Replace the fuse.
No sound	Volume too slow	Adjust volume to audible level.
	Wiring is not properly connected	Check wiring connections.
The operation keys do not work	Control panel is not properly installed	Reinstall control panel.
	Built-in microcomputer is not operating properly due to noise	Press the <b>RESET</b> button.
Cannot tune to radio station, auto-seek does not work	Antenna cable is not connected	Insert the antenna cable firmly.
	Signals are too weak.	Select a station manually.
ERROR-01 on LCD	Database or decoder error	Change to another mode.
ERROR-02 on LCD	No songs on device	Remove device and add songs.
ERROR-03 on LCD	Abnormal current to USB device	Change mode or unplug and reconnect USB device.
ERROR-04 on LCD	iPod/iPhone is not verified	Unplug and reconnect iPod/iPhone.

## SPECIFICATIONS

### USB

Signal to Noise Ratio	> 65 dB
Channel Separation	More than 50 dB
Frequency Response	20 Hz - 20 kHz

### FM Radio

Frequency Coverage (USA)	87.5 to 107.9 MHz
Frequency Coverage (Europe)	87.5 to 108 MHz
Sensitivity (S/N = 30dB)	2.2µV
Stereo Separation	>25 dB

### AM/MW

Frequency Range (USA)	530-1710 kHz
Frequency Range (Europe)	522-1620 kHz
Sensitivity (S/N=20dB)	30 dB

### General

Frequency band(s) (for Bluetooth)	2.4~2.4835GHz
Maximum radio-frequency power transmitted (for Bluetooth)	4 dBm
Operating Voltage	DC 12 Volts
Grounding System	Negative Ground
Speaker Impedance	4-8 ohms per channel
Tone Controls:	
Bass (at 100 Hz)	±10 dB
Treble (at 10 kHz)	±10 dB
Power Output	45W x 4
Idle/Standby Current	0 A
Current Drain	15 Ampere Max
Dimensions	175 (W) x 175 (D) x 50 (H)

## FCC Notes

**WARNING! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.**

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



ASA Electronics Corporation

[www.asaelectronics.com](http://www.asaelectronics.com)

[www.jensenheavyduty.com](http://www.jensenheavyduty.com)

©2017 ASA Electronics Corporation

v.090217



## Regulatory and Warranty Information



If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

## **BELKIN TECHNICAL AND WARRANTY SUPPORT INFORMATION**

### **HOW DO I GET HELP?**

If you have a question about your product or experience a problem with it, please go to <http://www.belkin.com/support> or <http://support.linksys.com>. You will find lots of online support tools and information to help you with your product.

### **What should I do if my product is defective?**

You always have the option to return the product to the original seller if you have a problem. You can make a claim based on this warranty or any consumer laws that apply to you.

You can also make a claim under this warranty or local consumer laws by contacting Linksys or Belkin Technical Support. To find out how to contact us, click the "Contact Us" link on the home page of <http://Linksys.com> or <http://www.belkin.com>.

### **If I believe my product is defective and covered by this warranty, what do I need to do?**

You will need to contact Technical Support for your region at the links above. So that we can help you, you will need to give us some information when you contact us:

- your product model, hardware revision and serial number;
- the name of your Internet Service Provider (ISP); and
- proof that you purchased the product, with the date of the purchase shown and place where it was purchased. **WE WILL ALWAYS NEED A DATED PROOF OF ORIGINAL PURCHASE TO PROCESS WARRANTY CLAIMS.**

Sometimes we will need you to send the product back to us so that we can fix or replace it. If we ask you to return your product to us by post, you will be given a Return Materials Authorization (RMA) number and we'll tell you where to send the product. You will need to make sure the product is properly packaged and shipped, and you will be responsible for the costs of returning your product to us. We need to identify your product when it reaches us, so you'll need to include the RMA number AND a copy of your dated proof of original purchase (please keep the original) with the returned product. We also recommend that you send the package by registered and insured mail or by overnight courier to protect the package while it is in transit.

### **What happens when I return my product?**

Defective products covered by this warranty will be replaced without charge with the same product or an equivalent product of equal or greater value, or Belkin will provide you with a refund of the purchase price of the product, minus any rebates and discounts. The remedy offered will be determined by Belkin in its sole discretion.

We can only ship replacement or repaired products to locations in the country where the original product was purchased.

Belkin may need to delete all or part of your data to repair or replace your product. Belkin may also install software updates as part of warranty service. **PLEASE MAKE SURE THAT YOU BACK UP ALL OF YOUR DATA ON THE PRODUCT BEFORE SENDING IT IN FOR REPAIR OR REPLACEMENT. BELKIN IS NOT RESPONSIBLE FOR ANY LOSS OF DATA OR SOFTWARE DURING WARRANTY SERVICE.**

Replacements not covered under warranty or your rights under consumer law may be refused by place of purchase, or may be subject to charge.



## Technical support

This warranty is not a service or support contract. Details on our technical support offerings and policies (including any applicable fees) can be found at <http://www.belkin.com/support> or <http://support.linksys.com>.

Belkin provides many different options to support you. Please click on or go to the appropriate website below for more details. Please make sure to change to your local country if necessary.

- Belkin and WeMo Products: <http://www.belkin.com/support>
- Linksys Products: <http://support.linksys.com>

Along with the Limited Warranty, Belkin provides Complimentary Assisted Technical Support for the Warranty Period to get your hardware up and running. Complimentary Assisted Technical Support includes technical support (by phone) and live chat (through your computer). At this time, live chat is only available in certain countries. Please visit our websites (indicated above) in your local area for details.

For additional support beyond the Complimentary Assisted Technical Support period or for assistance on advanced features beyond basic support, please contact our Technical Support team to learn more about how we can help you get the most out of your product. Please note that you may be assessed a fee to speak with our technician if you contact us outside the Complimentary Assisted Technical Support period.

Additional information on some of our Premium Support Offerings can be found at:

Linksys Networking Products – <http://www.linksys.com/us/premium-support/>

Belkin and WeMo Networking Products – <http://www.belkin.com/us/belkin-premium-support/>

Please Note: Some of these offerings may not be offered in your country

Telephone support may not be available where you live and may be subject to charge.

This document contains the regulatory and warranty information of the following models:

E9450, MR9600, MR9000, MR9000X, MR8950, MR8900, MR8300, MR8250, MR7350, MR7340, MR7310, MR6350, MR6340, MR6330, MR6320 and MR5500

## **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

2.4GHz operation of this product in the USA is firmware-limited to channels 1 through 11.

The device for the band 5150-5250 MHz is only for indoor usage to reduce the potential for harmful interference to co-channel mobile satellite systems.

## **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 35 cm between the radiator and your body.

This device and its antennas(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

## **Wireless Disclaimer**

The maximum performance for wireless is derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

## Safety Notices

### English



**WARNING:** Do not use this product near water, for example, in a wet basement or near a swimming pool.



**WARNING:** Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.



**WARNING:** The power adaptor is the equipment's disconnection device. The power outlet must be located nearby the equipment and its access must be easy. This product is intended for indoor use only.

### Español



**ADVERTENCIA:** No use este producto cerca del agua, por ejemplo en un sótano húmedo o cerca de una piscina.



**ADVERTENCIA:** Evite usar este producto durante una tormenta eléctrica. Puede existir el riesgo remoto de que se produzca una descarga eléctrica producida por un rayo.



**ADVERTENCIA:** El adaptador de alimentación es el dispositivo de desconexión del equipo. La base de toma de corriente debe estar cerca del equipo y ser fácilmente accesible. Este producto está destinado solo para uso en interiores.

### Third-Party Software or Firmware

The use of software or firmware not supported/provided by Linksys products may result that the equipment is no longer compliant with the regulatory requirements.

## WARRANTY AND SUPPORT INFORMATION

### IMPORTANT!

PLEASE RETAIN PROOF OF PURCHASE AND PRODUCT WARRANTY INFORMATION

### LIMITED WARRANTY

(UNITED STATES AND CANADA)

This warranty is provided to you by Belkin International, Inc, or one of its subsidiaries or affiliates ("Belkin")**IMPORTANT NOTICE REGARDING YOUR CONSUMER RIGHTS**

The benefits we give in this manufacturer's warranty are additional to any rights and remedies that you may have under local consumer protection laws. Nothing in this warranty limits or affects your legal rights.

This manufacturer's warranty is governed by the laws of the country in which you purchased your Belkin, Linksys or WeMo product. In many countries, consumers have rights under local consumer laws. Those consumer rights may differ between countries, states and provinces, and often cannot be excluded. Your local consumer rights organization can advise you on your legal rights.

This manufacturer's warranty is not intended to:

- change or exclude any rights under consumer law that cannot be lawfully changed or excluded; or
- limit or exclude any right you have against the person who sold the Belkin, Linksys or WeMo product to you if that person has breached their sales contract with you.



## WHAT DOES THIS WARRANTY COVER?

Belkin warrants that the product hardware and any software media (i.e., media on which the product software is provided) will be free from defects in materials and workmanship under normal use during the Warranty Period described below. This means that the product won't be defective, and that it will look and work as advertised during the relevant period.

This warranty does not apply to products purchased from a source other than Belkin or a Belkin Authorized Reseller.

### How long is the product warranted?

Belkin warrants that the hardware in this Belkin, Linksys or WeMo product, and any associated software media, will be free from defects in materials and workmanship under normal use during the Warranty Period. The Warranty Period begins on the date the product was purchased by the original end-user purchaser and lasts for the period set out in the table below:

Product Type	Warranty Period
New products	12 Months
Refurbished products	90 days
Repaired or replacement products	The longer of the original Warranty Period or 30 days
Software media (if provided with the product)	90 days

A claim under this warranty is only eligible if it is made within the Warranty Period.

### What isn't covered?

Belkin does not give any warranty:

- in relation to software or services, provided by Belkin or any third party, included in or with the product;
- that the product, software or services will always operate uninterrupted or error free;
- that the product, software or services, or any equipment, system or network on which the product, software or services are used are 100% secure and cannot be hacked; or
- that a third party service the product needs will always be available.

**Note:** Although Belkin does not make these promises in this warranty, you may have additional rights under consumer laws.

### Will this warranty always apply?

This warranty does not apply if:

- the warranty claim was made fraudulently or by misrepresentation;
- the product was not installed, operated, repaired, or maintained in accordance with Belkin's instructions;
- the product has been subjected to abnormal physical or electrical stress, misuse, negligence, or accident;
- damage to the product is cosmetic, including scratches and dents, or defects caused by normal wear and tear or normal aging of the product;
- the serial number on the product has been altered, defaced, or removed; or
- the product was supplied or licensed for beta, evaluation, testing or demonstration purposes, and you didn't buy or license the product.

This warranty is only valid and enforceable in the country of purchase.

**Note:** Although this warranty doesn't apply in these situations, you may have additional rights under consumer laws.

#### **How will Belkin make things right?**

If you make an eligible claim under this warranty, Belkin will, at its election:

- repair the product with new or refurbished parts, or pay the reasonable costs of repairing the product;
- replace the product with a reasonably available equivalent new or refurbished Belkin, Linksys or Wemo product; or
- refund you the purchase price of the product, minus any rebates and discounts.

Any repaired or replacement products are warranted for the remainder of the original Warranty Period or 30 days, whichever is longer. All products and parts that are replaced become the property of Belkin.

**Note:** The rights and remedies outlined above are the only rights and remedies available under this warranty. However, you may have additional rights under consumer laws.

### **GENERAL EXCLUSIONS AND LIMITATIONS OF LIABILITY**

IN THOSE JURISDICTIONS WHERE IT CAN LAWFULLY DO SO, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, BELKIN, ITS RESELLERS AND ITS SUPPLIERS HEREBY DISCLAIM AND EXCLUDE ALL OTHER WARRANTIES, EXPRESS, STATUTORY OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, ACCEPTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT, TITLE, FITNESS FOR A PARTICULAR PURPOSE, LOSS OF OR DAMAGE TO DATA, LACK OF VIRUSES OR FREE FROM VIRUS OR MALWARE ATTACK, SECURITY, PERFORMANCE, LACK OF NEGLIGENCE, WORKMANLIKE EFFORT, QUIET ENJOYMENT, THAT THE FUNCTIONS CONTAINED IN THE PRODUCT WILL MEET YOUR REQUIREMENTS, OR THAT DEFECTS IN THE PRODUCT WILL BE CORRECTED, OR THAT YOUR USE OF THE PRODUCT WILL GENERATE ACCURATE, RELIABLE, TIMELY RESULTS, INFORMATION, MATERIAL OR DATA. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY BELKIN, A DEALER, AGENT OR AFFILIATE SHALL CREATE A WARRANTY. TO THE EXTENT WARRANTIES CANNOT BE DISCLAIMED OR EXCLUDED, THEY ARE LIMITED TO THE DURATION OF THE RELEVANT EXPRESS WARRANTY PERIOD. EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL BELKIN, ITS AFFILIATES, ASSOCIATES, DEALERS, AGENTS OR SUPPLIERS OR THEIR RESPECTIVE OFFICERS, DIRECTORS, EMPLOYEES, LICENSORS AND ASSIGNS BE LIABLE FOR ANY DIRECT, INDIRECT, EXEMPLARY, PUNITIVE, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO DAMAGES FOR LOSS OF PROFITS OR REVENUE, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR LOSS OF ABILITY TO USE ANY THIRD PARTY PRODUCTS OR SERVICES, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER), REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, EVEN IF BELKIN OR SUCH OTHER ENTITIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE TOTAL AGGREGATE LIABILITY OF BELKIN, ITS AFFILIATES, ASSOCIATES, DEALERS, AGENTS OR SUPPLIERS TO YOU FOR ALL DAMAGES EXCEED THE PRICE YOU PAID FOR THE PRODUCT. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF ANY WARRANTY OR REMEDY PROVIDED FAILS OF ITS ESSENTIAL PURPOSE. NOTHING IN THIS SECTION SHALL LIMIT THE LIABILITY OF BELKIN IN RELATION TO DEATH OR BODILY INJURIES.

THE WARRANTIES AND REMEDIES SET OUT IN THIS AGREEMENT ARE EXCLUSIVE, AND, TO THE EXTENT PERMITTED BY LAW, IN LIEU OF ALL OTHERS ORAL OR WRITTEN, EXPRESS OR IMPLIED. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES OR OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE FOREGOING LIMITATIONS MAY NOT APPLY TO YOU.

8850-00896 Rev. C02



K8850-00896C02(HYP)



Part Number: JHD1635BT

## **IMPORTANT OWNER'S MANUAL INFORMATION**

Owner's Manuals are made available at the following website:

<http://www.asaelectronics.com/manuals-guides>



---

Número de pieza: JHD1635BT

## **Importante LA INFORMACIÓN DEL MANUAL DEL PROPIETARIO**

Manuales del propietario están disponibles en el siguiente sitio web:

<http://www.asaelectronics.com/manuals-guides>

---

Numéro de pièce: JHD1635BT

## **IMPORTANT MANUEL D'INFORMATION**

Manuels d'utilisation sont disponibles sur le site web suivant :

<http://www.asaelectronics.com/manuals-guides>

**asa**  
ELECTRONICS.  
2602 Marina Drive • Elkhart, IN 46514  
[www.asaelectronics.com](http://www.asaelectronics.com)